

	SURFACE VEHICLE RECOMMENDED PRACTICE	SAE	J641 JUN2012
		Issued	1951-01
		Revised	2012-06
		Superseding	J641 MAR2000
Hydrodynamic Drives Terminology			

RATIONALE

This standard is being updated to provide optional nomenclature to certain figures, and to provide clarification to certain equations.

1. SCOPE

Since the torque converter and fluid coupling are commonly used components of automatic transmissions in industry, the SAE appointed a committee to standardize terminology, test procedure, data recording, design symbols, and so forth, in this field. The following committee recommendations will facilitate a clear understanding for engineering discussions, comparisons, and the preparation of technical papers.

The recommended usages represent the predominant practice or the acceptable practice. Where agreement is not complete, alternates have been included for clarification.

EXAMPLE: Two systems of blade angle designations are described. Consequently when a blade angle is specified, the system should be designated.

This SAE Recommended Practice deals only with the physical parts and dimensions and does not attempt to standardize the design considerations, such as the actual fluid flow angle resulting from the physical blade shape.

2. REFERENCES

2.1 Applicable Document

The following publication forms a part of this specification to the extent specified herein. Unless otherwise indicated, the latest issue of SAE publications shall apply.

2.1.1 SAE Publication

Available from SAE International, 400 Commonwealth Drive, Warrendale, PA 15096-0001, Tel: 877-606-7323 (inside USA and Canada) or 724-776-4970 (outside USA), www.sae.org.

SAE J1087 One-Way Clutches - Nomenclature and Terminology

SAE Technical Standards Board Rules provide that: "This report is published by SAE to advance the state of technical and engineering sciences. The use of this report is entirely voluntary, and its applicability and suitability for any particular use, including any patent infringement arising therefrom, is the sole responsibility of the user."

SAE reviews each technical report at least every five years at which time it may be revised, reaffirmed, stabilized, or cancelled. SAE invites your written comments and suggestions.

Copyright © 2012 SAE International

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SAE.

TO PLACE A DOCUMENT ORDER: Tel: 877-606-7323 (inside USA and Canada)
 Tel: +1 724-776-4970 (outside USA)
 Fax: 724-776-0790
 Email: CustomerService@sae.org
 SAE WEB ADDRESS: <http://www.sae.org>

**SAE values your input. To provide feedback
on this Technical Report, please visit
http://www.sae.org/technical/standards/J641_201206**

3. DEFINITIONS

3.1 HYDRODYNAMIC DRIVE

In contrast with electrical or mechanical drives, a hydrodynamic drive transmits power solely by dynamic fluid action in a closed recirculating path.

3.2 FLUID COUPLING

A hydrodynamic drive which transmits power without ability to change torque. (Ideal torque ratio is 1:1 at all speed ratios.) See Figure 1.

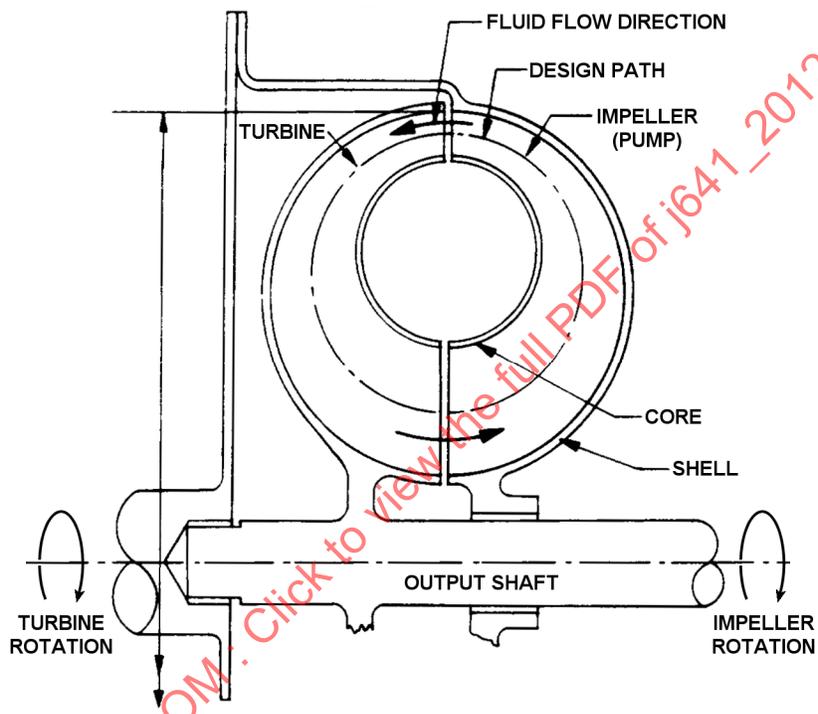


FIGURE 1 - FLUID COUPLING

3.3 TORQUE CONVERTER

A hydrodynamic drive which transmits power with ability to multiply torque. (Torque ratio changes as speed ratio changes.) See Figure 2.

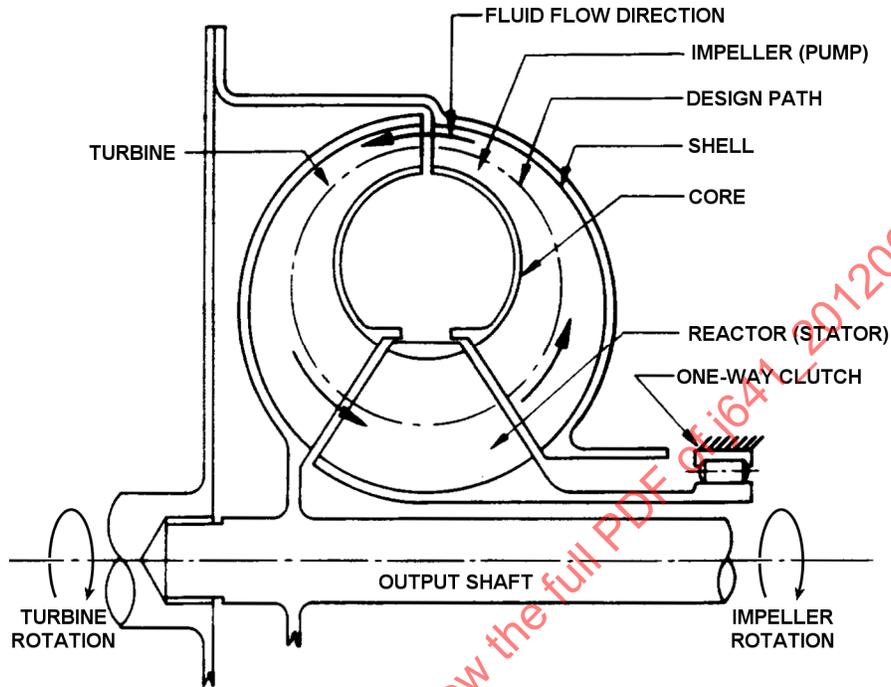


FIGURE 2 - TWO-PHASE, SINGLE-STAGE TORQUE CONVERTER
(SINGLE-PHASE, SINGLE-STAGE IF ONE-WAY CLUTCH IS DELETED)

SAENORM.COM : Click to view the full PDF of J641-201206

3.4 ELEMENT

An element consists of a single row of flow directing blades. See Figure 3.

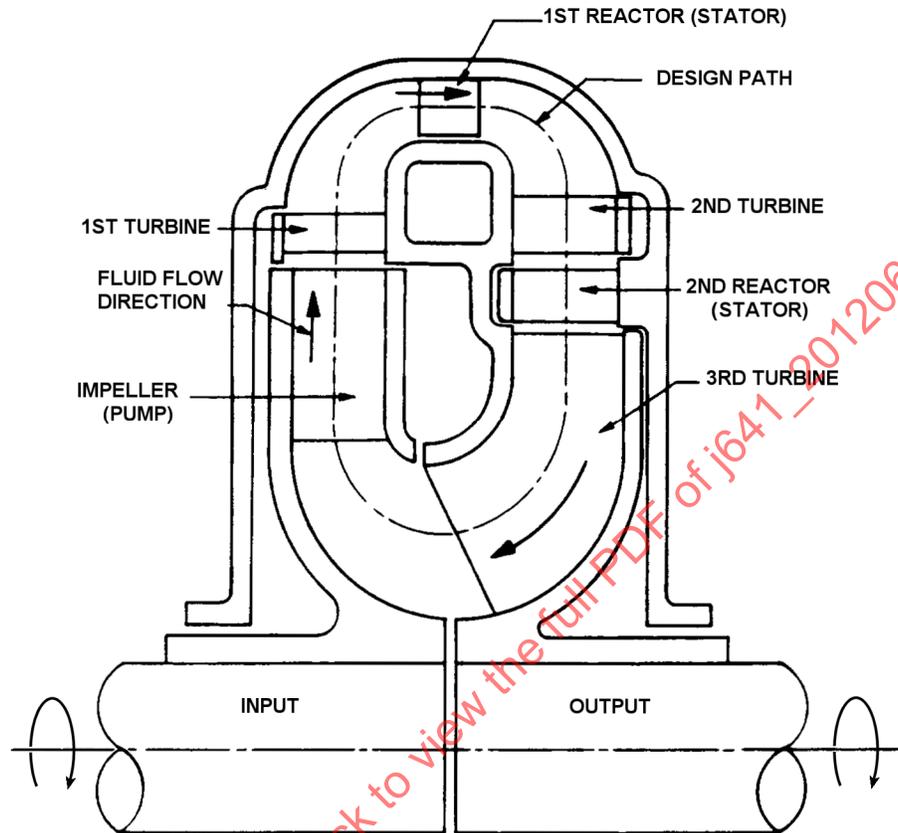


FIGURE 3 - THREE-MEMBER, SIX-ELEMENT, SINGLE-PHASE, THREE-STAGE TORQUE CONVERTER

3.5 MEMBER

A member is an independently rotating element of a hydrodynamic unit such as an impeller (pump), reactor (stator), or turbine. It may comprise one or more elements. See Figure 3.

3.6 STAGE (SINGLE-, TWO-, THREE-, ETC.)

A stage is a turbine element interposed between elements of other members. The number of stages is the number of such elements of the turbine member. See Figures 2 and 3.

3.7 PHASE (SINGLE-, TWO-, THREE-, ETC.)

Applied to a torque converter, refers to the number of functional arrangements of the working elements when the functional change is produced by a one-way clutch or other mechanical means such as a clutch or brake. See Figures 2 and 3.

3.8 IMPELLER (PUMP)

Designates the power input member.

3.9 TURBINE

Designates the output member.

3.10 REACTOR (STATOR)

Designates the reaction member. The reactor is grounded, typically through a one-way clutch.

3.11 ONE-WAY CLUTCH

See SAE J1087.

3.12 CLUTCH-TYPE TORQUE CONVERTER

A hydrodynamic torque converter using a clutch to provide a direct mechanical drive. See Figure 4.

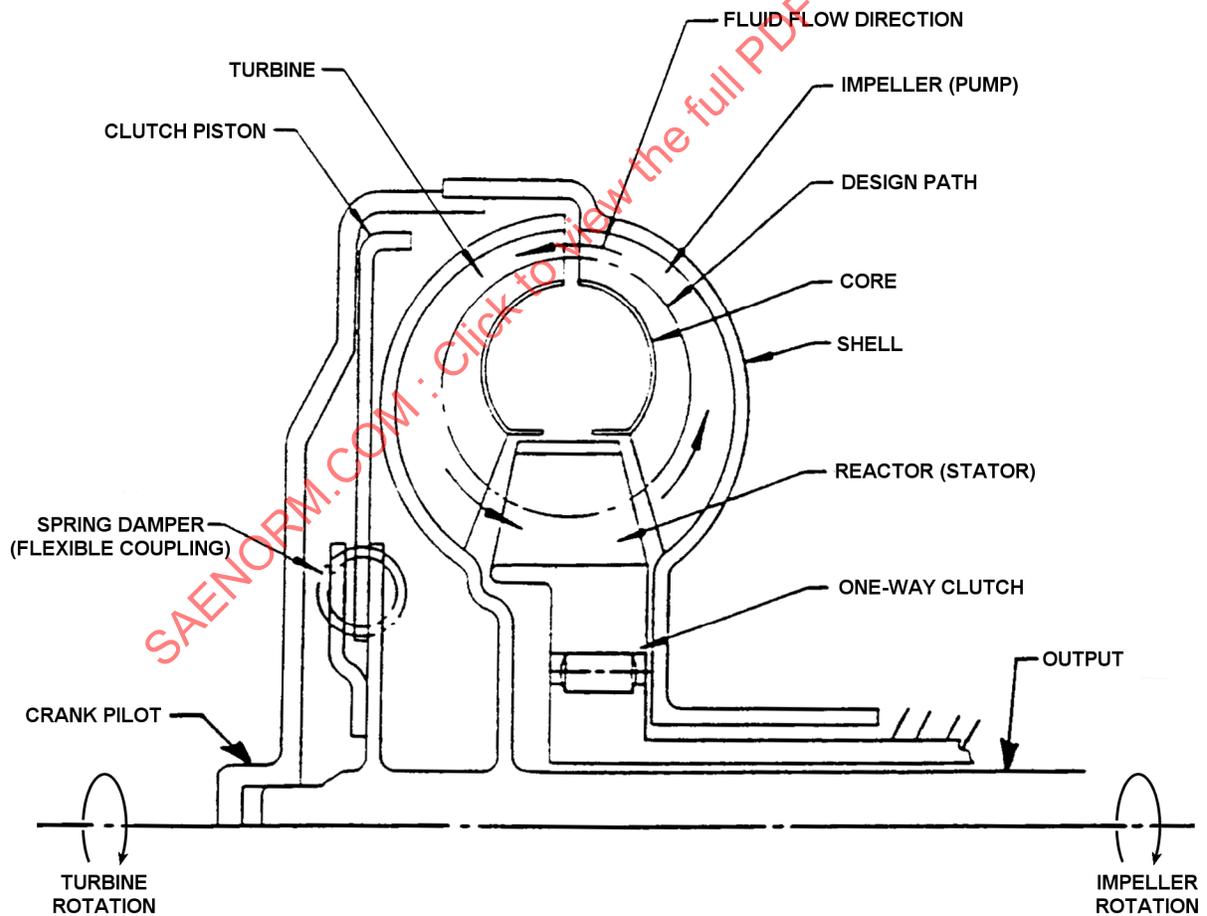


FIGURE 4 - CLUTCH-TYPE TORQUE CONVERTER

3.13 CLUTCH PISTON

A friction element device which can mechanically couple the impeller to the output. See Figure 4.

3.14 SPRING DAMPER (FLEXIBLE COUPLING)

A device that reduces the amplitude of torsional vibration to the output. See Figure 4.

3.15 NAMING OF MULTIPLE MEMBERS

Multiple members that perform basically the same function in both polyphase and multistage torque converters are named in the order of fluid circulation in normal operation:

- a. First impeller, second impeller, etc.
- b. First turbine, second turbine, etc.
- c. First reactor, second reactor, etc.

3.16 BLADE (VANE)

Within an element, designates the means of directing fluid flow.

3.17 VARIABLE BLADE (VANE)

Designates a blade provided with control means to vary the angular position and thus vary the direction of fluid flow.

3.18 TORUS SECTION

Designates the confines of a flow circuit in a radial plane of a torque converter or fluid coupling.

3.19 SHELL (HUB)

Designates the outside wall of the torus section in any member. See Figures 1 and 2.

3.20 CORE (SHROUD)

Designates the inside wall of the torus section in any member. See Figures 1 and 2.

3.21 DESIGN PATH

The path of the assumed mean effective flow, used for definition of blade angles, entrance and exit radii, etc. See Figures 1 and 2.

3.22 BIAS (ENTRANCE AND EXIT)

At the entering and exit blade edges, designates the angular variance with respect to an axial plane at the design path. The angle is measured as viewed in an axial direction. See Figure 5.

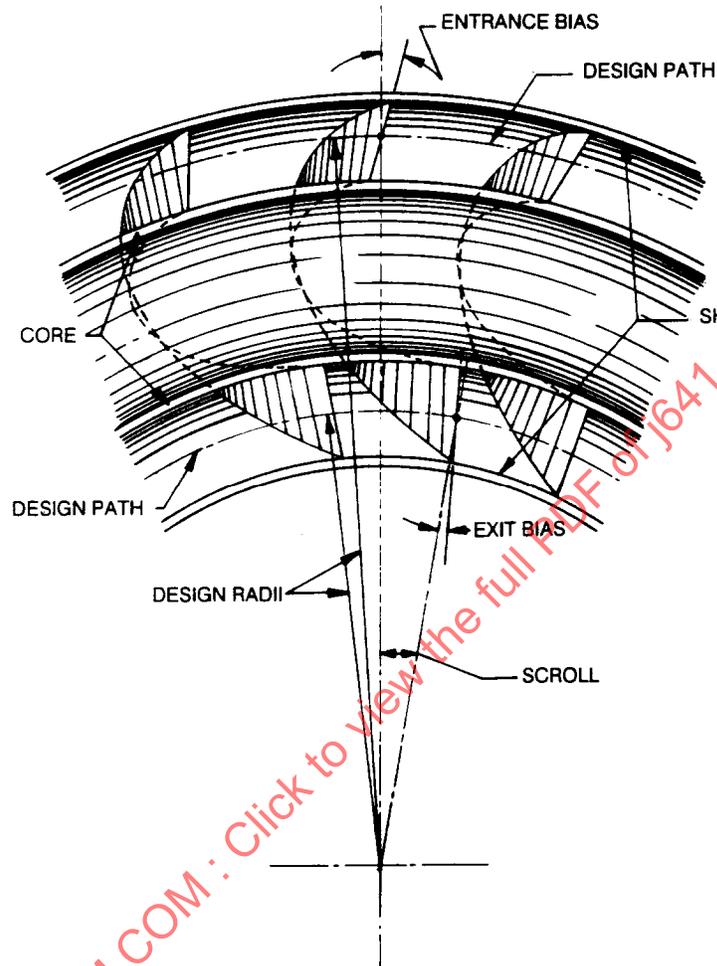


FIGURE 5 - BLADE TERMINOLOGY (TURBINE)

3.23 SCROLL

The angle between the two planes containing the intersection of the design path and the entering and leaving edges of the blade when the blade does not lie in one axial plane. See Figure 5.

3.24 TORQUE CONVERTER SIZE

In general terms, is designated by the maximum diameter of the flow path. See Figure 1.

3.25 DESIGN RADII (ENTRANCE OR EXIT)

Design radii of any member are taken at the point of intersection of the design path with the theoretical blade edges. See Figure 5.

3.26 SLIP

Designates the difference between input speed (N_i) and output speed (N_o). It may also be expressed as a percent of input speed.

3.27 SPEED RATIO

Designates the output speed divided by the input speed (N_o/N_i).

3.28 TORQUE RATIO

Designates the output torque divided by the input torque (T_o/T_i).

3.29 CAPACITY FACTOR (K-FACTOR) FOR A HYDRODYNAMIC DRIVE

The input speed in rpm (N_i) divided by the square root of the input torque (T_i) (see Equation 1). K-factor is designated as metric (more common, T_i in Nm) or US Customary Units (T_i in lb-ft)

$$K = \frac{N_i}{\sqrt{T_i}} \quad (\text{Americas}) \quad (\text{Eq. 1})$$

$$K = \frac{T}{N^2} \quad (\text{Europe/Asia})$$

3.30 STALL TORQUE RATIO

Designates the torque ratio when the turbine is restrained from rotating.

3.31 STALL LAUNCH

Accomplished by restraining the vehicle with the brakes, opening the throttle fully, and subsequently releasing the brakes after the engine has attained maximum stall speed.

3.32 STALL SPEED

Designates the input speed in rpm at a specified input torque when the turbine is restrained from rotating.

3.33 TORQUE CONVERSION RANGE

Designates the range of operation where torque multiplication exists.

3.34 COUPLING RANGE

Designates the range of operation at which torque ratio is unity and the reactor(s) one-way clutch is overrunning.

3.35 COUPLING POINT

Designates the point where the torque conversion range ends and the coupling range begins.

3.36 HYDRODYNAMIC UNIT CHARGE PRESSURE

Designates the externally applied hydraulic fluid pressure under which the hydrodynamic unit operates.