
**Plastics piping systems for the supply
of gaseous fuels for maximum operating
pressures up to and including 2 MPa
(20 bar) — Polyamide (PA) —**

**Part 6:
Code of practice for design, handling
and installation**

*Systèmes de canalisations en matières plastiques pour la distribution
de combustibles gazeux pour des pressions maximales de service
inférieures ou égales à 2 MPa (20 bar) — Polyamide (PA) —*

*Partie 6: Code de pratique pour la conception, la manutention
et l'installation*



PDF disclaimer

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.

STANDARDSISO.COM : Click to view the full PDF of ISO 22621-6:2010



COPYRIGHT PROTECTED DOCUMENT

© ISO 2010

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Case postale 56 • CH-1211 Geneva 20
Tel. + 41 22 749 01 11
Fax + 41 22 749 09 47
E-mail copyright@iso.org
Web www.iso.org

Published in Switzerland

Contents

Page

Foreword	iv
Introduction.....	v
1 Scope	1
2 Normative references	1
3 Terms and definitions	2
4 Symbols and abbreviated terms	3
5 Design	3
5.1 General	3
5.2 Materials, components and jointing equipment.....	3
5.3 Maximum operating pressure	4
5.4 Assembly techniques.....	4
5.5 Squeeze-off properties.....	4
6 Installation.....	4
6.1 Jointing procedure	4
6.2 Training.....	5
6.3 Heated-tool fusion jointing	5
6.4 Electrofusion jointing.....	11
6.5 Laying	14
7 Storage, handling and transport.....	16
7.1 General	16
7.2 Storage	16
7.3 Handling	18
7.4 Transport.....	18
8 Quality control	18
8.1 General	18
8.2 Inspection prior to laying.....	18
8.3 Inspection during laying.....	19
Annex A (informative) Derating coefficients for operating temperatures	21

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 22621-6 was prepared by Technical Committee ISO/TC 138, *Plastics pipes, fittings and valves for the transport of fluids*, Subcommittee SC 4, *Plastics pipes and fittings for the supply of gaseous fuels*.

ISO 22621 consists of the following parts, under the general title *Plastics piping systems for the supply of gaseous fuels for maximum operating pressures up to and including 2 MPa (20 bar) — Polyamide (PA)*:

- *Part 1: General*
- *Part 2: Pipes*
- *Part 3: Fittings*
- *Part 5: Fitness for purpose of the system*
- *Part 6: Code of practice for design, handling and installation*

Introduction

This part of ISO 22621 addresses the common basic principles for gas supply systems. More detailed national standards or codes of practice might exist in the ISO member countries. This part of ISO 22621 is intended to be applied in association with those national standards or codes of practice related to the above-mentioned basic principles.

STANDARDSISO.COM : Click to view the full PDF of ISO 22621-6:2010

STANDARDSISO.COM : Click to view the full PDF of ISO 22621-6:2010

Plastics piping systems for the supply of gaseous fuels for maximum operating pressures up to and including 2 MPa (20 bar) — Polyamide (PA) —

Part 6: Code of practice for design, handling and installation

1 Scope

This part of ISO 22621 specifies a code of practice dealing with polyamide (PA) piping systems, intended to be buried outside buildings and used for the supply of gaseous fuels.

It is applicable to mains and service lines, the components of which are prepared for jointing by scraping and/or machining, and gives instructions for the design, storage, handling, transportation, laying conditions and fusion quality control of PA pipes and fittings up to and including 250 mm outside diameter, as well as subsequent joint testing, backfilling, pipe system testing, commissioning and decommissioning.

The jointing methods covered by this part of ISO 22621 are butt fusion jointing and electrofusion jointing.

No special precautions are necessary for areas exposed to the influence of mining and earthquakes other than those precautions mentioned in this part of ISO 22621.

It is the responsibility of users of this part of ISO 22621 to take existing and new national regulations into account.

2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 12162, *Thermoplastics materials for pipes and fittings for pressure applications — Classification, designation and design coefficient*

ISO 12176-1, *Plastics pipes and fittings — Equipment for fusion jointing polyethylene systems — Part 1: Butt fusion*

ISO 12176-2, *Plastics pipes and fittings — Equipment for fusion jointing polyethylene systems — Part 2: Electrofusion*

ISO 12176-3, *Plastics pipes and fittings — Equipment for fusion jointing polyethylene systems — Part 3: Operator's badge*

EN 12327, *Gas supply systems — Pressure testing, commissioning and decommissioning procedures — Functional requirements*

ISO 22621-1, *Plastics piping systems for the supply of gaseous fuels for maximum operating pressures up to and including 2 MPa (20 bar) — Polyamide (PA) — Part 1: General*

ISO 22621-2, *Plastics piping systems for the supply of gaseous fuels for maximum operating pressures up to and including 2 MPa (20 bar) — Polyamide (PA) — Part 2: Pipes*

ISO 22621-3, *Plastics piping systems for the supply of gaseous fuels for maximum operating pressures up to and including 2 MPa (20 bar) — Polyamide (PA) — Part 3: Fittings*

ISO 22621-5, *Plastics piping systems for the supply of gaseous fuels for maximum operating pressures up to and including 2 MPa (20 bar) — Polyamide (PA) — Part 5: Fitness for purpose of the system*

3 Terms and definitions

For the purposes of this document, the terms, definitions, symbols and abbreviated terms given in ISO 22621-1 and ISO 22621-5 and the following apply.

3.1 butt fusion machine pressure
pressure indicated on the manometer or on a pressure display on a butt fusion machine, giving an indication of the interface force applied to the pipe or fitting ends

3.2 clearance
shortest distance between the outer limits of two objects

3.3 drag resistance
frictional resistance due to the weight of the length of pipe fixed in the movable clamp at the point at which movement of the movable clamp is initiated (peak drag), or the friction occurring during movement (dynamic drag)

3.4 electrofusion control box
unit implementing the output fusion parameters of voltage or current and time or energy to execute the fusion cycle, as specified by the electrofusion fitting manufacturer

3.5 frictional losses in the butt fusion machine
force necessary to overcome friction in the whole mechanism of a butt fusion machine

3.6 interface force
force between the fusion surfaces of the pipe(s) and/or fitting(s) during the fusion cycle, as specified in the fusion diagram

3.7 operator
person authorized to build PA systems from pipes or fittings, based on a written procedure agreed on by the pipeline operator

3.8 overall service (design) coefficient
C
overall coefficient, with a value greater than 1, which takes into consideration service conditions as well as properties of the components of a piping system

3.9**pipeline operator**

private or public organization authorized to design, construct or operate and maintain a gas supply system

3.10**soil cover**

vertical distance between the top of a buried pipe and the normal surface after finishing work

4 Symbols and abbreviated terms

d_e outside diameter of pipe at any point

MOP maximum operating pressure

MRS minimum required strength

RCP rapid crack propagation

SDR standard dimension ratio

5 Design**5.1 General**

A written laying procedure, authorized by the pipeline operator, shall be made available prior to the construction of a pipeline. The laying procedure shall include specification of the jointing procedure, the pipe and fitting materials to be used, the trenching and backfilling requirements, the pressure testing and commissioning requirements, and the data to be collected for the traceability system.

The selection of materials, SDR series, dimensions and assembling techniques shall be the responsibility of the pipeline operator.

There are two SDR series in common use for gas supply systems: SDR 17 and SDR 11. Other SDR series can also be used, such as SDR 26 for renovation.

The training and the level of skill of the operator shall be in accordance with the requirements of the jointing procedures.

General guidelines for supervision and quality control are given in Clause 8.

5.2 Materials, components and jointing equipment

The PA materials and components used shall conform to ISO 22621-1, ISO 22621-2 and ISO 22621-3, as relevant.

Other components not covered by the above-mentioned parts of ISO 22621 shall conform to the relevant national standards.

If pipes and fittings are to be stored outside, requirements on maximum storage time shall be given in the laying procedure. PA materials shall be stabilized to give protection against a UV radiation level of 3,5 GJ/m². It is desirable that national bodies give recommendations for allowed storage times in their countries.

The fusion equipment used for the construction of the pipeline shall comply with the requirements of ISO 12176-1 or ISO 12176-2. If the operation of the fusion equipment requires an operator's badge, the badge shall conform to ISO 12176-3.

5.3 Maximum operating pressure

The maximum operating pressure (MOP) of the system shall be selected by the pipeline operator on the basis of the gas supply system operating requirements and the materials used. The MOP of a PA system depends on the type of resin used (the MRS), the pipe SDR series and the service conditions, and is limited by the overall service (design) coefficient, C , and the RCP criteria.

The overall service (design) coefficient, C , for thermoplastics materials is specified in ISO 12162. This coefficient is used to calculate the MOP of the pipeline. C shall be greater than or equal to 2 for PA pipeline systems for natural gas.

$$\text{MOP} = \frac{20 \times \text{MRS}}{C \times (\text{SDR} - 1) \times D_F} \quad (1)$$

NOTE The derating factor, D_F , is a coefficient used in the calculation of the MOP which takes into account the influence of the operating temperature. Derating factors for various operating temperatures are given in Annex A.

The ratio of the critical RCP pressure to the MOP shall be $\geq 1,5$ at the minimum operating temperature. The critical RCP pressure is dependent on temperature, pipe size and type of PA material used. It is defined in this subclause in accordance with ISO 22621-1, based on the full-scale test method in accordance with ISO 22621-1:2007, Annex C, which specifies a test temperature of 0 °C.

Where the pipe temperature decreases below 0 °C, the p_c/MOP ratio shall be recalculated using a p_c (critical pressure) value determined from the minimum expected operating temperature of the pipe. If necessary, the value of the MOP shall be reduced so as to maintain the p_c/MOP ratio at a value $\geq 1,5$.

5.4 Assembly techniques

Jointing procedures may vary depending on the pipe size used.

Fusion is the preferred jointing method. Preference shall be given to butt fusion and electrofusion.

Components made from PA 11 shall be heat fusion jointed only to components made from PA 11.

Components made from PA 12 shall be heat fusion jointed only to components made from PA 12.

Components made from polyamide are not fusion compatible with components made from other polymers.

A written jointing procedure, authorized by the pipeline operator, shall be available prior to the construction of a pipeline. The jointing procedure shall include specification of the jointing method, the fusion parameters, the fusion equipment, the jointing conditions, the level of skill of the operator, and the quality control methods to be used.

5.5 Squeeze-off properties

When squeeze-off techniques are considered, the suitability of the pipe for squeeze-off shall be established in accordance with the manufacturer's recommendations.

6 Installation

6.1 Jointing procedure

The jointing operation shall be performed in accordance with the pipeline operator's written procedure and shall take into account the procedures outlined in ISO 22621-5:2010, Annex A, for butt fusion jointing and ISO 22621-5:2010, Annex B, for electrofusion jointing.

Polyamide pipes, fittings and accessories may be jointed by heated-tool fusion jointing or electrofusion jointing. The jointing and quality control methods used for the construction of the gas supply system shall be appropriate to the design of the network and take into account the requirements of ISO 22621-5.

6.2 Training

The operator shall be competent in the appropriate laying and jointing methods. He or she shall possess the necessary skill and knowledge to produce joints of consistently high quality.

Operators shall receive formal training under the supervision of a qualified instructor. The gas company may require a certificate indicating that the operator has reached an adequate standard in accordance with national or local regulations.

6.3 Heated-tool fusion jointing

6.3.1 General

Heated-tool fusion joints shall be made under defined conditions of pressure, time and temperature, using a written procedure (see 6.1). Mating surfaces should be heated to their fusion temperature and then brought into contact with one another.

6.3.2 Fusion temperature

The production of a strong fusion bond depends, among other things, on the fusion temperature of the polyamide material: overheating can degrade the material, and insufficient heating does not soften it adequately.

The temperature range over which any particular polyamide material may be satisfactorily jointed shall be considered. The jointing procedure shall specify the heating cycle and the temperature levels for the polyamide material selected.

Cold weather and wind can adversely affect the fusion temperature. Under these circumstances, special precautions, such as shielding, end caps and longer heating times shall be considered.

6.3.3 Fusion equipment

The butt fusion equipment used shall conform to ISO 12176-1.

As high-quality fusion joints cannot be made with fusion equipment in poor condition, maintenance of the fusion equipment is very important and shall be carried out on a regular basis. The cleanliness and integrity of the heating surfaces, the ability of the heating tools to produce the correct temperature and the correct alignment and operation of the equipment when used are of paramount importance.


The heating tools are designed to maintain uniform temperatures within the fusion temperature range of the particular polyamide material and shall have calibrated means of measuring and indicating the temperature. A precise temperature measurement device, such as a pyrometer or a digital thermometer with a surface temperature sensor, may be used to check the surface temperature of the heating tools, although additional care is necessary to avoid inconsistency of readings when such a device is used.

All heating tools used shall be electrically heated.

6.3.4 Butt fusion

6.3.4.1 Principle

The butt fusion technique consists of heating the planed ends with the mating surfaces by holding them against a flat heating plate until molten, removing the heating plate, pushing the two softened ends against one another, holding under pressure for a prescribed time and allowing the joint to cool (see Figure 1).

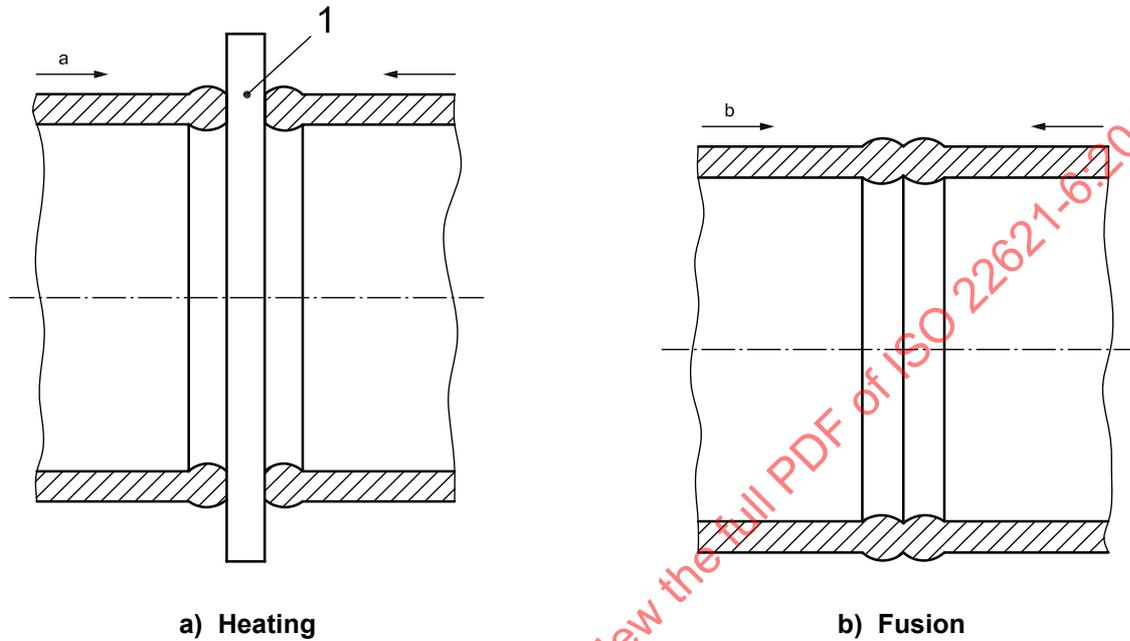

Key

- 1 heating plate
- a Pressure during heating.
- b Pressure during fusion.


Figure 1 — Butt fusion

Pipes or fittings with fusion ends of different SDR values shall not be jointed by butt fusion.

6.3.4.2 Butt fusion cycle

The butt fusion cycle can be represented by a pressure/time diagram for a defined fusion temperature. Different butt fusion cycles are available, depending on the pipe diameter and the working conditions. The butt fusion cycle used shall be specified in the written procedure.

Figure 2 is an example of a butt fusion diagram.

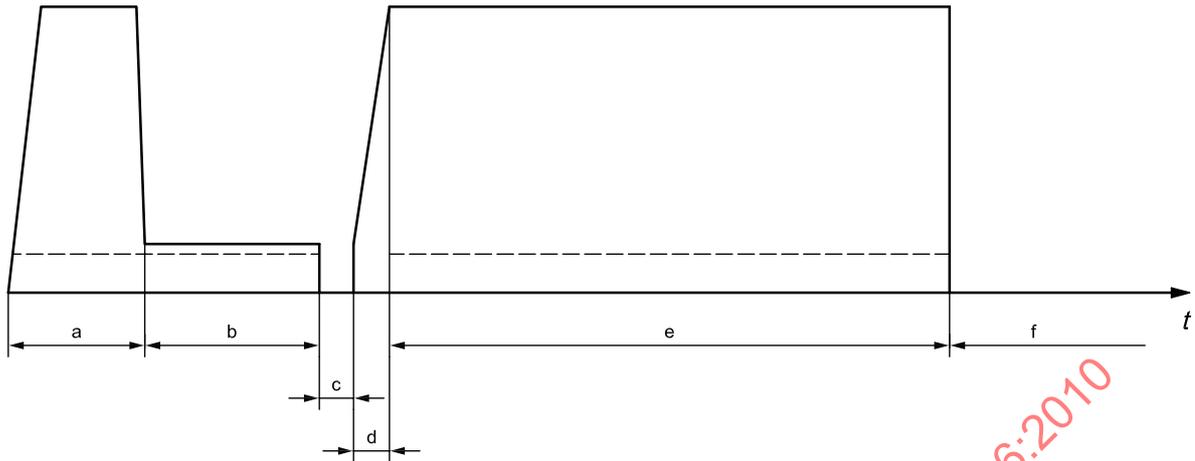**Key**

- t time
- a Phase 1.
- b Phase 2.
- c Phase 3.
- d Phase 4.
- e Phase 5.
- f Phase 6.

Figure 2 — Butt fusion cycle**Table 1 — Butt fusion cycle and parameters**

Parameter		Value	Unit
Heater-plate temperature, T		240 ± 20	$^{\circ}\text{C}$
Phase 1	Pressure, p_1^a	$0,3 \pm 0,1$	MPa^b
	Time, t_1	Measured as the time until B_1 is reached	s
	Bead width, B_1	$d_n \leq 110$: $0,5 < B_1 \leq 1,5$ $110 < d_n \leq 180$: $2 < B_1 \leq 4$	mm mm
Phase 2	Pressure, p_2^a	$0,03 \pm 0,02$	MPa
	Time, t_2	$(30 + 0,5d_n) \pm 20$	s
Phase 3	Time, t_3	Maximum value: 3	s
Phase 4	Time, t_4	Maximum value: 3	s
Phase 5	Pressure, p_5^a	$0,3 \pm 0,1$	MPa
	Time, t_5	12 ± 3	min
Phase 6	Time, t_6	Minimum value: $1,5e_n$	min
		Maximum value: 20	min
<p>^a This pressure is the interface pressure and is related to d_n, e_n and the butt fusion equipment used.</p> <p>^b $1 \text{ MPa} = 1 \text{ N/mm}^2$.</p>			

The pressures shall be chosen such that the required force is produced at the interface, irrespective of frictional and pressure losses in the butt fusion machine and drag resistance from the pipe system.

In the case of machines with hydraulic power rams, the force is normally indicated in terms of the applied cylinder pressure. For such machines, a specific calibration table is provided which gives the relationship between the real interface pressure and the pressure indicated by the manometer (pressure gauge).

6.3.4.3 Butt fusion temperature


The butt fusion temperature is normally situated between 220 °C and 260 °C and is given in the jointing procedure.

6.3.4.4 Butt fusion jointing

This subclause gives an overview of the minimum operations necessary to produce a butt fusion joint with a specified butt fusion cycle and temperature.

- a) Reduce the drag resistance as much as possible, for example by using pipe rollers.
- b) Clamp the spigot ends of the pipe(s) or fitting(s) in the butt fusion machine.
- c) Clean the spigot ends.
- d) Check that the butt fusion machine is compatible with the pipe diameter and the prescribed butt fusion cycle.
- e) Plane the pipes parallel by moving the movable clamp against the planing tool (see Figure 3). The closing pressure shall be sufficient to produce a steady flow of PA slivers on both sides of the planing tool. Planing is complete when the pipe face(s) or fitting face(s) are plane and parallel to each other.

STANDARDSISO.COM : Click to view the full PDF of ISO 22621-6:2010

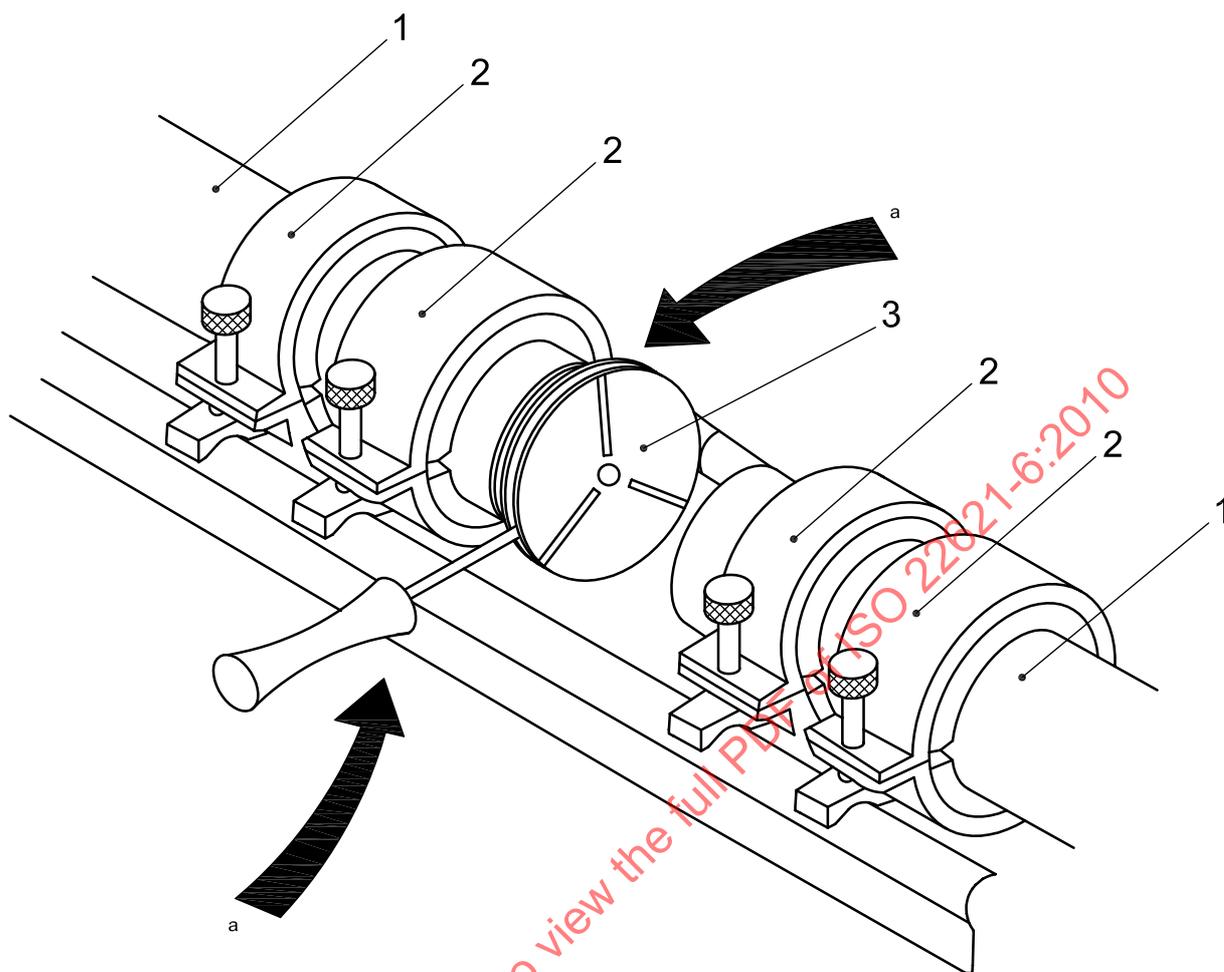
**Key**

- 1 pipe
- 2 clamp
- 3 planing tool
- a Direction of planing.

Figure 3 — Planing the spigot ends of pipes

- f) Lower the pressure, keeping the planing tool rotating in order to avoid a burr on the pipe or fitting faces. Move the movable clamp backwards and remove the planing tool.
- g) Close the butt fusion machine and check that the pipes are aligned. The spigot ends of pipe(s) or fitting(s) shall be aligned as much as possible and not exceed the maximum misalignment given in the jointing procedure.
- h) The gap between the pipe or fitting faces after planing shall be as small as possible and shall not exceed the maximum gap given in the jointing procedure.
- i) Measure the additional pressure caused by the frictional losses in the butt fusion machine and the drag resistance by moving the movable clamp forwards. Add this pressure to the required butt fusion pressure.
- j) If necessary, clean the fusion surfaces and the heating plate.

- k) Check that the surface coating of the heating plate is intact and without scratches.
- l) Check that the heating plate is at the correct fusion temperature.
- m) Place the heating plate between the pipe faces. Close the butt fusion machine against the heating plate to apply the fusion pressure, including the measured additional pressure, until the specified bead width has been reached (see Figure 4).

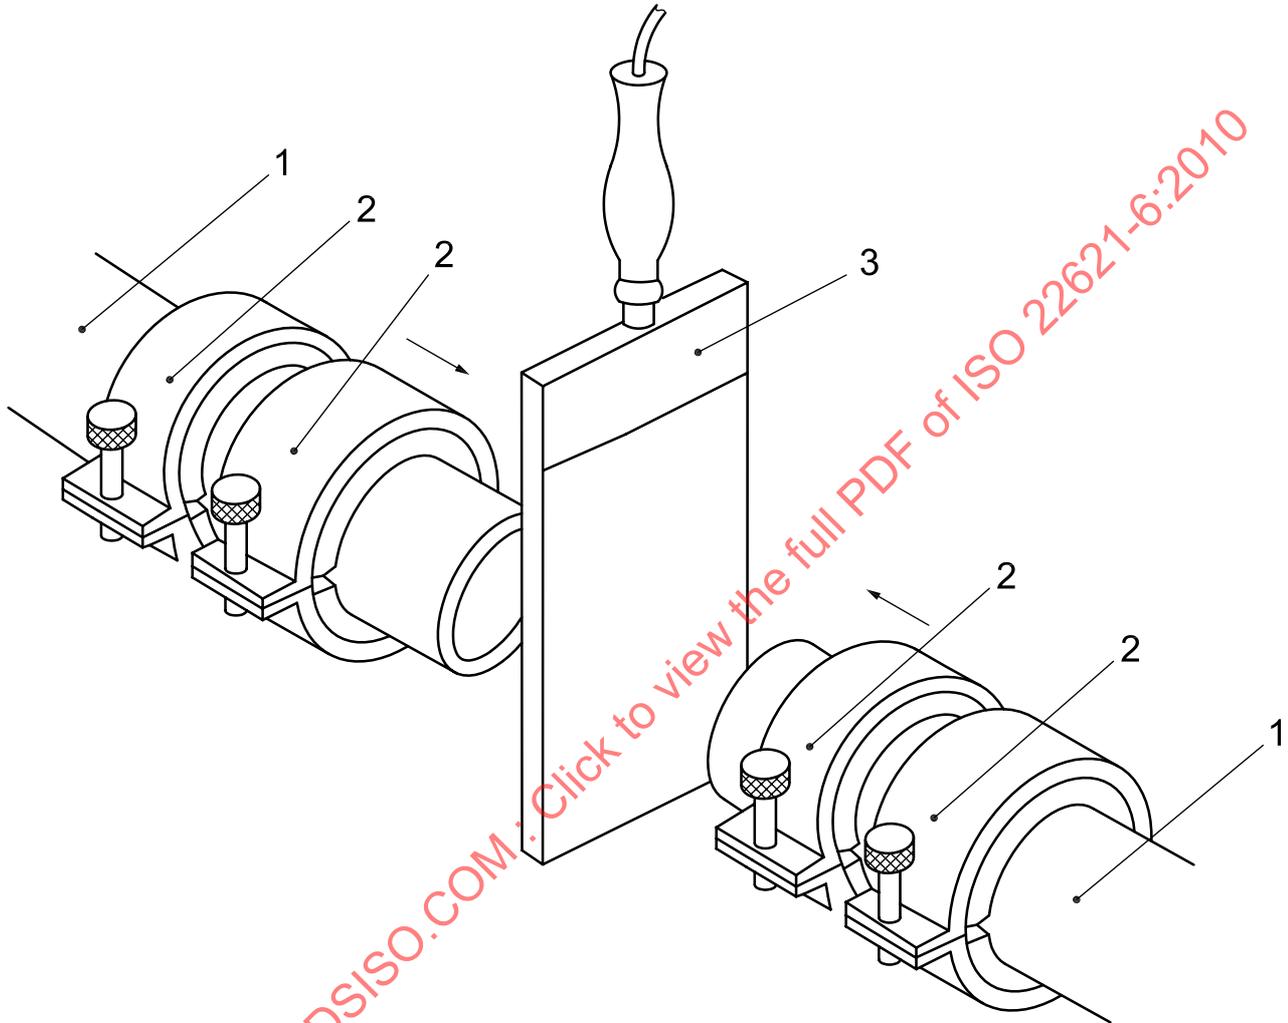

Key

- 1 pipe
- 2 clamp
- 3 heating plate

Figure 4 — Heating the spigot ends of pipes

- n) Reduce the pressure to a level at which contact is just maintained between the pipe ends and the heating plate.
- o) When the heat soak time has elapsed, open the butt fusion machine and remove the heating plate. Check the heated pipe ends quickly for possible damage to the melted ends caused by the removal of the heating plate, and close the butt fusion machine again. The period between opening and closing shall be within the maximum time given in the jointing procedure.

- p) Store the heating plate in a protective enclosure when not in use.
- q) The butt fusion machine shall remain closed and under pressure during the whole butt fusion time and subsequent cooling period. It is important that the cooling period be respected.
- r) When the butt fusion and cooling times have elapsed, release the pressure in the butt fusion machine.
- s) When removed, the pipe shall be handled with care.

6.4 Electrofusion jointing

6.4.1 General

The basic principle of joining such fittings by electrofusion consists of heating, using the Joule effect, an electrical coil incorporated in the internal surfaces (fusion surfaces) of the fitting, causing the material adjacent to the coil to melt and making the pipe and fitting surfaces fuse.

6.4.2 Temperature

The fusion operation may be carried out without any special precautions for variations in ambient temperature, provided these variations are within the limits specified in the jointing procedure. If some adjustment in the electrical power supplied to the fitting is necessary to cater for extreme ambient temperatures, the jointing procedure shall specify suitable electrofusion equipment.

6.4.3 Electrofusion equipment

The electrofusion equipment shall conform to ISO 12176-2.

As high-quality fusion joints cannot be made with fusion equipment in poor condition, maintenance of the fusion equipment is very important and shall be carried out on a regular basis.

As some types of fusion equipment are only suitable for use with fittings of a particular make and other types for use with electrofusion fittings of other makes, the jointing procedure shall specify the type of fusion equipment used.

The electrofusion control box is designed to provide, using an electrical power source (generator or domestic supply), the correct fusion parameters for the fitting, taking into account, if required, the ambient temperature. The fusion parameters are the applied voltage or current and the fusion time.

If a generator is used as the electrical power source, it shall be able to deliver the power required by the fitting, taking into account the electrical characteristics of the control box and the generator. Generators shall have suitable protection and security devices in accordance with relevant standards.

In some cases, the control box and generator may be available as a combined unit.

6.4.4 Electrofusion

6.4.4.1 Preparation

The following procedure gives an overview of the minimum operations necessary to prepare for electrofusion jointing.

a) General

Electrofusion fittings shall be kept in their protective wrapping until they are ready to be joined to a pipe or spigot fitting. The surfaces fused shall be dry before beginning the jointing procedure.

Ensure that the electrofusion fitting is suitable for use within the ambient temperature range and for the pipe or spigot fitting series or SDR value concerned.

Use rerounding and alignment clamps for all types of electrofusion fitting to minimize pipe ovality, misalignment and movement during the jointing and cooling phases.

Scrape the outer fusion surface of the pipe or spigot fitting to remove oxidized material. Perform this operation with a suitable tool, such as a manual or mechanical scraper. The use of a mechanical scraper is recommended. Scraping shall be performed round the entire circumference of the pipe or spigot fitting end. The scraping depth shall be specified in the jointing procedure.

b) Electrofusion fittings with socket ends


Cut the pipe square to the pipe axis using either a plastic-pipe cutter or a fine-toothed saw with a cutting guide. Deburr the inside edges with a knife.

Scrape the fusion area of the pipe or spigot ends. If required or necessary, clean the fusion area.

Make sure that the penetration can be checked (e.g. by marking the penetration depth). Slide the socket fitting onto the spigot ends and locate it correctly.

If tie-ins are used (see Figure 5), push the full length of the electrofusion socket onto one of the pipe ends and, after clamping both pipe ends, push it back such that both pipe ends are covered. Check the depth of penetration of both pipe ends.

STANDARDSISO.COM : Click to view the full PDF of ISO 22621-6:2010

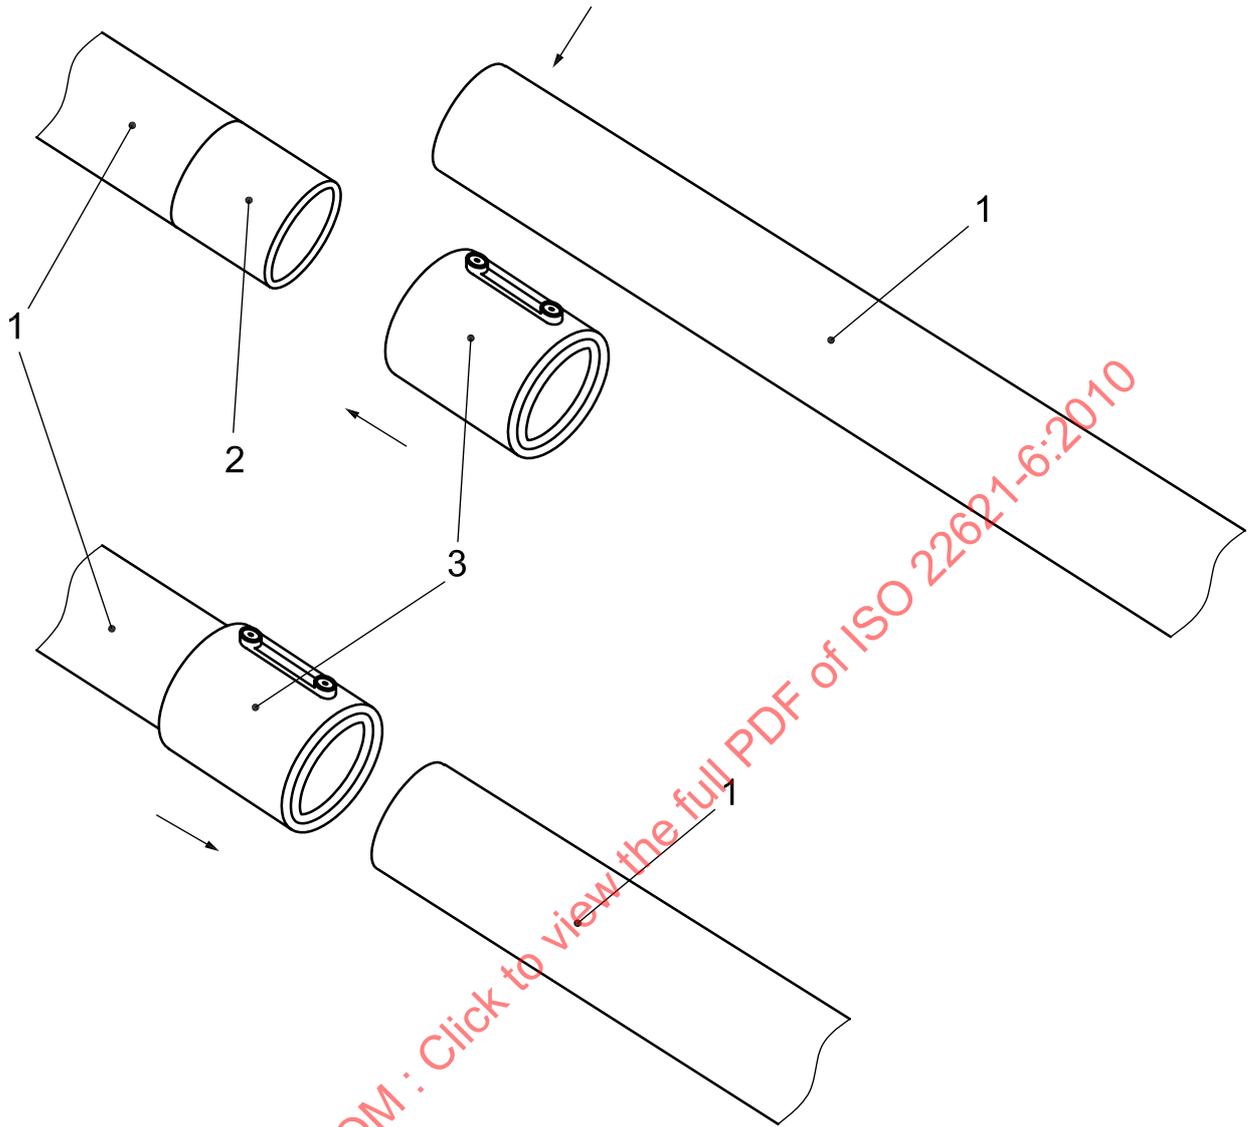**Key**

- 1 pipe
- 2 pipe end
- 3 tie-in


Figure 5 — Use of tie-ins

Fit an alignment clamp or positioning clamp and check the alignment of the pipe ends.

c) Electrofusion saddle fittings

Scrape the fusion area of the pipe. If required or necessary, clean the fusion area.

Place the saddle on the pipe in accordance with the installation instructions. If required, put an assembly tool on the pipe or saddle in accordance with the fitting manufacturer's installation instructions (see Figure 6).

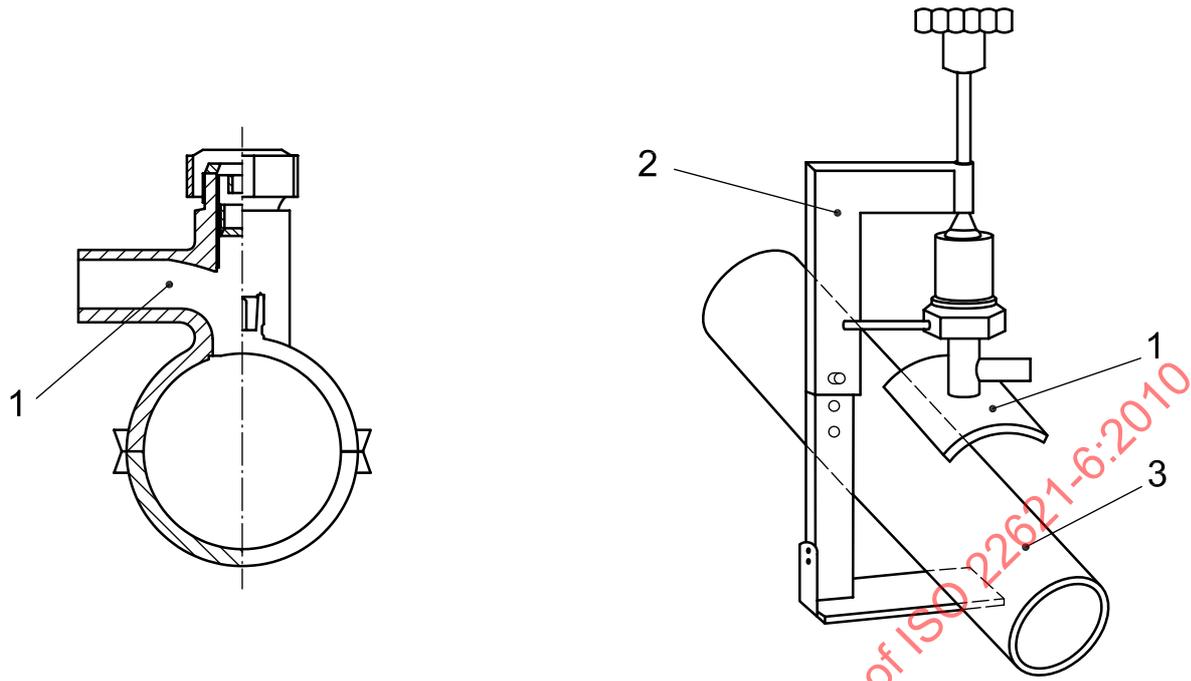

Key

- 1 saddle
- 2 assembly tool
- 3 pipe

Figure 6 — Example of installation of a saddle

6.4.4.2 Electrofusion operation

Set the control box to give the correct fusion parameters (e.g. voltage or current, times).

In the case of an automatic process, use the procedure suitable for the fitting and the control box concerned.

Check that the fusion cycle has been correctly completed.

6.4.4.3 Cooling

Leave the joint clamped for the time required for it to cool. Cooling times are normally prescribed by the manufacturer and are given in the jointing procedure.

When the clamps are removed, the pipe shall be handled with care.

6.5 Laying

6.5.1 General

Care shall be taken to prevent damage to the pipes and fittings during the whole of the laying process.

Changes in direction of a polyamide pipeline when laying can be made using pre-formed bends or elbow fittings or by making use, within limits, of the natural flexibility of the pipe. Natural flexibility may be used for bend radii $\geq 25 \times d_e$, and also for smaller radii for certain SDR values and materials, provided this is consistent with operational experience and good engineering practice.

Machine-bending of pipes or bending after the application of heat shall not be used.

The normal minimum clearance shall be ≥ 200 mm. If this minimum clearance cannot be observed, a protection barrier shall be installed. Special precautions shall be taken if the gas pipeline crosses or is laid alongside a hot water or steam pipeline, a petrol-carrying pipe, a petrol station or a high-voltage cable.

The position of the pipeline shall be recorded before backfilling.

To minimize the possibility of damage to the pipeline by external influences, one of the following measures can be taken:

- a) place a warning device, for example a hazard tape, along the top of the pipe;
- b) place a tracer wire at the same depth as the pipe to enable the pipe to be located again in future;
- c) install permanently visible above-ground markings, especially at road, railway and water crossings, at blow-off devices, on private land, at boundaries between plots of land and at points where the pipeline changes direction.

6.5.2 Trench

Excavating and backfilling of the trench shall be in accordance with the written procedure.

The width of the trench bottom shall be large enough to allow correct installation and backfilling.

If it should be necessary to perform any fusion jointing in the trench, the width of the trench may need to be larger, depending on the type of fusion jointing and the type of equipment used.

In uniform, relatively soft and fine-grained soils free of large flints, stones and other hard objects, and where the bottom of the trench can readily be brought to an even finish providing uniform support for the pipes over their whole length, it may be permissible to lay pipes of all nominal sizes without the need for special preparation of the trench bottom.

6.5.3 Drag forces

Pipes shall not be overstressed by tensile forces during laying. If the pipe is laid by drag, care shall be taken so that the drag force is not greater than the values given by Equation (2):

$$F = \frac{14\pi d_e^2}{3 \times \text{SDR}} \quad (2)$$

where

F is the maximum drag force, in newtons;

SDR is the standard dimension ratio;

d_e is the external diameter of the pipe, in millimetres;

Stresses caused by differences in temperature between laying and operation shall also be taken into consideration.

6.5.4 Metal-body valves

Valves are available with a metal body. With metal body valves, precautions shall be taken against corrosion.

Metal-body valves shall be installed, such that they do not expose the PA pipe to unnecessary stress during opening or closing.

6.5.5 Connection to existing systems

Where there can be a release of gas in the working area, static-charge accumulation shall be avoided.

In order to avoid static charges, the pipeline system shall be connected to earth during manipulations, for example by draping water-soaked cloths made of natural fibre over all pipes and fittings likely to be handled so that the cloths touch both the pipe and the ground.

6.5.6 Backfilling

Unless otherwise specified, buried pipelines and casings shall have a minimum soil cover of 0,6 m. Exceptions may be made for pipes entering metering or regulating boxes, but such pipes shall be protected against external interference. Greater soil cover shall be provided in areas of deep ploughing, drainage, roads with heavy traffic, and railway or waterway crossings.

Excavated materials may be used as backfill, provided they are free of stones and sharp objects likely to damage the pipe. If not, imported backfill may be used.

NOTE Attention is drawn to the need to take any applicable national or local regulations concerning backfill materials and minimum soil cover into account.

The pipe shall be uniformly supported; material around the pipe shall be compacted according to installation practice, so as to avoid excessive pipe ovality.

6.5.7 Pressure testing and commissioning

Pressure testing and commissioning shall be in accordance with EN 12327.

The test pressure selected for a pipeline shall be appropriate to its MOP.

NOTE Attention is drawn to the possible need to take national regulations concerning pipeline pressures into account.

Consideration shall be given to the need for any special precautions to be taken to protect persons and property if air or inert gas is used as the test medium.

For test temperatures below 0 °C, the possibility of a reduction in critical RCP pressure shall be taken into account in the pipeline preparation and test procedure adopted.

Pressurized PA pipelines at ambient temperature are subject to expansion by creep, which could affect the results of pressure testing. At higher test pressures, this effect can be significant. Appropriate allowance shall be made for pressure losses due to creep when interpreting pressure test results.

7 Storage, handling and transport

7.1 General

Polyamide pipes are available in coils or straight lengths. Fittings are normally individually packed.

Mishandling of the pipes and fittings shall be avoided. Poor handling techniques can result in gouges, scratches, cuts or holes (see 8.3.1).

7.2 Storage

Straight pipes shall be stacked on a reasonably flat surface, free of stones, other projections or sharp objects likely to deform or damage the pipes. Pipes and fittings shall be stored in such a way as to minimize the possibility of the material being damaged by crushing, piercing or extended exposure to direct sunlight.