

Issued 1967-12
Revised 2003-12

Superseding J322 JAN1996

**Nonmetallic Trim Materials—Test Method for Determining
the Staining Resistance to Hydrogen Sulfide Gas**

1. **Scope**—This SAE Recommended Practice is designed to reveal discoloration which may occur when nonmetallic materials used for trimming automobiles are exposed for a limited time to an atmosphere containing hydrogen sulfide.

NOTE 1—CAUTION—Hydrogen sulfide gas is extremely hazardous. Use of this substance may be fatal if proper precautions are not taken. This test method does not purport to address all of the safety problems associated with its use. It is the responsibility of the user of this document to establish appropriate safety and health practices and determine the applicability of regulatory limitations prior to use.

NOTE 2—A fume hood and adequate ventilation should be provided at all times during testing.

2. **References**

- 2.1 **Related Publications**—The following publications are provided for information purposes only and are not a required part of this document.

2.1.1 AATCC PUBLICATIONS—Available from American Association of Textile Chemists & Colorists, 1 Davis Drive, P.O. Box 12215, Research Triangle Park, NC 27709-2215, 919-549-8141, Fax 919-549-8933.

AATCC Evaluation Procedure 1 Gray Scale for Color Change

2.1.2 GLOBAL ENGINEERING DOCUMENTS—Available from Global Engineering, 15 Inverness Way East, Englewood CO 80112, Email:global@ihs.com.

SO 105-A02—Textiles—Tests for Colour Fastness—Part A02: Grey Scale for Assessing Change in Colour

3. **Materials and Equipment Required**

- 3.1 Hydrogen sulfide cylinder with valve.
- 3.2 Two test tubes approximately 38 x 200 mm.
- 3.3 Two two-hole stoppers to fit the test tubes.

SAE Technical Standards Board Rules provide that: "This report is published by SAE to advance the state of technical and engineering sciences. The use of this report is entirely voluntary, and its applicability and suitability for any particular use, including any patent infringement arising therefrom, is the sole responsibility of the user."

SAE reviews each technical report at least every five years at which time it may be reaffirmed, revised, or cancelled. SAE invites your written comments and suggestions.

Copyright © 2003 SAE International

All rights reserved. No part of this publication may be reproduced, stored in a retrieval system or transmitted, in any form or by any means, electronic, mechanical, photocopying, recording, or otherwise, without the prior written permission of SAE.

TO PLACE A DOCUMENT ORDER:

Tel: 877-606-7323 (inside USA and Canada)
Tel: 724-776-4970 (outside USA)
Fax: 724-776-0790
Email: custsvc@sae.org
<http://www.sae.org>

SAE WEB ADDRESS:

3.4 Miscellaneous glass tubing, cotton, plastic tubing, and pinch clamp as in Figure 1.

4. **Test Specimen**

4.1 Cut a 25 x 50 mm test specimen. (The test specimen must be of such a size and shape to allow for free passage of gas on all sides.)

5. **Procedure**

5.1 Assemble apparatus per Figure 1 and place under fume hood.

5.2 Insert test specimen into tube B.

5.3 Add approximately 50 mL of tap water to tube A. Insert cotton packing per Figure 1. Stopper tubes A and B.

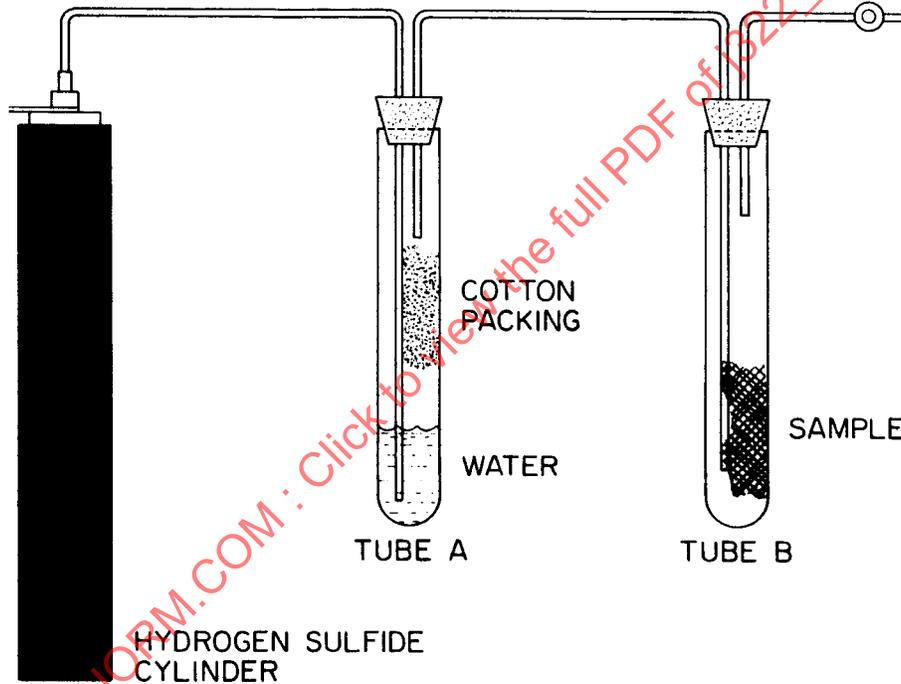


FIGURE 1—STAINING TEST DIAGRAM

5.4 Remove pinch clamp from exhaust hose of tube B and cautiously open the valve on the hydrogen sulfide cylinder. Adjust the valve so hydrogen sulfide gas bubbles through the system at a uniform and controlled rate, with a steady flow of bubbles at 5 bubbles/second.

5.5 Allow the system to purge for 1.5 min, then close the valve and immediately replace the pinch clamp on the exhaust hose of tube B.

5.6 Allow the system to remain in the closed position for an additional 2 min.

5.7 Remove the stopper of tube B and take out the test specimen.

SAE J322 Revised DEC2003

5.8 Compare the test specimen with an unexposed specimen of the same material and report any discoloration which has occurred using as a reference staining grey scale. (Grey Scale for Color Change, AATTC Evaluation Procedure 1, similar to ISO 105-A02.)

6. **Notes**

6.1 **Marginal Indicia**—The change bar (I) located in the left margin is for the convenience of the user in locating areas where technical revisions have been made to the previous issue of the report. An (R) symbol to the left of the document title indicates a complete revision of the report.

PREPARED BY THE SAE TEXTILES AND FLEXIBLE PLASTICS COMMITTEE

SAENORM.COM : Click to view the full PDF of j322_200312