

INTERNATIONAL STANDARD

NORME INTERNATIONALE



Industrial networks – Wireless communication network and communication profiles – WIA-PA

Réseaux industriels – Réseau de communications sans fil et profils de communication – WIA-PA

IECNORM.COM : Click to view the full PDF of IEC 62601 ed 2.0:2015



THIS PUBLICATION IS COPYRIGHT PROTECTED

Copyright © 2015 IEC, Geneva, Switzerland

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either IEC or IEC's member National Committee in the country of the requester. If you have any questions about IEC copyright or have an enquiry about obtaining additional rights to this publication, please contact the address below or your local IEC member National Committee for further information.

Droits de reproduction réservés. Sauf indication contraire, aucune partie de cette publication ne peut être reproduite ni utilisée sous quelque forme que ce soit et par aucun procédé, électronique ou mécanique, y compris la photocopie et les microfilms, sans l'accord écrit de l'IEC ou du Comité national de l'IEC du pays du demandeur. Si vous avez des questions sur le copyright de l'IEC ou si vous désirez obtenir des droits supplémentaires sur cette publication, utilisez les coordonnées ci-après ou contactez le Comité national de l'IEC de votre pays de résidence.

IEC Central Office
3, rue de Varembe
CH-1211 Geneva 20
Switzerland

Tel.: +41 22 919 02 11
Fax: +41 22 919 03 00
info@iec.ch
www.iec.ch

About the IEC

The International Electrotechnical Commission (IEC) is the leading global organization that prepares and publishes International Standards for all electrical, electronic and related technologies.

About IEC publications

The technical content of IEC publications is kept under constant review by the IEC. Please make sure that you have the latest edition, a corrigenda or an amendment might have been published.

IEC Catalogue - webstore.iec.ch/catalogue

The stand-alone application for consulting the entire bibliographical information on IEC International Standards, Technical Specifications, Technical Reports and other documents. Available for PC, Mac OS, Android Tablets and iPad.

IEC publications search - www.iec.ch/searchpub

The advanced search enables to find IEC publications by a variety of criteria (reference number, text, technical committee,...). It also gives information on projects, replaced and withdrawn publications.

IEC Just Published - webstore.iec.ch/justpublished

Stay up to date on all new IEC publications. Just Published details all new publications released. Available online and also once a month by email.

Electropedia - www.electropedia.org

The world's leading online dictionary of electronic and electrical terms containing more than 30 000 terms and definitions in English and French, with equivalent terms in 15 additional languages. Also known as the International Electrotechnical Vocabulary (IEV) online.

IEC Glossary - std.iec.ch/glossary

More than 60 000 electrotechnical terminology entries in English and French extracted from the Terms and Definitions clause of IEC publications issued since 2002. Some entries have been collected from earlier publications of IEC TC 37, 77, 86 and CISPR.

IEC Customer Service Centre - webstore.iec.ch/csc

If you wish to give us your feedback on this publication or need further assistance, please contact the Customer Service Centre: csc@iec.ch.

A propos de l'IEC

La Commission Electrotechnique Internationale (IEC) est la première organisation mondiale qui élabore et publie des Normes internationales pour tout ce qui a trait à l'électricité, à l'électronique et aux technologies apparentées.

A propos des publications IEC

Le contenu technique des publications IEC est constamment revu. Veuillez vous assurer que vous possédez l'édition la plus récente, un corrigendum ou amendement peut avoir été publié.

Catalogue IEC - webstore.iec.ch/catalogue

Application autonome pour consulter tous les renseignements bibliographiques sur les Normes internationales, Spécifications techniques, Rapports techniques et autres documents de l'IEC. Disponible pour PC, Mac OS, tablettes Android et iPad.

Recherche de publications IEC - www.iec.ch/searchpub

La recherche avancée permet de trouver des publications IEC en utilisant différents critères (numéro de référence, texte, comité d'études,...). Elle donne aussi des informations sur les projets et les publications remplacées ou retirées.

IEC Just Published - webstore.iec.ch/justpublished

Restez informé sur les nouvelles publications IEC. Just Published détaille les nouvelles publications parues. Disponible en ligne et aussi une fois par mois par email.

Electropedia - www.electropedia.org

Le premier dictionnaire en ligne de termes électroniques et électriques. Il contient plus de 30 000 termes et définitions en anglais et en français, ainsi que les termes équivalents dans 15 langues additionnelles. Egalement appelé Vocabulaire Electrotechnique International (IEV) en ligne.

Glossaire IEC - std.iec.ch/glossary

Plus de 60 000 entrées terminologiques électrotechniques, en anglais et en français, extraites des articles Termes et Définitions des publications IEC parues depuis 2002. Plus certaines entrées antérieures extraites des publications des CE 37, 77, 86 et CISPR de l'IEC.

Service Clients - webstore.iec.ch/csc

Si vous désirez nous donner des commentaires sur cette publication ou si vous avez des questions contactez-nous: csc@iec.ch.

INTERNATIONAL STANDARD

NORME INTERNATIONALE



Industrial networks – Wireless communication network and communication profiles – WIA-PA

Réseaux industriels – Réseau de communications sans fil et profils de communication – WIA-PA

INTERNATIONAL
ELECTROTECHNICAL
COMMISSION

COMMISSION
ELECTROTECHNIQUE
INTERNATIONALE

ICS 25.040.40 ; 35.100.05

ISBN 978-2-8322-3040-4

Warning! Make sure that you obtained this publication from an authorized distributor.
Attention! Veuillez vous assurer que vous avez obtenu cette publication via un distributeur agréé.

CONTENTS

FOREWORD	13
1 Scope	15
2 Normative references	15
3 Terms, definitions and abbreviations	15
3.1 Terms and definitions	15
3.2 Abbreviations	19
4 Definition of data types	21
5 WIA-PA overview	22
5.1 Device types	22
5.2 Network topology	22
5.3 Protocol architecture	24
5.4 Interconnection	25
6 System management	26
6.1 General	26
6.2 Framework of system management	27
6.3 Joining process	28
6.3.1 Provisioning process	28
6.3.2 Joining process of routing device	29
6.3.3 Joining process of field device	30
6.3.4 Addressing and address assignment	31
6.4 Virtual Communication Relationship (VCR)	32
6.4.1 Definition	32
6.4.2 Protocol support for VCR	33
6.4.3 VCR establishment	33
6.4.4 VCR release	34
6.5 Routing configuration and communication resource allocation	34
6.5.1 Routing configuration	34
6.5.2 Framework of communication resource allocation	34
6.5.3 DLPDU priority and scheduling rules	35
6.5.4 Communication resource allocation to routing device	35
6.5.5 Communication resource allocation to field device	37
6.6 Aggregation and disaggregation	39
6.6.1 Aggregation	39
6.6.2 Disaggregation	41
6.6.3 An example of the two level aggregation process	41
6.6.4 Management of aggregation and disaggregation objects	43
6.7 Performance monitoring	45
6.7.1 Path failure report	45
6.7.2 Device status report	45
6.7.3 Channel condition report	46
6.8 Leaving process	46
6.8.1 General	46
6.8.2 Leaving process of routing device	46
6.8.3 Leaving process of field device	48
6.9 Management information base and services	49
6.9.1 Management information base	49

6.9.2	MIB services	63
7	Physical layer	65
7.1	General	65
7.2	General requirements based on IEEE STD 802.15.4-2011	66
7.3	Additional requirements	67
7.3.1	General	67
7.3.2	Frequency allocations	67
7.3.3	Channel numbers and frequency assignments	67
7.3.4	Radio transceivers	67
7.3.5	Unspecified or improved required radio performance	67
7.3.6	Transmit power	68
7.3.7	Output power control	68
7.3.8	Receiver sensitivity	68
7.3.9	PHY PIB attributes	68
8	Data link layer	69
8.1	General	69
8.2	Protocol stack	69
8.3	MAC overview and function extension	70
8.3.1	MAC overview	70
8.3.2	General requirements based on IEEE STD 802.15.4-2011	70
8.3.3	MAC function extension	73
8.4	DLSL function description	74
8.4.1	General	74
8.4.2	Coexistence	75
8.4.3	Timeslot communication	75
8.4.4	WIA-PA superframe	76
8.4.5	Frequency hopping	76
8.4.6	Transmission of long cycle data	78
8.4.7	Retry strategy	79
8.4.8	Management service	79
8.4.9	Radio link quality and channel condition measurement	79
8.4.10	Security	80
8.4.11	Country code	80
8.4.12	DLSL state machine	80
8.5	Data link sub-layer data services	86
8.5.1	General	86
8.5.2	DLDE-DATA.request	86
8.5.3	DLDE-DATA.confirm	87
8.5.4	DLDE-DATA.indication	88
8.5.5	Time sequence of DLSL data service	89
8.6	Data link sub-layer management services	90
8.6.1	General	90
8.6.2	Network discovery services	90
8.6.3	Device joining services	92
8.6.4	Device leaving services	94
8.6.5	DLME-CHANNEL-CONDITION.indication	96
8.6.6	DLME-NEIGHBOUR-INFO.indication	96
8.6.7	DLME-COMM-STATUS.indication	97
8.6.8	Keep-alive services	97

8.6.9	Time synchronization services	98
8.7	DLSL frame formats	99
8.7.1	General frame format	99
8.7.2	Date frame format	100
8.7.3	Command frame format	100
9	Network layer	102
9.1	General	102
9.2	Protocol stack	102
9.3	Function description	103
9.3.1	General	103
9.3.2	Addressing	103
9.3.3	Routing	104
9.3.4	Packet lifecycle management	104
9.3.5	Joining and leaving network of device	104
9.3.6	End-to-end network performance monitoring	105
9.3.7	Fragmentation and reassembly	105
9.3.8	Network layer state machine	105
9.4	Network layer data services	110
9.4.1	General	110
9.4.2	NLDE-DATA.request	110
9.4.3	NLDE-DATA.confirm	111
9.4.4	NLDE-DATA.indication	111
9.4.5	Time sequence of NL data services	112
9.5	Network layer management services	112
9.5.1	General	112
9.5.2	Network communication status report services	112
9.5.3	Network joining services	115
9.5.4	Network leaving services	120
9.5.5	Cluster member report services	124
9.5.6	Neighbour information report services	126
9.5.7	Route allocation services	128
9.5.8	Communication resource allocation services	134
9.5.9	Aggregation and disaggregation services	150
9.5.10	Device status report services	151
9.5.11	Channel condition report services	153
9.5.12	Failure path report services	155
9.5.13	Network attribute getting services	156
9.5.14	Network attribute setting services	160
9.6	Network layer packet formats	163
9.6.1	Common packet format	163
9.6.2	Data packet format	164
9.6.3	Aggregated packet format	165
9.6.4	Command packet format	165
10	Application layer	182
10.1	Overview	182
10.1.1	General	182
10.1.2	AL structure	182
10.1.3	Functions of UAP	182
10.1.4	Functions of ASL	183

10.2	UAP	183
10.2.1	General	183
10.2.2	UAO	183
10.2.3	Method definition	184
10.3	Application sub-layer	188
10.3.1	General	188
10.3.2	Application sub-layer data entity	188
10.4	Application sub-layer packet formats	193
10.4.1	General	193
10.4.2	ASL general packet format	193
10.4.3	Packet formats	195
11	Security	196
11.1	General	196
11.2	Security management framework	197
11.3	Secure communication protocol stack	198
11.3.1	General	198
11.3.2	Data link sub-layer security	199
11.3.3	Application sub-layer security	200
11.4	Key management	201
11.4.1	Key type	201
11.4.2	Key distribution	202
11.4.3	Key update	202
11.4.4	Key status	202
11.5	Secure joining process	203
11.5.1	Secure joining process of a new WIA-PA device	203
11.5.2	Device security material getting services	204
11.6	Secure transportation	211
11.6.1	Process of secure transportation from field device to host configuration computer	211
11.6.2	Process of secure transportation from host configuration computer to field device	212
Annex A	(informative) Security strategy for WIA-PA network	213
A.1	Risk analysis for WIA-PA network	213
A.2	Security principles for WIA-PA network	213
A.3	Security objectives for WIA-PA network	213
A.4	Graded and layered security system	213
Annex B	(informative) Format description	215
B.1	Time sequence diagram	215
B.2	Packet or frame format	215
Annex C	(informative) Example of UAO	217
C.1	General	217
C.2	Analog input object	217
C.2.1	Overview	217
C.2.2	Class attribute of AIO	217
C.2.3	Instance attribute of AIO	217
Annex D	(informative) Country-specific and region-specific provisions	219
Annex E	(informative) Regional modification for compliance with ETSI standards	220
E.1	General	220
E.2	Compliance with EN 300 440-2 V1.4.1	220

E.3 Compliance with EN 300 328 V1.8.1	220
Bibliography.....	222
Figure 1 – Example of WIA-PA physical topology (combination of star and mesh).....	23
Figure 2 – Example of WIA-PA physical topology (star-only)	23
Figure 3 – OSI basic reference model mapped to WIA-PA	24
Figure 4 – The architecture of WIA-PA gateway	25
Figure 5 – DMAP in system management.....	26
Figure 6 – Hybrid centralized and distributed system management scheme	28
Figure 7 – Joining process of routing device through the gateway device.....	29
Figure 8 – Joining process of routing device through an online routing device	30
Figure 9 – Joining process of field device through a gateway device.....	31
Figure 10 – Joining process of field device through a routing device	31
Figure 11 – Long address structure of device.....	31
Figure 12 – Short address structure of routing device	32
Figure 13 – Short address structure of field device	32
Figure 14 – An example of resource allocation.....	35
Figure 15 – Allocation process of routing device's communication resources	36
Figure 16 – Allocation process of field device's communication resources	38
Figure 17 – Example of aggregation and disaggregation	42
Figure 18 – Process of path failure report	45
Figure 19 – Device status report process of field device	45
Figure 20 – Device status report process of routing device	46
Figure 21 – Process of channel condition report	46
Figure 22 – Active leaving process of routing device.....	47
Figure 23 – Passive leaving process of routing device	47
Figure 24 – Active leaving process of field device (leaving from gateway device).....	48
Figure 25 – Active leaving process of field device (leaving from routing device).....	48
Figure 26 – Passive leaving process of field device (leaving from gateway device)	49
Figure 27 – Passive leaving process of field device (leaving from routing device)	49
Figure 28 – WIA-PA DLL protocol stack	69
Figure 29 – WIA-PA DLSL reference model	75
Figure 30 – WIA-PA superframe	76
Figure 31 – R1, R2 and R3 superframe structures	78
Figure 32 – An example of long cycle data transmission	79
Figure 33 – DLSL state machine for device joining.....	81
Figure 34 – DLSL state machine for in-network running	83
Figure 35 – Time sequence of data service	89
Figure 36 – Time sequence of network discovery.....	92
Figure 37 – General frame format	99
Figure 38 – WIA-PA network layer protocol stack.....	102
Figure 39 – WIA-PA network layer reference model	103
Figure 40 – Network layer state machine	105

Figure 41 – Time sequence of NL data services	112
Figure 42 – Time sequence for field device joining through routing device	118
Figure 43 – One-hop joining process for routing device	119
Figure 44 – Multi-hop join process of routing device	119
Figure 45 – Active leaving process of field device (leaving routing device)	122
Figure 46 – Passive leaving of field device	122
Figure 47 – Active leaving process of routing device	123
Figure 48 – Passive leaving process of routing device	123
Figure 49 – Cluster member reporting process	126
Figure 50 – Neighbour information reporting process	128
Figure 51 – Time sequence for route adding	130
Figure 52 – Time sequence for route updating	132
Figure 53 – Time sequence for route deleting	134
Figure 54 – Adding a link originating from gateway device to routing device	137
Figure 55 – Adding a link originating from routing device to field device	137
Figure 56 – Updating a link originating by gateway device to routing device	139
Figure 57 – Updating a link originating from routing device to field device	140
Figure 58 – Releasing a link originating from gateway device to routing device	142
Figure 59 – Releasing a link originating from routing device to field device	142
Figure 60 – Adding a superframe originating from gateway device to routing device	144
Figure 61 – Adding a superframe originating from routing device to field device	144
Figure 62 – Updating a superframe originating from gateway device to routing device	146
Figure 63 – Updating a superframe originating from routing device to field device	147
Figure 64 – Releasing a superframe originating from gateway device to routing device	149
Figure 65 – Releasing a superframe originating from routing device to field device	149
Figure 66 – Device status reporting process from field device to routing device	152
Figure 67 – Device status reporting process from routing device to gateway device	153
Figure 68 – Channel condition reporting process from field device to routing device	154
Figure 69 – Channel condition reporting process from routing device to gateway device	155
Figure 70 – Failure path reporting process	156
Figure 71 – AL structure	182
Figure 72 – User application process	183
Figure 73 – C/S communication process	191
Figure 74 – P/S communication process (disable aggregation function)	192
Figure 75 – P/S communication process (enable aggregation function)	192
Figure 76 – R/S communication process	193
Figure 77 – Security management framework of WIA-PA network	197
Figure 78 – Security communication protocol stack	199
Figure 79 – Key lifecycle	202
Figure 80 – Secure joining process of WIA-PA device	203
Figure 81 – Time sequence for field device joining (field device to routing device)	207
Figure 82 – Time sequence for field device joining (routing device to gateway device)	208
Figure 83 – One-hop joining process for routing device	209

Figure 84 – Multi-hop join process of routing device (new routing device to routing device).....	210
Figure 85 – Multi-hop join process of routing device (routing device to gateway device)	211
Figure B.1 – Time sequence diagram.....	215
Table 1 – Definition of data types.....	22
Table 2 – Protocol support for VCR.....	33
Table 3 – Relations between VCR and aggregation function	39
Table 4 – Format of aggregated data followed by field device's DAGO.....	41
Table 5 – Format of aggregated packet followed by routing device's PAGO	41
Table 6 – DAGO class attributes	43
Table 7 – DAGO instance attributes	43
Table 8 – MEM_STRUCT structure	44
Table 9 – PAGO class attributes	44
Table 10 – PAGO instance attributes	44
Table 11 – DGO class attributes	44
Table 12 – DGO instance attributes	45
Table 13 – Unstructured attributes (1 of 5).....	50
Table 14 – Structured attributes.....	55
Table 15 – NLRoute_Struct structure	56
Table 16 – Superframe_Struct structure.....	56
Table 17 – Link_Struct structure	57
Table 18 – Neighbour_Struct structure.....	58
Table 19 – ChanCon_Struct structure.....	58
Table 20 – Device_struct structure (1 of 3)	59
Table 21 – VCR_Struct structure.....	61
Table 22 – DevConRep_Struct structure	62
Table 23 – Key_Struct structure.....	62
Table 24 – ObjList_Struct structure.....	62
Table 25 – DMAP-MIB-GET.request parameters	63
Table 26 – DMAP-MIB-GET.confirm parameters	64
Table 27 – DMAP-MIB-SET.request parameters	64
Table 28 – DMAP-MIB-SET.confirm parameters.....	65
Table 29 – PHY protocol selection	66
Table 30 – Frequency band and data rate	67
Table 31 – Frequency assignments.....	67
Table 32 – PHY PIB attributes (1 of 2)	68
Table 33 – MAC protocol selection (1 of 2)	71
Table 34 – MAC PIB attributes.....	73
Table 35 – MAC extended PIB attributes.....	73
Table 36 – Beacon payload.....	74
Table 37 – Format of Capability Information field	74
Table 38 – Hopping mechanisms	77

Table 39 – DLSL state transitions for device joining	82
Table 40 – DLSL state transitions for in-network running (1 of 3)	83
Table 41 – DLDE-DATA.request parameters	87
Table 42 – DLDE-DATA.confirm parameters	88
Table 43 – Status table	88
Table 44 – DLDE-DATA.indication parameters	89
Table 45 – DLME-DISCOVERY.request parameters	90
Table 46 – DLME- DISCOVERY.confirm parameters	91
Table 47 – Network descriptor list	91
Table 48 – DLME-JOIN.request parameters	93
Table 49 – DLME-JOIN.indication parameters	93
Table 50 – DLME-JOIN.response parameters	94
Table 51 – DLME-JOIN.confirm parameters	94
Table 52 – DLME-LEAVE.request parameters	95
Table 53 – DLME-LEAVE.indication parameters	95
Table 54 – DLME-LEAVE.confirm parameters	95
Table 55 – DLME-CHANNEL-CONDITION.indication parameters	96
Table 56 – DLME-NEIGHBOUR-INFO.indication parameters	96
Table 57 – DLME-COMM-STATUS.indication parameters	97
Table 58 – DLME -KEEP-LIVE.confirm parameters	98
Table 59 – DLME -KEEP-LIVE.indication parameters	98
Table 60 – DLME-TIME-SYN.request parameters	98
Table 61 – DLME -TIME-SYN.confirm parameters	99
Table 62 – DLME-TIME-SYN.indication parameters	99
Table 63 – DLSL frame control field	100
Table 64 – Date frame format	100
Table 65 – General command frame format	100
Table 66 – DLSL command frame	101
Table 67 – Format of keep-alive command frame	101
Table 68 – Format of time synchronization command frame	102
Table 69 – Example of a routing table	104
Table 70 – NL state transitions (1 of 4)	106
Table 71 – NLDE-DATA.request parameters	111
Table 72 – NLDE-DATA.confirm parameters	111
Table 73 – NLDE-DATA.indication parameters	112
Table 74 – NLME-COMM-STATUS.request parameters	113
Table 75 – NLME-COMM-STATUS.indication parameters	114
Table 76 – NLME-COMM-STATUS.confirm parameters	114
Table 77 – NLME-JOIN.request parameters	115
Table 78 – NLME-JOIN.indication parameters	116
Table 79 – NLME-JOIN.response parameters	116
Table 80 – NLME-JOIN.confirm parameters	117
Table 81 – NLME-LEAVE.request parameters	120

Table 82 – NLME-LEAVE.indication parameters	120
Table 83 – NLME-LEAVE.response parameters	121
Table 84 – NLME-LEAVE.confirm parameters	121
Table 85 – NLME-RPT-CLRMEM.request parameters	124
Table 86 – NLME-RPT-CLRMEM.confirm parameter	124
Table 87 – NLME-RPT-CLRMEM.response parameters	125
Table 88 – NLME-NEIGHBOUR-INFO.request parameters	126
Table 89 – NLME-NEIGHBOUR-INFO.confirm parameter	127
Table 90 – NLME-ADD_ROUTE.request parameters	128
Table 91 – NLME-ADD_ROUTE.confirm parameters	129
Table 92 – NLME-UPDATE_ROUTE.request parameters	130
Table 93 – NLME-UPDATE_ROUTE.confirm parameter	131
Table 94 – NLME-UPDATE_ROUTE.request parameters	132
Table 95 – NLME-DELETE_ROUTE.confirm parameters	133
Table 96 – NLME-ADD-LINK.request parameters	135
Table 97 – NLME-ADD-LINK.confirm parameters	136
Table 98 – NLME-UPDATE-LINK.request parameters	138
Table 99 – NLME-UPDATE-LINK.confirm parameters	138
Table 100 – NLME-RELEASE-LINK.request parameters	140
Table 101 – NLME-RELEASE-LINK.confirm parameters	141
Table 102 – NLME-ADD-SFR.request parameters	143
Table 103 – NLME-ADD-SFR.confirm parameters	143
Table 104 – NLME-UPDATA-SFR.request parameters	145
Table 105 – NLME-UPDATE-SFR.confirm parameters	145
Table 106 – NLME-RELEASE-SFR.request parameters	147
Table 107 – NLME-RELEASE-SFR.confirm parameters	148
Table 108 – NLME-AGG.indication parameters	150
Table 109 – NLME-AGO-SEND.request parameters	150
Table 110 – NLME-DAG.indication parameter	151
Table 111 – NLME-DEVICE -STATUS.request parameters	151
Table 112 – NLME-DEVICE -STATUS.indication parameters	152
Table 113 – NLME-DEVICE -STATUS.confirm parameter	152
Table 114 – NLME-CHANNEL-CONDITION.request parameters	153
Table 115 – NLME-CHANNEL-CONDITION.indication parameters	154
Table 116 – NLME-CHANNEL-CONDITION.confirm parameter	154
Table 117 – NLME-PATH_FAILURE.request parameters	155
Table 118 – NLME-PATH_FAILURE.indication parameters	156
Table 119 – NLME-PATH_FAILURE.confirm parameters	156
Table 120 – NLME-INFO_GET.request parameters	157
Table 121 – NLME-INFO_GET.indication parameters	158
Table 122 – NLME-INFO_GET.response parameters	159
Table 123 – NLME-INFO_GET.confirm parameters	160
Table 124 – NLME-INFO_SET.request parameters	161

Table 125 – NLME-INFO_SET.indication parameters	161
Table 126 – NLME-SET.response parameters	162
Table 127 – NLME-SET.confirm parameters	163
Table 128 – Network layer common packet format	163
Table 129 – Control field format	163
Table 130 – Network layer data packet format	164
Table 131 – Aggregated packet format	165
Table 132 – Format of NL command packet	166
Table 133 – Network layer command packet	166
Table 134 – Execution results of commands	167
Table 135 – Format of joining request packet	167
Table 136 – Format of joining response packet	168
Table 137 – Format of communication status report request packet	168
Table 138 – Format of leaving request packet	169
Table 139 – Value of Leaving reason	169
Table 140 – Format of leaving response packet	169
Table 141 – Format of cluster member report request packet	169
Table 142 – Format of cluster member report response packet	170
Table 143 – Format of neighbour information report request packet	170
Table 144 – Format of route adding request packet	171
Table 145 – Format of route adding response packet	171
Table 146 – Format of route update request packet	171
Table 147 – Format of route update response packet	172
Table 148 – Format of route deleting request packet	172
Table 149 – Format of route deleting response packet	172
Table 150 – Format of link adding request packet	173
Table 151 – Format of link adding response packet	173
Table 152 – Format of link update request packet	174
Table 153 – Format of link update response packet	174
Table 154 – Format of link release request packet	175
Table 155 – Format of link release response packet	175
Table 156 – Format of superframe adding request packet	175
Table 157 – Format of superframe adding response packet	176
Table 158 – Format of superframe update request packet	176
Table 159 – Format of superframe update response packet	177
Table 160 – Format of superframe release request packet	177
Table 161 – Format of superframe release response packet	177
Table 162 – Format of device condition report request packet	178
Table 163 – Format of device condition information field	178
Table 164 – Format of channel condition report request packet	179
Table 165 – Format of channel quality information field	179
Table 166 – Format of path failure report request packet	179
Table 167 – Format of attribute getting request packet	180

Table 168 – Format of attribute getting response packet.....	180
Table 169 – Format of attribute setting request packet.....	181
Table 170 – Format of attribute setting response packet	181
Table 171 – UAO method definition.....	185
Table 172 – Request format of READ method	185
Table 173 – Response format of READ method	185
Table 174 – Request format of WRITE method	186
Table 175 – Response format of WRITE method	186
Table 176 – Format of PUBLISH method	187
Table 177 – Format of REPORT method	187
Table 178 – Format of REPORT ACK method	187
Table 179 – ASLDE-DATA.request parameters	189
Table 180 – ASLDE-DATA.confirm parameters	189
Table 181 – ASLDE-DATA.indication parameters.....	190
Table 182 – ASLDE-AGG.request parameters	190
Table 183 – ASLDE-DAG.indication parameters	191
Table 184 – Application sub-layer general packet format	193
Table 185 – Packet control field format	194
Table 186 – Packet type subfield value	194
Table 187 – ASL data packet format	195
Table 188 – ASL acknowledgement packet format	196
Table 189 – Format of security DLPDU	199
Table 190 – Format of DLSSL security header	200
Table 191 – Structure of security control field in DLSSL security header	200
Table 192 – Structure of security material control field in DLSSL security header.....	200
Table 193 – Security APDU structure	201
Table 194 – Structure of ASL security header field	201
Table 195 – DLME-SEC.request parameters.....	204
Table 196 – DLME-SEC.indication parameters.....	204
Table 197 – DLME-SEC.response parameters	205
Table 198 – DLME-SEC.confirm parameters	206
Table A.1 – Graded and layered security measures for WIA-PA network.....	214
Table A.2 – Security levels of data packets.....	214
Table B.1 – Packet or frame format in octet(s)	215
Table B.2 – Subfield format in bit(s).....	216
Table C.1 – AIO class attribute	217
Table C.2 – AIO instance attributes	218
Table E.1 – Applicable EN 300 440-2 requirements list	220
Table E.2 – Applicable EN 300 328 requirements list	220
Table E.3 – Timeslot timing definitions and calculations.....	221

INTERNATIONAL ELECTROTECHNICAL COMMISSION

**INDUSTRIAL NETWORKS –
WIRELESS COMMUNICATION NETWORK
AND COMMUNICATION PROFILES –
WIA-PA****FOREWORD**

- 1) The International Electrotechnical Commission (IEC) is a worldwide organization for standardization comprising all national electrotechnical committees (IEC National Committees). The object of IEC is to promote international co-operation on all questions concerning standardization in the electrical and electronic fields. To this end and in addition to other activities, IEC publishes International Standards, Technical Specifications, Technical Reports, Publicly Available Specifications (PAS) and Guides (hereafter referred to as “IEC Publication(s)”). Their preparation is entrusted to technical committees; any IEC National Committee interested in the subject dealt with may participate in this preparatory work. International, governmental and non-governmental organizations liaising with the IEC also participate in this preparation. IEC collaborates closely with the International Organization for Standardization (ISO) in accordance with conditions determined by agreement between the two organizations.
- 2) The formal decisions or agreements of IEC on technical matters express, as nearly as possible, an international consensus of opinion on the relevant subjects since each technical committee has representation from all interested IEC National Committees.
- 3) IEC Publications have the form of recommendations for international use and are accepted by IEC National Committees in that sense. While all reasonable efforts are made to ensure that the technical content of IEC Publications is accurate, IEC cannot be held responsible for the way in which they are used or for any misinterpretation by any end user.
- 4) In order to promote international uniformity, IEC National Committees undertake to apply IEC Publications transparently to the maximum extent possible in their national and regional publications. Any divergence between any IEC Publication and the corresponding national or regional publication shall be clearly indicated in the latter.
- 5) IEC itself does not provide any attestation of conformity. Independent certification bodies provide conformity assessment services and, in some areas, access to IEC marks of conformity. IEC is not responsible for any services carried out by independent certification bodies.
- 6) All users should ensure that they have the latest edition of this publication.
- 7) No liability shall attach to IEC or its directors, employees, servants or agents including individual experts and members of its technical committees and IEC National Committees for any personal injury, property damage or other damage of any nature whatsoever, whether direct or indirect, or for costs (including legal fees) and expenses arising out of the publication, use of, or reliance upon, this IEC Publication or any other IEC Publications.
- 8) Attention is drawn to the Normative references cited in this publication. Use of the referenced publications is indispensable for the correct application of this publication.
- 9) Attention is drawn to the possibility that some of the elements of this IEC Publication may be the subject of patent rights. IEC shall not be held responsible for identifying any or all such patent rights.

International Standard IEC 62601 has been prepared by subcommittee 65C: Industrial networks, of IEC technical committee 65: Industrial process measurement, control and automation.

This second edition cancels and replaces the first edition published in 2011. This edition constitutes a technical revision.

This edition includes the following significant technical changes with respect to the previous edition:

- changed IEEE STD 802.15.4-2006 to IEEE STD 802.15.4-2011 and added common modification for IEEE STD 802.15.4-2011 MAC profile, PHY profile and IEEE STD 802.15.4-2011 related references;
- added common modifications for regional adoption and added Annex D and Annex E;

- deleted extended MAC management services and added two DLSL management services;
- added specific state machines for DLSL and NL;
- unified representation of frame format and packet format;
- changed format of definition of data types;
- added detailed description of technologies for clearer understanding;
- provided support for CCA modes 1, 2, and 3.

The reader's attention is drawn to the fact that Annex E lists all of the “in-some-country” clauses on differing practices of a less permanent nature relating to the subject of this standard.

The text of this standard is based on the following documents:

FDIS	Report on voting
65C/821/FDIS	65C/833/RVD

Full information on the voting for the approval of this standard can be found in the report on voting indicated in the above table.

This publication has been drafted in accordance with the ISO/IEC Directives, Part 2.

The committee has decided that the contents of this publication will remain unchanged until the stability date indicated on the IEC web site under "<http://webstore.iec.ch>" in the data related to the specific publication. At this date, the publication will be

- reconfirmed,
- withdrawn,
- replaced by a revised edition, or
- amended.

IMPORTANT – The 'colour inside' logo on the cover page of this publication indicates that it contains colours which are considered to be useful for the correct understanding of its contents. Users should therefore print this document using a colour printer.

INDUSTRIAL NETWORKS – WIRELESS COMMUNICATION NETWORK AND COMMUNICATION PROFILES – WIA-PA

1 Scope

This International Standard specifies the system architecture and the communication protocol of Wireless networks for Industrial Automation – Process Automation (WIA-PA) that is built on IEEE STD 802.15.4-2011.

2 Normative references

The following documents, in whole or in part, are normatively referenced in this document and are indispensable for its application. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO/IEC 9899, *Information technology – Programming languages – C*

ISO 3166-1, *Codes for the representation of names of countries and their subdivisions – Part 1: Country codes*

IEEE STD 802.15.4-2011, *IEEE Standard for Local and metropolitan area networks – Part 15.4: Low-Rate Wireless Personal Area Networks (LR-WPANs)*

3 Terms, definitions and abbreviations

3.1 Terms and definitions

3.1.1

absolute timeslot number

number of timeslots from the start of the network, generally denoting the current timeslot

3.1.2

active leaving

process by which an online field device is allowed to leave the network through applying to its routing device or by which an online routing device is allowed to leave the network through applying to the gateway device

3.1.3

adaptive frequency hopping

change of communication channels according to actual condition of channels in every timeslot during the intra-cluster period of WIA-PA superframe

3.1.4

adaptive frequency switch

change of communication channels according to the actual condition of channels during the beacon frame and active period in a superframe cycle, and using different channels in different superframe cycles

3.1.5

aggregation

merging of data from multiple user application objects or merging of several packets from cluster members into one packet

3.1.6

application sub-layer

protocol sub-layer that provides data and management services for the application layer

3.1.7

beacon

special frame broadcast by the routing devices or the gateway device in the WIA-PA network

3.1.8

broadcast

sending one packet to all WIA-PA devices simultaneously

3.1.9

channel

RF medium used to convey a packet from a sender to a receiver

3.1.10

cluster

logical group of devices that is comprised of a routing device and field devices

3.1.11

clusterhead

manager in a cluster, performed by the routing device

3.1.12

clustermember

data source in a cluster, performed by a field device

3.1.13

coexistence

ability of one network to perform its task in a given shared environment without disturbing or being disturbed by other networks

Note 1 to entry: These networks may or may not have the same set of rules.

3.1.14

communication resource

channels and timeslots used to transport a frame

3.1.15

WIA-PA configuration software

software tool for configuring a WIA-PA network and devices

3.1.16

data link sub-layer

upper layer of the IEEE STD 802.15.4-2011 MAC layer, used to handle the aspects of network topology and communication resources in the WIA-PA network

3.1.17

disaggregation

dividing the merged packet into data of user application objects

3.1.18**field device**

device usable in the field, which is connected to or controls the process

3.1.19**frame**

format of aggregated bits from the medium access control (MAC) entity that are transmitted together in time

[SOURCE: IEEE STD 802.15.4-2011]

3.1.20**frequency hopping**

change of transmitting/receiving frequency to combat interference and fading

3.1.21**gateway device**

device connecting the WIA-PA network to other plant networks

3.1.22**handheld device**

portable device used for provisioning, firmware updating, and device status monitoring

3.1.23**hop**

movement of a packet directly between two adjacent neighbour devices in one network transaction without the participation of any other devices in the WIA-PA network

Note 1 to entry: Multiple hops are used to lengthen the transmission distance, bypass interference sources or avoid obstructions.

3.1.24**host configuration computer**

device through which users and maintenance/management personnel perform transactions on the WIA-PA network and the management networks

3.1.25**interconnectable**

using the same communication protocols, communication interface and data access

3.1.26**interoperable**

able to work together to perform a specific role in one or more distributed application programs

Note 1 to entry: In this case parameters and their application-related functionality fit together both syntactically and semantically. Interoperability is achieved when the devices support complementary sets of parameters and functions belonging to the same profile.

3.1.27**interoperability**

ability of two or more network systems to exchange information and to make mutual use of the information that has been exchanged

[SOURCE: ISO/IEC TR 10000-1:1998, 3.2.1 modified by replacing “IT systems” with “network systems”]

3.1.28

joining

process by which a WIA-PA device is authenticated and allowed to participate in the WIA-PA network

3.1.29

link

set of communication parameters necessary to transport a frame between adjacent devices in the network

Note 1 to entry: It includes source/destination address, timeslot, channel, direction, and link type.

3.1.30

mesh

topology formed by routing devices and the gateway device in the WIA-PA network

Note 1 to entry: One routing device may connect to the gateway device and to more than one other routing device.

3.1.31

multicast

sending one packet to a group of WIA-PA devices simultaneously

3.1.32

network address

short address

16-bit unsigned integer uniquely identifying the device in the WIA-PA network

Note 1 to entry: The most significant 8 bits of the network address, assigned by the network manager, identify different clusters.

3.1.33

network manager

logical role for configuring the network, allocating the communication resources, managing the routing tables, and monitoring and reporting the health of the network

3.1.34

packet

formatted, aggregated bits that are transmitted together in time across the physical medium

[SOURCE: IEEE STD 802.15.4-2011, 3.31]

3.1.35

packet lifecycle

maximal packet survival time from being generated to being dropped

3.1.36

passive leaving

process by which an online field device is instructed by its routing device to leave the network or by which an online routing device is instructed by the gateway device to leave the network

3.1.37

physical address

long address

EUI-64 bits uniquely identifying the device in the WIA-PA network

Note 1 to entry: A physical address is assigned by a manufacturer.

3.1.38

routing device

device forwarding packets from one WIA-PA device to another in the WIA-PA network

3.1.39**security manager**

logical role for configuring the security strategies of the whole network, managing keys, and authenticating devices

3.1.40**superframe**

collection of timeslots repeating over time

Note 1 to entry: It specifies the transmitting or receiving time of periodic communication.

3.1.41**timeslot**

basic time unit of data exchange

Note 1 to entry: Its duration is configurable in the WIA-PA network.

3.1.42**timeslot hopping**

regular change of transmitting/receiving frequency per timeslot to avoid interference and fading

3.1.43**unicast**

sending one packet to a single device in the WIA-PA network

3.1.44**virtual communication relation**

communication paths and communication resources between two user application objects

3.1.45**WIA-PA device**

device in the WIA-PA network

EXAMPLE: Host configuration computer, gateway device, routing device, field device or handheld device.

3.2 Abbreviations

ACK	Acknowledge
AFH	Adaptive Frequency Hopping
AFS	Adaptive Frequency Switch
AIO	Analog Input Object
AL	Application Layer
AOO	Analog Output Object
ASDU	Application Service Data Unit
ASL	Application Sub-Layer
ASLDE	Application Sub-Layer Data Entity
ASLDE-SAP	ASLDEService Access Point
ASLME	Application Sub-Layer Management Entity
ASLME-SAP	ASLMEService Access Point
ASLPDU	Application Sub-Layer Protocol Data Unit
ASN	Absolute timeSlot Number
CAP	Contention Access Period
CFP	ContentionFree Period

C/S	Client/Server
CSMA	Carrier Sense Multiple Access
CSMA-CA	Carrier Sense Multiple Access with Collision Avoidance
DAGO	Data AggreGation Object
DGO	DisaGgregation Object
DIO	Digital Input Object
DLDE	Data Link Sub-Layer Data Entity
DLDE-SAP	DLDE Service Access Point
DLL	Data Link Layer
DLME	Data Link Sub-Layer Management Entity
DLME-SAP	DLME Service Access Point
DLPDU	Data Link Sub-Layer Protocol Data Unit
DLSL	Data Link Sub-Layer
DMAP	Device Management Application Process
DOO	Digital Output Object
EIRP	Equivalent Isotropic Radiated Power
ENC	ENCryption
EUI-64	Extended Unique Identifier-64 bits
FCS	Frame Check Sequence
FDMA	Frequency Division Multiple Access
FFD	Full-Function Device
FH	Frequency Hopping
GTS	Guaranteed Time Slot
GW	GateWay device
ID	IDentifier
IDS	Intrusion Detection System
KED	Data Encryption Key
KEK	Key Encryption Key
KJ	Join Key
KS	Share Key
LME-SAP	Lay Management Entity Service Access Point
LSB	Least Significant Bit
LQI	Link Quality Indication
MAC	Medium Access Control sub-layer
MCPS	MAC Common Part Sub-layer
MHR	Medium Access Control Header
MIB	Management Information Base
MIC	Message Integrity Code
MLDE	MAC sub-Layer Data Entity
MLDE-SAP	MLDE Service Access Point
MLME	MAC sub-Layer Management Entity
MLME-SAP	MLME Service Access Point
MPDU	MAC Protocol Data Unit

MSB	Most Significant Bit
NL	Network Layer
NLDE	Network Layer Data Entity
NLDE-SAP	NLDE Service Access Point
NLME	Network Layer Management Entity
NLME-SAP	NLME Service Access Point
NM	Network Manager
NPDU	Network Protocol Data Unit
NSDU	Network Service Data Unit
PAGO	Packet AGgregation Object
PAN	Personal Area Network
PHY	PHYsical layer
PIB	PAN Information Base
P/S	Publisher/Subscriber
RFD	Reduced-Function Device
R/S	Report source/Sink
SAP	Service Access Point
SM	Security Manager
TDMA	Time Division Multiple Access
TH	Timeslot Hopping
UAO	User Application Object
UAP	User Application Process
UAPME-SAP	UAP Management Entity SAP
UTC	Universal Time Coordinated
VCR	Virtual Communication Relationship
VCR_ID	Virtual Communication Relationship IDentifier
WIA-PA	Wireless network for Industrial Automation – Process Automation

4 Definition of data types

Table 1 gives the WIA-PA definition of data types.

Table 1 – Definition of data types

Definition of data types (see ISO/IEC 9899)			
Data type		Range of values	Length
Boolean	Boolean	Non 0: TRUE; 0: FALSE	1 octet
Unsigned integer	Unsigned8	$0 \leq i \leq 2^8-1$	1 octet
	Unsigned16	$0 \leq i \leq 2^{16}-1$	2 octets
	Unsigned24	$0 \leq i \leq 2^{24}-1$	3 octets
	Unsigned32	$0 \leq i \leq 2^{32}-1$	4 octets
	Unsigned40	$0 \leq i \leq 2^{40}-1$	5 octets
	Unsigned48	$0 \leq i \leq 2^{48}-1$	6 octets
	Unsigned64	$0 \leq i \leq 2^{64}-1$	8 octets
Octet string	Octetstring	8-bit string	1 octet
Float	Float	See IEC 60559	4 octets

5 WIA-PA overview

5.1 Device types

The document specifies five types of WIA-PA devices:

- a) host configuration computer;
- b) gateway device(GW);
- c) routing device;
- d) field device; and
- e) handheld device.

To improve reliability, there may be redundant gateway devices and redundant routing devices in the WIA-PA network. A primary device connects its redundant device in the wired manner. The wired connection is not defined in this document. The short address (see 6.3.4) of a redundant device is the same as that of its primary device. The start-up time of a redundant device is not later than that of the primary device. When primary devices run, redundant devices do not start up their radio modules. When the information of primary devices is changed, the primary devices should backup in timely manner the changed information to their redundant devices in the wired manner. The wired manner is not specified in this document. If SecEnableFlag is enabled, the redundant devices are authenticated (see 11.2).

5.2 Network topology

WIA-PA network supports two different types of network topologies:

- a) a hierarchical network topology that combines star and mesh, and
- b) a star-only network topology.

The hierarchical network topology that combines star and mesh is illustrated in Figure 1. The first level of the network is in mesh topology, where routing devices and gateway devices are deployed. The second level of the network is in star topology, where routing devices, field devices, and handheld devices (if they exist) are deployed.

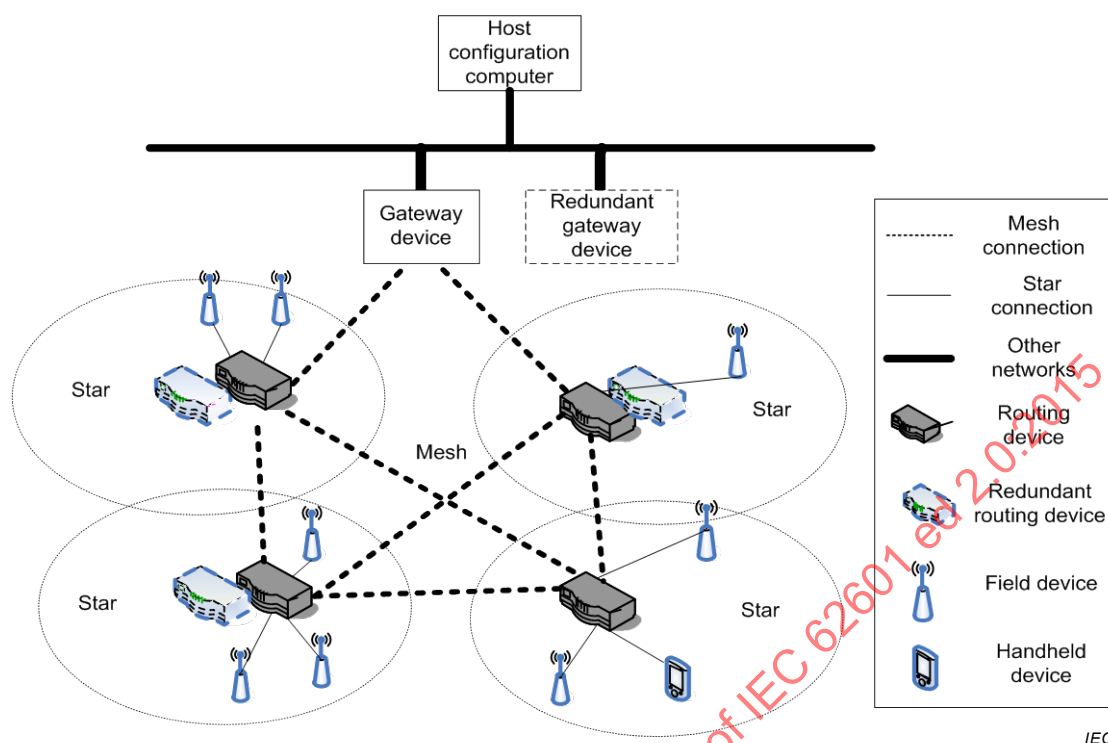


Figure 1 – Example of WIA-PA physical topology (combination of star and mesh)

The star-only network is comprised of a gateway device, field devices, and handheld devices (if they exist). The star network topology is illustrated in Figure 2.

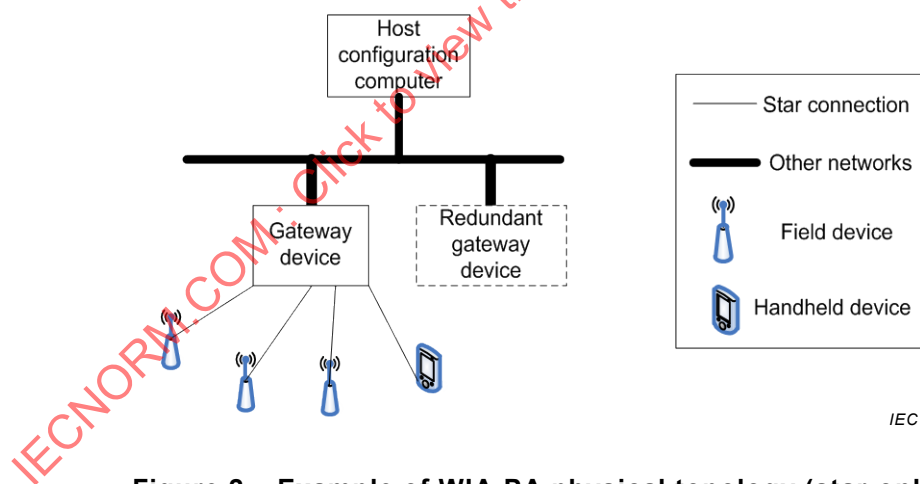


Figure 2 – Example of WIA-PA physical topology (star-only)

The star-only network is a special case of the hierarchical network. In this document, the specification of the hierarchical network covers the star-only network. Therefore, there is no explicit specification provided for the star-only network.

In order to facilitate management, this document specifies five kinds of logical roles.

a) Gateway

Gateway handles protocol-translation and data-mapping between the WIA-PA network and other networks.

b) Network manager

Network Manager (NM) manages and monitors the entire network (see 6.2). There should be one and only one network manager per WIA-PA network.

c) Security manager

Security Manager (SM) deals with security key management and security authentication of gateway devices, routing devices, field devices, and handheld devices (if they exist).

d) Cluster head

Cluster head manages and monitors field devices and handheld devices (if they exist). Cluster head also merges and securely forwards packets from local cluster members and other cluster heads.

e) Cluster member

Cluster member collects field data and sends the data to its cluster head.


The NM and the SM that are used for system management should reside in a gateway device.

One physical device may perform the functions of several logical roles. In the hierarchical network that combines star and mesh, a gateway device may perform the logical roles of gateway, NM, SM, and cluster head. A routing device should act as a cluster head. A field device/handheld device should only act as a cluster member.

The primary device and the redundant device are marked by the parameter RedundantDevFlag in Table 20.

5.3 Protocol architecture

The WIA-PA protocol architecture, which is illustrated in Figure 3, is based on ISO/IEC 7498-1. The WIA-PA protocol architecture defines the Data Link Sub-Layer (DLSL), Network Layer (NL) and Application Layer (AL), while its PHYSical layer (PHY) and Medium Access Control sub-layer (MAC) are based on IEEE Std 802.15.4-2011.

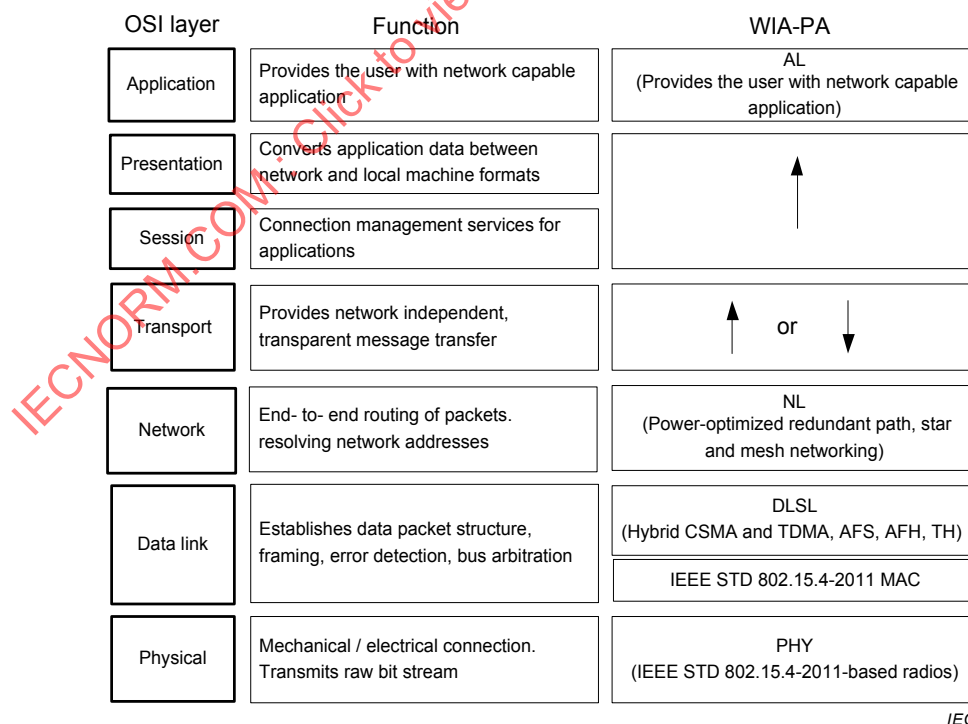

IEC

Figure 3 – OSI basic reference model mapped to WIA-PA

5.4 Interconnection

The WIA-PA network interconnects with other networks through the WIA-PA gateway. Besides the communication to the WIA-PA NM and SM, the WIA-PA gateway may communicate with other WIA-PA devices in order to exchange information between devices. Meanwhile, the WIA-PA gateway may connect other networks, such as wired fieldbuses. The architecture of the WIA-PA gateway is shown in Figure 4.

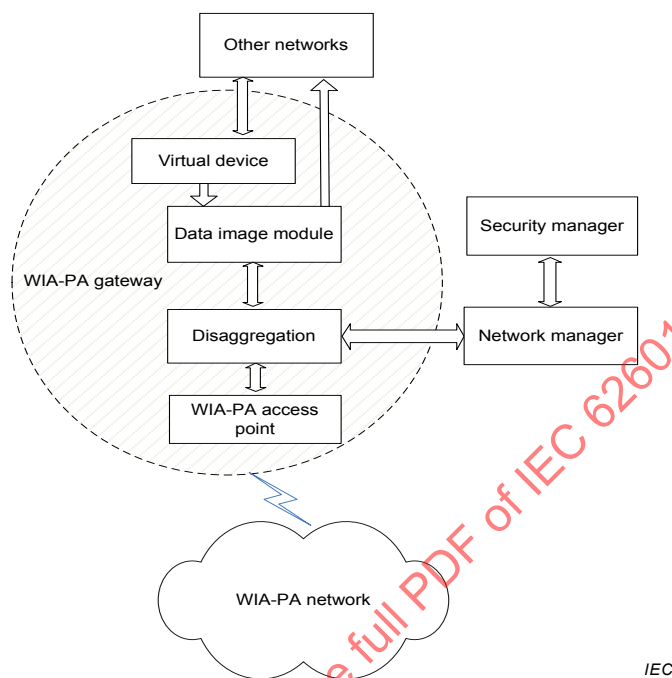


Figure 4 – The architecture of WIA-PA gateway

The WIA-PA gateway includes the following components.

a) WIA-PA access point

The WIA-PA access point realizes the physical connections of the WIA-PA network and transmission of the management information and data.

b) Virtual device

The virtual device defines a communication interface for other networks. The interface is used to map a data source from other networks into a WIA-PA device in order to fulfil communication between the WIA-PA network and other networks.

c) Disaggregation object

This object is used to disaggregate the packets that are aggregated within routing devices and field devices.

d) Data image module

The data image module stores the data of devices in the WIA-PA network and provides an access interface for other networks.

The virtual device and the data image module are optional and implementation-specific, which are not defined in this document.

6 System management

6.1 General

The system management in the WIA-PA network includes both network management and security management. The functions of system management are implemented by the Device Management Application Process (DMAP) in each device. The DMAP, as a system management entity, includes the network management module, the security management module, and the Management Information Base (MIB) module. DMAP is shown as the grey area in Figure 5. The white blocks within the grey area are the function components in the DMAP.

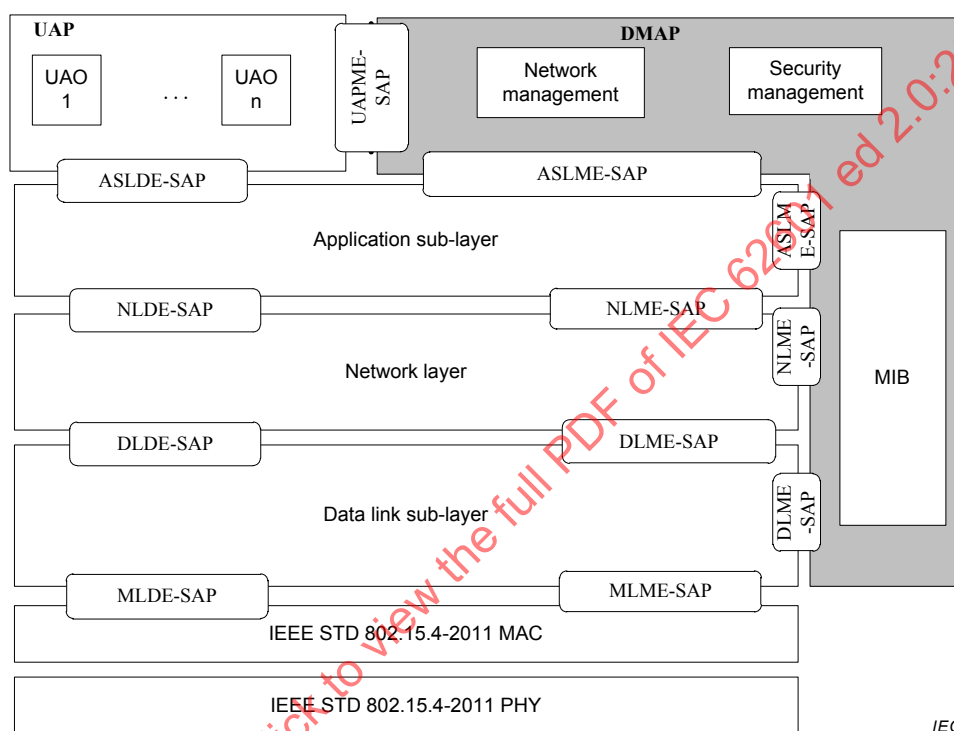


Figure 5 – DMAP in system management

The network management specifies the management of device attributes and attributes that are related to communication and network configuration. The network management functions are accomplished by the DMAPs in the NM, cluster heads, and cluster members. The network management functions include the following actions.

a) Joining and leaving the network

A routing device should join or leave the network through the gateway device or an online routing device. A field device should join or leave the network through an online routing device or the gateway device. The new joining device should be authenticated by the SM.

b) Network address allocation

Each device in the WIA-PA network has a 64-bit Extended Unique Identifier (EUI-64) address and a 16-bit network address. The EUI-64 address is also called long address. The long address of each device is assigned by vendors according to the IEEE EUI-64 address. The 16-bit network address is also called short address. The short address of each network device is assigned by the NM.

c) Routing configuration

Static routing is implemented in the WIA-PA network. The routing table in each routing device is configured by the NM.

d) Communication resource configuration

Communication resources of the WIA-PA network are organized as superframes (see 8.4.4). When a routing device has successfully joined the network, it should be allocated communication resources by the NM. After a field device has successfully joined a cluster, the cluster head should allocate communication resources to it.

e) Time source configuration and services of system time

The WIA-PA network sets only one base time source, which is performed by the gateway device. In order to recognize the order of occurring events, the WIA-PA devices relatively synchronize with the gateway device.

f) Performance monitoring

Performance monitoring is necessary to collect the performance of the WIA-PA network, which includes device status, path failure, and channel condition.

g) MIB maintenance

The MIB module should configure the MIB of the WIA-PA protocol stack.

h) Interfaces for plant operators and maintenance personnel

The NM should provide an interface to allow plant operators and maintenance personnel to monitor and control the performance/activities of the network and devices. The definition of this interface is out of the scope of the current WIA-PA standard.

i) Firmware upgrading

Firmware upgrading should update the protocol stack of WIA-PA devices. Because on-line firmware upgrading is a power-hungry operation, WIA-PA does not recommend this mode and does not specify it in this document. WIA-PA recommends off-line firmware upgrading through handheld devices. Handheld devices connect devices that are to be upgraded by wire or wireless connections. Wired connections may use the serial communication methods. Wireless connections are not specified in this document.

The security management should manage the attributes associated with network security. The security management is performed by the SM and by the security management modules in cluster heads and cluster members. The SM handles the centralized authentication of the whole network, and needs coordination with the NM. See 11.1 for the functions of security management.

The MIB module stores all attributes used in the WIA-PA network, including both structured attributes and unstructured attributes (see 6.9).

6.2 Framework of system management

The WIA-PA network supports the hybrid centralized and distributed management scheme.

The hybrid centralized and distributed management framework is illustrated in Figure 6. The system management is implemented by the NM, the SM, and cluster heads. Cluster heads are directly managed by the NM and the SM. In addition, they are provisioned with the privilege of managing cluster members.

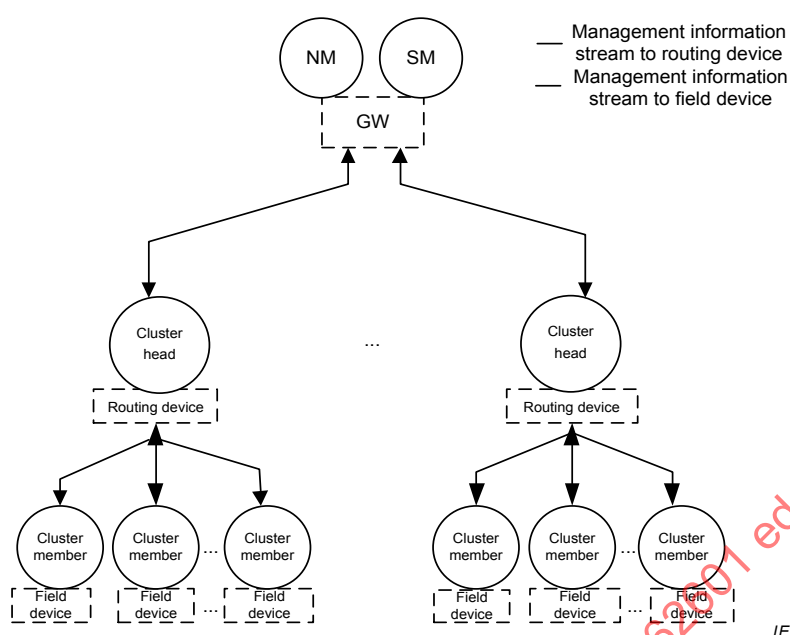


Figure 6 – Hybrid centralized and distributed system management scheme

The NM should perform the following tasks:

- constructing and maintaining the mesh topology comprised of cluster heads, and star topology comprised of cluster heads and cluster members;
- allocating communication resources for cluster heads in mesh topology, and allocating communication resources for cluster members to the cluster heads in star topology;
- monitoring the performance of the WIA-PA network, including device status, path failure, and channel condition.

The SM should perform the following tasks:

- authorizing the cluster heads and cluster members that are attempting to join the WIA-PA network;
- managing keys in the entire network, including key generation, key distribution, key recovery, and key revocation;
- authorizing the relationship of the end-to-end communication.

The cluster head should perform the following tasks:

- constructing and maintaining the star topology; allocating communication resources that are allocated to the star topology by the NM to cluster members in the cluster; providing the monitoring results of the star topology to the NM;
- storing and forwarding keys used in the star topology; authorizing the communication relationship among cluster heads; authorizing the communication relationship between a cluster head and cluster members.

6.3 Joining process

6.3.1 Provisioning process

When a WIA-PA device intends to join the network, it should be provisioned by a handheld device via wired manner.

A new device should have 64-bit long address before joining the WIA-PA network. First, the CountryCode value (see 6.9.1.2.1 and 8.4.11) of a new device shall be set, which reflects the regulatory constraints in the region where it might be deployed. The NetworkTopology value

(see 6.9.1.2.1) shall be set, which indicates the type of the network topology. The SecEnableflag value (see 6.9.1.2.1) shall be set, which indicates whether the authentication is enabled over the network. If authentication is enabled, KJ shall also be set (see 11.2).

To join the WIA-PA network, a new routing device or field device should first listen to beacons.

6.3.2 Joining process of routing device

When a routing device intends to join the network, it should be provisioned a Join Key by a handheld device. See Clause 11 for the detailed provisioning process.

The joining process of a routing device includes the following actions.

- A routing device scans the available channels to get beacons from either the online routing devices or the gateway device.
- The routing device chooses an online routing device or the gateway device as the temporal parent and synchronizes with the network according to the received beacon.
- The routing device sends a joining request to its temporal parent, which will then forward the request to the NM.
- When receiving a joining request, the NM should communicate with the SM to complete the authentication process. Then the NM returns a joining response.
- The routing device receives the joining response relayed by its temporal parent. If the response is negative, the routing device should restart this joining process; otherwise, the joining process should be finished.

The joining process of a routing device through the gateway device is shown in Figure 7.

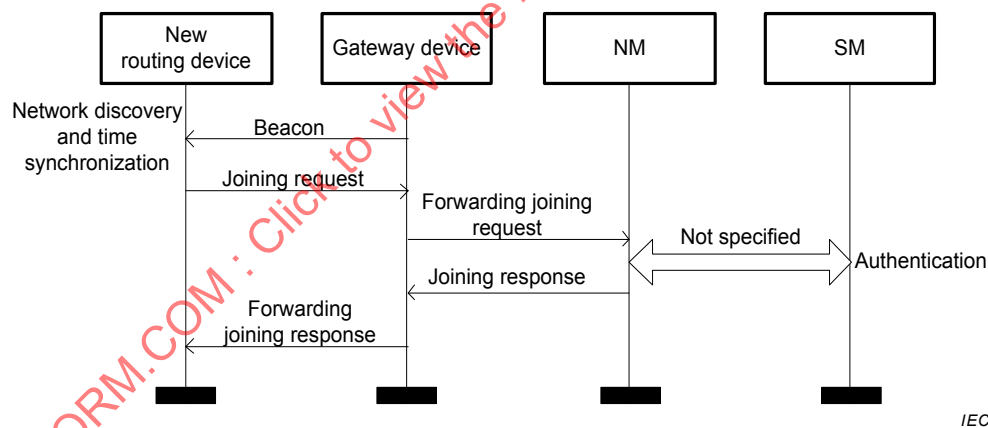


Figure 7 – Joining process of routing device through the gateway device

The joining process of a routing device through an online routing device is shown in Figure 8.

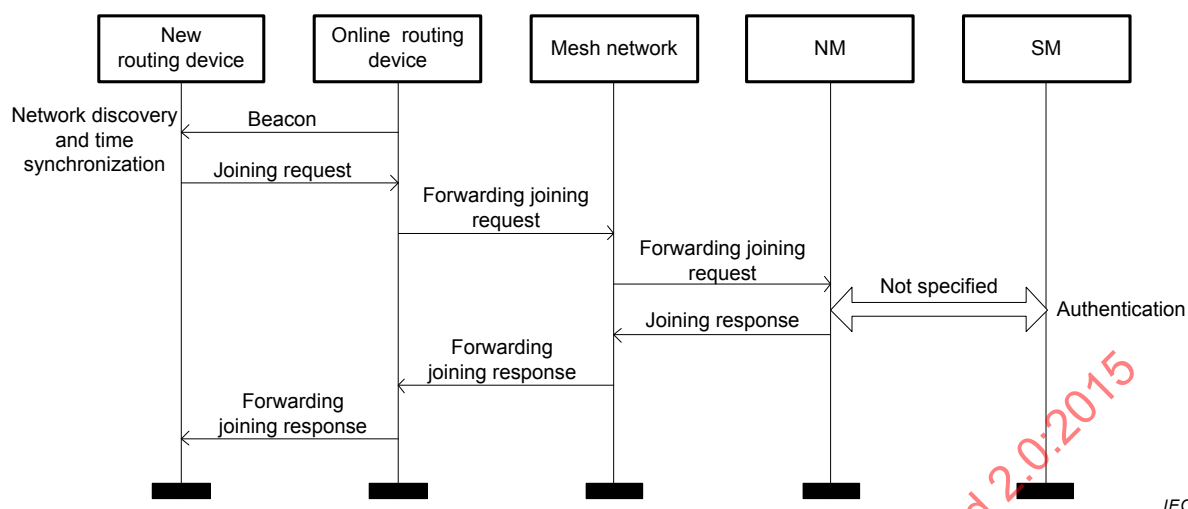


Figure 8 – Joining process of routing device through an online routing device

See 9.5.8 for the allocation of communication resources.

6.3.3 Joining process of field device

The joining process of a field device includes the following actions.

- A field device scans the available channels to get beacons from the online routing devices or the gateway device.
- The field device chooses one online routing device or the gateway device as the cluster head and synchronizes with the network according to the received beacon.
- The field device sends the joining request to the cluster head.
- When receiving the joining request, the cluster head forwards it to the NM.
- After receiving the joining response from the NM, the cluster head returns the joining response to the field device according to the type of network topology and the available communication resources of the cluster head. If the network topology is mismatched, the status in the response is set to FAILURE_TOP_DISMATCH; if there are other types of failures, the status in the response is set to FAILURE_ELSE; if the joining is successful, the status in the response is set to SUCCESS. See 8.6.3.4 for definition of Status.
- The field device receives the joining response from the cluster head. If the status in the response is FAILURE_TOP_DISMATCH, the field device will choose another routing device as its cluster head and restart the joining process as above; if status in the response is FAILURE_ELSE, the field device will restart this joining process; otherwise, if status in the response is SUCCESS, the field device has joined in the network.

The joining processes of a field device through the gateway device and through a routing device are shown in Figure 9 and Figure 10 respectively. See 9.5.8 for the allocation of communication resources.

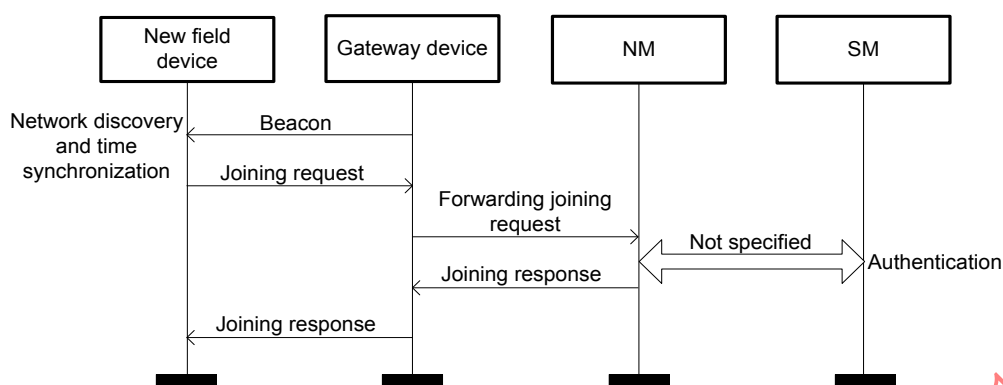


Figure 9 – Joining process of field device through a gateway device

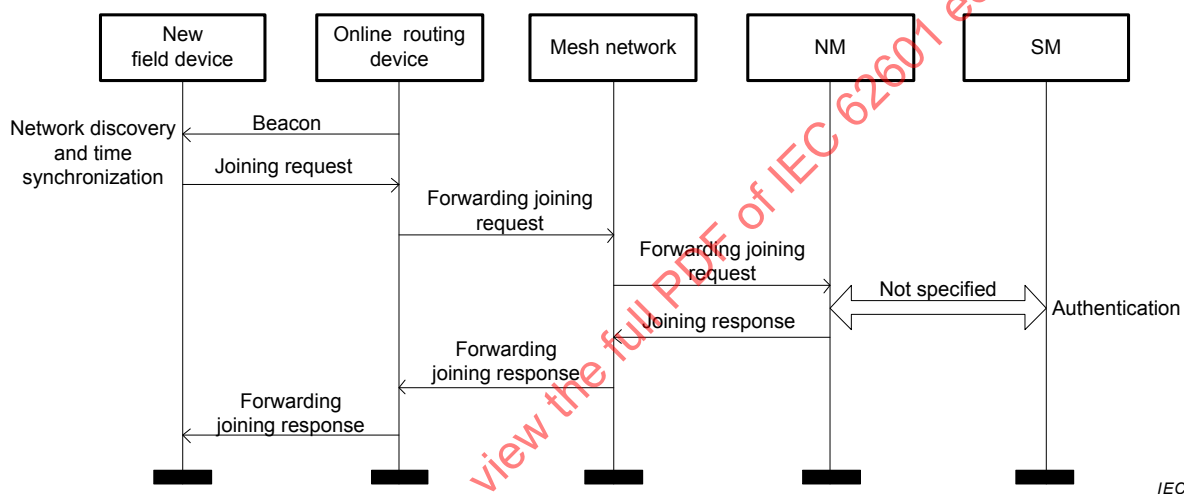



Figure 10 – Joining process of field device through a routing device

A WIA-PA handheld device connects to the WIA-PA network via the gateway device or a routing device. The joining process of the handheld device is the same as other WIA-PA devices. After joining in the network, the WIA-PA handheld device configures the WIA-PA devices and collects the network performance/health information during the Contention Access Period (CAP) period of the WIA-PA superframe.

See Clause 11 for detailed information about security.

6.3.4 Addressing and address assignment

In the WIA-PA network, each WIA-PA device (GW, routing device or field device) has a global unique 64-bit long address and a 16-bit short address. The long address, as shown in Figure 11, is set by manufacturers according to the IEEE EUI-64 address.

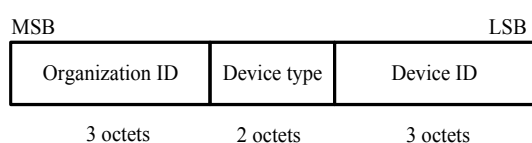

IEC

Figure 11 – Long address structure of device

The short address is 16-bit long. The most significant 8 bits of the short address that are assigned by the NM are used to identify different clusters. If the value of the parameter NetworkTopology (see 6.9.1.2.1) is 1, that is the network topology is star-only, the address of the gateway device is also the address of the cluster head.

The short address of GW is allocated by the NM. The NM resides in a gateway device (see 5.2). The address allocation process of the GW is an internal operation, which is not specified in this specification.

The short address of a routing device is shown in Figure 12. For the short address of the routing device, the least significant 8 bits are set to 0.

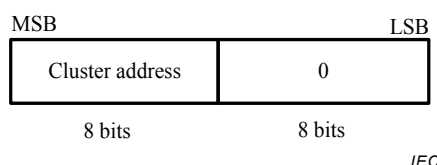


Figure 12 – Short address structure of routing device

The short address of a field device is shown in Figure 13. The least significant 8-bit part of the field device's short address is the intra-cluster address (in the cluster).

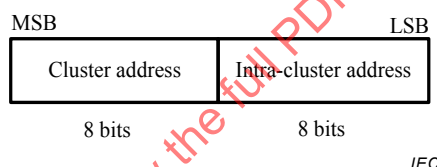


Figure 13 – Short address structure of field device

6.4 Virtual Communication Relationship (VCR)

6.4.1 Definition

Access to the User Application Objects (UAOs) is defined by the VCRs and the endpoints of a VCR are two UAOs. VCRs distinguish the routing and communication resources among different UAOs. Each VCR is identified by a VCR Identifier (VCR_ID). The attributes of a VCR include UAO ID at source side, destination UAO ID, addresses of source device/destination device, VCR type, valid scope, etc (see Table 2).

VCRs are classified into three types according to the application modes:

- Publisher/Subscriber(P/S) VCR, which is used to publish periodic data;
- Report source /Sink(R/S) VCR, which is used to support aperiodic events and trend reports;
- Client/Server(C/S) VCR, which is used to transfer aperiodic and dynamic paired unicast messages.

VCRs are classified into three types according to its aggregation functions:

- Non-aggregation VCR

If the aggregation is not supported by a cluster member, the non-aggregation VCR is used by the cluster member to send non-aggregation packets to its cluster head. If the cluster head does not support the aggregation function, it will forward the non-aggregation packets to the gateway through the non-aggregation VCR.

b) Data aggregation VCR

If the aggregation is supported by a cluster member, the data aggregation VCR is used by the cluster member to send the aggregated data from the UAOs to its clusterhead. If the cluster head does not support the aggregation function, it will forward the aggregated data to the gateway through the data aggregation VCR. The effective interval of the data aggregation VCR originates from the Data Aggregation Object (DAGO) of the cluster head to the DisaGgregation Object (DGO) of the gateway.

c) Packet aggregation VCR

If the aggregation is supported by a cluster head, the packet aggregation VCR is used by the cluster head to send aggregated packets to the gateway. The effective interval of the packet aggregation VCR originates from the Packet Aggregation Object (PAGO) of the cluster head to the DisaGgregation Object (DGO) of the gateway.

PAGOs, DGOs, and DAGOs (see 6.6.1) are three special UAOs.

6.4.2 Protocol support for VCR

The protocol supports for VCRs are listed in Table 2.

Table 2 – Protocol support for VCR

Protocol layer support			VCR types		
			P/S VCR	R/SVCR	C/S VCR
AL	User applications		Periodic data transmission of UAO	Aperiodic report e.g. alarm or event	Attribute getting and setting operation in UAO
	Communication modes in Application Sub-Layer (ASL)		P/S	R/S	C/S
	Bidirectional		No	No	Yes
	End-to-end retransmission		No	Optional	Yes
	Packet aggregation supporting		Yes	No	No
NL	Redundant path supporting	Intra-cluster	No	No	No
		Inter-cluster	Yes	Yes	Yes
	Unicast/Broadcast		Broadcast/Unicast	Broadcast/Unicast	Unicast
DLSL	Periodic		Yes	No	No
	Real-time		Yes	Optional	No
	Communication resource	Intra-cluster	Contention Free Period (CFP), exclusive timeslots in intra-cluster communication period	CAP	CAP
		Inter-cluster	Exclusive timeslots in inter-cluster communication period	Shared timeslots	Shared timeslots

6.4.3 VCR establishment

The processes of R/S VCR and C/S VCR establishment are as follows.

- The NM obtains the UAOs of the field devices when they have joined the WIA-PA network. The UAOs are obtained by the NLME-INFO_GET primitives during the CAP (see 9.5.13 and 9.6.4).
- Once the NM obtains the UAOs, it allocates reserved R/S VCRs and C/S VCRs for each UAO to field devices.

The process of P/S VCR establishment (if it is needed) is as follows.

- a) The NM establishes one P/S VCR for each UAO by using the NLME-INFO_SET primitives (see 9.5.14 and 9.6.4). If a field device does not support the data aggregation, each UAO has one non-aggregation P/S VCR, and different VCRs may use the same routing paths. Otherwise, each field device has one data aggregation VCR. If the routing device supports packet aggregation, one packet aggregation VCR is established for the routing device.

See Table 21 for the VCR information.

6.4.4 VCR release

VCRs are released when routing devices and field devices leave the network (see 6.8).

6.5 Routing configuration and communication resource allocation

6.5.1 Routing configuration

Routing devices use static routing that is configured by the NM. The concrete routing algorithms are not specified in this standard. The details of routing paths are shown in Table 15. The redundant paths are supported and use the same RouteID. The routing configuration is realized by route allocation services (see 9.5.7).

6.5.2 Framework of communication resource allocation

Communication resources consist of timeslots and channels. Allocation of communication resources should be considered in two dimensions: time and channel.

The process of communication resource allocation is as follows.

- a) In the mesh network, the communication resources of the cluster heads are allocated by the NM. The communication resources consist of those used by cluster heads in the mesh network and those allocated by cluster heads to cluster members.
- b) In the star network, the communication resources are allocated by cluster heads to cluster members. That is, communication resources are bound to cluster members.

An example of the resource allocation in the hierarchical network topology that combines star and mesh is shown in Figure 14. First, the NM residing in the GW allocates communication resources to the routing devices R1, R2 and R3. These communication resources are used for communication among R1, R2 and R3, for communication between routing devices and the GW, and for communication between intra-cluster field devices and routing devices. Second, after receiving communication resources from the NM, routing devices allocate some of the communication resources to their intra-cluster field devices, which are used for intra-cluster communications among field devices and their corresponding routing devices. As shown in Figure 14, after the NM allocates communication resources for R1, R2 and R3, R1 allocates communication resources for F1 and F2, R2 allocates communication resources for F5, and R3 allocates communication resources for F3 and F4.

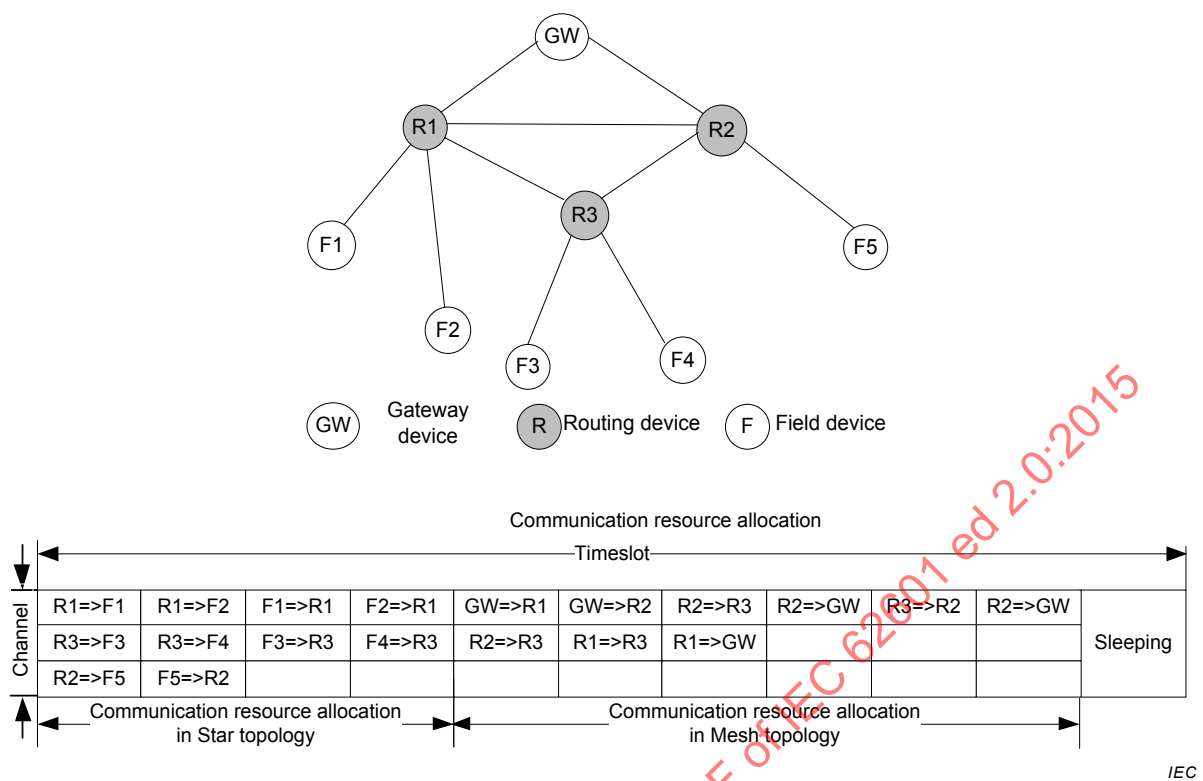


Figure 14 – An example of resource allocation

6.5.3 DLPDU priority and scheduling rules

Four priority levels of DLPDUs are defined.

a) Command (highest priority)

Any packet containing a payload with network-related diagnostics, configuration, control information, or emergent alarms should be classified with a priority of Command.

b) Process data (secondary priority)

Any packet containing process data should be classified as secondary priority level, Process Data.

c) Normal (third priority)

DLPDUs that do not meet the criteria of Command, Process data, or Alarm should be classified as Normal priority.

d) Alarm (lowest priority)

Packets containing only non-emergent alarm and event payload should assume a priority of Alarm. Devices should buffer no more than one DLPDU having Alarm priority.

The following scheduling rules are recommended in this order for allocating communication resources:

- allocating channels to the beacon frame and active period;
- allocating timeslots to the devices with the fastest update rate;
- allocating resources to the packet with the earliest generating time in multi-hop situations;
- allocating resources to the highest priority packet prior to other packets.

6.5.4 Communication resource allocation to routing device

The WIA-PA network applies the integrated management strategy of centralized and distributed schemes. After the routing device joins the network, it should scan its neighbour

devices on each channel and report the neighbour information to the NM. After receiving the neighbour information, the NM should allocate paths, a superframe, and a block of links to the routing device by using the communication resource allocation services (see 9.5.8). The information of every routing device superframe is broadcast to its field devices in the beacon frame. The allocation process of routing device communication resources is illustrated in Figure 15.

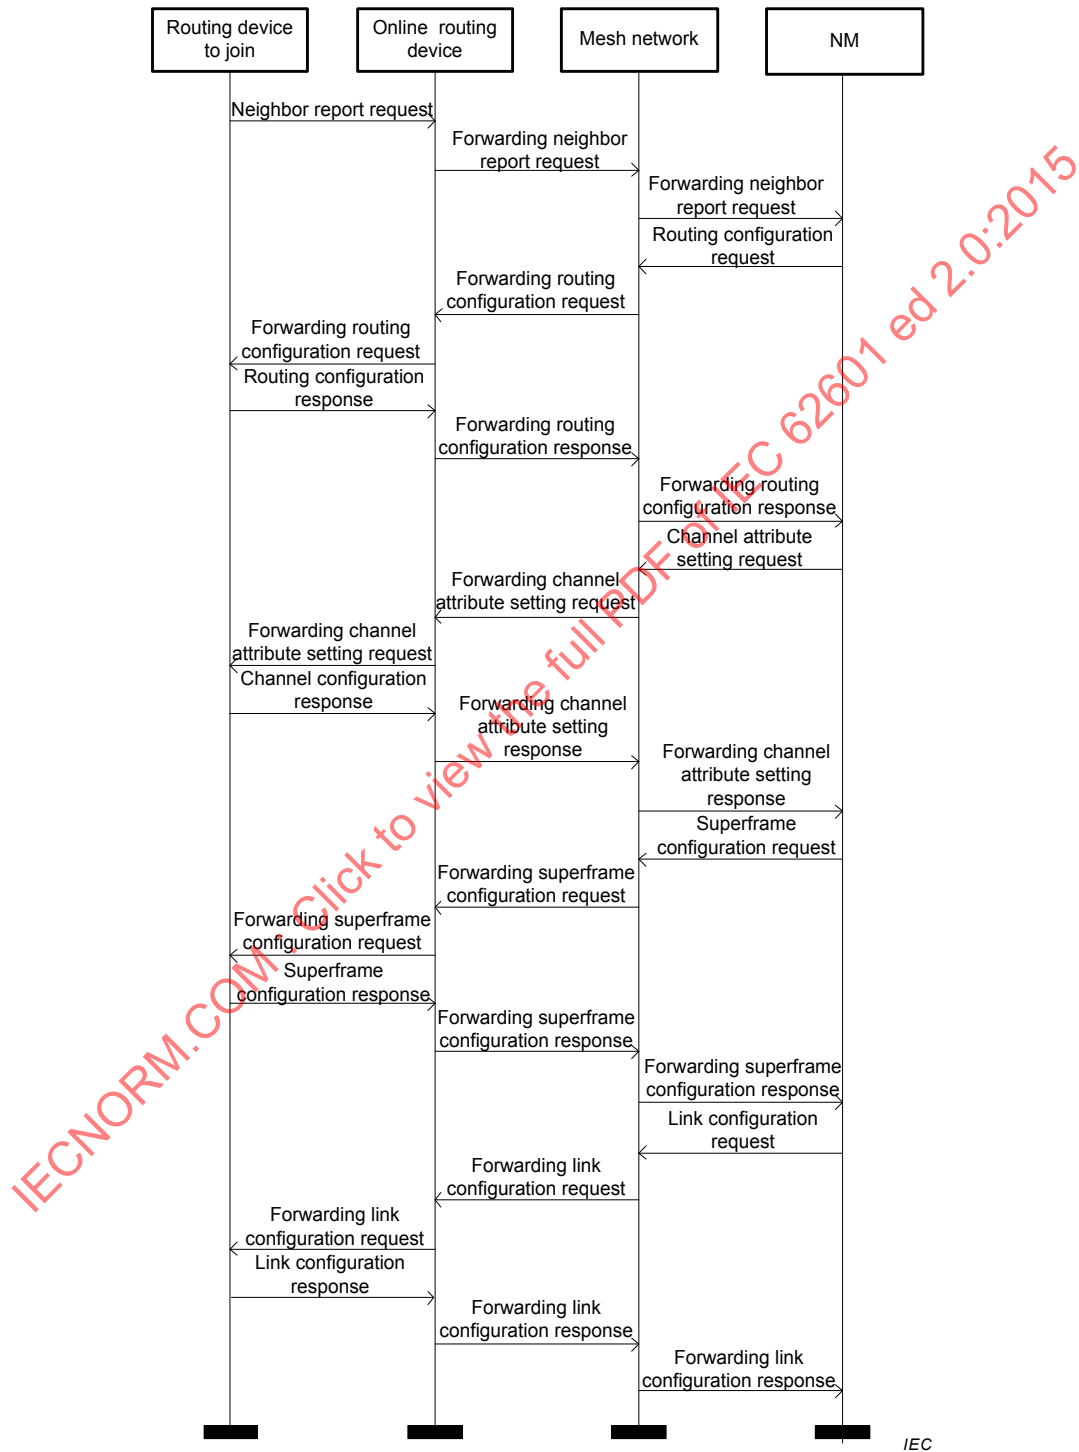


Figure 15 – Allocation process of routing device's communication resources

6.5.5 Communication resource allocation to field device

After VCRs of a field device are established successfully, either the routing device or the gateway device allocates timeslots to its field devices by using the communication resource allocation services (see 9.5.8), which are used in communication between the routing device and the field devices or between the gateway device and the field devices. If the superframes of the routing device and the gateway device are affected by the joining field devices, the routing device and the gateway device should update their RouteTable, Superframe and Link attributes (see 6.9.1.2.2 and 9.5.8).

When a field device joins the network through an online routing device, the communication resource allocation process of the field device is illustrated in Figure 16.

IECNORM.COM : Click to view the full PDF of IEC 62601 ed 2.0:2015

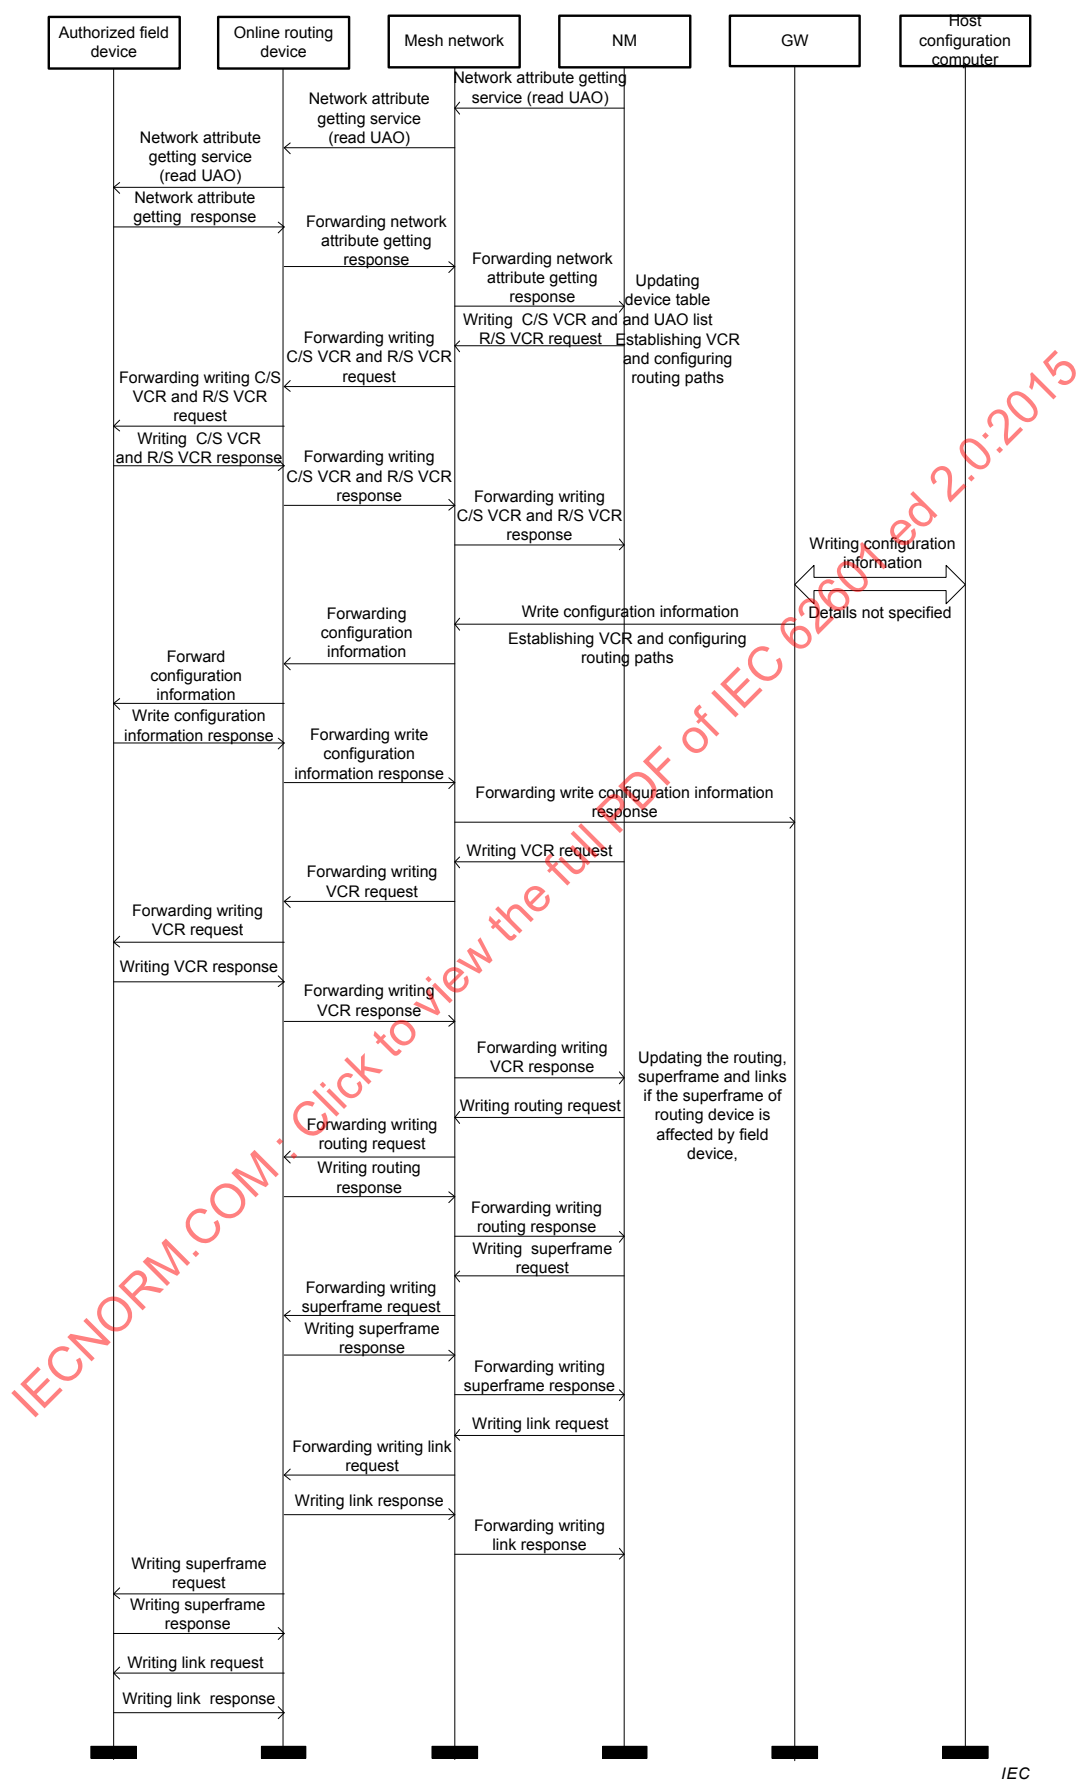


Figure 16 – Allocation process of field device's communication resources

6.6 Aggregation and disaggregation

6.6.1 Aggregation

The aggregation function is optional for field devices and routing devices and is indicated by the aggregation and disaggregation support flag AGGSupportFlag (see Table 20). If the field devices or the routing devices support the aggregation mechanism, the NM sets the aggregation and disaggregation enable flag AGGEnableFlag to 1 (see Table 20).

The WIA-PA network supports a two-level aggregation mechanism in order to reduce the number of packet transmissions.

- a) Data aggregation. If a field device has more than one User Application Object (UAO), it should decide whether or not to invoke the data aggregation mechanism according to the AGGEnableFlag. This mechanism should reduce the data communication frequency and enhance network efficiency.
- b) Packet aggregation. If a routing device receives packets from more than one field device, it should decide whether invoking packet aggregation mechanism or not according to the AGGEnableFlag. This mechanism should reduce the number of packets from the routing device to the gateway device and enhance network efficiency.

The aggregation function is implemented by the DAGOs in field devices and PAGOs in routing devices. The operation parameters of DAGOs and PAGOs are configured by the NM.

The aggregation function supported by the WIA-PA network includes the following four situations.

- 1) A field device supports the aggregation function, while its routing device does not.
- 2) A routing device supports the aggregation function, while its field device does not.
- 3) Both, a field device and its routing device support the aggregation function.
- 4) Neither a field device nor its routing device supports the aggregation function.

Relations between the VCRs and the aggregation functions supported by field device, routing device and gateway device are shown in Table 3.

Table 3 – Relations between VCR and aggregation function

	Field device DAGO (Aggregation function)			Routing device PAGO (Aggregation function)			Gateway device DGO (Disaggregation function)	
	Support	Disable	Enable	Support	Disable	Enable	Disable	Enable
Non-aggregation VCR	NO	X		NO	X		—	—
Data aggregation VCR	YES		X	NO	X ^a			X
	YES		X	NO		X ^b		X
Packet aggregation VCR	NO	— ^c	— ^c	YES		X		X

X Indicates the aggregation/disaggregation function in the corresponding device is enabled or disabled.

— Indicates the VCR is independent of the aggregation/disaggregation function.

^a The data aggregation VCR starts with DAGO of a field device and ends at DGO of the gateway device.

^b The data aggregation VCR starts with DAGO of a field device and ends at PAGO of a routing device.

^c Field devices have no packet aggregation function.

The aggregation configuration process is listed as follows.

- i) NM should read the AGGSupportFlag to verify whether devices support the aggregation function.
- ii) NM should set the value of the AGGEnableFlag attribute to 1 in the MIB if the routing devices support the aggregation function. The NM should allocate packet aggregation VCRs to the routing devices. The aggregation duration of a routing device should be indicated by attribute AggPeriod (see 6.9.1.2.1) and set to the minimum DataUpdateRate attribute (see Table 21) of its field devices in the cluster. When aggregation duration expires, the routing device aggregates all its packets and sends the aggregated packet out.
- iii) NM should set the value of the AGGEnableFlag attribute to 1 in the MIB if the field devices support the aggregation function. The NM should allocate the data aggregation VCRs to the field devices. The aggregation duration of a field device should be indicated by attribute AggPeriod (see 6.9.1.2.1) and set to the minimum DataUpdateRate attribute (see Table 21) of its UAOs. When the aggregation duration expires, the field device aggregates all its packets and sends the aggregated packet to the routing device.

According to whether the aggregation is embedded or not, a field device or a routing device operates as follows.

- a) If the AGGEnableFlag attribute of a field device is set to 0, this field device does not support the aggregation function. Field devices that have no aggregation function send their data to the routing device through the non-aggregation VCR and the related RouteID (see Table 20). If the aggregation flag AGGEnableFlag attribute of the routing device is also set to 0, the routing device should forward this aggregated packet to the DGO of the gateway device through the original RouteID.
- b) If a field device has more than one UAO and its AGGEnableFlag attribute is set to 1, the DAGO of the field device calculates the length of the P/S data from the UAOs and aggregates these data. The format of the aggregated data is shown in Table 4. The aggregated data is sent to the ASL by the DAGO and is encapsulated with the ASL header. The field of the packet type in the ASL header is set to 0b11, which is used to indicate the aggregated packet (see 10.4.2). The aggregation packet in the ASL is sent to the routing device through the data aggregation VCR and the related RouteID; if the AGGEnableFlag attribute of the routing device is 0, the routing device should forward this aggregated packet to the DGO of the gateway device through the original RouteID.
- c) If the aggregation function embedded in a routing device is enabled (AGGEnableFlag = 1) and receives packets from its field devices, it reads the NL packet headers. The routing device should aggregate the packet according to the P/S flags and the Fragment flag in the NL packet headers (see 9.6.3). The aggregation rules are as follows:
 - if the received packet is P/S type and the Fragment flag is 0, the packet should be aggregated;
 - other types should not be aggregated.

If the packet can be aggregated, its source address and NL payload are sent to the PAGO of the DMAP. The PAGO uses the time when the first packet comes (required to be aggregated) as the start time of an aggregation cycle PagoPeriod (see Table 10). Once PagoPeriod expires, the PAGO aggregates the packets according to the format that is shown in Table 5, and searches the packets related to the packet aggregation VCR. The aggregated packet, packet aggregation VCR, and the related packets are then sent to the NL; the NL should send this aggregated packet to the gateway device through the related packets. The format of the aggregated packet in NL is shown in 9.6.3. If the length of the aggregated packet is longer than the maximum length allowed by the NL, the NL should fragment the packet and send the packet to the gateway device by using the packet aggregation VCR and the related packets.

Table 4 – Format of aggregated data followed by field device's DAGO

	Format of aggregated data followed by field device's DAGO					
Length in octet(s)	1	1	Variable length	...	1	Variable length
Field name	Number of aggregated data	Data length	Data	...	Data length	Data

Table 5 – Format of aggregated packet followed by routing device's PAGO

	Format of aggregated data followed by routing device's PAGO							
Length in octet(s)	1	2	1	Variable length	...	2	1	Variable length
Field name	Number of aggregated packet	Source address	Data length	Data	...	Source address	Data length	Data

6.6.2 Disaggregation

The disaggregation function is optional for the gateway device and is indicated by the aggregation and disaggregation support flag AGGSupportFlag (see Table 20). If the gateway device supports the disaggregation mechanism, the NM sets the aggregation and disaggregation enable flag AGGEnableFlag to 1 (see Table 20).

The disaggregation function is implemented by the DGO in the gateway device. The gateway device decides whether to disaggregate the received packet according to the NL header and the ASL header. If the value of packet type in the NL header is 1, the gateway device disaggregates the NL aggregated packet; if the value of the packet type in the ASL header is 0b11, the gateway device continues disaggregating the ASL aggregated packet.

The operation parameters of the DGO are configured by the NM.

The process of disaggregation is as follows.

- a) After the gateway device receives the aggregated packets from field devices and routing devices, it will notify the DGO in its DMAP to disaggregate the packets.
- b) The DMAP sends the disaggregated packets to UAOs.

6.6.3 An example of the two level aggregation process

The following example illustrates the aggregation and disaggregation processes. The example is based on a network that consists of two field devices, one routing device, the GW, and the host configuration computer. As shown in Figure 17, the routing device R acts as the cluster head of field device A and field device B; there are two UAOs named a1 and a2 residing in field device A and two UAOs named b1 and b2 residing in field device B.

This example supposes that field device A does not support the aggregation function, while field device B and routing device R do. The data update rates of a1 and a2 are configured to 1 s, and the data update rates of b1 and b2 are configured to 4 s. The DAGO of the field device B is responsible for aggregating the packets from b1 and b2, and generates packet p_b. The routing device R has one PAGO and the aggregation duration is the minimum data update rates of a1, a2, b1, and b2, whose value is 1 s. The routing device R has a PAGO, which aggregates the packets from a1, a2 and packet p_b. The gateway device has a DGO, which disaggregates packets from field device A and B.

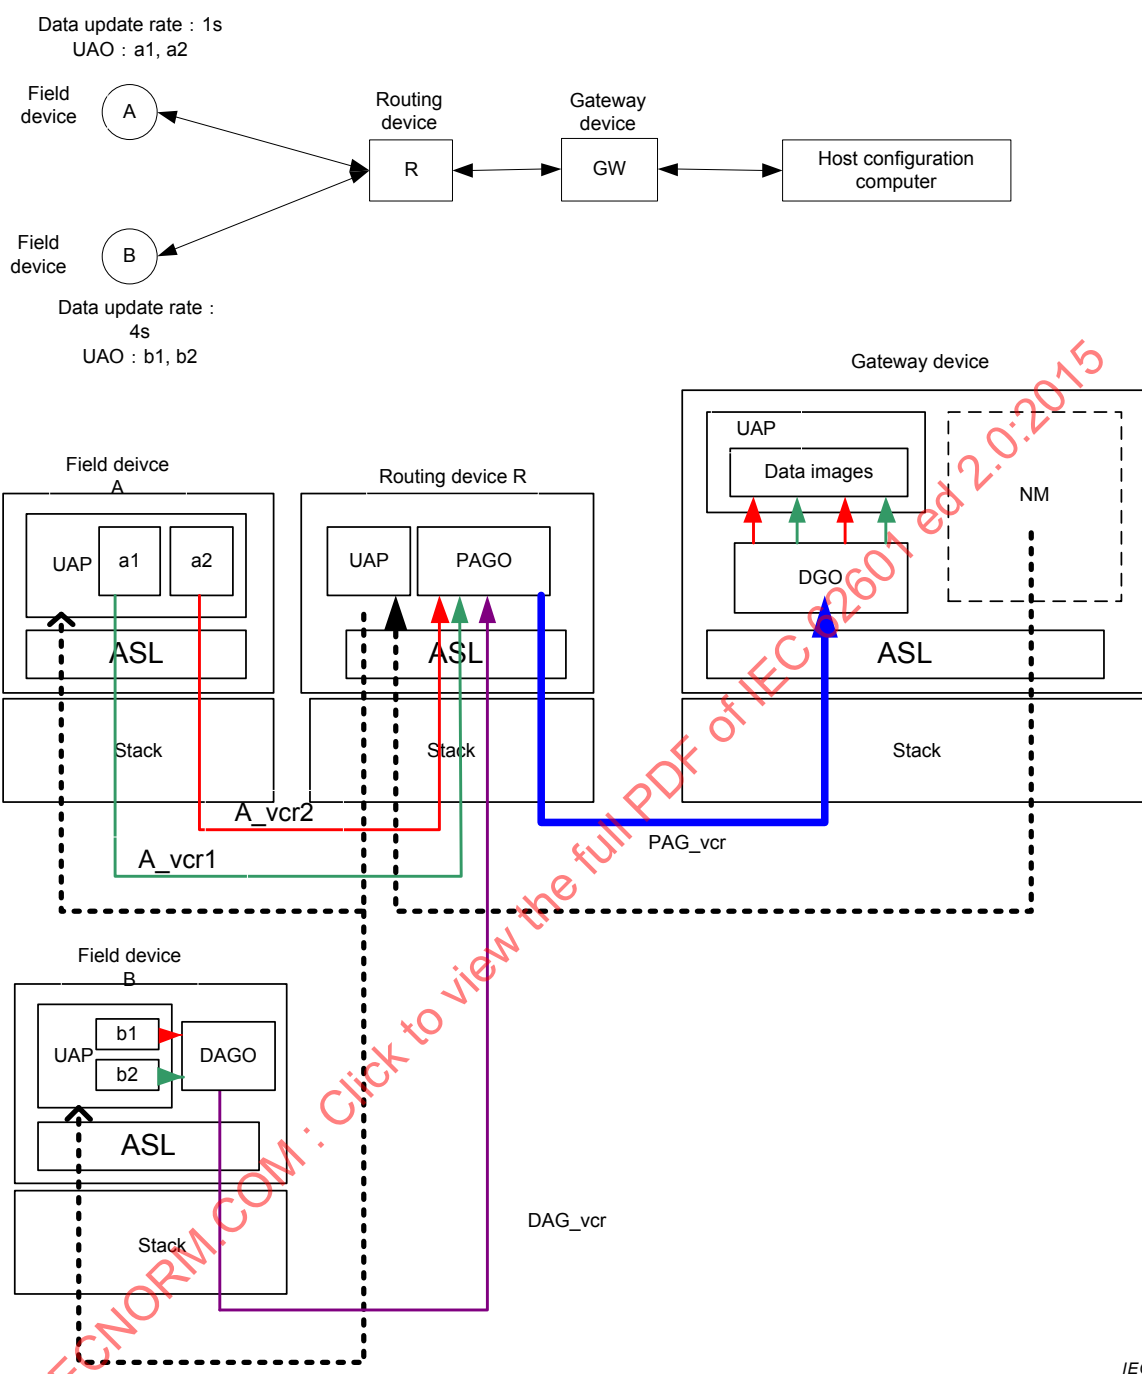


Figure 17 – Example of aggregation and disaggregation

The aggregation and disaggregation process is listed below.

- After the network is established, the NM allocates the non-aggregation VCRs to a1, a2, b1, and b2 for the transmissions of non-aggregation packets. The non-aggregation VCRs of a1 and a2 in field device A are indicated by A_vcr1 and A_vcr2. The endpoints of A_vcr1 are a1 and the UAP of the GW, and the endpoints of A_vcr2 are a2 and the UAP of the GW. Because the data transmissions of field device B do not use the non-aggregation VCRs, the non-aggregation VCRs of b1 and b2 in field device B are not indicated in this example.
- After constructing the non-aggregation VCRs, the NM configures the aggregation duration and data aggregation VCR for field device B and configures the aggregation duration and packet aggregation VCR for routing device R. The aggregation durations are the minimum data update rate among all UAOs in a field device or the minimum data update rate among

all field devices for a routing device. Because the data update rates of b1 and b2 are 4 s, the aggregation duration of DAGO in field device B is four seconds; the data aggregation VCR of field device B is indicated by DAG_vcr and its endpoints are DAGO in field device B and the DGO in the GW. The aggregation duration of routing device R is set to the minimum data update rate in a cluster. Because the minimum data update rate among a1, a2, b1, and b2 is one second, the aggregation duration of routing device R is set to 1 s. The packet aggregation VCR of routing device R is indicated by PAG_vcr and its endpoints are PAGO in the routing device R and DGO in the GW.

- c) After A_vcr1, A_vcr2, DAG_vcr, and PAG_vcr are established, the DAGO, PAGO and DGO begin to work. The DAGO in field device B uses the time when the first packet comes (required to be aggregated) as the start time, and aggregates the packets and sends them to routing device R through DAG_vcr at the configured aggregation timeslot. The PAGO in routing device R uses the time when the first packet comes (required to be aggregated) as the start time, and aggregates the packets in DMAP and sends them to the DGO through PAG_vcr in the GW at the configured aggregation timeslot.
- d) After the DGO of the GW receives the aggregated packets, it disaggregates the packets and finds the corresponding UAOs according to the packet source address and UAO identifiers.
- e) The DMAP in GW sends the disaggregated packets to the corresponding UAOs.

6.6.4 Management of aggregation and disaggregation objects

The attributes of the DAGO class are shown in Table 6.

Table 6 – DAGO class attributes

Attribute ID	Name	Data type	Default value	Usage	Description	Supporting method
0	DagoID	Unsigned8	0	Mandatory	The identifier of the DAGO	READ
1	DagoRevision	Unsigned8	0	Optional	The version defined by the DAGO	READ

The attributes of the DAGO instance are shown in Table 7.

Table 7 – DAGO instance attributes

Attribute ID	Name	Data type	Default value	Usage	Description	Supporting method
0	DagoInsID	Unsigned8	0	Mandatory	The identifier of the DAGO instance	READ
1	DagoPeriod	Unsigned8	1	Mandatory	The aggregation cycle (in seconds)	READ/WRITE
2	DagoMemNum	Unsigned8	1	Mandatory	Count of the aggregated UAOs	READ/WRITE
3	DagoMemLst	MEM_STRUCT structure (see Table 8)		Optional	List of the aggregated UAOs	READ/WRITE
4	DagoMemData Size	Unsigned8	0	Optional	Length of the aggregated data DagoMemData (in octets)	READ/WRITE
5	DagoMemData	Octetstring		Mandatory	Data of the aggregated UAOs	READ/WRITE

The methods supported by the DAGOs are shown in Table 171.

The definition of the MEM_STRUCT structure is shown in Table 8.

Table 8 – MEM_STRUCT structure

Attribute ID	Name	Data type	Description
0	AppObjID	Unsigned8	The identifier of the UAO
1	AppObjInsID	Unsigned8	The identifier of the UAO instance
2	AppObjAttrID	Unsigned8	The attribute identifier of the UAO instance

The attributes of the PAGO class are shown in Table 9.

Table 9 – PAGO class attributes

Attribute ID	Name	Data type	Default value	Usage	Description	Supporting method
0	PagoID	Unsigned8	1	Mandatory	The identifier of the PAGO	READ
1	PagoRevision	Unsigned8	0	Optional	The version defined by the PAGO	READ

The attributes of the PAGO instance are shown in Table 10.

Table 10 – PAGO instance attributes

Attribute ID	Name	Data type	Default value	Usage	Description	Supporting method
0	PagoInsID	Unsigned8	0	Mandatory	The identifier of the aggregation object instance	READ
1	PagoPeriod	Unsigned8	1	Mandatory	The aggregation cycle (in seconds)	READ/WRITE
2	PagoMemNum	Unsigned8	1	Mandatory	Count of the aggregated cluster members	READ/WRITE
3	PagoMemLst	Octetstring		Optional	List of the aggregated cluster members	READ/WRITE
4	PagoDataSize	Unsigned8	0	Optional	Length of the aggregated packet (in octets)	READ/WRITE
5	PagoMemData	Octetstring		Mandatory	Data of the aggregated cluster members	READ/WRITE

The methods supported by the PAGOs are shown in Table 171.

The attributes of the DGO class are shown in Table 11.

Table 11 – DGO class attributes

Attribute ID	Name	Data type	Default value	Usage	Description	Supporting method
0	DgoID	Unsigned8	2	Mandatory	The identifier of the DGO	READ
1	DgoRevision	Unsigned8	0	Optional	The revision defined by the DGO	READ

The attributes of the DGO instance are shown in Table 12.

Table 12 – DGO instance attributes


Attribute ID	Name	Data type	Default value	Usage	Description	Supporting method
0	DgoInstID	Unsigned8	0	Mandatory	The identifier of the DGO instance	READ

The methods supported by the DGOs are shown in Table 171.

6.7 Performance monitoring


6.7.1 Path failure report

The path failure report is used by routing devices to report path failure events to the NM through the redundant paths. The process of path failure report is shown in Figure 18 (see 9.5.12).

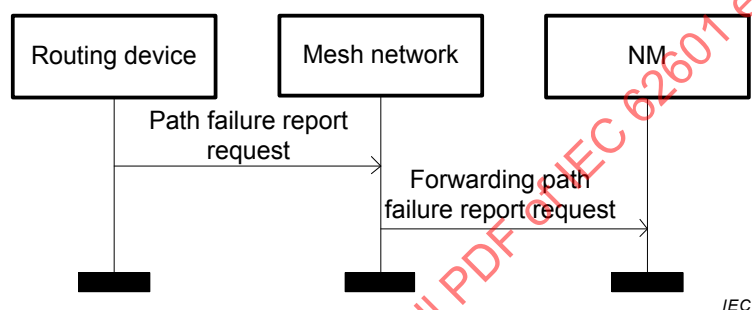**Figure 18 – Process of path failure report**

6.7.2 Device status report

After receiving device status reports from intra-cluster field devices, a routing device reports its own health and the health of its field devices to the NM periodically. The NM appraises and diagnoses the network performance according to health information, and replies to the change of network environment timely. The NM should detect abnormal conditions in the WIA-PA device, such as low level of battery power and disconnection from neighbouring devices. This is realized by setting alarm levels to the WIA-PA devices. The device status report processes of the field device and the routing device are shown in Figure 19 and Figure 20 (see 9.5.10).

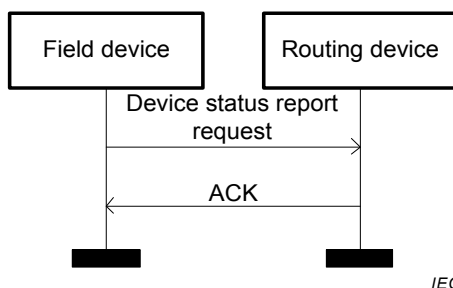**Figure 19 – Device status report process of field device**

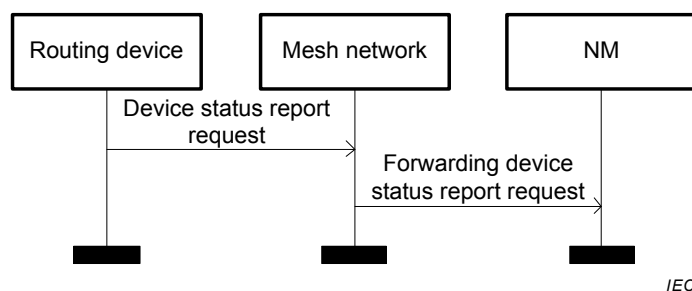


Figure 20 – Device status report process of routing device

6.7.3 Channel condition report

The channel condition report is used for the WIA-PA field devices or routing devices to report the channel condition remotely to the NM. The process of channel condition report is shown in Figure 21 (see 9.5.11).

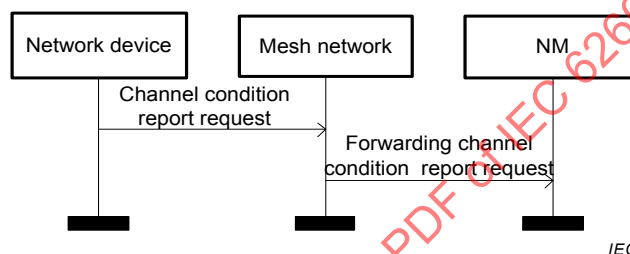


Figure 21 – Process of channel condition report

6.8 Leaving process

6.8.1 General

The leaving process of WIA-PA devices includes the abnormal leaving process, the active leaving process and the passive leaving process. The abnormal leaving process is caused by device failure, device invalidation, and energy depletion, which should be judged by the Keep-alive command frame of DLSL. The active leaving is an optional function and is enabled by setting ActiveLeavingEnable (see 6.9.1.2.1) to 1. The active leaving is requested by field devices from their routing devices or by routing devices from the gateway device. The passive leaving is requested by the gateway device from routing devices or by routing devices from their field devices.

6.8.2 Leaving process of routing device

The WIA-PA network specifies two leaving processes for routing devices: active leaving and passive leaving. The active leaving process of a routing device is as follows (shown in Figure 22).

- A routing device sends the leaving request to the NM.
- The NM gives a leaving response to the routing device.
- After receiving a positive response, the routing device notifies the leaving to its field devices. After passive leaving of field devices, the routing device leaves the network.
- The NM releases the network address, VCR and the communication resources of the departing routing device, and updates the network topology.
- The NM notifies the routing devices that have communication relationships with the departed routing device to release the related communication resources.

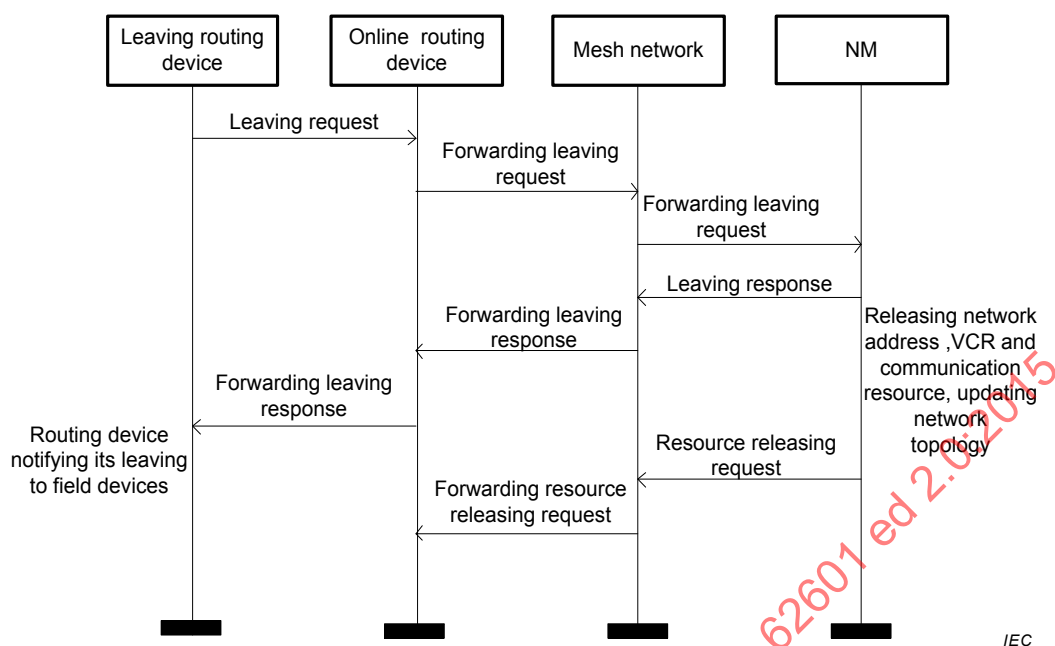


Figure 22 – Active leaving process of routing device

The passive leaving process of a routing device is as follows (shown in Figure 23).

- The NM sends the leaving request to a routing device.
- The routing device notifies its leaving to field devices.
- After passive leaving of field devices, the routing device sends a leaving response to the NM.
- The NM releases the network address, VCR and communication resources, and updates the network topology after receiving the leaving response from the routing device.
- The NM notifies the routing devices that have communication relationships with the departed routing device to release the related communication resources.

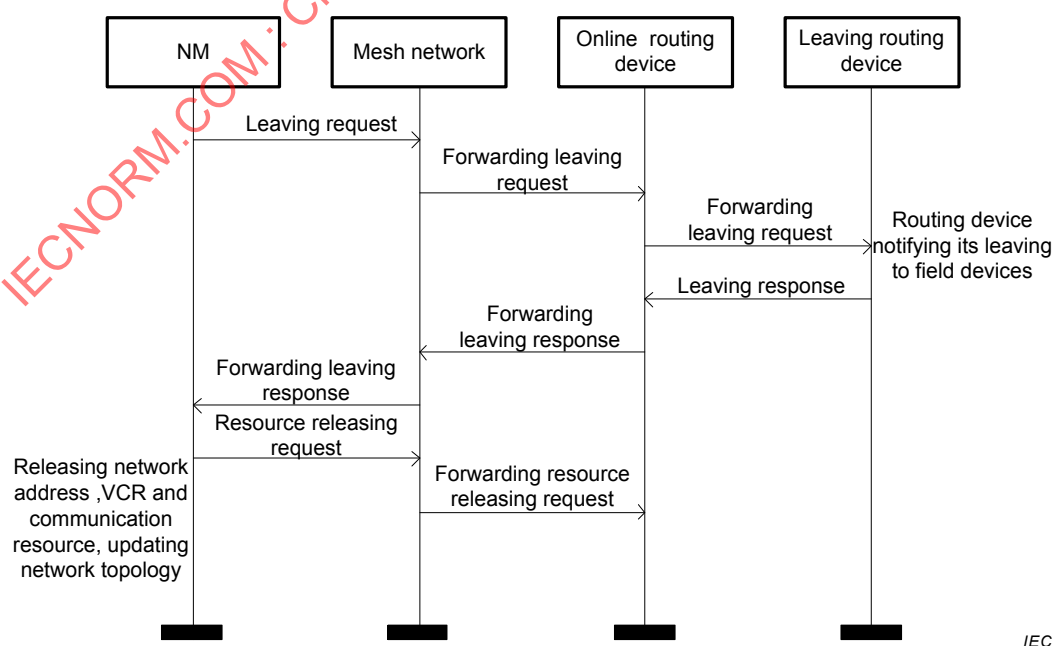


Figure 23 – Passive leaving process of routing device

6.8.3 Leaving process of field device

The WIA-PA network specifies two leaving processes for field devices: active leaving and passive leaving.

The active leaving process of a field device is as follows (shown in Figure 24 and Figure 25).

- A field device sends the leaving request to the routing device or the gateway device in a cluster.
- The routing device or the gateway device returns a leaving response to the leaving field device.
- The routing device or the gateway device releases the intra-cluster network address, VCR, and communication resources and updates the cluster member list and UAO list of the field device that has left the network.
- After receiving the response, the field device leaves the network.
- If the field device leaves the routing device, the routing device reports the updated cluster member list and UAO list to the NM.

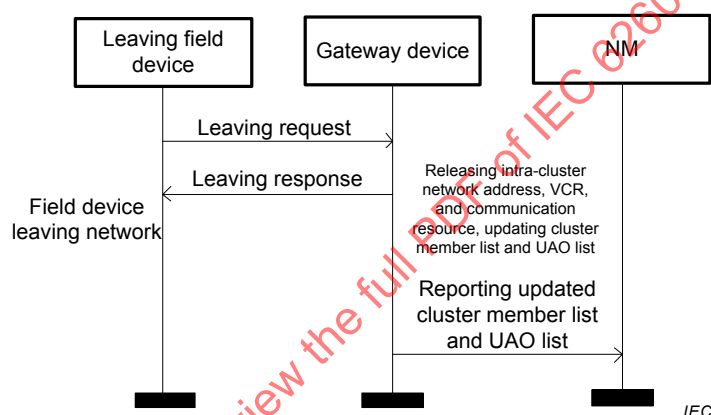


Figure 24 – Active leaving process of field device (leaving from gateway device)

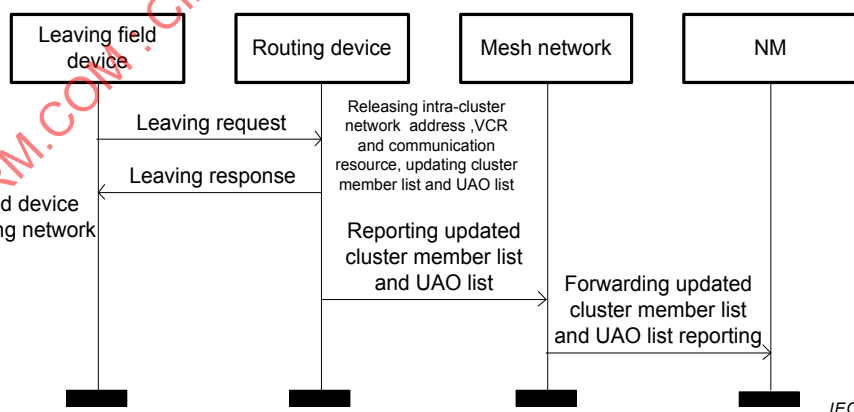


Figure 25 – Active leaving process of field device (leaving from routing device)

The passive leaving process of a field device is as follows (shown in Figure 26 and Figure 27).

- The routing device or the gateway device sends the leaving request to a field device.
- The field device returns the leaving response to the routing device or the gateway device.
- The field device leaves the cluster.

- d) The routing device or the gateway device releases the intra-cluster network address, VCR and communication resources of the departing field device and updates the cluster member list and UAO list.
- e) If the field device leaves the routing device, the routing device reports the cluster member and its UAO list to the NM.

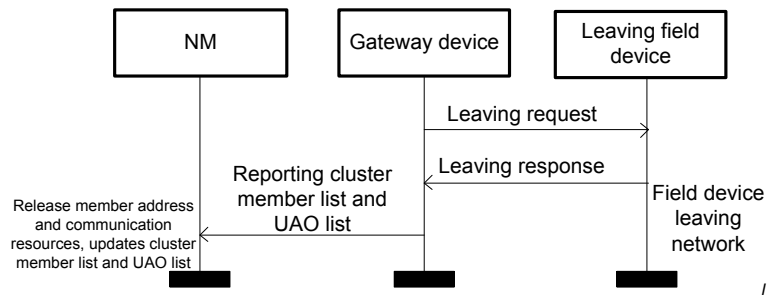


Figure 26 – Passive leaving process of field device (leaving from gateway device)

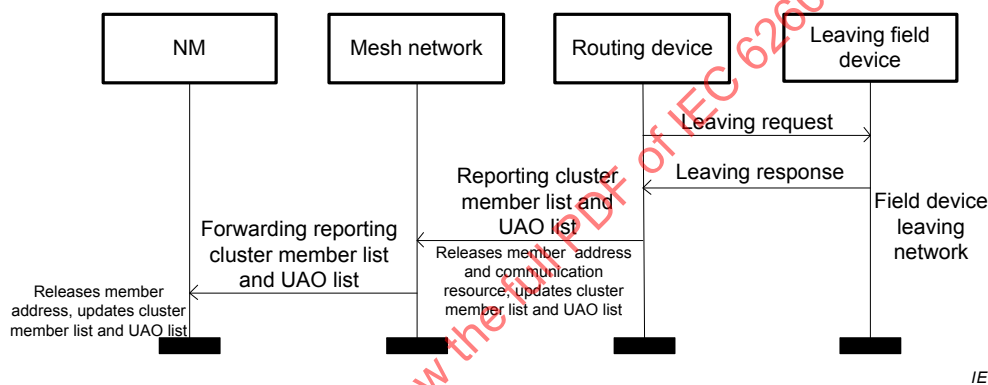


Figure 27 – Passive leaving process of field device (leaving from routing device)

6.9 Management information base and services

6.9.1 Management information base

6.9.1.1 General

Items stored in the MIB are called attributes and are used for monitoring and configuring the WIA-PA network parameters. These attributes can be accessed and updated by the NM.

According to the storage types, the attributes in the MIB are classified into three categories:

- a) constant attribute,
- b) static attribute, and
- c) dynamic attribute.

A constant attribute, such as the serial number of a wireless device, is unchangeable with time. The constant attribute is set when devices leave manufacturers and should not be modified.

A static attribute, such as an alarm limit, changes its value infrequently. The value of the static attribute should be preserved after the warm restart/reset/ power-failure.

A dynamic attribute changes its value frequently without any external command. The value of the dynamic attribute will be lost after the warm restart/reset/power-failure. Warm restart is a sequence of operations that is performed to reset a previously running device after an

unintentional shutdown. When a device is reset, it enters into the idle state. Power-failure indicates that the available power that is used by devices is becoming critically low.

According to the attribute data types, the attributes in the MIB are divided into unstructured attributes and structured attributes.

According to the implementation requirements, the attributes in the MIB are divided into mandatory attributes and optional attributes.

There are two types of the access rights to the attributes in the MIB:

- a) R (Read), which means that the values of the attribute may be read by other devices in WIA-PA network; and
- b) W (Write), which means that the values of the attribute may be set by other devices in WIA-PA network.

6.9.1.2 MIB attributes

6.9.1.2.1 Unstructured attributes

The unstructured attributes are listed in Table 13. The values of attributes numbered 0 to 28 are identical in the entire network; and the values of attributes numbered 29 to 33 are device specific.

Table 13 – Unstructured attributes (1 of 5)

ID	Name	Data type	Valid range	Access type	Storage type	Default value	Description
0	ProtocolVersion ^{de}	Unsigned16	0 to 65 535	R	Static	2013	Protocol version of current WIA-PA protocol stack, which is indicated by years.
1	NetworkID ^{e#}	Unsigned8	0 to 255	R/W	Static	0	Network identifier, used for multiple networks coexisting
2	StatisticsDuration ^{e*}	Unsigned16	0 to 65 535	R/ W	Static	0	Configuring the cycle of the statistic collection (in seconds). After this duration, WIA-PA devices update the statistic data in the neighbour tables. The value of 0 indicates that the device does not collect statistic data.
3	MaxNSDUSize ^{e*}	Unsigned8	0 to 255	R	Static	71	Maximum size of service data unit supported by the NL (in octets). MaxNSDUSize = aMaxPHYPacketSize -maximal length of MAC header – maximal length of DLSL header – maximal length of NL header. See IEEE STD 802.15.4-2011 Table 70 for aMaxPHYPacketSize.

Table 13 (2 of 5)

ID	Name	Data type	Valid range	Access type	Storage type	Default value	Description
4	BitMap ^{ae*}	Unsigned32	32 bits	R/W	Dynamic	0x FFFF	Each bit indicates whether a channel can be used: 0 = Not used; 1 = Used. The value of bit i indicates the usage status of channel i. The value of the bit i indicates whether it is used according to IEEE STD 802.15.4-2011 channel number.
5	KeepAliveDuration ^{ee*}	Unsigned24	0 to $(2^{24}-1)$	R/W	Static	1 000	Duration between two keep-alive frames (in milliseconds) The value of 0 is invalid.
6	TimeSynDuration ^{ee*}	Unsigned24	0 to $(2^{24}-1)$	R/W	Static	25 000	Duration between two time synchronization frames (in milliseconds). The default value is calculated under the assumptions that the drift of crystal oscillator is 20 parts per million and the synchronization error is 1 ms. The value of 0 is invalid.
7	ChannelThreshold ^{ee*}	Unsigned8	0 to $(\text{macMaxFrameRetries} - 2)$	R/W	Static	1	The channel switch threshold in adaptive frequency hopping, indicated as retry count; see IEEE STD 802.15.4-2011, Table 52 for macMaxFrameRetries
8	SecEnableFlag ^{ee*}	Boolean	0, 1	R/W	Static	0	Security enable flag: 0 = the whole network needs authentication; 1 = the whole network does not need authentication.
9	KeyupdateDur ^{be*}	Unsigned32	0 to $(2^{32}-1)$	R/W	Dynamic	0	The updating cycle of key (in milliseconds). The value of 0 indicates that keys are not updated.
10	MaxAttackedCnt ^{be*}	Unsigned16	0 to 65 535	R/W	Static	5	The maximum count of attacks. The value of 0 indicates that this attribute is invalid.
11	MaxKeyAttacked-Cnt ^{be*}	Unsigned16	0 to 65 535	R/W	Static	1	The maximum count of key attacked.
12	MICFailerTimeUnit ^{be*}	Unsigned16	0 to 65 535	R/W	Static	60	The time interval in seconds used to count the MaxAttackedCnt.

Table 13 (3 of 5)

ID	Name	Data type	Valid range	Access type	Storage type	Default value	Description
13	Alert ^{be*}	Unsigned16	0 to 65 535	R/W	Static	0	Bit 0 to 6 represent the security alert, the value 1 represents an alert: Bit0 = AttackedCount reaches the MaxAttackedCnt; Bit1 = KS is attacked; Bit2 = KJ is attacked; Bit3 = DLKEK is attacked; Bit4 = ALKEK is attacked; Bit5 = DLKED is attacked; Bit6 = ALKED is attacked.
14	EtoEACKTimeOut ^{e*}	Unsigned24	0 to $(2^{24}-1)$	R/W	Static	100*macMaxFrameRetries	The upper limit of waiting time for end to end acknowledge (in milliseconds). See IEEE STD 802.15.4-2011, Table 52 for macMaxFrameRetries.
15	TimeSlotDuration ^{e*}	Unsigned16	0 to 65 535	R/W	Static	N/A	Indicating the timeslot duration. The timeslot duration is calculated by: $(aBaseSlotDuration \times 2^{TimeSlotDuration})$. See IEEE STD 802.15.4-2011, Table 51 for aBaseSlotDuration.
16	PLRThreshold ^{e*}	Unsigned8	0 to 100	R/W	Static	50	The threshold of packet loss rate, which is PLRThreshold divided by 100 and is used for adaptive frequency switch. See 8.4.5 for adaptive frequency switch.
17	CmemRptCycle ^{ce*}	Unsigned16	0 to 65 535	R/W	Static	Maximal superframe cycle of the whole WIA-PA network	Configuring the reporting cycle of cluster member information (in seconds) The value of 0 is invalid.
18	ChaStaRptCycle ^{e*}	Unsigned16	0 to 65 535	R/W	Static	Maximal superframe cycle of the whole WIA-PA network	Configuring the reporting cycle of channel condition information (in seconds) The value of 0 is invalid.
19	DevStaRptCycle ^{e*}	Unsigned16	0 to 65 535	R/W	Static	Maximal superframe cycle of the whole WIA-PA network	Configuring the reporting cycle of device status information (in seconds) The value of 0 is invalid.

Table 13 (4 of 5)

ID	Name	Data type	Valid range	Access type	Storage type	Default value	Description
20	PathFailRptCycle ^{ce*}	Unsigned16	0 to 65 535	R/W	Static	Maximal superframe cycle of the whole WIA-PA network	Configuring the reporting cycle of failure path information (in seconds) The value of 0 is invalid.
21	MaxEtoERetry ^{e*}	Unsigned8	0 to 255	R/W	Static	1	The maximum number of end-to-end retry
22	NetworkTopology ^{e*}	Boolean	0, 1	R/W	Static	1	Indicating the network topology: 0 = hierarchical network that is the combination of star and mesh; 1 = star-only network topology.
23	UTCTime ^f	Unsigned32	0 to (2 ³² -1)	R/W	Dynamic	0	Universal Time Coordinated (UTC).
24	ActiveLeaving-Enable ^e	Boolean	0, 1	R/W	Static	0	A flag indicates that if the active leaving function is enabled: 0 = Disabled; 1 = Enabled.
25	SecMode ^{be*}	Unsigned8	0 to 3	R/W	Static	0	Bit 0 represents whether the DLSL uses security service: 0 = Not used; 1 = Used. Bit 1 represents whether the AL uses security service: 0 = Not used; 1 = Used.
26	SecLevel ^{b*}	Unsigned8	0 to 63	R/W	Static	0	Bit 0, 1 and 2 represent the security levels of the DLSL frames. 000 = None; 001 = MIC-32; 010 = MIC-64; 011 = MIC-128; 100 = Encryption; 101 = Encryption-MIC-32; 110 = Encryption-MIC-64; 111 = Encryption-MIC-128; Bit 3, 4 and 5 represent the security levels of the AL packets. 000 = None; 001 = Encryption; 010 = MIC-32; 011 = Encryption-MIC-32; Others are reserved.

Table 13 (5 of 5)

ID	Name	Data type	Valid range	Access type	Storage type	Default value	Description
27	CountryCode ^{e*}	Unsigned16	0 to 65 535	R/W	Dynamic	0x3C00	The country code that provides the local and regulatory-constraint guidance. See 8.4.11 for details.
28	EtoEACKEnable ^{e*}	Bool	0, 1	R/W	Dynamic	0	A flag indicates that if the WIA-PA network supports end to end ACK: 0 = Not support; 1 = Support.
29	AuthenState ^{be}	Boolean	0, 1	R/W	Dynamic	0	A flag that marks if a WIA-PA device has been authenticated to be a legal device: 0 = Not authenticated; 1 = Authenticated.
30	AuthenTime ^{be}	Unsigned32	0 to (2 ³² -1)	R/W	Dynamic	0	Time of a device being authenticated (in UTC time)
31	AggPeriod ^{be*}	Unsigned8	0 to 255	R/W	Static	N/A	The aggregation duration (in milliseconds) This value is valid only if aggsupport=1 and enable=1.
32	ObjectNumber ^{e*}	Unsigned8	0 to 255	R/W	Static	N/A	The number of UAOs.
33	AbsoluteSlotNumber ^e	Unsigned48	0 to (2 ⁴⁸ -1)	R/W	Dynamic	0	Number of timeslots from the start of the network, denoting the current timeslot, increasing by one.
^a Attributes are optional for the field device/handheld device. ^b Attributes are optional for all devices in the WIA-PA networks. ^c Attributes are not chosen by the field device/handheld device. ^d ProtocolVersion is configured by manufacturers. ^e Attributes numbered 0 to 33 are stored by all types of WIA-PA devices. If the default value of an attribute is N/A, users may set it; otherwise, if the default value of an attribute is specified, users should set it according to actual application scenarios. [#] Attributes are configured by the handheld device. [*] Attributes are configured by the GW.							

6.9.1.2.2 Structured attributes

The structured attributes are listed in Table 14.

Table 14 – Structured attributes

ID	Name	Data type	Access type	Storage type	Default value	Description
100	RouteTable	NLRoute_Struct structure (see Table 15)	R/ W	Dynamic		Including the route ID, destination address, next-hop address, and retry counter. Each list member is identified by storage index.
101	Superframe	Superframe_Struct structure (see Table 16)	R/ W	Dynamic		Describing the superframe information. Each list member is identified by storage index.
102	Link	Link_Struct structure (see Table 17)	R/W	Dynamic		Describing the link information. Each list member is identified by storage index.
103	Neighbour ^a	Neighbour_Struct structure (see Table 18)	R/W	Dynamic		Describing the information of neighbour devices. Each list member is identified by storage index.
104	ChannelCondition	ChanCon_Struct structure (see Table 19)	R/ W	Dynamic		Recording the statistic information of channel condition. Each list member is identified by storage index.
105	DeviceStruct	Device_Struct structure (see Table 20)	R/W	Dynamic/constant/static		Describing the information of WIA-PA devices. Each list member is identified by storage index.
106	VCRList	VCR_Struct structure (see Table 21)	R/ W	Dynamic		Recording the VCR information. Each list member is identified by storage index.
107	DevConRep	DevConRep_Struct structure (see Table 22)	R/W	Dynamic		Recording the information of device condition. Each list member is identified by storage index. This attribute is recorded by routing devices and the gateway device.
108	KeyTable ^b	Key_Struct structure (see Table 23)	R/W	Dynamic		Including the key type, key length, key update time, key using time, key value, and count of key attack. Each list member is identified by storage index.
109	ObjList	ObjList_Struct structure (see Table 24)	R/W	Static		The list of UAO identifiers. Each list member is identified by storage index.

NOTE The sizes of all the lists specified in Table 14 are implementation dependent.

^a Attributes are not chosen by the field device/handheld device.

^b Attributes are optional for all devices in the WIA-PA networks.

The data type of routing attributes RouteTable is shown in Table 15.

Table 15 – NLRoute_Struct structure

Attribute member identifier	Name	Data type	Valid range	Description
0	RouteID	Unsigned16	0 to 65 535	A unique routing identifier
1	SourceAddress	Unsigned16	0 to 65 535	The short address of source device
2	DestinationAddress	Unsigned16	0 to 65 535	The short address of destination device
3	NextHop	Unsigned16	0 to 65 535	The short address of next-hop device
4	RetryCounter	Unsigned8	0 to 255	A counter to record end-to-end retries

The data type of superframe attributes Superframe is shown in Table 16.

Table 16 – Superframe_Struct structure

Attribute member identifier	Name	Data type	Valid range	Description
0	SuperframeID	Unsigned16	0 to 65 535	Unique identifier of the superframe, supplied by the NM
1	SuperframeMultiple	Unsigned8	0 to 255	SuperframeMultiple = maximum data update rates/minimum data update rates. It is used for restricting the WIA-PA superframe length and is also used for processing the long cycle data transmission. See 8.4.6 for details.
2	NumberSlots	Unsigned16	0 to 65 535	Superframe size (counts of timeslots)
3	ActiveFlag	Boolean	0, 1	Superframe active flag: 0 = Inactive; 1 = Active.
4	ActiveSlot	Unsigned48	0 to (2 ⁴⁸ -1)	Absolute timeslot number (ASN) when a superframe begins active

The data type of link attributes Link is shown in Table 17.

Table 17 – Link_Struct structure

Attribute member identifier	Name	Data type	Valid range	Description
0	LinkID	Unsigned16	0 to 65 535	Unique identifier of the link
1	NeighbourAddr	Unsigned16	0 to 65 535	Reference to a neighbour table entry, which is empty when the NM allocates links to a routing device for intra-cluster communication.
2	LinkType	Unsigned8	0 to 31	Bit 0 represents the link type: 0 = Unicast; 1 = Broadcast; Bit 1 and bit 2 represent the character of a link: 00 = Transmitting; 01 = Transmit-shared; 10 = Receiving; Bit 3 represents the type of a timeslot: 0 = Data timeslot; 1 = Management timeslot. Bit 4 represents the aggregation character: 0 = Timeslot for non-aggregated packet; 1 = Timeslot for aggregated packet.
3	RelativeSlotNumber	Unsigned16	0 to 65 535	Relative timeslot number
4	LinkSuperframeNum	Unsigned8	0 to 255	LinkSuperframeNum = data update rate of this device/the minimum data update rate. It is used for processing the long cycle data transmission.
5	ActiveFlag	Boolean	0, 1	Indicating if a link is being used: 0 = Not used; 1 = Being used.
6	ChannelIndex	Unsigned8	0 to 31	The channel sequence numbers for this link, namely, the sequence numbers of the main channels.
7	SuperframeID	Unsigned16	0 to 65 535	Reference to a superframe in the superframe table

The data type of neighbour attributes Neighbour is shown in Table 18.

Table 18 – Neighbour_Struct structure

Attribute member identifier	Name	Data type	Valid range	Description
0	NeighbourAddr	Unsigned16	0 to 65 535	The short address of neighbour device
1	NeighbourStatus	Unsigned8	0 to 3	Bit 0 represents whether this neighbour device is a main time source: 0 = No; 1 = Yes; Bit 1 represents the status of neighbour device: 0 = Normal; 1 = Abnormal.
2	BackoffCounter	Unsigned8	0 to 31	Backoff counter
3	BackoffExponent	Unsigned8	0 to 15	Backoff exponent
4	LastTimeCommunicated	Unsigned48	0 to ($2^{48}-1$)	Time when last communicated with the neighbour device (in ASNs)
5	AveRSL	Unsigned8	0 to 255	The average level of signals received from the neighbour device in StatisticsDuration
6	PacketsTransmitted	Unsigned16	0 to 65 535	The number of un-broadcast frames sent to the neighbour device in StatisticsDuration
7	AckPackets	Unsigned16	0 to 65 535	The number of expected ACK/NACK packets received in StatisticsDuration
8	PacketsReceived	Unsigned16	0 to 65 535	The number of good packets received from the neighbour device in StatisticsDuration
9	BroadcastPackets	Unsigned16	0 to 65 535	The number of good broadcast packets received from the neighbour device in StatisticsDuration

The data type of channel condition attributes ChannelCondition is shown in Table 19.

Table 19 – ChanCon_Struct structure

Attribute member identifier	Name	Data type	Valid range	Description
0	DeviceShortAddress	Unsigned16	0 to 65 535	16-bit address of device
1	ChannelID	Unsigned8	0 to 255	The sequence number of channel
2	NeighbourAddr	Unsigned16	0 to 65 535	16-bit address of neighbour device
3	LinkQuality	Unsigned8	0 to 255	Link Quality Indication (LQI) value of every channel
4	PacketLossRate	Unsigned16	0 to 65 535	Packet loss rate of every channel, which is a percentage and calculated through received ACKs and total sent packets
5	RetryNum	Unsigned8	0 to MaxFrameRetries	The count of retransmission of every channel

The data type of device attributes DeviceStruct is shown in Table 20.

Table 20 – Device_struct structure (1 of 3)

Attribute member identifier	Name	Data type	Valid range	Storage type	Access type	Default value	Description
0	LongAddress	Unsigned64	0 to ($2^{64}-1$)	C	R	N/A	64-bit global unique address Same as for the DeviceType field as defined in 6.3.4: 0 = Gateway device; 1 = Routing device; 2 = Field device; 3 = Handheld device; Others are reserved.
1	Redundant-DevFlag	Boolean	0, 1	S	R/W	0	Flag that indicates whether this device is a redundant device: 0 = Irredundant device; 1 = Redundant device.
2	Redundant-DevLongAddr	Unsigned64	0 to ($2^{64}-1$)	C	R	N/A	64-bit global unique address of a redundant device Same as for the DeviceType field as defined in 6.3.4: 0 = Gateway device; 1 = Routing device; 2 = Field device; 3 = Handheld device; Others are reserved.
3	NetAddress-Assign	Boolean	0, 1	S	R/W	N/A	A flag indicating whether the network address (see 6.3.4) has been assigned: 0 = No; 1 = Yes.
4	DeviceShort-Address	Unsigned16	0 to 65 535	S	R/W	N/A	Short address of WIA-PA device The most significant 8 bits are cluster address and the least significant 8 bits are intra-cluster address
5	ManufacturerID	Unsigned24	0 to ($2^{24}-1$)	C	R	N/A	Manufacturer's identifier
6	DeviceSerial-Num	Unsigned64	0 to ($2^{64}-1$)	C	R	N/A	Device serial number
7	DeviceVersion	Unsigned8	0 to 255	C	R	N/A	Device version number
8	PowerSupply-Status	Unsigned8	0 to 10	S	R/W	N/A	Power condition: 0 = Fixed power supply; 1 = Highest power; 2 = Second highest power; 10 = lowest power.
9	RouterCapable	Boolean	0, 1	S	R/W	0	A flag to indicate if the device has routing function: 0 = No; 1 = Yes.

Table 20 (2 of 3)

Attribute member identifier	Name	Data type	Valid range	Storage type	Access type	Default value	Description
10	Devicestate	Unsigned8	0 to 16	S	R/W		Bits 0 and 1 represent device joining state: 00 = Not joined; 01 = Joining; 10 = Security authentication; 11 = Joined. Bit 2-3 represent device running state: 00 = Inactive; 01 = Active; 10 = Failed. Others are reserved.
11	DeviceMemory-total	Unsigned32	0 to (2 ³² -1)	C	R	N/A	Total memory in a device (in octets), including RAM, ROM, Flash..
12	DeviceUsed-Memory	Unsigned32	0 to (2 ³² -1)	D	R/W	N/A	Memory used by device (in octets)
13	ClockMaster-Role	Boolean	0, 1	S	R/W	N/A	The device is a time source or not (see 8.3.3.1): 0 = No; 1 = Yes.
14	ClockUpdate	Unsigned32	0 to (2 ³² -1)	D	R/W	0	The last adjustment of clock (in seconds)
15	PacketsMACTo-DLSL	Unsigned32	0 to (2 ³² -1)	D	R/W	0	Count of the packets from MAC to DLSL
16	PacketsFrom-DLSLRejected	Unsigned32	0 to (2 ³² -1)	D	R/W	0	Count of the packets from the DLSL that are rejected by the NL
17	PacketsFrom-DLSLAccepted	Unsigned32	0 to (2 ³² -1)	D	R/W	0	Count of the packets from the DLSL that are accepted by the NL
18	PacketsFrom-ASL	Unsigned32	0 to (2 ³² -1)	D	R/W	0	Count of the packets from the ASL
19	PacketsFrom-ASLRejected	Unsigned32	0 to (2 ³² -1)	D	R/W	0	Count of the packets from the ASL that are dropped by the NL
20	PacketsOutTo-DLSL	Unsigned32	0 to (2 ³² -1)	D	R/W	0	Count of the packets from the ASL that are forwarded by the NL to the DLSL
21	AGGSupport-Flag	Boolean	0, 1	S	R/W	N/A	Aggregation and disaggregation support flag (whether a routing device supports aggregation mechanism); 0 = Not support; 1 = Support.
22	AGGEnable-Flag	Boolean	0, 1	S	R/W	0	Aggregation and disaggregation enable flag (whether a routing device enables aggregation mechanism); 0 = Disenable; 1 = Enable.
23	IntraChannel-Num	Unsigned8	0 to 31	S	R/W	0	The number of usable channels for intra-cluster communication

Table 20 (3 of 3)

Attribute member identifier	Name	Data type	Valid range	Storage type	Access type	Default value	Description
24	IntraChanel	Unsigned8	0 to 31	S	R/W	0	A list to store all communication channels, which is allocated by the GW to routing devices and field devices. The size of the list is IntraChannelNum. See 8.4.5 for details.
25	SuperframeID	Unsigned16	0 to 65 535	S	R/W	0	Unique identifier of the superframe, supplied by the NM

The Storage types in this table are C = constant, D = Dynamic, and S = static.

The data type of VCR attributes VCR_Struct is shown in Table 21.

Table 21 – VCR_Struct structure

Attribute member identifier	Name	Data type	Valid range	Description
0	VcrID	Unsigned16	0 to 65 535	VCR identifier The VCR is invalid if its identifier is 0xFFFF.
1	VcrType	Unsigned8	0 to 16	Bits 0-1 represent VCR type: 00 = P/S VCR; 01 = R/S VCR; 10 = C/S VCR; Bits 2 and 3 represent aggregation or non aggregation VCR: 00 = Non-aggregation VCR; 01 = Data aggregation VCR; 10 = Packet aggregation VCR; Others are reserved.
2	SrcObjID	Unsigned8	0 to 255	Source object ID
3	SrcObjInstID	Unsigned8	0 to 255	ID of source object instance
4	DesObjID	Unsigned8	0 to 255	Destination object ID
5	DesObjInstID	Unsigned8	0 to 255	ID of destination object instance
6	DataUpdateRate	Unsigned32	0 to (2 ³² -1)	Data update rate (in milliseconds) The data has no cycle if this value is 0xFFFFFFFF.
7	VcrStatus	Boolean	0, 1	VCR status: 0 = Inactive; 1 = Active.
8	VcrActivationTime	Unsigned32	0 to (2 ³² -1)	The activation time of VCR (in milliseconds)
9	ServiceTime	Unsigned32	0 to (2 ³² -1)	The valid service duration of VCR (in milliseconds)
10	SourceChAddress	Unsigned16	0 to 65 535	The cluster head address of the source device
11	SourceAddress	Unsigned16	0 to 65 535	The network address of the source device
12	DestinationAddress	Unsigned16	0 to 65 535	The network address of the destination device
13	SecurityPolicy	Unsigned8	0 to 255	Security level of packets (see Annex A)
14	RouteID	Unsigned16	0 to 65 535	Route identifier

The time unit used in this table is the timeslot used by the superframe.

The data type of device condition attributes DevConRep is shown in Table 22.

Table 22 – DevConRep_Struct structure

Attribute member identifier	Name	Data type	Valid range	Description
0	DevShortAddr	Unsigned16	0 to 65 535	16-bit short address of device
1	NumPktSent	Unsigned16	0 to 65 535	The total number of packets sent after the last report
2	NumPktRcvd	Unsigned16	0 to 65 535	The total number of packets terminated in the device after the last report
3	NumMacMicFailure	Unsigned16	0 to 65 535	The total number of Message Integrity Code (MIC) failures after the last report
4	BatLevel	Unsigned8	1 to 10	Residual power level
5	RestartCount	Unsigned8	0 to 255	Restart count of device
6	Uptime	Unsigned32	0 to (2 ³² -1)	Time from the last restart (in seconds)

The data type of key attributes KeyTable is shown in Table 23.

Table 23 – Key_Struct structure

Attribute member identifier	Name	Data type	Valid range	Description
0	KeyID	Unsigned16	0 to 65 535	Key identifier
1	KeyType	Unsigned8	0 to 3	Key type: 0 = Joining key; 1 = Key encryption key; 2 = DLSL encryption key; 3 = AL encryption key.
2	KeyLength	Unsigned8	0 to 255	(KeyLength+1) is the valid length of the key (in bits)
3	KeyActiveTime	Unsigned48	0 to (2 ⁴⁸ -1)	Absolute timeslot number (ASN) when key begins active.
4	KeyData	Octetstring		Key value
5	KeyAttackCnt	Unsigned8	0 to 255	The total number of key attacks
6	KeyState	Unsigned8	0 to 7	The using state of a key: 0 = Backup; 1 = Using; 2 = Invalid; Others are reserved.

The data type of object list attributes ObjList is shown in Table 24.

Table 24 – ObjList_Struct structure

Attribute member identifier	Name	Data type	Valid range	Description
0	ObjectID	Unsigned8	0 to 255	The unique identifier of the UAO
1	InstanceID	Unsigned8	0 to 255	The unique identifier of an object instance
2	ProfileID	Unsigned16	0 to 65 535	The profile ID for the UAO
3	ParameterNumber	Unsigned8	0 to 255	Number of parameters of the UAO

NOTE ObjectID and InstanceID in ObjList_Struct are identical with Object Identifier and Instance ID (see Annex C). DAGO, PAGO, and DGO are three special UAOs. Therefore, the attributes of DAGO, PAGO, or DGO are included in the ObjList if such object is implemented in the device. In addition, DagolD and DagolnsID of DAGO, PagolD and PagolnsID of PAGO as well asDgolD and DgolnsID of DGO are respectively corresponding to the ObjectID and InstanceID in ObjList_Struct.

6.9.2 MIB services

6.9.2.1 Remote MIB services

The attributes in the MIB can be read and written remotely through the attribute-getting and attribute-setting services provided by the NL.

6.9.2.2 Local MIB services

6.9.2.2.1 General

The attributes in the MIB can be read and written locally through the attribute-getting and attribute-setting services provided by the local DMAP.

6.9.2.2.2 DMAP attribute getting services

DMAP-MIB-GET.request is used by protocol layers to request attributes in the MIB.

The semantics of DMAP-MIB-GET.request are as follows:

```
DMAP-MIB-GET.request (
    AttributeID,
    AttributeMemID,
    FirstValueStorIndex,
    Count
)
```

Table 25 specifies the parameters for DMAP-MIB-GET.request.

Table 25 – DMAP-MIB-GET.request parameters

Name	Data type	Valid range	Description
AttributeID	Unsigned8	0 to 255	Attribute ID in the MIB
AttributeMemID	Unsigned8	0 to 255	The identifier of attribute member, which is used to get the structured MIB attributes The value 255 means that all attributes should be read.
FirstValueStorIndex	Unsigned16	0 to 65 535	The first storage index of multiple attribute values, which is used to get the structured MIB attributes
Count	Unsigned8	0 to 255	Number of attribute values or attributes member values, which is used to get the structured MIB attributes; Getting all attribute values from FirstValueStorIndex if Count = 0

DMAP-MIB-GET.confirm is used to return the result of DMAP-MIB-GET.request.

The semantics of DMAP-MIB-GET.confirm are as follows:

```
DMAP-MIB-GET.confirm (
    Status,
    AttributeID,
    AttributeMemID,
    FirstValueStorIndex,
    Count,
    AttributeValue
)
```


Table 26 specifies the parameters for DMAP-MIB-GET.confirm.

Table 26 – DMAP-MIB-GET.confirm parameters

Name	Data type	Valid range	Description
Status	Unsigned8	0 to 255	Attribute getting results: 0 = SUCCESS; 1 = UNSUPPORTED_ATTRIBUTE; Others are reserved.
AttributeID	Unsigned8	0 to 255	The requested attribute ID
AttributeMemID	Unsigned8	0 to 255	The identifier of attribute member The value 255 means that all attributes should be read.
FirstValueStorIndex	Unsigned16	0 to 65 535	The first storage index of multiple read attribute values
Count	Unsigned8	0 to 255	Number of attribute values or attributes member values
AttributeValue	Octetstring		The value of the attribute

If the operation of getting attributes is successful, the Status should be SUCCESS and the AttributeValue is valid; otherwise, if the MIB does not have the needed attributes, the Status should return UNSUPPORTED_ATTRIBUTE and the AttributeValue is invalid.

6.9.2.2.3 DMAP attribute setting services

DMAP-MIB-SET.request should be used by the protocol layers to write attributes to the MIB.

The semantics of DMAP-MIB-SET.request are as follows:

DMAP-MIB-SET.request (

AttributeID,
AttributeMemID,
FirstValueStorIndex,
Count,
AttributeValue

)

Table 27 specifies the parameters for DMAP-MIB-SET.request.

Table 27 – DMAP-MIB-SET.request parameters

Name	Data type	Valid range	Description
AttributeID	Unsigned8	0 to 255	Attribute ID in the MIB
AttributeMemID	Unsigned8	0 to 255	Identifier of attribute member The value 255 means that all attributes should be read.
FirstValueStorIndex	Unsigned16	0 to 65 535	The first storage index of multiple attribute values, which is used to get the structured MIB attributes
Count	Unsigned8	0 to 255	Number of attributes
AttributeValue	Octetstring		Value of the attribute

DMAP-MIB-SET.confirm is used to return the result of DMAP-MIB-SET.request.

The semantics of DMAP-MIB-SET.confirm are as follows:

DMAP-MIB-SET.confirm (

Status,
AttributeID,
AttributeMemID,
FirstValueStorIndex
)

Table 28 specifies the parameters for DMAP-MIB-SET.confirm.

Table 28 – DMAP-MIB-SET.confirm parameters

Name	Data type	Valid range	Description
Status	Unsigned8	0 to 255	Attribute setting result: 0 = SUCCESS; 1 = UNSUPPORTED_ATTRIBUTE; 2 = INVALID_PARAMETER; Others are reserved.
AttributeID	Unsigned8	0 to 255	Attribute ID in the MIB
AttributeMemID	Unsigned8	0 to 255	Identifier of attribute member The value 255 means that all attributes should be read.
FirstValueStorIndex	Unsigned16	0 to 65 535	The first storage index of multiple written attribute values

If the operation of setting attributes is successful, the Status should be SUCCESS; if the MIB does not have the needed attributes, the Status should be UNSUPPORTED_ATTRIBUTE; otherwise, if the set attributes are not conformable to the specified attributes, the Status should be INVALID_PARAMETER.

7 Physical layer

7.1 General

WIA-PA uses Radio Frequencies (RF) to communicate between devices. The communication distance between two devices depends upon the transmitter power, antenna type, and obstruction between two devices. WIA-PA devices can be powered either by mains power, battery, energy harvesting devices (for example solar, vibration, etc), or a combination thereof.

The PHY specification of WIA-PA is based on the IEEE STD 802.15.4-2011 2,4 GHz compliant radio.

WIA-PA PHY defines the signaling method, signal strength, receiver sensitivity, and environment for sending bits across the network media. The PHY is responsible for activation and deactivation of the radio transceiver, energy detection, link quality indicator, channel selection, clear channel assessment, transmitting and receiving packets across the physical medium.

The PHY specification of WIA-PA includes the following:

- the PHY requirements many of which are adopted directly from IEEE STD 802.15.4-2011 including specific requirements on channels, transmit power, and receiver sensitivity, and
- the PHY requirements to ensure inter-connectable among WIA-PA devices.

7.2 General requirements based on IEEE STD 802.15.4-2011

The WIA-PA physical layer shall be based on IEEE STD 802.15.4-2011 2,4 GHz DSSS with additional requirements and exceptions as specified herein.

One of the device provisioning parameters, CountryCode (see 8.4.11), provides the locale and regulatory-constraint guidance needed to drive conformance to the relevant regulations. See Annex D.

The device vendors are responsible that these devices are compliant with this standard and any country- or region-specific regulations.

Table 29 specifies the IEEE STD 802.15.4-2011 PHY selection for a WIA-PA device.

Table 29 – PHY protocol selection

Clause of IEEE STD 802.15.4-2011	Header	Presence	Constraints
6	General PHY requirements		
6.1	General requirements and definitions	Partial	Only 2 450 MHz DSSS PHY, employing O-QPSK modulation
6.1.1	Operating frequency range	Partial	Only 2 450 MHz DSSS band is included (see Table 30)
6.1.2	Channel assignments	Partial	Only Channels 11-25 of channel page 0 are included (see Table 32)
6.1.3	Minimum LIFS and SIFS periods	Partial	Only minimum LIFS and SIFS for 2 450 MHz band is included
6.1.4	RF power measurement	YES	
6.1.5	Transmit power	YES	
6.1.6	Out-of-band spurious emission	YES	
6.1.7	Receiver sensitivity definitions	YES	
6.2	PHY service specifications	YES	
6.3	PPDU format	YES	
6.4	PHY constants and PIB attributes		
6.4.1	PHY constants	YES	
6.4.2	PHY PIB attributes	Partial	See 7.3.9
6.5	2 450 MHz PHY specifications	YES	See 7.3.8 for further explanation
6.6	868/915 MHz band binary phase-shift keying (BPSK) PHY specifications	NO	Only 2 450 MHz band is included
6.7	868/915 MHz band (optional) amplitude shift keying (ASK) PHY specifications	NO	Only 2 450 MHz band is included
6.8	868/915 MHz band (optional) O-QPSK PHY specifications	NO	Only 2 450 MHz band is included
6.9	General radio specifications		
6.9.1	TX-to-RX turnaround time	YES	
6.9.2	RX-to-TX turnaround time	YES	
6.9.3	Error-vector magnitude (EVM) definition	YES	
6.9.4	Transmit center frequency tolerance	YES	
6.9.5	Transmit power	NO	See 7.3.6 for replacement of this subclause
6.9.6	Receiver maximum input level of desired signal	YES	
6.9.7	Receiver ED	YES	
6.9.8	Link quality indicator (LQI)	YES	
6.9.9	Clear channel assessment (CCA)	YES	

7.3 Additional requirements

7.3.1 General

Although the IEEE STD 802.15.4-2011 physical layer supports multiple frequency bands and modulation classes, a device compliant with this standard shall operate in the license-exempt 2 400 MHz to 2 483,5 MHz band using DSSS modulation and coding at 250 kbit/s, which is specified in IEEE STD 802.15.4-2011, Table 51 as 2 450 DSSS PHY. This standard does not support any of the other frequency bands or data rates or modulation and coding techniques specified in IEEE STD 802.15.4-2011.

7.3.2 Frequency allocations

The transceiver shall employ DSSS and operate in the license-free ISM band as shown in Table 30.

Table 30 – Frequency band and data rate

Frequency MHz	Communication rate kchip/s	Modulation	Bit rate kb/s	Symbol rate ksymbol/s	Symbols
2 400 to 2 483,5	2 000	O-QPSK	250	62,5	16-ary Orthogonal

7.3.3 Channel numbers and frequency assignments

The 2 450 MHz band supports channel assignments 11 – 26 as specified by IEEE STD 802.15.4-2011. Since channel 26 is not compliant with the regulation of some world regions, it is not included in this document.

The frequency assignment for the channels 11 – 25 is shown in Table 31.

Table 31 – Frequency assignments

Channel number	Frequency MHz	Channel number	Frequency MHz	Channel number	Frequency MHz
11	2 405	16	2 430	21	2 455
12	2 410	17	2 435	22	2 460
13	2 415	18	2 440	23	2 465
14	2 420	19	2 445	24	2 470
15	2 425	20	2 450	25	2 475

7.3.4 Radio transceivers

The radio transceivers of WIA-PA devices are compliant to IEEE STD 802.15.4-2011 and conform to worldwide regulations in Europe, Canada, Japan, China, the United States and other locations. See Annex D.

7.3.5 Unspecified or improved required radio performance

This document includes the following that is not specified in IEEE STD 802.15.4-2011.

- Recommended time to switch between channels should be 12-symbol periods.
- Recommended cold start radio turn-on time is 4 ms maximum. It includes frequency lock and settling time.

7.3.6 Transmit power

Transmit power shall be the Equivalent Isotropic Radiated Power (EIRP) of the device. WIA-PA devices shall provide a nominal EIRP of +10 dBm (10 mW) ± 3 dB. The maximum radiated power level shall not exceed the regulatory requirements that apply where the device is deployed, as constrained by CountryCode (see 8.4.11).

In both cases the rated transmit power shall be representative of the manufacturer's production device with power source (batteries, solar, or otherwise) at 95 % to 100 % of rated capacity. All devices should be provided with an omni-direction antenna. The rated transmit power data including maximum output power and radiation patterns for all antenna supported by the product shall be available in the product manual or upon request.

7.3.7 Output power control

The device power level shall be programmable at discrete, monotonic levels from –10 dBm to +10 dBm EIRP (within ± 4 dBm of error in actual power level). The output power can be controlled by setting the PHY PIB attribute phyTransmitPower.

7.3.8 Receiver sensitivity

Receiver sensitivity of WIA-PA complies with IEEE STD 802.15.4-2011 and shall be capable of achieving a sensitivity of –85 dBm or better.

7.3.9 PHY PIB attributes

This standard includes the attributes specified in the IEEE STD 802.15.4-2011, 6.4.2 and additional attributes that apply only to this document. Some of these attributes are assigned a constant value as shown in Table 32.

Table 32 – PHY PIB attributes (1 of 2)

Attribute	Comment
phyCurrentChannel	Set by Ph-Enable request
phyChannelsSupported	Only channels 11 – 25 are supported
phyTXPowerTolerance	1dB, 3 dB, 6 dB
phyTXPower	The values from '–10 dBm to +10 dBm' are supported
phyCCAMode	Only value 2 (carrier sense) is included
phyCurrentPage	Only value '0' is included
phyMaxFrameDuration	Only value '266' is included
phySHRDuration	Only value '10' is included
phySymbolsPerOctet	Only value '2' is included
phyPreambleSymbolLength	Only value '0' is included
phyUWBDataRatesSupported	This attribute is invalid in WIA-PA
phyCSSLowDataRateSupported	This attribute is invalid in WIA-PA
phyUWBCoUSupported	This attribute is invalid in WIA-PA
phyUWB CSSSupported	This attribute is invalid in WIA-PA
phyUWBCurrentPulseShape	This attribute is invalid in WIA-PA
phyUWB CoUpulse	This attribute is invalid in WIA-PA
phyUWB CSpulse	This attribute is invalid in WIA-PA
phyUWB LCPWeight1	This attribute is invalid in WIA-PA
phyUWB LCPWeight2	This attribute is invalid in WIA-PA
phyUWB LCPWeight3	This attribute is invalid in WIA-PA

Table 32 (2 of 2)

Attribute	Comment
phyUWBLCWeight4	This attribute is invalid in WIA-PA
phyUWBLCDelay2	This attribute is invalid in WIA-PA
phyUWBLCDelay3	This attribute is invalid in WIA-PA
phyUWBLCDelay4	This attribute is invalid in WIA-PA
phyRanging	This attribute is invalid in WIA-PA
phyRangingCrystalOffset	This attribute is invalid in WIA-PA
phyRangingDPS	This attribute is invalid in WIA-PA
phyCurrentCode	Only value '0' is included
phyNativePRF	This attribute is invalid in WIA-PA
phyUWBScanBinsPerChannel	This attribute is invalid in WIA-PA
phyUWBInsertedPreambleInterval	This attribute is invalid in WIA-PA
phyTXRMARKER Offset	This attribute is invalid in WIA-PA
phyRXRMARKER Offset	This attribute is invalid in WIA-PA
phyRFRAMEProcessingTime	This attribute is invalid in WIA-PA
phyCCADuration	This attribute is invalid in WIA-PA


8 Data link layer

8.1 General

The WIA-PA Data Link Layer (DLL) is designed to guarantee communication among WIA-PA devices in a reliable and secure way in real-time. The DLL of WIA-PA extends the IEEE STD 802.15.4-2011 superframe structure. The WIA-PA DLL supports certain key functions, including frequency hopping, retransmission, and Time Division Multiple Access (TDMA) and Carrier Sense Multiple Access (CSMA) hybrid channel access mechanisms. These mechanisms are used to guarantee reliability and real-time transmission in communication. The WIA-PA DLL is designed to use MIC mechanism and encryption technology to guarantee the integrity and confidentiality of the communication process.

8.2 Protocol stack

The WIA-PA DLL is designed to leverage the IEEE STD 802.15.4-2011 to meet the requirements of process automation. The DLL protocol stack is shown in Figure 28.

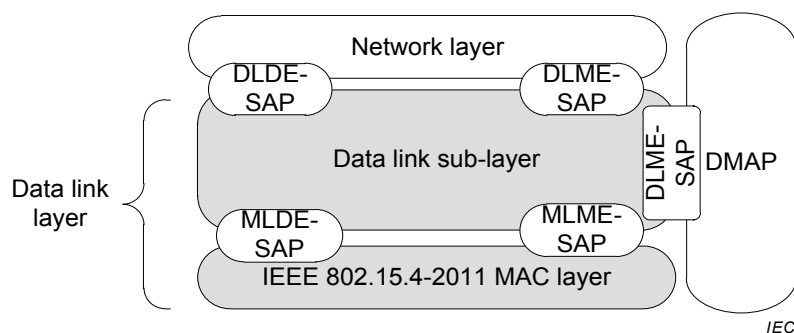**Figure 28 – WIA-PA DLL protocol stack**

The WIA-PA DLL includes the following parts:

- a) the IEEE STD 802.15.4-2011 MAC, which handles the mechanisms of sending and receiving individual data frames;
- b) the DLSL, which handles the aspects of communication resource.

8.3 MAC overview and function extension

8.3.1 MAC overview

The following section specifies the MAC of the WIA-PA standard and the content of IEEE STD 802.15.4-2011 MAC is not stated in this document. This document is based on the IEEE STD 802.15.4-2011 beacon-enabled MAC, which handles all access to the physical radio channel and is responsible for the following tasks:

- a) generating network beacons if the device is a gateway device or a routing device,
- b) synchronizing to network beacons,
- c) supporting network point to point association and disassociation,
- d) supporting point to point security,
- e) employing the timeslotted CSMA-CA mechanism for device joining,
- f) handling and maintaining the GTS mechanism, and
- g) providing a reliable link between two peer MAC entities.

Field devices and handheld devices correspond to the Reduced-Function Device (RFD), and routing devices and gateway devices correspond to the Full-Function Device (FFD). None of the optional functions of RFD and FFD in IEEE STD 802.15.4-2011 are required in this standard.

8.3.2 General requirements based on IEEE STD 802.15.4-2011

The WIA-PA MAC shall be based on IEEE STD 802.15.4-2011 MAC with additional requirements and exceptions as specified herein.

The GW acts as the PAN coordinator in IEEE STD 802.15.4-2011 and the routing devices act as coordinators in IEEE STD 802.15.4-2011.

Table 33 specifies the IEEE STD 802.15.4-2011 MAC selection for a WIA-PA device.

Table 33 – MAC protocol selection (1 of 2)

Clause of IEEE STD 802.15.4-2011	Header	Presence	Constraints
5	MAC protocol		
5.1	MAC functional description		
5.1.1	Channel access	YES	
5.1.2	Starting and maintaining PANs	Partial	Only active scan is used in WIA-PA.
5.1.3	Association and disassociation	YES	
5.1.4	Synchronization	YES	
5.1.5	Transaction handling	NO	Transactions can be instigated from the devices themselves.
5.1.6	Transmission, reception, and acknowledgement	YES	
5.1.7	GTS allocation and management	NO	This function is not used in WIA-PA.
5.1.8	Ranging	NO	This function is not used in WIA-PA.
5.2	MAC frame formats		
5.2.1	General MAC frame format	YES	For WIA-PA MAC frame format, the value of the Security Enabled subfield of MHR shall be set to 0 and the length of the Auxiliary Security Header subfield is 0 octets. The PAN ID Compression is set to 1. The length of Source PAN identifier field is 0 and the Destination PAN Identifier is set to NetworkID (see 6.9.1.2.1) of WIA-PA.
5.2.2	Format of individual frame types	YES	
5.2.3	Frame compatibility	YES	
5.3	MAC command frames	Partial	See following 5.3.1 to 5.3.9.
5.3.1	Association request command	YES	
5.3.2	Association response command	YES	
5.3.3	Disassociation notification command	YES	
5.3.4	Data request command	YES	
5.3.5	PAN ID conflict notification command	NO	PAN ID conflict notification command is not used in WIA-PA.
5.3.6	Orphan notification command	NO	Orphan notification command is not used in WIA-PA.
5.3.7	Beacon request command	NO	Beacon request command is not used in WIA-PA.
5.3.8	Coordinator realignment command	NO	Coordinator realignment command is not used in WIA-PA.
5.3.9	GTS request command	NO	GTS request command is not used in WIA-PA.

Table 33 (2 of 2)

Clause of IEEE STD 802.15.4-2011	Header	Presence	Constraints
6	MAC service		
6.1	Overview		
6.2	MAC management service	Partial	See following 6.2.1 to 6.2.17.
6.2.1	Common requirements for MLME primitives	YES	
6.2.2	Association primitives	YES	
6.2.3	Disassociation primitives	YES	
6.2.4	Communications notification primitives	YES	
6.2.5	Primitives for reading PIB attributes	YES	
6.2.6	GTS management primitives	NO	GTS management primitives are not used in WIA-PA.
6.2.7	Primitives for orphan notification	NO	Primitives for orphan notification are not used in WIA-PA.
6.2.8	Primitives for resetting the MAC sublayer	NO	After a node leaving the WIA-PA network, its MAC sublayer resets to the default value.
6.2.9	Primitives for specifying the receiver enable time	YES	
6.2.10	Primitives for channel scanning	YES	
6.2.11	Primitives for writing PIB attributes	YES	
6.2.12	Primitives for updating the superframe configuration	NO	Primitives for updating the superframe configuration are not used in WIA-PA.
6.2.13	Primitives for synchronizing with a coordinator	NO	Primitives for synchronizing with a coordinator are not used in WIA-PA.
6.2.14	Primitives for requesting data from a coordinator	NO	Primitives for requesting data from a coordinator are not used in WIA-PA.
6.2.15	Primitives for specifying dynamic preamble	NO	Primitives for specifying dynamic preamble are not used in WIA-PA.
6.2.16	Primitives for channel sounding	NO	Primitives for channel sounding are not used in WIA-PA.
6.2.17	Primitives for ranging calibration (for UWB PHYs)	NO	Primitives for ranging calibration (for UWB PHYs) are not used in WIA-PA.
6.3	MAC data service	Partial	Following 6.3.1 to 6.3.3 are used in WIA-PA.
6.3.1	MCPS-DATA.request	YES	
6.3.2	MCPS-DATA.confirm	YES	
6.3.3	MCPS-DATA.Indication	YES	
6.3.4	MCPS-PURGE.request	NO	The MCPS-PURGE.request is not used in WIA-PA.
6.3.5	MCPS-PURGE.confirm	NO	The MCPS-PURGE.confirm is not used in WIA-PA.
6.4	MAC constants and PIB attributes		
6.4.1	MAC constants	YES	
6.4.2	MAC PIB attributes	Partial	See Table 34 for details.
6.4.3	Calculating PHY dependent MAC PIB values	YES	

This document includes the attributes specified in the IEEE STD 802.15.4-2011, 6.4.2 and additional attributes that apply only to this document. Some of these attributes are assigned a constant value as shown in Table 34.

Table 34 – MAC PIB attributes

Attribute	Comment
macAckWaitDuration	Only value 54 symbols is included for 2,4 GHz PHY
macAssociatedPANCoord	Only value FALSE is included
macAssociationPermit	Only value TRUE is included
macAutoRequest	Only value FALSE is included
macBattLifeExt	Only value FALSE is included
macBattLifeExtPeriods	This attribute is invalid in WIA-PA
macBeaconPayload	The contents of the beacon payload are extended in WIA-PA
macBeaconPayloadLength	Only value 10 is included
macBeaconTxTime	Only value 0x000000 is included
macCoordExtendedAddress	This attribute is invalid in WIA-PA
macCoordShortAddress	This attribute is invalid in WIA-PA
macGTSPermit	Only value FALSE is included
macMaxFrameTotalWaitTime	Only when phyMaxFrameDuration is 266
macMinLIFSPeriod	Only value 40 is included (for 2,4 GHz PHY)
macMinSIFSPeriod	Only value 12 is included (for 2,4 GHz PHY)
macPromiscuousMode	Only value TRUE is included
macRangingSupported	Only value FALSE is included
macSecurityEnable	Only value FALSE is included
macSyncSymbolOffset	0x000-0x100 for the 2,4 GHz PHY
macTxControlActiveDuration	This attribute is invalid in WIA-PA
macTxControlPauseDuration	This attribute is invalid in WIA-PA

8.3.3 MAC function extension

8.3.3.1 General

This document extends one MAC PIB attribute. The extended PIB attribute is listed in Table 35.

Table 35 – MAC extended PIB attributes

Attribute	Type	Range	Description	Default
macBeaconNum	Integer	1-15	The number of beacon transmissions in one timeslot	1

macBeaconNum is used to indicate the number of beacon transmissions in one timeslot.

8.3.3.2 Beacon payload

The WIA-PA network uses the IEEE STD 802.15.4-2011 MAC beacon payload to distribute superframe information. In IEEE STD 802.15.4-2011, see 5.2.2.1 for the frame format of the MAC beacon.

The beacon payload is shown in Table 36.

Table 36 – Beacon payload

	Beacon payload			
Length in octet(s)	1	6	2	1
Field name	ClusterID	ASN	Timevalue	NextBcnChannel

The subfields in Table 36 are defined as follows:

- ClusterID indicates the identifier of the cluster;
- ASN indicates the absolute timeslot number. Its value shall increase by one (does not decrease). Its current value is always the sequence number of the current timeslot. The maximum value shall be $(2^{48}-1)$. After the maximum value, it shall re-count from zero;
- See Table 60 for Timevalue; and
- NextBcnChannel indicates the channel used to transmit the next beacon.

8.3.3.3 Association request command frame

The WIA-PA network device uses the IEEE STD 802.15.4-2011 MAC association request command frame to join the WIA-PA network. See 5.3.1 in IEEE STD 802.15.4-2011 for the frame format of the MAC association request command frame.

The types of WIA-PA network devices are indicated by Bit 1 in the Capability Information field (See Figure 50 in IEEE STD 802.15.4-2011) of the MAC association request command frame.

The format of the Capability Information field of the MAC association request command frame is shown in Table 37.

Table 37 – Format of Capability Information field

	Format of Capability Information field						
Length in bit(s)	1	1	1	1	2	1	1
Subfield name	Reserved	Device type	Power source	Receiver on when idle	Reserved	Security capability	Allocated address

The subfields in Table 37 are listed as follows:

- the Device type subfield is extended to indicate the WIA-PA device type; 0 indicates the routing device and 1 indicates the field device or handheld device;
- see IEEE STD 802.15.4-2011, 5.3.1.2 for the power source subfield, receiver on when idle subfield, security capability subfield, and allocated address subfield.

8.4 DLSL function description

8.4.1 General

The DLSL provides a service interface between the NL and the MAC. The DLSL conceptually includes a Data Link Sub-Layer Data Entity (DLDE) and a Data Link Sub-Layer Management Entity (DLME). The DLDE provides data service interfaces. The DLME provides layer management services such as the configuration of the parameters of DLSL and the monitoring of the operation status of DLSL.

Figure 29 depicts the components and interfaces of the DLSL.

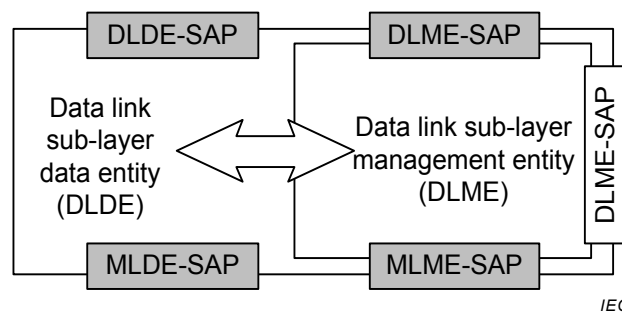


Figure 29 – WIA-PA DLSL reference model

The DLSL provides two services, which are accessed through following two Service Access Points (SAPs):

- the DLSL data service, which is accessed through the DLDE Service Access Point (DLDE-SAP);
- the DLSL management service, which is accessed through the DLME-SAP.

In this document, the main function of the DLSL is to allocate communication resources among competitive users in order to avoid collisions, improve throughput, and increase bandwidth utilization. The main concepts of the DLSL include timeslot, superframe and link, which are defined as follows.

- Timeslot is the basic time unit in packet exchange. The WIA-PA timeslot duration is configurable.
- Superframe is a collection of timeslots repeating on a cyclic schedule. The number of timeslots in a given superframe determines the communication cycle for the WIA-PA devices that use the timeslots.
- Link includes time and frequency. A link assignment specifies how the device uses a set of superframe timeslots. The link types include transmitting, receiving and transmit-shared. The sharing link allows more than one device to contend this link for packet exchange at the same time. The transmitting and receiving links should only allow designated devices to exchange packets.

8.4.2 Coexistence

The WIA-PA network should consider the following coexistence strategies:

- the WIA-PA network extends the IEEE STD 802.15.4-2011 superframe structure;
- the WIA-PA DLSL together with the NM achieves coexistence with other wireless networks. The WIA-PA DLSL incorporates several strategies to optimize coexistence:
 - timeslot communication;
 - low duty-cycle;
 - multi-channel;
 - frequency hopping (FH); and
 - collision avoidance.

8.4.3 Timeslot communication

The key requirement of timeslot communication is to guarantee that all transactions occur in a timeslot according to specific timing requirements. That is to say, all packets should be exchanged in a prescriptive timeslot and not be delayed. The timeslot length of WIA-PA DLSL is fully compatible with the timeslot length of IEEE STD 802.15.4-2011.

The timeslot duration is configured by the NM after devices join the network.

8.4.4 WIA-PA superframe

In order to guarantee real-time and reliable communication, this document only takes account of the beacon-enabled IEEE STD 802.15.4-2011 superframe structure.

The WIA-PA superframe structure is shown in Figure 30.

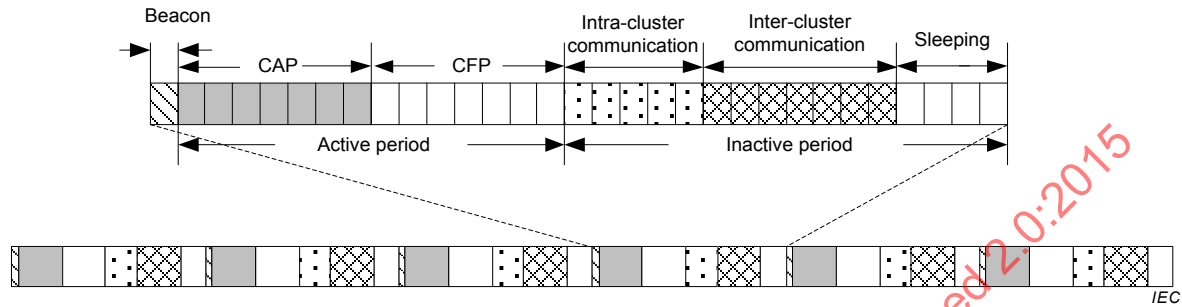


Figure 30 – WIA-PA superframe

The periods of the WIA-PA superframe are defined as follows:

- the CAP period defined in the IEEE STD 802.15.4-2011 superframe is used for device joining, intra-cluster management and retry in the WIA-PA superframe;
- the CFP period defined in the IEEE STD 802.15.4-2011 superframe is used for communication between handheld devices and their cluster head in the WIA-PA superframe; and
- the inactive period defined in the IEEE STD 802.15.4-2011 superframe is used for intra-cluster communication, inter-cluster communication, and sleeping in the WIA-PA superframe.

The NM should generate WIA-PA superframes. The superframe lengths of routing devices are different, and are set as the lowest data update rate of all the members in a cluster. The timeslot types of WIA-PA superframe includes shared timeslots and dedicated timeslots. Shared timeslots are used for transmission of aperiodic data, and dedicated timeslots are used for intra- and inter-cluster transmission of periodic data.

Because the inactive period defined in the IEEE STD 802.15.4-2011 superframe is used for intra-cluster communication, inter-cluster communication, and sleeping in the WIA-PA superframe, the WIA-PA basic superframe duration is defined as thirty-two timeslots. The duration of the WIA-PA superframe is defined as 2^N (N is a natural integer) times the WIA-PA basic superframe duration.

Each routing device has only one superframe and the communication among routing devices happens during the overlapped inter-cluster timeslots. Each field device has only one superframe; the communication among field device and routing device happens during the intra-cluster timeslots.

8.4.5 Frequency hopping

The WIA-PA network supports frequency hopping, and the hopping sequence is designated by the NM. Frequency hopping in the WIA-PA network includes three mechanisms: AFS, AFH, and TH.

Adaptive frequency switch (AFS): in the WIA superframe, the beacon, CAP and CFP use the same channel in the same superframe cycle, and change the channel according to the channel conditions in different superframe cycles. That is to say, bad channel condition, which

means that the packet drop rate is above PLRThreshold, triggers the operation of changing channels. See 6.9.1.2.1 for PLRThreshold.

Adaptive frequency hopping (AFH): irregularly changes communication channels per timeslot of the WIA superframe according to actual channel condition. The channel conditions are measured in retry times. If the channel condition is bad and the retry times of the sender reaches the value of ChannelThreshold, the sender chooses the next channel in sequence from IntraChanel[] and notifies the receiver during the next retry timeslot by using the main channel (see Table 17). If the receiver does not receive the notification, it counts its retry times continuously. When the retry times of the receiver reach the value of ChannelThreshold, the receiver chooses the next channel from IntraChanel[] during the (ChannelThreshold+2)th timeslot. If the receiver receives the notification of a channel switch, it changes the communication channel and returns ACK; otherwise, it does not change the communication channel and retries data by using the main channel. If the retry times of the sender reach macMaxFrameRetries, the sender discards the current packet and transmits the next packet by using the main channel. If the communication between the sender and the receiver is successful before the retry times of the sender reaches macMaxFrameRetries, the sender transmits the next packet by using the standby channel. The Intra-cluster period adopts the AFH mechanism. See 6.9.1.2.1 for ChannelThreshold and IntraChanel[]; see Table 52 in IEEE STD 802.15.4-2011 for the information of macMaxFrameRetries.

The current channel in IntraChanel[] used by sender and receiver is marked as main channel, while other channels in IntraChanel[] are marked as standby channels.

Timeslot Hopping (TH): regularly changes communication channels per timeslot of the WIA superframe to combat interference and fading. The Inter-cluster period adopts the TH mechanism. The hopping structure is: <timeslot 1, channel 1><timeslot 2, channel 2>... <timeslot i, channel i>.

The specific hopping mechanisms of DLSS in the WIA-PA network are shown in Table 38.

Table 38 – Hopping mechanisms

IEEE STD 802.15.4-2011	WIA-PA	Basic MAC mechanism		DLSL Hopping mechanism
Beacon	Beacon	TDMA	Frequency Division Multiple Access (FDMA) and TDMA	AFS
CAP	CAP	CSMA		
CFP	CFP	TDMA		
Inactive	Intra-cluster period	TDMA		AFH
	Inter-cluster period	TDMA		TH
	Sleeping			

Different routing devices use different channels in the active period. If the number of channels is not enough, the WIA-PA network uses the TDMA mechanism to enhance the system capacity. The start time of a superframe is configured by the NM. For example, there are three routing devices R1, R2, and R3 in the WIA-PA network. The superframe lengths of R1, R2 and R3 are respectively one, two and four WIA-PA basic superframe duration(s), as shown in Figure 31. According to the superframe definition, the active period of R1 cannot be multiplexed with the active periods of R2 and R3. However, the active periods of R2 and R3 may be multiplexed with each other. The active periods of R2 and R3 may use the same channel, while the active period of R1 should use a different channel from that of the active periods of R2 and R3.

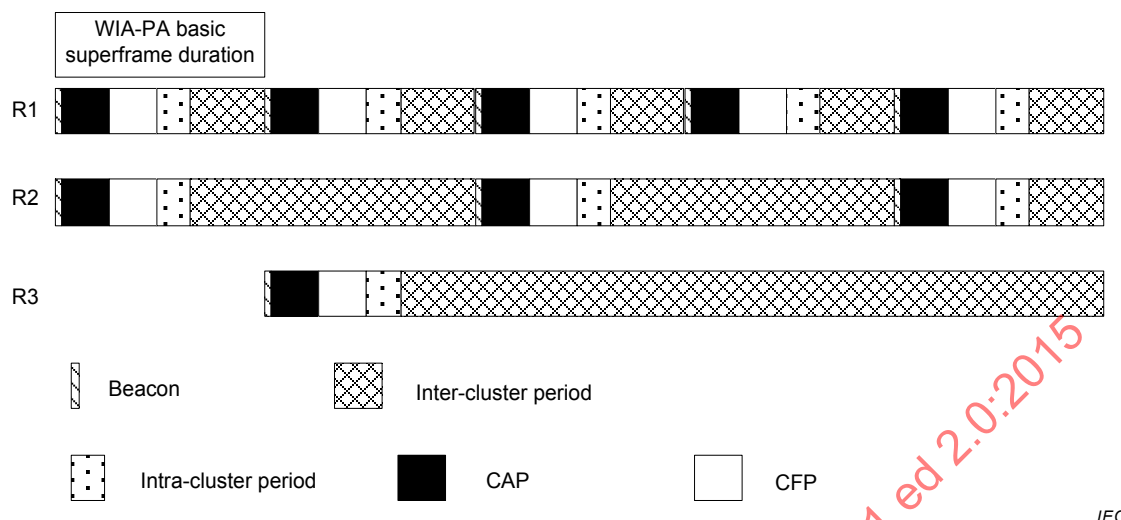


Figure 31 – R1, R2 and R3 superframe structures

8.4.6 Transmission of long cycle data

The long cycle data is defined as the data update rate of a device that is either greater than the maximum superframe length of IEEE STD 802.15.4-2011 or is greater than the data update rate of the routing device in a cluster.

To indicate the transmission of the long cycle data, this document defines a parameter termed TransmitFlag. TransmitFlag is defined as follows:

$$\text{TransmitFlag} = \lceil (\text{AbsoluteSlotNumber} - \text{ActiveSlot} + 1) / \text{NumberSlots} \rceil \% \text{SuperframeMultiple}$$

where

AbsoluteSlotNumber	see 6.9.1.2;
ActiveSlot	see 6.9.1.2;
NumberSlots	see 6.9.1.2;
SuperframeMultiple	see 6.9.1.2.

In every superframe cycle, field devices receive the beacons and decide whether to send data in this superframe cycle. The process of long cycle data transmission is described as follows:

- If $0 < \text{TransmitFlag} < \text{SuperframeMultiple}$ and $\text{TransmitFlag} = \text{LinkSuperframeNum}$, then the field device transmits data in this superframe cycle.
- If $\text{TransmitFlag} = 0$ and $\text{LinkSuperframeNum} = \text{SuperframeMultiple}$, then the field device transmits data in this superframe cycle.

See Table 17 for LinkSuperframeNum.

Figure 32 is an example of long cycle data transmission.

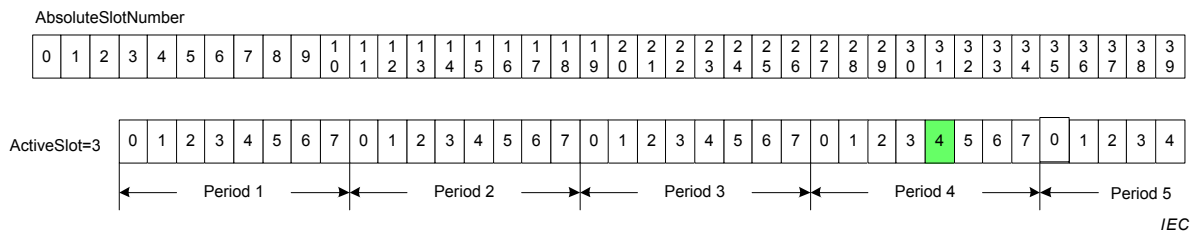


Figure 32 – An example of long cycle data transmission

In Figure 32, ActiveSlot = 3, NumberSlots = 8, SuperframeMultiple = 4, and LinkSuperframeNum = 4.

If the current absolute slot of a beacon is 27 (AbsoluteSlotNumber = 27), *TransmitFlag* is calculated as follows:

$$TransmitFlag = \lceil (27 - 3 + 1) / 8 \rceil \% 4 = 0$$

According to the calculation result, it can be concluded that *TransmitFlag* = 0 and that SuperframeMultiple = LinkSuperframeNum, which indicates that the packet should be sent during the current superframe cycle.

8.4.7 Retry strategy

The NM in the mesh network and the routing devices in the star network should allocate some timeslots for retries. The retry strategy supports the frequency hopping mechanisms (see 8.4.5).

The number of retry timeslots is bound by the constant *macMaxFrameRetries* in the IEEE STD 802.15.4-2011 MAC PAN Information Base (PIB).

8.4.8 Management service

The WIA-PA DLSL provides management services to the upper layer and the DMAP with DLME-SAP. The services include network discovery, device joining and leaving, resource allocation and operations of management database attributes (see Clause 6).

8.4.9 Radio link quality and channel condition measurement

Radio link quality and channel condition measurements include the link quality measurement of each pair of neighbours and the channel condition measurement of each channel. The collected information may be accumulated at the DLSL and reported through the DMAP. Link quality and channel condition are used to dynamically allocate communication resources.

Generally, the radio link quality measurement is performed according to the following performance indices:

- average signal level received from the neighbour devices in the statistics duration;
- non-broadcast packets sent to the neighbour devices in the statistics duration;
- count of ACK that is not received in the statistics duration; and
- count of the non-broadcast packets received from the neighbour devices in the statistics duration.

The channel condition measurement is performed according to the following performance data:

- a) LQI per link;
- b) packet loss rate per link, which is determined by the count of received ACK and packets that are sent; and
- c) average count of retries per link.

8.4.10 Security

The WIA-PA DLSE applies the MIC mechanism and encryption technology to guarantee the integrity and confidentiality of the communication. See Clause 11 for details.

8.4.11 Country code

The regulatory considerations of DLME are configured through its CountryCode attribute (see 6.9.1.2.1), which is a 16-bit value where:

- a) bits 0-9 provide a 10-bit country code, using ISO 3166-1 numeric three-digit country codes;
- b) bit 10 indicates whether European spectrum regulation apply (0 = no, 1 = yes). A DLME shall operate in compliance with European spectrum regulation when Bit10 = 1;
- c) bit 11 indicates whether FCC rules apply (0 = no, 1 = yes). A DLME should operate in compliance with FCC rules when Bit11 = 1;
- d) bit 12 indicates whether a 10 dBm EIRP limit applies (0 = no, 1 = yes). A DLME should limit its emissions to ≤ 10 dBm EIRP when Bit12 = 1;
- e) bit 13 indicates whether the DLME is considered to be operating under adaptive or non-adaptive rules (0 = non-adaptive, 1 = adaptive);
- f) bit 14 indicates whether the DLME is considered to be operating under frequency-hopping spread-spectrum rules (0 = not-FHSS-rules, 1 = FHSS-rules);
- g) bit 15 indicates whether the value of this attribute is fixed (0 = no, 1 = yes) while the DLME is operational. Once this bit is set, any subsequent attempt to modify this attribute shall be rejected except when it occurs while the DLME is being provisioned.

NOTE 1 This feature supports device operation in regulatory regimes that prohibit the ability to reconfigure a device in such a way that it would violate regulatory restraints, and while still permitting the repair or refurbishment of devices with subsequent resale into markets where other regulations apply.


When no specific country of intended use has been identified, the default value for CountryCode shall be 0x3C00, indicating that a device in the default state should comply with ETSI rules, FCC rules, the 10 dBm EIRP limit, and be classified as an adaptive non-FHSS device. See Annex D.

NOTE 2 This default value of CountryCode ensures that the equipment, before it has been provisioned, meets the regulatory requirements of most regions in which it might be deployed. The value of CountryCode could be changed during wired provisioning to reflect the intended regulatory regime that applies to the device's locale of deployment.

8.4.12 DLSE state machine

The WIA-PA DLSE state machine is divided into two state machines: one for device joining and the other for in-network running.

The WIA-PA DLSE state machine for device joining is shown in Figure 33.

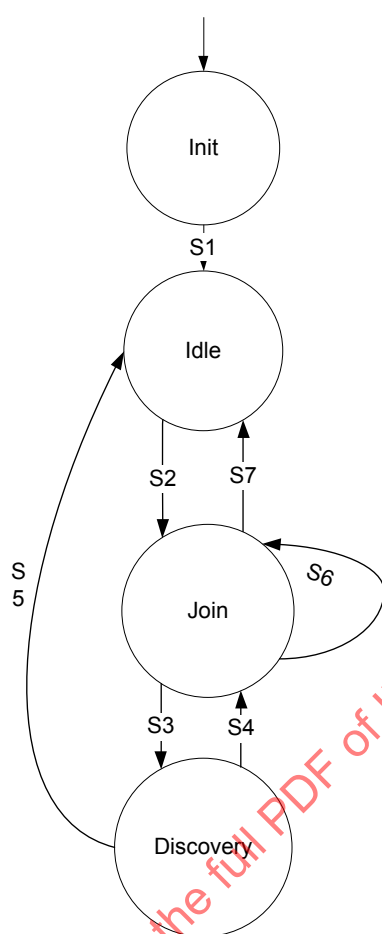

IEC

Figure 33 – DLSP state machine for device joining

The DLSSL state transitions for device joining are shown in Table 39.

Table 39 – DLSSL state transitions for device joining

Sequence number #	Current state	Event or condition	Actions	Next state
S1	Init		Initiation	Idle
S2	Idle	Devicestate = Not joined		Join
S3	Join	DLME-DISCOVERY.request()	Parsing the discovery request message and invoke MLME-SCAN.request()	Discovery
S4	Discovery	MLME-SCAN.confirm (status = SUCCESS) and MLME-BEACON-NOTIFY.indication()	Parsing the scan confirm message and beacon notification message; invoke DLME-DISCOVERY.confirm(SUCCESS)	Join
S5	Discovery	MLME-SCAN.confirm (status != SUCCESS) or no confirm received		Idle
S6	Join	DLME-JOIN.request()	Setting Devicestate = Joining; generating association request message and invoke MLME-ASSOCIATE.request()	Join
S7	Join	MLME-ASSOCIATE.confirm() or no confirm received	If MLME-ASSOCIATE.confirm() received, parsing the associate confirm message: if status = SUCCESS, invoke DLME-JOIN.confirm(Status = SUCCESS) and setting Devicestate = Joined; if status != SUCCESS, invoke DLME-JOIN.confirm(). If no confirm received, no actions.	Idle

After a device joined WIA-PA network, that is Devicestate = Joined, the DLSSL runs its state machine for in-network running.

The WIA-PA DLSSL state machine for in-network running is shown in Figure 34.

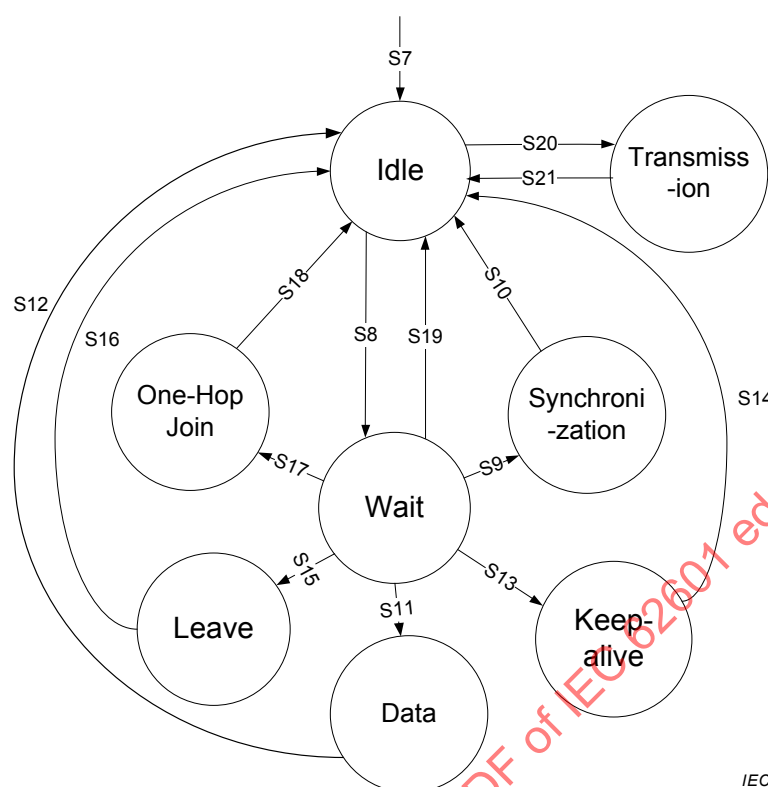


Figure 34 – DLSL state machine for in-network running

The DLSL state transitions for in-network device are shown in Table 40.

Table 40 – DLSL state transitions for in-network running (1 of 3)

Sequence number #	Current state	Event or condition	Actions	Next state
S8	Idle	Timeslot timeout LinkType = Receiving or LinkType = Transmit-shared	Invoke MLME-RX-ENABLE. request ()	Wait
S9	Wait	From MAC: MLME-COMM- STATUS.indication() or MCPS-DATA.indication(); From DMAP: DLME-TIME- SYN.request()		Synchroniza tion
S10	Synchroniza tion		From MAC: parsing MLME communication status indication message and invoke DLME-TIME- SYN.confirm() or parsing DLPDU from MAC data frame.If FrameType = 1 and Command frame identifier = 11 in DLPDU, invoke DLME-TIME- SYN.indication(); From DMAP: generating DLSL time request command frame and invoke MCPS-DATA.request().	Idle
S11	Wait	From MAC: MCPS- DATA.confirm()or MCPS- DATA.indication(); From NL: DLDE- DATA.request()		Data

Table 40 (2 of 3)

Sequence number #	Current state	Event or condition	Actions	Next state
S12	Data		From MAC: invoke DLSD- DATA.confirm() or parsing DLPDU. If Frame type = 0 in DLPDU, evaluate the LinkQuality and PacketLossRate and invoke DLDE-DATA.indication(); From NL: MCPS-DATA.request()	Idle
S13	Wait	From MAC: MLME-COMM- STATUS.indication() or MCPS-DATA.indication(); From DMAP: DLME-KEEP- LIVE.request()		Keep-alive
S14	Keep-alive		From MAC: parsing MLME communication status indication message and invoke DLME- KEEP-LIVE.confirm() or parsing DLPDU from MAC data frame. If Frame type = 1 and Command frame identifier = 10 in DLPDU, invoke DLME-KEEP- ALIVE.indication(); From DMAP: invoke MLME-KEEP- LIVE.request()	Idle
S15	Wait	From MAC: MLME- DISASSOCIATE.indication() or MLME- DISASSOCIATE.confirm(); From DMAP: DLME-LEAVE.request()		Leave
S16	Leave		From MAC: parsing DLSD leave indication message or confirm message and invoke DLME- LEAVE.indication() or DLME- LEAVE.confirm(); From DMAP: parsing DLSD leave request message and invoke MLME-DISASSOCIATE.request()	Idle
S17	Wait	From MAC: MLME- ASSOCIATE.indication() or MLME-ASSOCIATE.confirm() From DMAP: DLME-JOIN. request () or DLME-JOIN. response ()		One-Hop Join
S18	One-Hop Join		From MAC: parsing MAC association indication message or confirm message and invoke DLME-JOIN.indication() or DLME- JOIN.confirm(); From DMAP: parsing DMAP join request or response message and invoke MLME- ASSOCIATE.request() or MLME- ASSOCIATE.response()	Idle
S19	Wait	From MAC: MLME-COMM- STATUS.indication() and no frame received or received failed From DMAP and NL: no message received	From MAC: invoke DLME-COMM- STATUS.indication(FAILURE_ELS E)	Idle

Table 40 (3 of 3)

Sequence number #	Current state	Event or condition	Actions	Next state
S20	Idle	Timeslot timeout LinkType = Transmitting or LinkType = Transmit-shared	Invoke MCPS-DATA.request()	Transmission
S21	Transmission	MCPS-DATA.confirm()	Reschedule or retry frame if transmit failed; Release frame's buffer if MCPS- DATA.confirm (SUCCESS);	Idle

See 8.5 for DLSL related primitives; see 8.7 for DLSL frame formats; see 9.4 and 9.5 for NL related primitives; see IEEE STD 802.15.4-2011, 6.2 for MAC related primitives; see 6.9.1.2.1 for Devicestate.

The states in DLSL state machine are specified as follows.

a) Join state

This state handles the joining procedure of a device. After a device joins the network, the DLSL runs its state machine as in Figure 34.

b) Leave state

This state handles the leaving procedure of a device.

c) Idle state

After a device joins the network, the DLSL enters the Idle state. The following transitions may occur while the DLSL is in the Idle state:

- When a timeslot arrives, the DLSL enters either the Transmission state or the Receive state according to the link options (transmitting, receiving or transmit-shared).

d) Transmission state

When the timeslot arrives and the link option is a transmit link, the DLSL enters the Transmission state. The following events will happen while the DLSL is in the Transmission state.

- Successful propagation of a frame with a broadcast/multicast destination address happens as soon as the frame is transmitted. The frame's buffer is then released.
- Successful propagation of a frame with a unicast destination address occurs when a validated and successful confirmation is received from the local MAC layer. This indicates that message propagation has been completed successfully; the frame's buffer is then released.
- If a failure confirmation is received from the local MAC layer, the frame should be retried.
- If a response with an error or no response is received, the frame should be re-scheduled or retried.

e) Wait state

The frames that a device can receive include frames whose final destination addresses are this device and frames whose final destination addresses are not this device. The functions of the Wait state are to receive, check and process the frame. The following transitions may occur while the DLSL is in the Wait state.

- If there is no frame received, the DLSL will evaluate the link and return to the Idle state.
- If a beacon frame or a time synchronization command frame is received, then the Synchronization state is entered.
- If a keep-alive command frame is received, then the Keep-alive state is entered.
- If a DMAP leave request is received, then the Leave state is entered.

- If a join command is received from DMAP, then the One-Hop Join state is entered.
- Upon successful frame reception, the DLSL will process the frame according to frame priority (receive or discard), and then the device returns directly to the Idle state.

f) Data state

In this state, the DLSL data is generated or parsed. After received the DLSL data frame, the LinkQuality and PacketLossRate are evaluated. After generating the DLSL data frame, the DLSL enters Wait state.

g) Synchronization state

In this state, time synchronization is executed after a device receives a beacon frame or a time synchronization command frame, and then the DLSL enters Idle state.

h) Keep-alive state

In this state, a neighbour node is marked as keep-alive after a device receives a keep-alive command frame, and then the DLSL enters Idle state.

i) One-Hop Join state

In this state, the one-hop join process is supported by GW device.

8.5 Data link sub-layer data services

8.5.1 General

The DLDE-SAP supports the point-to-point transmission of DLSL Protocol Data Units (DLPDUs) between devices. The primitives supported by DLSL data services include DLDE-DATA.request, DLDE-DATA.confirm, and DLDE-DATA.indication.

8.5.2 DLDE-DATA.request

The DLDE receives the payload from the NL through a DLDE-DATA.request and adds it to the message queue of the DLSL.

The semantics of DLDE-DATA.request are as follows:

```
DLDE-DATA.request (
    NetworkID,
    SrcAddrMode,
    SrcAddr,
    DstAddrMode,
    DstAddr,
    Priority,
    Type,
    PayloadLength,
    Payload,
    PayloadHandle
)
```


Table 42 specifies the parameters for DLDE-DATA.confirm.

Table 42 – DLDE-DATA.confirm parameters

Name	Data type	Valid range	Description
PayloadHandle	Unsigned8	0 to 255	Handle allocated when call DLDE-DATA.confirm
Status	Unsigned8	0 to 255	Result of the data transmission of DLSL: 0 = SUCCESS; 1 = TRANSACTION_OVERFLOW; 2 = TRANSACTION_EXPIRED; 3 = NO_ACK; 4 = CHANNEL_ACCESS_FAILURE; 5 = UNAVAILABLE_KEY; 6 = FAILED_SECURITY_CHECK; 7 = INVALID_PARAMETER; Others are reserved. See Table 43 for more detail

Table 43 – Status table

ID	Value	Description
0	SUCCESS	The requested operation is completed successfully. For a transmission request, this value indicates a successful transmission.
1	TRANSACTION_OVERFLOW	Not enough space for storing transactions
2	TRANSACTION_EXPIRED	Transaction has expired and its information is discarded
3	NO_ACK	No acknowledgement message is received after macMaxFrameRetries
4	CHANNEL_ACCESS_FAILURE	Cannot transmit due to channel access failure
5	UNAVAILABLE_KEY	No valid key in access control list
6	SECURITY_ERROR	Cryptographic processing of the received secured frame failed
7	INVALID_PARAMETER	A parameter in the primitives out of value range
8	NO-BEACON	A scan operation failed to find any network beacons
9 to 255	Reserved	

8.5.4 DLDE-DATA.indication

The semantics of DLDE-DATA.indication are as follows:

DLDE-DATA.indication (

- NetworkID,
- ScrAddrMode,
- SrcAddr,
- Type,
- Priority,
- PayloadLength,
- Payload,
- PayloadLinkQuality,

)

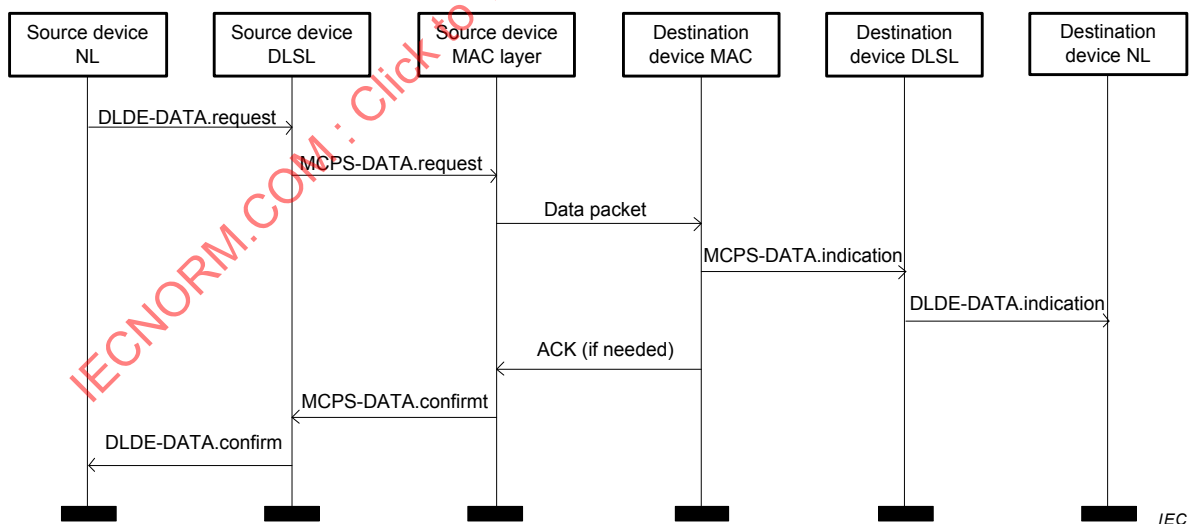
Table 44 specifies the parameters for DLDE-DATA.indication.

Table 44 – DLDE-DATA.indication parameters

Name	Data type	Valid range	Description
NetworkID	Unsigned8	0 to 255	Network identifier
SrcAddrMode	Unsigned8	0 to 3	The source address mode. Four options are available: 0 = No address; 1 = Reserved; 2 = 16-bit short address; 3 = 64-bit long address.
SrcAddr	Unsigned16/64	0 to 65 535 or $(2^{64}-1)$	Source address, using 64-bit long address only in device join process, and using 16-bit short address generally
Type	Unsigned8	0 to 1	0 = Intra-cluster transmission; 1 = Inter-cluster transmission.
Priority	Unsigned8	0 to 15	Priority of payload
PayloadLength	Unsigned8	$\leq \text{MaxMACFrameSize}$	Length of payload
Payload	Octetstring		Payload
PayloadLinkQuality	Unsigned8	0 to 255	LQI value measured during reception of the DLPDU Lower values represent lower link quality.

8.5.5 Time sequence of DLSL data service

Figure 35 shows the data transaction sequence of transporting one data packet from the source device to the destination device.

**Figure 35 – Time sequence of data service**

DLDE-DATA.request is generated by a local Network Layer Data Entity (NLDE) when a Network Protocol Data Unit (NPDU) is to be transferred to a peer NLDE.

On receipt of DLDE-DATA.request, DLDE inserts the message into the sending buffer and begins sending the supplied DLPDU.

DLDE-DATA.indication is generated by the DLDE of a destination device and issued to the NLDE on receipt of a data frame at the local DLDE that passes the appropriate message filtering operations.

DLDE-DATA.confirm is generated by the DLDE of a source device in response to DLDE-DATA.request. DLDE-DATA.confirm returns a status indicating the result of the transmission.

See Figure 27 in IEEE STD 802.15.4-2011 for the detailed message sequence chart between peer MAC entities.

8.6 Data link sub-layer management services

8.6.1 General

The upper layer uses the DLME-SAP to send management commands to the DLSL. The DLSL management services include subnet discovery, device joining and leaving, channel condition collection and report, neighbour information collection and report, and time synchronization.

8.6.2 Network discovery services

8.6.2.1 General

The DLSL network discovery services are used to scan a given list of communication channels. One device may use the network discovery services to search for cluster heads sending beacon frames within its communication scope. The primitives supported by the DLSL network discovery services include DLME-DISCOVERY.request and DLME-DISCOVERY.confirm.

8.6.2.2 DLME-DISCOVERY.request

DLME-DISCOVERY.request is used to request a device to scan channels.

The semantics of DLME-DISCOVERY.request are as follows:

DLME-DISCOVERY.request (
 ScanChannels,
 ScanDuration
)

Table 45 specifies the parameters for DLME-DISCOVERY.request.

Table 45 – DLME-DISCOVERY.request parameters

Name	Data type	Valid range	Description
ScanChannels	Unsigned32	32-bit Bits-Map	Bit 11 to bit 26 indicate IEEE STD 802.15.4-2011 channels of 2,4 GHz frequency band; others are set. See IEEE STD 802.15.4-2011, 6.2.10 for ScanChannels.
ScanDuration	Unsigned8	0 to 14	A value used to calculate the length of time to spend scanning each channel of ED, active, and passive scans This parameter is ignored for orphan scans. The time spent scanning each channel is: $aBaseSuperframeDuration \times (2^n + 1)$ symbols, where n is the value of ScanDuration parameter.
See Table 51 in IEEE STD 802.15.4-2011 standard for the definition and value set of aBaseSuperframeDuration.			

8.6.2.3 DLME-DISCOVERY.confirm

DLME-DISCOVERY.confirm is used to respond to DLME-DISCOVERY.request.

The semantics of DLME-DISCOVERY.confirm are as follows:

```
DLME-DISCOVERY.confirm(
    Status,
    NetworkCount,
    NetworkDescriptor
)
```

Table 46 specifies the parameters for DLME- DISCOVERY.confirm. Table 47 specifies the network descriptor list.

Table 46 – DLME- DISCOVERY.confirm parameters

Name	Data type	Valid range	Description
Status	Unsigned8	0 to 255	Scan results: 0 = SUCCESS; 7 = INVALID_PARAMETER; 8 = NO_BEACON; Others are reserved. See Table 43 for more detail
NetworkCount	Unsigned8	0 to 255	The count of active network found during scan
NetworkDescriptor	Network descriptor list	0 to NetworkCount	Network Descriptor list of every network found, see Table 47

Table 47 – Network descriptor list

Name	Data type	Valid range	Description
LogicalChannel	Unsigned8	0 to 31	Logic channel used for joining, chosen from valid channels supported by PHY
BeaconOrder	Unsigned8	0 to 15	The frequency sending beacon frame
SuperframeOrder	Unsigned8	0 to 15	Active period length of the superframe
PermitJoining	Boolean	0, 1	Whether routing device permits field device to join: 0 = No permit; 1 = At least one device is permitted to join

If the scan is successful, DLME-DISCOVERY.confirm returns SUCCESS; however if no beacons are found, DLME-DISCOVERY.confirm returns NO_BEACON; if there are some errors or invalid parameters in DLME-DISCOVERY.request, DLME-DISCOVERY.confirm returns INVALID_PARAMETER.

8.6.2.4 Time sequence of subnet discovery

The time sequence for subnet discovery is shown in Figure 36. See IEEE STD 802.15.4-2011 for the primitives of MLME-SCAN.request and MLME-SCAN.confirm.

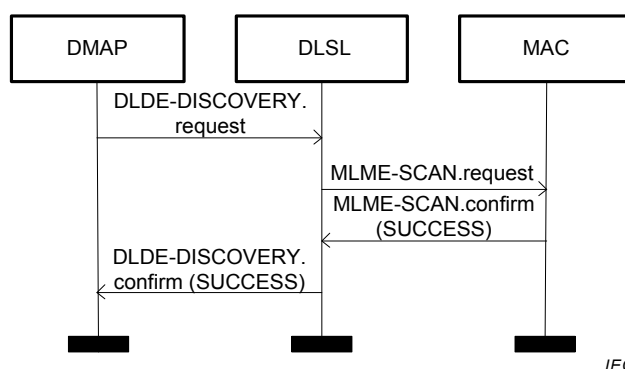


Figure 36 – Time sequence of network discovery

See Figure 12 and Figure 13 in IEEE STD 802.15.4-2011 for the detailed message sequence chart between peer MAC entities.

8.6.3 Device joining services

8.6.3.1 General

There are two instances requiring device joining services:

- a new field device joining the star network; or
- a new routing device joining the mesh network. The primitives supported by DLSL device joining services include DLME-JOIN.request, DLME-JOIN.indication, DLME-JOIN.response, and DLME-JOIN.confirm.

8.6.3.2 DLME-JOIN.request

DLME-JOIN.request is used for a device to join the network (star or mesh).

The semantics of DLME-JOIN.request are as follows:

DLME-JOIN.request (

- LogicalChannel,
- JoinAddr,
- PhyAddr,
- DeviceType

)

Table 48 specifies the parameters for DLME-JOIN.request.

Table 48 – DLME-JOIN.request parameters

Name	Data type	Valid range	Description
LogicalChannel	Unsigned8	0 to 31	Logic channel used for joining, chosen from valid channels supported by PHY
JoinAddr	Unsigned16	0 to 65 535	The short address of routing device or gateway device that accepts joining request
PhyAddr	Unsigned64	0 to $(2^{64}-1)$	Physical address of the new device waiting to join
DeviceType	Unsigned8	0 to 255	Type of the new device waiting to join: 0 = Gateway device; 1 = Routing device; 2 = Field device; 3 = Handheld device; Others are reserved.

8.6.3.3 DLME-JOIN.indication

DLME-JOIN.indication is used to inform the NLME of a routing device or to inform the gateway device that the joining request from one device has been successfully received.

The semantics of DLME-JOIN.indication are as follows:

DLME-JOIN.indication (

PhyAddr,
DeviceType

)

Table 49 specifies the parameters for DLME-JOIN.indication.

Table 49 – DLME-JOIN.indication parameters

Name	Data type	Valid range	Description
PhyAddr	Unsigned64	0 to $(2^{64}-1)$	Address of new device waiting to join
DeviceType	Unsigned8	0 to 255	Type of device waiting to join: 0 = Gateway device; 1 = Routing device; 2 = Field device; 3 = Handheld device; Others are reserved.

8.6.3.4 DLME-JOIN.response

DLME-JOIN.response is the response of DLME-JOIN.indication.

The semantics of DLME-JOIN.response are as follows:

DLME-JOIN.response (

PhyAddr,
ShortAddr,
TimeSource,
Status

)

Table 50 specifies the parameters for DLME-JOIN.response.

Table 50 – DLME-JOIN.response parameters

Name	Data type	Valid range	Description
PhyAddr	Unsigned64	0 to ($2^{64}-1$)	Address of device waiting to join
ShortAddr	Unsigned16	0 to 65 535	Short address allocated by the NM to device waiting to join
TimeSource	Unsigned8	0 to 1	Whether this device is set as time source: 0 = Not time source; 1 = Time source.
Status	Unsigned8	0 to 255	Result of joining request: 0 = SUCCESS; 1 = FAILURE_TOP_DISMATCH; 2 = FAILURE_ELSE; Others are reserved.

8.6.3.5 DLME-JOIN.confirm

DLME-JOIN.confirm reports the joining result to the DMAP.

The semantics of DLME-JOIN.confirm are as follows:

DLME-JOIN.confirm (
 ShortAddr,
 Status
)

Table 51 specifies the parameters for DLME-JOIN.confirm.

Table 51 – DLME-JOIN.confirm parameters

Name	Data type	Valid range	Description
ShortAddr	Unsigned16	0 to 65 535	Short address allocated by NM for device waiting to join
Status	Unsigned8	0 to 255	Result of joining request: 0 = SUCCESS; 1 = FAILURE_TOP_DISMATCH; 2 = FAILURE_ELSE; Others are reserved.

8.6.3.6 Time sequence for device joining in the network

See 9.5.3 for the detailed joining process.

8.6.4 Device leaving services

8.6.4.1 General

There are two instances requiring device leaving services: (1) A field device leaving the star network or (2) a routing device leaving the mesh network. The primitives supported by DLSE network leaving services include DLME-LEAVE.request, DLME-LEAVE.indication, and DLME-LEAVE.confirm.

8.6.4.2 DLME-LEAVE.request

The semantics of DLME-LEAVE.request are as follows:

```
DLME-LEAVE.request (
    ShortAddr
)
```

Table 52 specifies the parameters for DLME-LEAVE.request.

Table 52 – DLME-LEAVE.request parameters

Name	Data type	Valid range	Description
ShortAddr	Unsigned16	0 to 65 535	The short address of the device asking to leave

8.6.4.3 DLME-LEAVE.indication

DLME-LEAVE.indication is used to indicate to the upper layer that a device leaving request has been received.

The semantics of DLME-LEAVE.indication are as follows:

```
DLME-LEAVE.indication (
    ShortAddr
)
```

Table 53 specifies the parameters for DLME-LEAVE.indication.

Table 53 – DLME-LEAVE.indication parameters

Name	Data type	Valid range	Description
ShortAddr	Unsigned16	0 to 65 535	The short address of the device asking to leave

8.6.4.4 DLME-LEAVE.confirm

DLME-LEAVE.confirm is used to report the result of DLME-LEAVE.request.

The semantics of DLME-LEAVE.confirm are as follows:

```
DLME-LEAVE.confirm (
    Status
)
```

Table 54 specifies the parameters for DLME-LEAVE.confirm.

Table 54 – DLME-LEAVE.confirm parameters

Name	Data type	Valid range	Description
Status	Unsigned8	0 to 255	Result of leaving request: 0 = SUCCESS; 1 = FAILURE; Others are reserved.

8.6.4.5 Time sequence for device leaving

See IEEE STD 802.15.4-2011 for the following primitives: MLME-DISASSOCIATE.request, MLME-DISASSOCIATE.confirm, and MLME-DISASSOCIATE.indication.

The time sequences for devices leaving the network are listed as follows.

- a) The time sequence for routing devices leaving the network

Routing devices connect to both the mesh network and the star network. Therefore, the process of routing devices leaving the network includes routing devices leaving the mesh network and routing devices leaving the star network. According to the leaving originator, the process of routing devices leaving the network includes active leaving and passive leaving.

b) The time sequence for field devices leaving the network

According to the leaving source, the process of field devices leaving the network includes active leaving and passive leaving.

See 9.5.4 for detailed process of device leaving.

8.6.5 DLME-CHANNEL-CONDITION.indication

DLME-CHANNEL-CONDITION.indication is used by DLSL to report channel condition information to DMAP. The reported performance data includes LQI, packet loss rate, and count of retries.

The semantics of DLME-CHANNEL-CONDITION.indication are as follows:

DLME-CHANNEL-CONDITION.indication (

ChannelNum,
ChannelStructure
)

Table 55 specifies the parameters for DLME-CHANNEL-CONDITION.indication.

Table 55 – DLME-CHANNEL-CONDITION.indication parameters

Name	Data type	Valid range	Description
ChannelNum	Unsigned8	0 to 255	Count of channels
ChannelStructure	ChanCon_Struct		Information of channels

8.6.6 DLME-NEIGHBOUR-INFO.indication

DLME-NEIGHBOUR-INFO.indication is used to report the collected neighbour information to the DMAP and is used to update the neighbour attributes.

The semantics of DLME-NEIGHBOUR-INFO.indication are as follows:

DLME-NEIGHBOUR-INFO.indication (

NeighbourCount,
NeighbourStructure
)

Table 56 specifies the parameters for DLME-NEIGHBOUR-INFO.indication.

Table 56 – DLME-NEIGHBOUR-INFO.indication parameters

Name	Data type	Valid range	Description
NeighbourCount	Unsigned8	0 to 255	Count of neighbour devices
NeighbourStructure	Neighbour_Struct structure		Information of neighbours

8.6.7 DLME-COMM-STATUS.indication

DLME-COMM-STATUS.indication is used to report the communication status to the upper layer.

The semantics of DLME-COMM-STATUS.indication are as follows:

DLME-COMM-STATUS.indication (

PhyAddr,
Status
)

Table 57 specifies the parameters for DLME-COMM-STATUS.indication.

Table 57 – DLME-COMM-STATUS.indication parameters

Name	Data type	Valid range	Description
PhyAddr	Unsigned64	0 to $(2^{64}-1)$	Address of new device that has just joined the network
Status	Unsigned8	0 to 255	The joining status of a device: 0 = SUCCESS; 1 = FAILURE_TOP_DISMATCH; 2 = FAILURE_ELSE; Others are reserved.

8.6.8 Keep-alive services

8.6.8.1 DLME-KEEP-LIVE.request

DLME-KEEP-LIVE.request is used to send Keep-alive command frames that are requested by the DMAP.

The semantics of DLME-KEEP-LIVE.request are as follows:

DLME-KEEP-LIVE.request (

8.6.8.2 DLME-KEEP-LIVE.confirm

DLME -KEEP-LIVE.confirm is used to respond to DLME -KEEP-LIVE.request.

The semantics of DLME -KEEP-LIVE.confirm are as follows:

DLME -KEEP-LIVE.confirm (

Status

)

Table 58 specifies the parameters for DLME -KEEP-LIVE.confirm.

Table 58 – DLME -KEEP-LIVE.confirm parameters

Name	Data type	Valid range	Description
Status	Unsigned8	0 to 255	The result of the keep alive: 0 = SUCCESS; 1 = FAILURE; Others are reserved.

8.6.8.3 DLME-KEEP-LIVE.indication

DLME-KEEP-LIVE.indication is used to inform the DMAP that the keep-alive command frame has been successfully received.

The semantics of DLME -KEEP-LIVE.indication are as follows:

DLME-KEEP-LIVE.indication (

SrcAddr
)

Table 59 specifies the parameters for DLME -KEEP-LIVE.indication.

Table 59 – DLME -KEEP-LIVE.indication parameters

Name	Data type	Valid range	Description
SrcAddr	Unsigned16	0 to 65 535	The source address

8.6.9 Time synchronization services

8.6.9.1 DLME-TIME-SYN.request

DLME-TIME-SYN.request is used to send time synchronization command frames that are requested by the DMAP.

The semantics of DLME-TIME-SYN.request are as follows:

DLME-TIME-SYN.request (

TimeValue
)

Table 60 specifies the parameters for DLME-TIME-SYN.request.

Table 60 – DLME-TIME-SYN.request parameters

Name	Data type	Valid range	Description
TimeValue	Unsigned16	0 to $(2^{16}-1)$	Time difference between the transmission beginning and the timeslot beginning (in microsecond)

8.6.9.2 DLME-TIME-SYN.confirm

DLME-TIME-SYN.confirm is used to respond to DLME-TIME-SYN.request.

The semantics of DLME-TIME-SYN.confirm are as follows:

DLME-TIME-SYN.confirm (

Status
)

Table 61 specifies the parameters for DLME-TIME-SYN.confirm.

Table 61 – DLME -TIME-SYN.confirm parameters

Name	Data type	Valid range	Description
Status	Unsigned8	0 to 255	The result of time synchronization: 0 = SUCCESS; 1 = FAILURE; Others are reserved.

8.6.9.3 DLME-TIME-SYN.indication

DLME-TIME-SYN.indication is used to inform the DMAP that the time synchronization command frame has been successfully received.

The semantics of DLME-TIME-SYN.indication are as follows:

DLME-TIME-SYN.indication (

SrcAddr,
TimeValue
)

Table 62 specifies the parameters for DLME-TIME-SYN.indication.


Table 62 – DLME-TIME-SYN.indication parameters

Name	Data type	Valid range	Description
SrcAddr	Unsigned16	0 to 65 535	The source address
TimeValue	Unsigned16	0 to $(2^{16}-1)$	Time difference between the transmission beginning and the timeslot beginning (in microsecond)

8.7 DLSL frame formats

8.7.1 General frame format

The DLSL general frame format is illustrated in Figure 37.

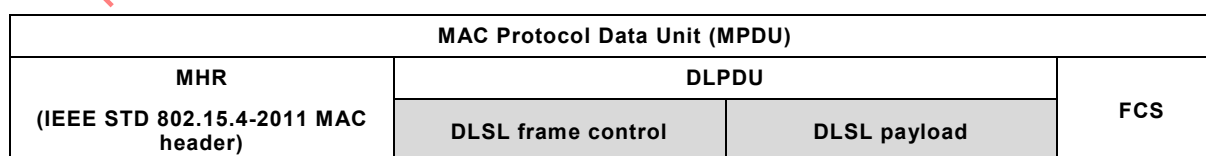

IEC

Figure 37 – General frame format

The DLSP frame is composed of:

- IEEE STD 802.15.4-2011 MAC Header (MHR) (See IEEE STD 802.15.4-2011, 5.2.1);
- DLSP frame control (see Table 63);
- DLSP payload; and

d) Frame Check Sequence (FCS).

See 11.3.2 for the content of security.

The format of the WIA-PA DLSSL frame control is shown in Table 63.

Table 63 – DLSSL frame control field

	DLSSL frame control field			
Length in bit(s)	1	1	1	5
Subfield name	Frame type	Time source	Security enable	Index of main channel

The subfields in Table 63 are listed as follows.

- The Frame type subfield has 1-bit length and is used to specify the frame type. If a frame is a data frame, this subfield is set to 0; otherwise, this subfield is set to 1.
- The Time source subfield has 1-bit length and is used to indicate whether this device is a time source. If the device is a time source, this subfield is set to 1; otherwise, this subfield is set to 0.
- The Security enable subfield has 1-bit length and is used to instruct DLSSL whether or not to use the security mechanism. A value of 0 means that the security mechanism is disabled and a value of 1 means that the security mechanism is enabled.
- The Index of the main channel is used to indicate the current communication channel.

All multiple octet fields should be transmitted or received with the least significant octet first and each octet should be transmitted or received with the Least Significant Bit (LSB) first. The same transmission order should apply to data fields transferred between layers.

8.7.2 Date frame format

The format of the DLSSL data frame is shown in Table 64.

Table 64 – Date frame format

	Date frame format	
Length in octet(s)	1	Variable length
Field name	DLSSL frame control	Data payload

The subfields in Table 64 are listed as follows:

- the DLSSL frame control is defined in Table 63; and
- the Data payload has variable length and is filled with the DLSSL data.

8.7.3 Command frame format

8.7.3.1 General command frame format

The general command frame format is shown in Table 65.

Table 65 – General command frame format

	General command frame format		
Length in octet(s)	1	1	Variable length
Field name	DLSSL frame control	Command frame identifier	Command payload

The subfields in Table 65 are listed as follows:

- a) the DLSL frame control is defined in Table 63;
- b) the Command frame identifier is defined in Table 66; and
- c) the Command payload has variable length and is filled with the DLSL management data.

8.7.3.2 DLSL command frame

8.7.3.2.1 General

The DLSL command frames are defined and shown in Table 66.

Table 66 – DLSL command frame

DLSL command frame			
Command frame identifier	Command name	User	Description
1	Keep-alive command frame	Gateway device/Routing device/Field device	Indicating an existing device
2	Time synchronization command frame	Gateway device/Routing device	Realizing synchronization of the whole network
3 to 255	Reserved	Reserved	To be extended

The Keep-alive command frame facilitates connection maintenance between neighbour devices. After devices join the network, their DMAPs send keep-alive command frame with the keep-alive request primitive. The GW sends the keep-alive command frame during the inter-cluster communication period in order to indicate that it is alive. Routing devices send the keep-alive command frames during the intra-cluster communication period in order to indicate that they are alive to their cluster members; in addition, routing devices send keep-alive command frames during the inter-cluster communication period in order to indicate that they are alive to other routing devices and to the GW. Field devices send the keep-alive command frames during the intra-cluster communication period in order to indicate that they are alive to their cluster heads.

In order to guarantee the reliability of the TDMA communication mode, devices in a network should synchronize with the time source. Time errors among devices are inevitable in spite of any hardware time sources. In order to overcome time clock drifting, the WIA-PA network performs two kinds of time synchronization: IEEE STD 802.15.4-2011 beacon and specifically designed time synchronization command frame. In the star-only network, the GW is the UTC time source. In the combination of star and mesh network, the GW is the UTC time source of the mesh part and all routing devices synchronize with the gateway device; each routing device is the time source for its field devices in the star part, which synchronize with their routing devices.

This document specifies that the maximum synchronization error is less than 10 % of the basic timeslot length of the maximum superframe duration.

8.7.3.2.2 Keep-alive command frame

The format of the keep-alive command frame is shown in Table 67.

Table 67 – Format of keep-alive command frame

Format of keep-alive command frame		
Length in octet(s)	1	1
Field name	DLSL frame control	Command frame identifier

The subfields in Table 67 are listed as follows.

- a) See Table 63 for DLSSL frame control.
- b) Command frame identifier is 10.

8.7.3.2.3 Time synchronization command frame

The time synchronization command frame is used to synchronize the entire network. The gateway device and the routing devices send the time synchronization command frames periodically.

If the network topology is star-only, the GW broadcasts the time synchronization command frame periodically. If the network topology is combination of mesh and star, the GW unicasts the time synchronization command frame during the inter-cluster communication period; routing devices broadcast the time synchronization command frames during the intra-cluster communication period to synchronize their star networks and unicast them during the inter-cluster communication period to synchronize the mesh network.

The format of the time synchronization command frame is shown in Table 68.

Table 68 – Format of time synchronization command frame

	Format of time synchronization command frame		
Length in octet(s)	1	1	2
Field name	DLSSL frame control	Command frame identifier	Calibrated value of TimeValue

The subfields in Table 68 are defined as follows:

- a) see Table 63 for DLSSL frame control,
- b) command frame identifier is 11; and
- c) see Table 60 for Calibrated value of TimeValue.

9 Network layer

9.1 General

The WIA-PA network layer (NL) receives and transports packets over networks, provides interfaces to the ASL, and carries out network layer management, configuration and control.

9.2 Protocol stack

The protocol stack of the WIA-PA network layer is shown in Figure 38.

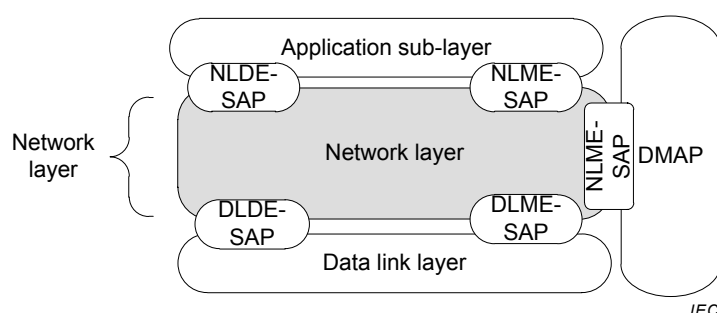


Figure 38 – WIA-PA network layer protocol stack

The layers and entities in Figure 39 are defined as follows:

- the NL defines the NLDE and the Network Layer Management Entity (NLME);
- the NLDE provides the service interface through which the ASL transmits and receives data; and
- the NLME provides the service interfaces through which the layer management functions are invoked by the upper layer and DMAP.

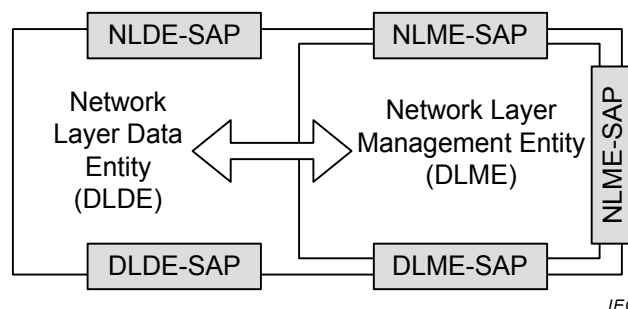


Figure 39 – WIA-PA network layer reference model

The NL provides two kinds of services that are accessed through the following two SAPs:

- the network layer data service, accessed through the NLDE SAP (NLDE-SAP);
- the network layer management service, accessed through the NLME SAP (NLME-SAP).

9.3 Function description

9.3.1 General

The NL is designed to perform the following functions:

- addressing,
- routing,
- communication resource allocation,
- packet lifecycle management,
- management for device joining and leaving network,
- end-to-end network performance monitoring, and
- fragmentation and reassembly.

9.3.2 Addressing

Each device has a global unique 64-bit long address and a 16-bit short address. Each device joins the network by using the long address and communicates with other devices by using the short address after joining the network. The 16-bit short address is indicated as x.y, where x and y are 8-bit integers. The most significant 8-bit in the 16-bit short address is the cluster address, and the least significant 8-bit is the intra-cluster address. The range of the cluster address is 0 to 255, and the range of the intra-cluster address is 0 to 255. The number 255 is used for the broadcast address. A routing device's intra-cluster address is 0.

The classifications of the short address are as follows:

- Unicast addresses: each device's address is the unicast address, which includes the following types:
 - the gateway device's address is 0.0;
 - the routing device's address is x.0, where x is 1 to 254;

- if the network topology is star-only, that is NetworkTopology=1, the field device's address is 0.y, where y is 1 to 254; otherwise, the field device's address is x.y, where x is 1 to 254 and y is 1 to 254; see 6.9.1.2.1 for NetworkTopology.
- b) Broadcast address: according to the different broadcast domains, there are four types of broadcast addresses:
- the intra-cluster broadcast address is x.255, where x is 0 to 254;
 - the global broadcast address is 255.255;
 - the mesh network's broadcast address is 255.0;
 - the gateway device's broadcast address is 0.255.

9.3.3 Routing

9.3.3.1 General

The WIA-PA network supports static routing algorithms configured by the NM. After getting the neighbour information from each routing device, the NM generates the connection relationship of all routing devices. On the basis of the connection relationship, the NM generates and writes the routing information to each routing device in the form of a routing table. Each route in the table is assigned a route ID. Multiple paths correspond to each VCR, including the main path and the redundant path. The main path and the redundant path use the same route ID.

9.3.3.2 Routing table

Each routing device maintains a routing table, which is generated by the NM. The routing table is used for the path selection in the mesh network. The table has five items. RouteID is the identifier of a route. SourceAddress is the address of the start point of a route, DestinationAddress is the endpoint address of a route, NextHop is the address of the next hop device in a route, and RetryCounter records the number of one-hop retries in a route which reflects the status of the route. The RouteIDs of paths with same source address and destination address are same.

An example of a routing table is shown in Table 69.

Table 69 – Example of a routing table

RouteID	SourceAddress	DestinationAddress	NextHop	RetryCounter
5	F1	N1	N3	0
8	F2	Ng	N2	0
...	...	...	...	...

Ng in the table indicates a gateway address; N1, N2 and N3 indicate routing devices' addresses; F1 and F2 indicate field devices' addresses.

9.3.4 Packet lifecycle management

Each packet has a lifecycle in the WIA-PA network. The lifecycle is expressed as a maximum surviving time. The NL records the generation time of packets by using timestamps. The surviving time is computed according to the generation time. When the surviving time of a packet exceeds its lifecycle, the packet should be discarded.

9.3.5 Joining and leaving network of device

The WIA-PA NL supports the joining and leaving processes of devices. The joining and leaving processes include the joining and leaving of field devices and of routing devices.

9.3.6 End-to-end network performance monitoring


The WIA-PA network layer monitors each path's health status. The NLME records the number of retries of each path to estimate the path failures. If there is a path failure, the NLME sends an indication to the DMAP (see 9.5.12).

9.3.7 Fragmentation and reassembly

Fragmentation and reassembly are handled at the NL. If the length of an NPDU is longer than the maximum DLSL payload, the NPDU should be fragmented at the NL of the sender. When the fragmented NPDUs reach the receiver, they are reassembled at the NL. See 9.6.2 for detailed packet format.

9.3.8 Network layer state machine

The NL state transitions are shown in Figure 40 and Table 70.

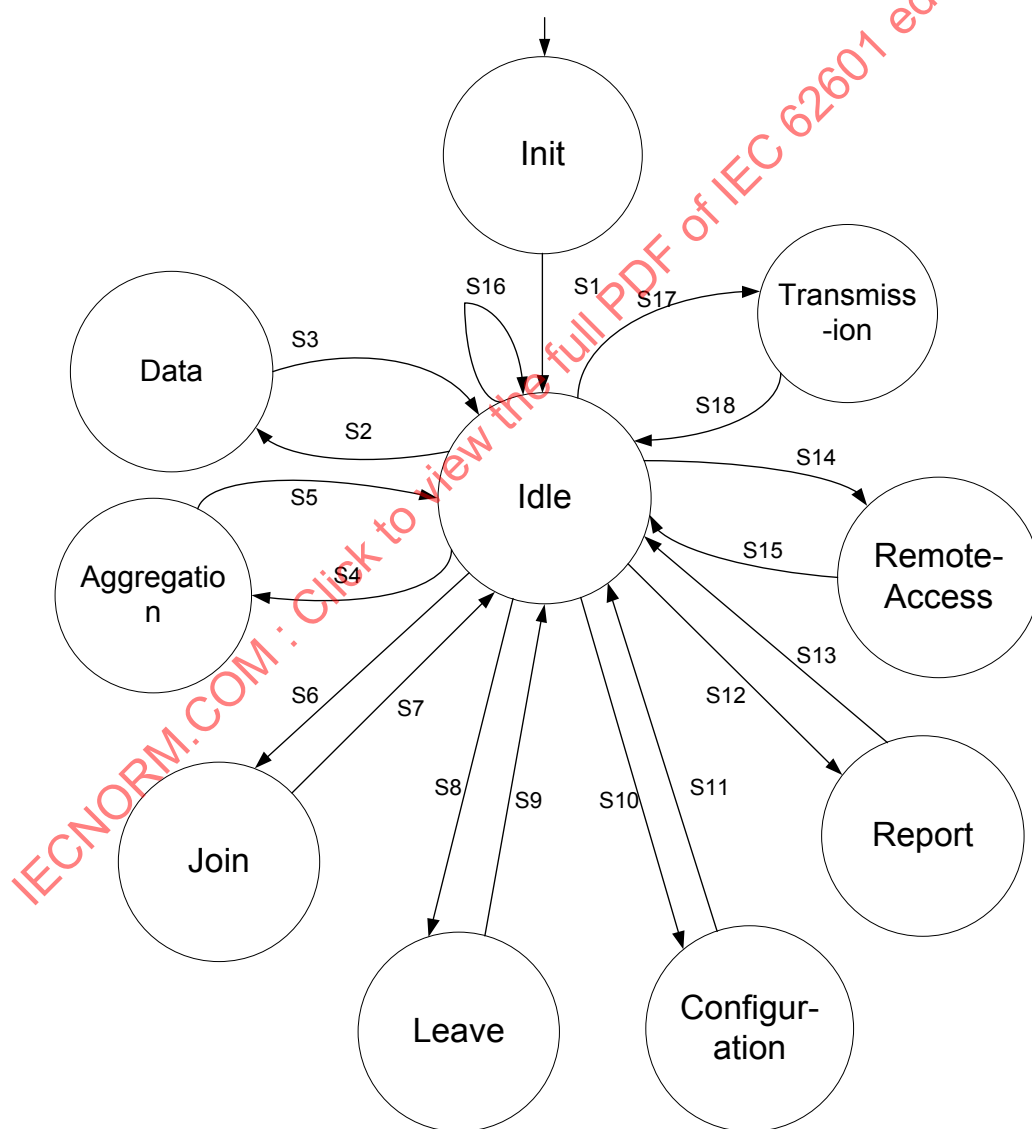

IEC

Figure 40 – Network layer state machine

Table 70 – NL state transitions (1 of 4)

Sequence number #	Current state	Event or condition	Actions	Next state
S1	Init		Initiation	Idle
S2	Idle	From DLSL: DLSL-DATA.confirm() or DLSL-DATA.indication() & Packet type = 0 in NSDU; From ASL: NLDE-DATA.request()		Data
S3	Data		From DLSL: invoke NLDE-DATA.confirm() to ASL or parsing NSDU and invoke NLDE-DATA.indication() for NSDU; From ASL: packing NPDU and invoke DLDE-DATA.request(); All messages or packets are sent to transmission queue.	Idle
S4	Idle	From DLSL: DLSL-DATA.indication() & Packet type = 1 in NSDU; From DMAP: NLME-AGO-SEND.request()		Aggregation
S5	Aggregation		From DLSL: parsing NSDU according to NL aggregated packet format and invoke NLME-DAG.indication() to DMAP; From DMAP: packing NL aggregated packet; All messages or packets are sent to relate transmission queue.	Idle
S6	Idle	From DLSL: DLSL-DATA.indication() & Packet type = 2 and Command ID = 0, 1 in NSDU; From DMAP: NLME-JOIN.request/response()		Join
S7	Join		From DLSL: parsing NSDU according to NL joining request packet format if Command ID = 0 or joining response packet format if Command ID = 1 and invoke NLME-JOIN.indication() / NLME-JOIN.confirm() to DMAP; From DMAP: packing NL joining response packet; All messages or packets are sent to related transmission queue.	Idle
S8	Idle	From DLSL: DLSL-DATA.indication() & Packet type = 2 and Command ID = 3, 4 in NSDU; From DMAP: NLME-LEAVE.request/response()		Leave
S9	Leave		From DLSL: parsing NSDU according to NL leaving request packet format if Command ID = 3 or leaving response packet format if Command ID = 4 and invoke NLME-LEAVE.indication() / NLME-LEAVE.confirm() to DMAP; From DMAP: packing NL leaving response packet; All messages or packets are sent to related transmission queue.	Idle

Table 70 (2 of 4)

Sequence number #	Current state	Event or condition	Actions	Next state
S10	Idle	From DLSL: DLSL-DATA.indication() & Packet type = 2 and Command ID = 8-25 in NSDU; From DMAP: NLME-ADD/UPDATE/DELETE_ROUTE.request/response () or NLME-ADD/UPDATE/RELEASE-LINK/SFR.request/response()		Configuration
S11	Configuration		From DLSL: parsing NSDU according to NL route/link/superframe-add/update/delete/release request/response packet format if Command ID = 8-25 and invoke NLME-ADD/UPDATE/DELETE_ROUTE.indication() or NLME-ADD/UPDATE/RELEASE-LINK/SFR.indication() to DMAP; From DMAP: packing NL route/link/superframe-add/update/delete/release response packet; All messages or packets are sent to related transmission queue.	Idle
S12	Idle	From DLSL: DLSL-COMM-STATUS.confirm() or DLSL-DATA.indication() & Packet type = 2 and Command ID = 2, 5-7, 26-28; From DMAP: NLME-RPT-CLRMEM.response()		Report

Table 70 (3 of 4)

Sequence number #	Current state	Event or condition	Actions	Next state
S13	Report		From DLSL: invoke NLME-COMM-STATUS.cofirm () to DMAP. if Command ID = 2, parsing NSDU according to NL communication status report request packet format and invoke NLME-COMM-STATUS.indication(); if Command ID = 5, 6, parsing NSDU according to NL cluster member report request/response packet format and invoke NLME-RPT-CLRMEM.indication/confirm () to DMAP; if Command ID = 7; parsing NSDU according to NL neighbour information report request packet format and invoke NLME-NEIGHBOUR-INFO.indication() to DMAP; if Command ID = 26; parsing NSDU according to NL device condition report request packet format and invoke NLME-DEVICE-STATUS.indication() to DMAP; if Command ID = 27, parsing NSDU according to NL channel condition report request packet format and invoke NLME-CHANNEL-CONDITION.indication() to DMAP; if Command ID = 28, parsing NSDU according to NL path failure report request packet format and invoke NLME-PATH_FAILURE.indication() to DMAP; From DMAP: packing NL cluster member report response packet; All messages or packets are sent to related transmission queue.	Idle
S14	Idle	From DLSL: DLSL-DATA.indication() & Packet type = 2 and Command ID = 29-32; From DMAP: NLME-INFO_GET.response() or NLME-INFO_SET.response()		Remote Access
S15	Remote Access		From DLSL: if Command ID = 29, 30; parsing NSDU according to NL attribute getting request/response packet format and invoke NLME-INFO_GET.indication() / NLME-INFO_GET.confirm to DMAP; if Command ID = 31, 32, parsing NSDU according to NL attribute setting request/response packet format and invoke NLME-INFO_SET.indication() / NLME-INFO_SET.confirm to DMAP; From DMAP: packing NL attribute getting /setting response packet; All messages or packets are sent to relate transmission queue.	Idle

Table 70 (4 of 4)

Sequence number #	Current state	Event or condition	Actions	Next state
S16	Idle	From DLSL: DLSL-DATA.indication() & Packet type = 2 and Command ID > 32 or no packet received	Discard related NSDUs	Idle
S17	Idle	Transmission queue is not empty		Transmission
S18	Transmission	Transmission is over		Idle

The states in the NL state machine are specified as follows.

a) Idle state

The following transitions may occur while in the Idle state:

- when the DLSL invokes DLDE-DATA.indication, the NL enters the Receive state;
- when the ASL invokes NLDE-DATA.request, the NL enters the Transmit state.

b) Transmit state

In the Transmit state, if the NL receives NLDE-DATA.confirm, it enters the Idle state.

c) Receive state

When in the Receive state, the NL enters the Idle state after the NL issues NLDE-DATA.indication to the upper layer.

See 9.4 for NLdata services, e.g. NLDE-DATA; see 9.5 for NL management services, e.g. NLME-; See 9.6.1 for Packet type and 9.6.4 for Command ID.

The states in the NL state machine are specified as follows.

a) Idle state

After a device initiates the NL, the NL enters the Idle state. The following transitions may occur while the DLSL is in the Idle state:

b) When a DLSL, ASL, or DMAP frame arrives, the NL processes the NSDU.

The packets that a device can receive include packets whose final destination addresses are this device. The functions of the Idle state are to receive and process the packet and process the DMAP, ASL and DLSL primitives.

The following transitions may occur while the NL is in the Receive state:

- If a data packet is received from DLSL or NLDE-DATA.request() is received from ASL, the NL enters Data state.
- If an aggregated packer is received from DLSL or NLME-AGO-SEND.request() is received from DMAP, the NL enters Aggregation state.
- If a join request or response command packet is received from DLSL or NLME-JOIN.request/response () is received from DMAP, the NL enters Join state.
- If a leave request or response command packet is received from DLSL or NLME-LEAVE.request/response () is received from DMAP, the NL enters Leave state.
- If a command packet identified from 8 to 25 is received from DLSL or NLME-ADD/UPDATE/DELETE_ROUTE.request/response () or NLME-ADD/UPDATE/RELEASE-LINK/SFR.request/response() are received from DMAP, the NL enters Configuration state.
- If a command packet identified by 2, 5-7, 26-28 is received from DLSL or NLME-RPT-CLRMEM.response() is received from DMAP, the NL enters Report state.
- If an attribute getting or setting command packet identified from 29 to 32 is received from DLSL or NLME-INFO_GET.response() /NLME-INFO_SET.response() is received from DMAP, the NL enters Remote Access state.

- If no packet or primitives is received or command packets identifier bigger than 32 is received from DLSL, the NL enters Idle state.
- c) When the transmission queue is not empty, the NL enters the Transmission state.
- d) Data state
This state handles the data process procedure of a device. If a data from DLSL is received or an ASL data request is received, the NL enters the Data state.
- e) Aggregation state
This state handles the data/packet aggregation and dis-aggregation procedure.
- f) Join state
This state handles the joining procedure of a device.
- g) Leave state
This state handles the leaving procedure of a device.
- h) Configuration state
This state handles the resource allocation procedures, which include the add/update/deleting or release of a route, link, or a superframe.
- i) Report state
This state handles the report procedures, which include the cluster member report, neighbour information report, device condition report, channel condition report, and path failure report.
- j) Remote access state
This state handles the remote attribute access procedures, which include the attribute getting and setting.
- k) Transmission state
This state handles the data or packet transmission procedures. If the transmission queue is not empty, the NL enters the Transmission state.

9.4 Network layer data services

9.4.1 General

The NLDE-SAP is used by the ASL to receive and transmit data. The primitives supported by NL data services include NLDE-DATA.request, NLDE-DATA.confirm, and NLDE-DATA.indication.

9.4.2 NLDE-DATA.request

The NLDE receives the payload from the ASL through NLDE-DATA.request and adds it to the message queue of the NL.

The semantics of NLDE-DATA.request are described as follows:

```
NLDE-DATA.request (
    VcrID,
    SrcAddr,
    Priority,
    PayloadLength,
    Payload,
    PayloadHandle
)
```

Table 71 specifies the parameters for NLDE-DATA.request.

Table 71 – NLDE-DATA.request parameters

Name	Data type	Valid range	Description
VcrID	Unsigned16	0 to 65 535	The VCR identifier
SrcAddr	Unsigned16	0 to 65 535 (Unicast address)	The 16-bit short address of the NSDU's source
Priority	Unsigned8	0 to 15	Priority of this NSDU
PayloadLength	Unsigned16	0 to 65 535	The length of NSDU to be transmitted
Payload	Octetstring		NSDU
PayloadHandle	Unsigned8	0 to 255	The handle associated with the NSDU to be transmitted

9.4.3 NLDE-DATA.confirm

NLDE-DATA.confirm reports the results of NLDE-DATA.request.

The semantics of NLDE-DATA.confirm are described as follows:

NLDE-DATA.confirm (

PayloadHandle,
Status

)

Table 72 specifies the parameters for NLDE-DATA.confirm.

Table 72 – NLDE-DATA.confirm parameters

Name	Data type	Valid range	Description
PayloadHandle	Unsigned8	0 to 255	Handle of the NSDU, which is used to indicate the NL payload.
Status	Unsigned8	0 to 255	Result of NLDE-DATA.request: 0 = SUCCESS; 1 = FAILURE; Others are reserved.

9.4.4 NLDE-DATA.indication

NLDE-DATA.indication informs the ASL when the NL receives a packet.

The semantics of NLDE-DATA.indication are described as follows:

NLDE-DATA.indication (

SrcAddr,
Priority,
NSDULength,
NSDU

)

Table 73 specifies the parameters of NLDE-DATA.indication.

Table 73 – NLDE-DATA.indication parameters

Name	Data type	Valid range	Description
SrcAddr	Unsigned16	0 to 65 535 (Unicast Address)	The 16-bit short address of the NSDU's source
Priority	Unsigned8	0 to 15	Priority of this NSDU
NSDULength	Unsigned16	0 to 65 535	Length of the NSDU
NSDU	octet		Data of the NSDU

9.4.5 Time sequence of NL data services

Figure 41 shows the basic procedures of packet sending and receiving. NLDE-DATA.request is generated by a local Application Sub-Layer Data Entity (ASLDE) when a data Application Sub-Layer Protocol Data Unit (ASLPDU) is to be transferred to a peer NLDE. On receipt of a NLDE-DATA.request, the NLDE begins transmitting of the NPDU.

NLDE-DATA.confirm is generated by the NLDE of a source device in response to NLDE-DATA.request. NLDE-DATA.confirm returns a status indicating the result of the transmission.

NLDE-DATA.indication is generated by the NLDE of a destination device and is issued to the ASLDE on receipt of a data packet at the local NLDE.

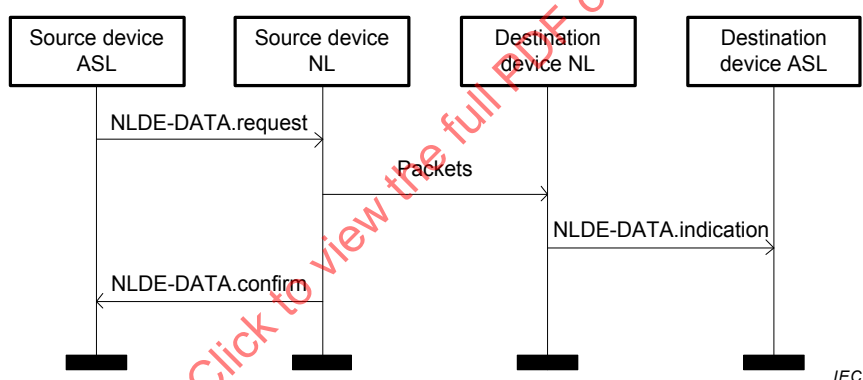


Figure 41 – Time sequence of NL data services

9.5 Network layer management services

9.5.1 General

The DMAP uses the interface supplied by NLME-SAP to configure and control the NL operation.

9.5.2 Network communication status report services

9.5.2.1 NLME-COMM-STATUS.request

The semantics of NLME-COMM-STATUS.request are described as follows:

```

NLME-COMM-STATUS.request (
    ProxyAddr,
    PhyAddr,
    DeviceType,
    Status
)
    
```

Table 74 specifies the parameters for NLME-COMM-STATUS.request.

Table 74 – NLME-COMM-STATUS.request parameters

Name	Data type	Valid range	Description
ProxyAddr	Unsigned16	0 to 65 535	The address of the routing device selected by the new device (unicast address)
PhyAddr	Unsigned64	0 to ($2^{64}-1$)	64-bit physical address of the new device
DeviceType	Unsigned8	0 to 255	The type of the new device: 0 = Gateway device; 1 = Routing device; 2 = Field device; 3 = Handheld device; Others are reserved.
Status	Unsigned8	0 to 255	Results of the joining process of a new device: 0 = SUCCESS; 1 = FAILURE; Others are reserved.

9.5.2.2 NLME-COMM-STATUS.indication

The semantics of NLME-COMM-STATUS.indication are described as follows:

NLME-COMM-STATUS.indication (

ProxyAddr,
PhyAddr,
DeviceType,
Status
)

Table 75 specifies the parameters for NLME-COMM-STATUS.indication.

Table 75 – NLME-COMM-STATUS.indication parameters

Name	Data type	Valid range	Description
ProxyAddr	Unsigned16	0 to 65 535	The address of the routing device selected by the new device (unicast address)
PhyAddr	Unsigned64	0 to ($2^{64}-1$)	64-bit physical address of the new device
DeviceType	Unsigned8	0 to 255	The type of the new device: 0 = Gateway device; 1 = Routing device; 2 = Field device; 3 = Handheld device; Others are reserved.
Status	Unsigned8	0 to 255	Results of the joining process of a new device: 0 = SUCCESS; 1 = FAILURE; Others are reserved.

On receipt of NL communication status request packet, the NL of the gateway device will invoke NLME-COMM-STATUS.indication and inform the DMAP.

9.5.2.3 NLME-COMM-STATUS.confirm

The semantics of NLME-COMM-STATUS.confirm are described as follows:

NLME-COMM-STATUS.confirm (
PhyAddr,
Status
)

Table 76 specifies the parameters for NLME-COMM-STATUS.confirm.

Table 76 – NLME-COMM-STATUS.confirm parameters

Name	Data type	Valid range	Description
PhyAddr	Unsigned64	0 to ($2^{64}-1$)	64-bit physical address of the new device
Status	Unsigned8	0 to 255	Execution result of the request: 0 = SUCCESS; 1 = FAILURE; Others are reserved.

NLME-COMM-STATUS.confirm is generated by the NL in response to NLME-COMM-STATUS.request. NLME-COMM-STATUS.confirm returns a status of either SUCCESS, indicating that the requested transmission has been successful, or FAILURE, indicating that the transmission has failed.

9.5.3 Network joining services

9.5.3.1 NLME-JOIN.request

The semantics of NLME-JOIN.request are described as follows:

```
NLME-JOIN.request (
    ProxyAddr,
    PhyAddr,
    SecMaterial,
    DeviceType
)
```

Table 77 specifies the parameters for NLME-JOIN.request.

Table 77 – NLME-JOIN.request parameters

Name	Data type	Valid range	Description
ProxyAddr	Unsigned16	0 to 65 535	The address of the routing device selected by the new device (Unicast address)
PhyAddr	Unsigned64	0 to $(2^{64}-1)$	64-bit physical address of the new device
SecMaterial	Unsigned32	0 to $(2^{32}-1)$	The identity information of a device
DeviceType	Unsigned8	0 to 255	The type of the new device: 0 = Gateway device; 1 = Routing device; 2 = Field device; 3 = Handheld device; Others are reserved.

9.5.3.2 NLME-JOIN.indication

The semantics of NLME-JOIN.indication are described as follows:

```
NLME-JOIN.indication (
    ProxyAddr,
    PhyAddr,
    SecMaterial,
    DeviceType
)
```

Table 78 specifies the parameters for NLME-JOIN.indication.

Table 78 – NLME-JOIN.indication parameters

Name	Data type	Valid range	Description
ProxyAddr	Unsigned16	0 to 65 535	Short address of the routing device that generates NL join request
PhyAddr	Unsigned64	0 to $(2^{64}-1)$	Device's physical address
SecMaterial	Unsigned32	0 to $(2^{32}-1)$	The identity information of a device
DeviceType	Unsigned8	0 to 255	The type of the new device: 0 = Gateway device; 1 = Routing device; 2 = Field device; 3 = Handheld device; Others are reserved.

On receipt of NL joining request packet, the NL of the gateway device will invoke NLME-JOIN.indication and inform the DMAP.

9.5.3.3 NLME-JOIN.response

The semantics of NLME-JOIN.response are described as follows:

NLME-JOIN.response (

ProxyAddr,
PhyAddr,
ShortAddr,
Status

)

Table 79 specifies the parameters for NLME-JOIN.response.

Table 79 – NLME-JOIN.response parameters

Name	Data type	Valid range	Description
ProxyAddr	Unsigned16	0 to 65 535	Short address of the routing device that generates NL join request
PhyAddr	Unsigned64	0 to $(2^{64}-1)$	Physical address of new device
ShortAddr	Unsigned16	0 to 65 535	Allocated network address (Unicast address) of new device
Status	Unsigned8	0 to 255	Execution result of the request 0 = SUCCESS; 1 = FAILURE; Others are reserved.

The DMAP invokes NLME-JOIN.response to assign a network address to the new device.

9.5.3.4 NLME-JOIN.confirm

The semantics of NLME-JOIN.confirm are described as follows:

NLME-JOIN.confirm (

ShortAddr,
Status

)

Table 80 specifies the parameters for NLME-JOIN.confirm.

Table 80 – NLME-JOIN.confirm parameters

Name	Data type	Valid range	Description
ShortAddr	Unsigned16	0 to 65 535	Network address (unicast address)
Status	Unsigned8	0 to 255	Execution result of the request: 0 = SUCCESS; 1 = FAILURE; Others are reserved.

NLME-JOIN.confirm is generated by the NL in response to NLME-JOIN.request. NLME-JOIN.confirm returns a status of either SUCCESS, indicating that the requested transmission has been successful, or FAILURE, indicating that the transmission has failed.

9.5.3.5 Time sequence for device joining

9.5.3.5.1 Time sequence for field device joining

To join the star network, a field device should initiate a joining request in the MAC layer by DMAP to the routing device or the gateway device. A field device should join the network either through the gateway device or through a routing device.

When the gateway device receives a joining request from a field device, it should indicate the joining to the NM and then return a joining response. If the new field device receives the MAC associate response from the gateway device, it joins the network.

When the routing device receives a joining request from a field device, it should produce a joining request of the NL and send this request to the gateway device. If the new field device receives the joining response, the joining process is finished.

Figure 42 illustrates an example of the joining process of a field device in the hierarchical network that is the combination of star and mesh.

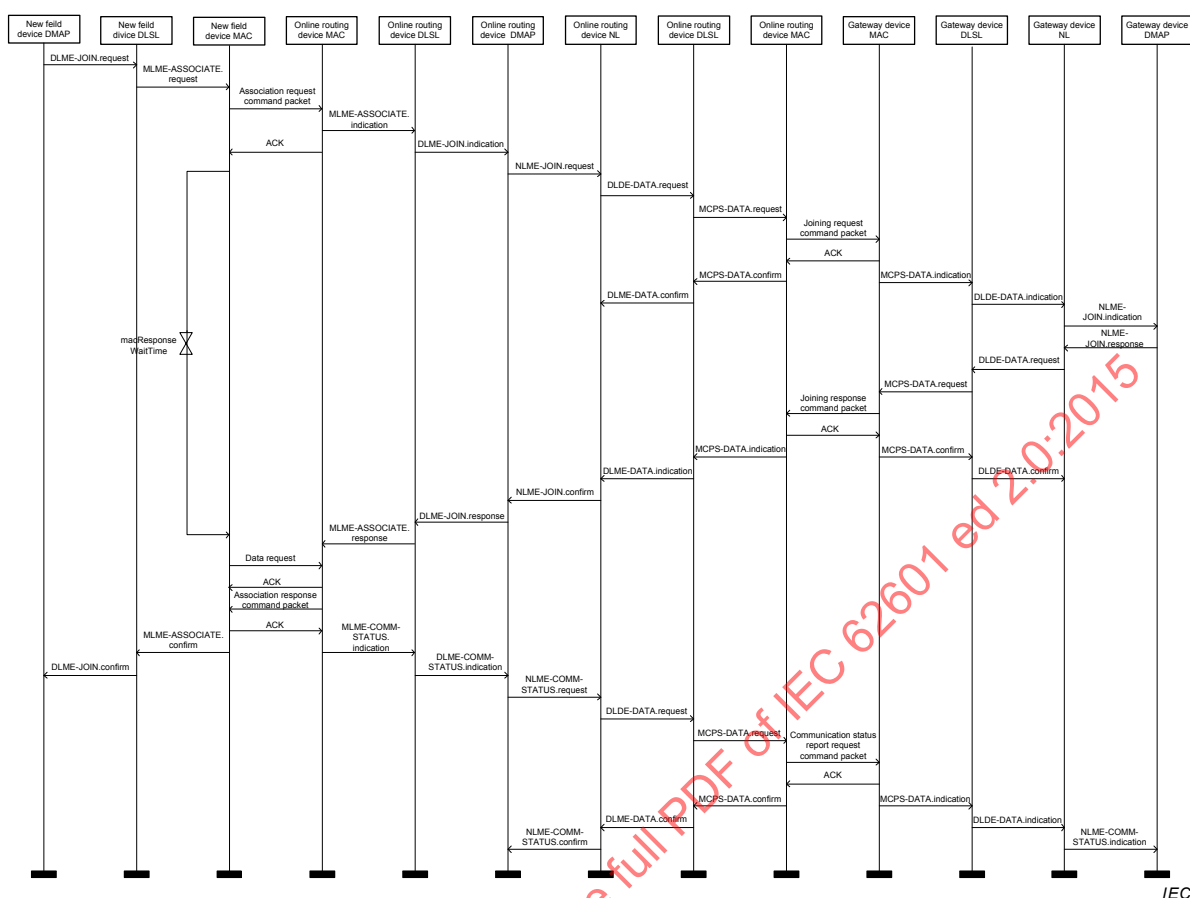


Figure 42 – Time sequence for field device joining through routing device

9.5.3.5.2 Time sequence for routing device joining

If a routing device wants to join the mesh network, it should send a joining request to the gateway device, and the request includes the long address of this routing device. There are two kinds of joining processes for routing devices: one-hop joining and multi-hop joining. If the new routing device sends a joining request to the gateway device, the one-hop joining process is used; if the new routing device joins the mesh network through another existing routing device, the multi-hop joining process is used.

The gateway device receives the joining request and informs the NM. The NM should return a response. If the new routing device receives the response, its joining process is completed.

Figure 43 and Figure 44 illustrate examples of the joining process of routing devices.

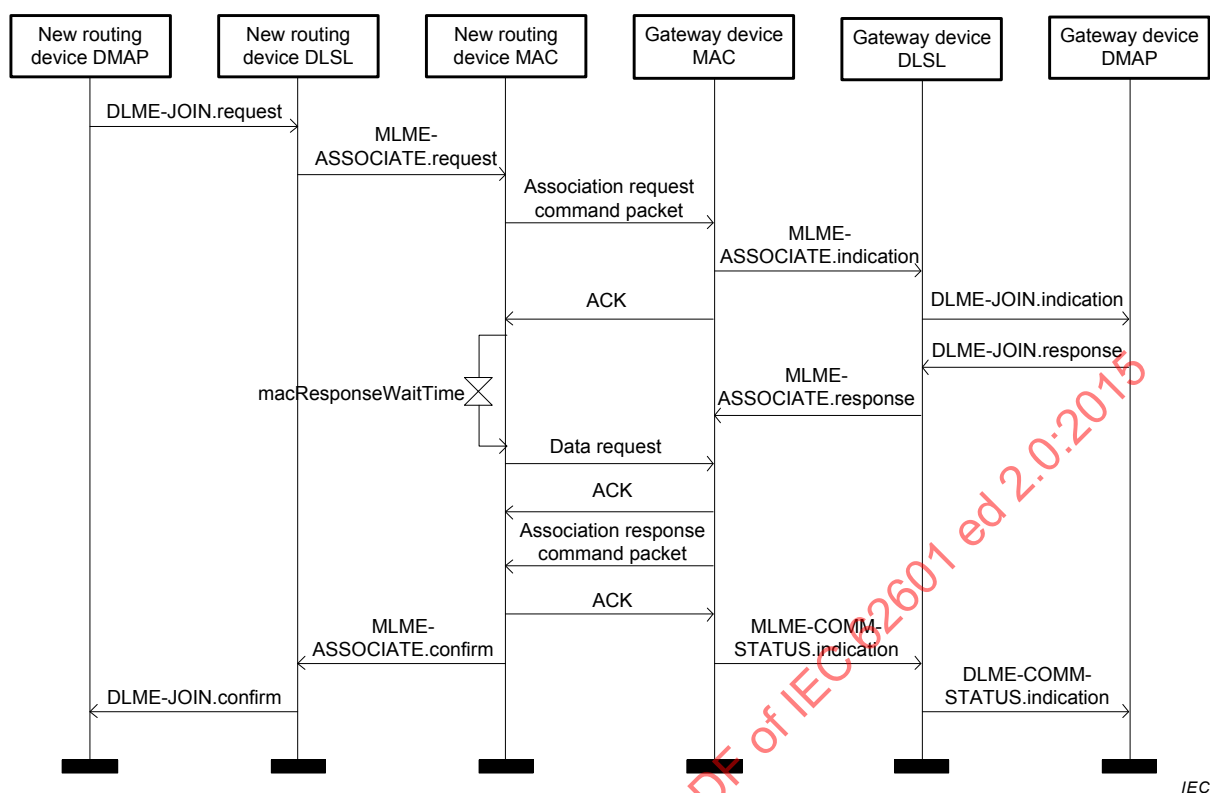


Figure 43 – One-hop joining process for routing device

See IEEE STD 802.15.4-2011, Figure 17 and Figure 18 for the detailed message sequence chart between peer MAC entities.

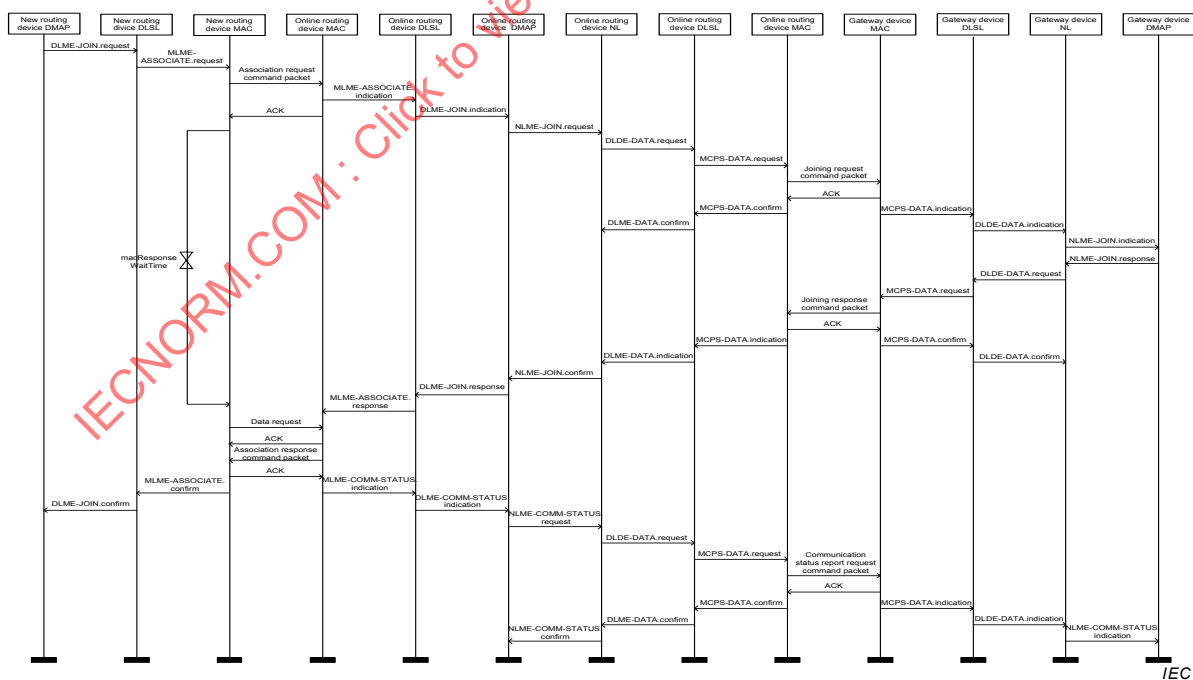


Figure 44 – Multi-hop join process of routing device

Before joining the network, the field devices and the routing devices set the DeviceState (see Table 20) to 0 to indicate that the devices have not joined the network. If the new devices have sent out the joining request and have not received the joining response, they set the

DeviceState to 1 to indicate that the devices are joining the network. If the new devices have sent out the joining request and have received the joining response successfully, they set the DeviceState to 3 to indicate that the devices have joined the network. If the joining process needs security authentication, the devices set the DeviceState to 3 during the authentication process. See Table 20 for DeviceState.

9.5.4 Networkleaving services

9.5.4.1 NLME-LEAVE.request

The semantics of NLME-LEAVE.request are described as follows:

```
NLME-LEAVE.request (
    SrcAddr,
    DstAddr,
    LeavingReason
)
```

Table 81 specifies the parameters for NLME-LEAVE.request.

Table 81 – NLME-LEAVE.request parameters

Name	Data type	Valid range	Description
SrcAddr	Unsigned16	0 to 65 535	The address of the device to which to send the leaving response
LeavingReason	Unsigned8	0 to 255	1 = Passive leaving of a routing device or a field device 2 = Active leaving of a routing device Others are reserved.

When a routing device wants to leave the network, or the gateway device wants a device to leave the network, the DMAP invokes NLME-LEAVE.request and requests its NL to start the leaving process.

9.5.4.2 NLME-LEAVE.indication

The semantics of NLME-LEAVE.indication are described as follows:

```
NLME-LEAVE.indication (
    DeviceAddr,
    LeavingReason
)
```

Table 82 specifies the parameters for NLME-LEAVE.indication.

Table 82 – NLME-LEAVE.indication parameters

Name	Data type	Valid range	Description
DeviceAddr	Unsigned16	0 to 65 535	The address of the device invoking Leaving request
LeavingReason	Unsigned8	0 to 255	1 = Passive leaving of a routing device or a field device 2 = Active leaving of a routing device Others are reserved.

On receipt of a leaving request command packet, the NL will invoke NLME-LEAVE.indication and inform the DMAP.

9.5.4.3 NLME-LEAVE.response

The semantics of NLME- LEAVE.response are described as follows:

```
NLME-LEAVE.response (
    DevAddr,
    Status
)
```

Table 83 specifies the parameters for NLME-LEAVE.response.

Table 83 – NLME-LEAVE.response parameters

Name	Data type	Valid range	Description
DevAddr	Unsigned16	0 to 65 535	The address of the device that has requested leaving
Status	Unsigned8	0 to 255	Execution result of the request 0 = SUCCESS; 1 = FAILURE; Others are reserved.

NLME-LEAVE.response is used by DMAP or NM to inform the leaving device whether or not the leaving request has been accepted.

9.5.4.4 NLME-LEAVE.confirm

The semantics of NLME-LEAVE.confirm are described as follows:

```
NLME-LEAVE.confirm (
    DevAddr,
    Status
)
```

Table 84 specifies the parameters for NLME-LEAVE.confirm.

Table 84 – NLME-LEAVE.confirm parameters

Name	Data type	Valid range	Description
DevAddr	Unsigned16	0 to 65 535	The address of the device that has either requested leaving or been instructed to leave by Gateway device
Status	Unsigned8	0 to 255	Execution result of the request: 0 = SUCCESS; 1 = FAILURE; Others are reserved.

NLME-LEAVE.confirm is generated by the NL in response to NLME-LEAVE.request. NLME-LEAVE.confirm returns a status of either SUCCESS, indicating that the request to transmit is successful, or FAILURE, indicating that the request to transmit is failed.

9.5.4.5 Time sequence for device leaving

9.5.4.5.1 Time sequence for field device leaving

The leaving processes of field devices include the following two types.

- Active leaving. For a field device, the DMAP invokes DLME-LEAVE.request to send a leaving request to the routing device or the gateway device that is its cluster head. After

[illegible]

See IEEE STD 802.15.4-2011, Figure 27 for the detailed message sequence chart between peer MAC entities.

-
- ```

sequenceDiagram
 participant F1 as Field device DMAP
 participant F2 as Field device DLS
 participant F3 as Field device MAC
 participant R1 as Routing device MAC
 participant R2 as Routing device DLS
 participant R3 as Routing device DMAP
 participant R4 as Routing device NL
 participant R5 as Routing device DLS
 participant R6 as Routing device MAC
 participant G1 as Gateway device MAC
 participant G2 as Gateway device DLS
 participant G3 as Gateway device NL
 participant G4 as Gateway device DMAP

 F1->>F2: DLME-LEAVE.indication
 F2->>F3: MLME-DISSOCIATE.indication
 F3->>R1: Disassociation request control packet
 R1->>R2: MLME-DISSOCIATE.confirm
 R2->>R3: DLME-LEAVE.request
 R3->>R4: DLME-LEAVE.confirm
 R4->>R5: NLME-RPT-CLRMEM.request
 R5->>R6: DLDE-DATA.request
 R6->>G1: MCPS-DATA.request
 Note over R6: Online routing device transfers forward the request of reporting cluster members
 G1->>G2: ACK
 G2->>R6: MCPS-DATA.confirm
 R6->>R5: MCPS-DATA.indication
 R5->>R4: DLDE-DATA.indication
 R4->>R3: NLME-RPT-CLRMEM.indication
 R3->>R2: NLME-RPT-CLRMEM.response
 R2->>R1: DLDE-DATA.request
 R1->>R2: DLDE-DATA.confirm
 R2->>R5: MCPS-DATA.indication
 R5->>R6: MCPS-DATA.confirm
 Note over R6: Online routing device transfers forward the response of reporting cluster members
 R6->>G1: ACK
 G1->>G2: MCPS-DATA.request
 G2->>G3: MCPS-DATA.confirm
 G3->>G4: DLDE-DATA.confirm
 G4->>G3: DLDE-DATA.request
 G3->>G2: DLDE-DATA.indication
 G2->>G1: DLDE-DATA.confirm

```

Routing devices connect to both the mesh network and the star network. Therefore, the routing device should inform both the gateway device and its field devices of its leaving.

See IEEE STD 802.15.4-2011, Figure 27 for the detailed message sequence chart between peer MAC entities.

#### 9.5.4.5.2 Time sequence for routing device leaving

The leaving processes of routing devices include the following two types.

- a) **Active leaving.** The DMAP of a routing device sends its leaving request to the gateway device by NLME-LEAVE.request. After receiving the leaving request, the gateway device returns a leaving response. When the DMAP of the leaving routing device receives NLME-LEAVE.confirm, it informs its cluster members. Figure 47 illustrates the time sequence of a routing device's active leaving.

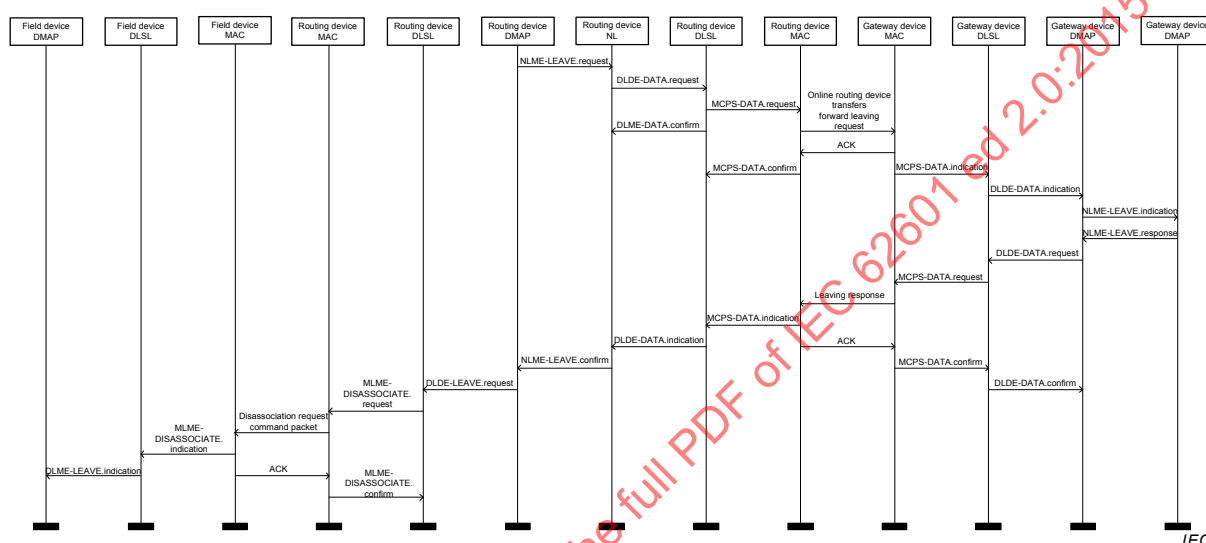


**Figure 47 – Active leaving process of routing device**

See IEEE STD 802.15.4-2011, Figure 27 for the detailed message sequence chart between peer MAC entities.

- b) **Passive leaving.** If the gateway device wants a routing device to leave the network, it produces an NL leaving request packet, and sends it to the designated routing device. After receiving the leaving request packet from the gateway device, the routing device informs all its cluster members of its leaving. Figure 48 illustrates the time sequence of a routing device's passive leaving.

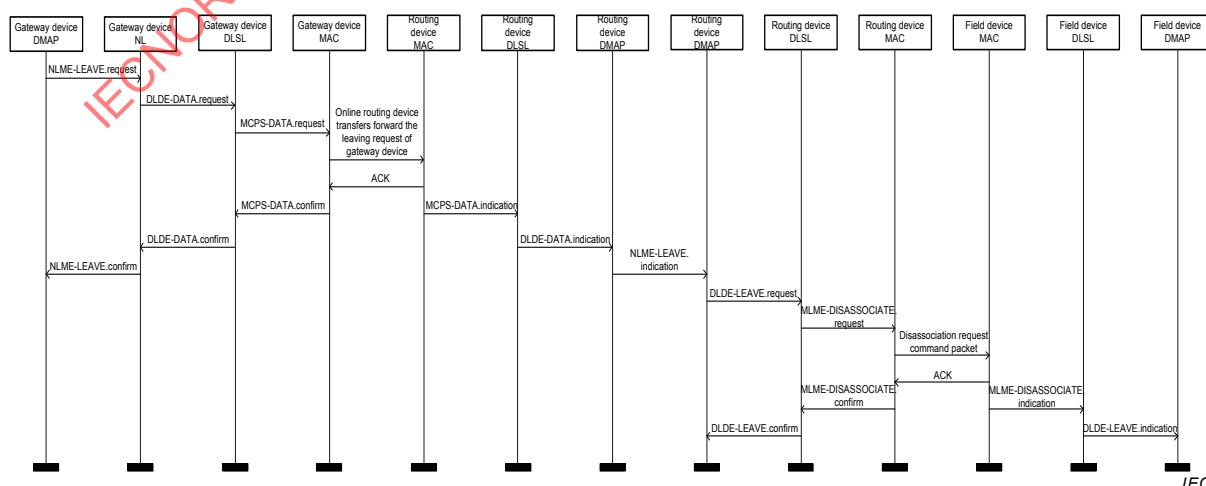


**Figure 48 – Passive leaving process of routing device**

See IEEE STD 802.15.4-2011, Figure 20 for the detailed message sequence chart between peer MAC entities.

## 9.5.5 Cluster member report services

### 9.5.5.1 NLME-RPT-CLRMEM.request

NLME-RPT-CLRMEM.request is used by routing devices to report the information of the cluster members to the gateway device.

The semantics of NLME-RPT-CLRMEM.request are described as follows:

```
NLME-RPT-CLRMEM.request (
 SrcAddr,
 DstAddr,
 ClrMemFlag,
 ClrMemAddr
)
```

Table 85 specifies the parameters for NLME-RPT-CLRMEM.request.

**Table 85 – NLME-RPT-CLRMEM.request parameters**

| Name       | Data type  | Valid range | Description                                                                                     |
|------------|------------|-------------|-------------------------------------------------------------------------------------------------|
| SrcAddr    | Unsigned16 | 0 to 65 535 | The source address                                                                              |
| DstAddr    | Unsigned16 | 0 to 65 535 | The destination address                                                                         |
| ClrMemFlag | Unsigned8  | 0 to 255    | The flag of the cluster member modification:<br>0 = Add;<br>1 = Delete;<br>Others are reserved. |
| ClrMemAddr | Unsigned16 | 0 to 65 535 | The network address of the modified cluster member                                              |

### 9.5.5.2 NLME-RPT-CLRMEM.confirm

NLME-RPT-CLRMEM.confirm is used by the NL to return the result of NLME-RPT-CLRMEM.request to the DMAP.

The semantics of NLME-RPT-CLRMEM.confirm are described as follows:

```
NLME-RPT-CLRMEM.confirm (
 Status
)
```

Table 86 specifies the parameters for NLME-RPT-CLRMEM.confirm.

**Table 86 – NLME-RPT-CLRMEM.confirm parameter**

| Name   | Data type | Valid range | Description                                                                                      |
|--------|-----------|-------------|--------------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | The result of the cluster member report:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

### 9.5.5.3 NLME-RPT-CLRMEM.indication

NLME-RPT-CLRMEM.indication is used by the NL to report the successful receipt of cluster member report request packets.

The semantics of NLME-RPT-CLRMEM.indication are described as follows:

```
NLME-RPT-CLRMEM.indication (
 SrcAddr,
 ClrMemFlag,
 ClrMemAddr
)
```

Table 85 specifies the parameters for NLME-RPT-CLRMEM.indication.

### 9.5.5.4 NLME-RPT-CLRMEM.response

NLME-RPT-CLRMEM.response is used to respond to NLME-RPT-CLRMEM.indication.

The semantics of NLME-RPT-CLRMEM.response are described as follows:

```
NLME-RPT-CLRMEM.response (
 DstAddr,
 Status
)
```

Table 87 specifies the parameters for NLME-RPT-CLRMEM.response.

**Table 87 – NLME-RPT-CLRMEM.response parameters**

| Name    | Data type  | Valid range | Description                                                                                             |
|---------|------------|-------------|---------------------------------------------------------------------------------------------------------|
| DstAddr | Unsigned16 | 0 to 65 535 | The destination address                                                                                 |
| Status  | Unsigned8  | 0 to 255    | The result returned from cluster member report:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

### 9.5.5.5 Time sequence for cluster member reporting

The time sequence diagram for reporting cluster member is shown in Figure 49.

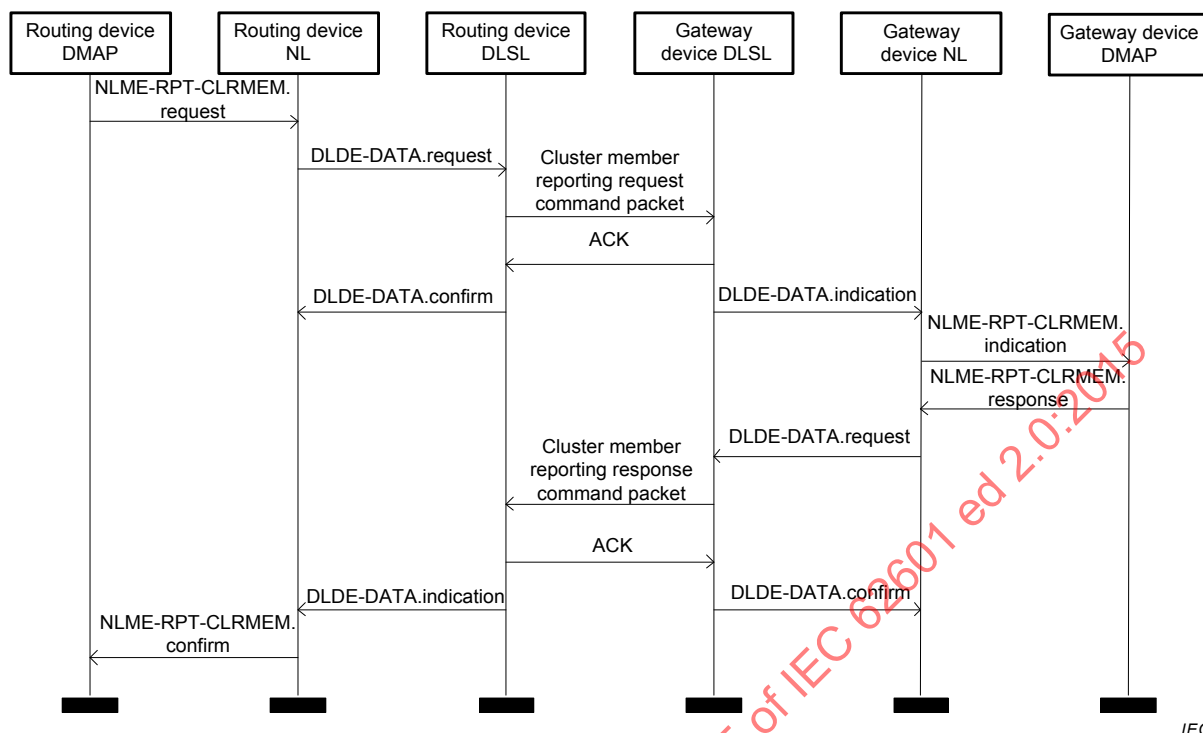


Figure 49 – Cluster member reporting process

## 9.5.6 Neighbour information report services

### 9.5.6.1 NLME-NEIGHBOUR-INFO.request

NLME-NEIGHBOUR-INFO.request is used for a routing device to report its one-hop neighbours' information to the gateway device. This usage of NLME-NEIGHBOUR-INFO.request is triggered only when a neighbour joins or leaves the WIA-PA network. The neighbour itself and its next hop neighbour to GW reports neighbour information to GW.

The semantics of NLME-NEIGHBOUR-INFO.request are described as follows:

```

NLME-NEIGHBOUR-INFO.request (
 SrcAddr,
 DstAddr,
 NeighbourCount,
 NeighbourStructure
)

```

Table 88 specifies the parameters for NLME-NEIGHBOUR-INFO.request.

Table 88 – NLME-NEIGHBOUR-INFO.request parameters

| Name               | Data type                                 | Valid range | Description                   |
|--------------------|-------------------------------------------|-------------|-------------------------------|
| SrcAddr            | Unsigned16                                | 0 to 65 535 | 16-bit source address         |
| DstAddr            | Unsigned16                                | 0 to 65 535 | 16-bit destination address    |
| NeighbourCount     | Unsigned8                                 | 0 to 255    | Number of the neighbours      |
| NeighbourStructure | Neighbour_Struct structure (see Table 18) |             | Information of the neighbours |

### 9.5.6.2 NLME-NEIGHBOUR-INFO.indication

NLME-NEIGHBOUR-INFO.indication is used for the DLSL to report the received NLME-NEIGHBOUR-INFO.request packet to the DMAP.

The semantics of NLME-NEIGHBOUR-INFO.indication are described as follows:

NLME-NEIGHBOUR-INFO.indication (

SrcAddr,  
NeighbourCount,  
NeighbourStructure  
)

Table 88 specifies the parameters for NLME-NEIGHBOUR-INFO.indication.

### 9.5.6.3 NLME-NEIGHBOUR-INFO.confirm

NLME-NEIGHBOUR-INFO.confirm is used to report the successful sending of neighbour information report request packets.

The semantics of NLME-NEIGHBOUR-INFO.confirm are described as follows:

NLME-NEIGHBOUR-INFO.confirm (

Status  
)

Table 89 specifies the parameters for NLME-NEIGHBOUR-INFO.confirm.


**Table 89 – NLME-NEIGHBOUR-INFO.confirm parameter**

| Name   | Data type | Valid range | Description                                                                                                 |
|--------|-----------|-------------|-------------------------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | Reporting the result of the neighbour information:<br>0 = SUCCESS;<br>1 = .FAILURE;<br>Others are reserved. |

### 9.5.6.4 Time sequence for neighbour information reporting

The time sequence diagram for reporting neighbour information is shown in Figure 50.



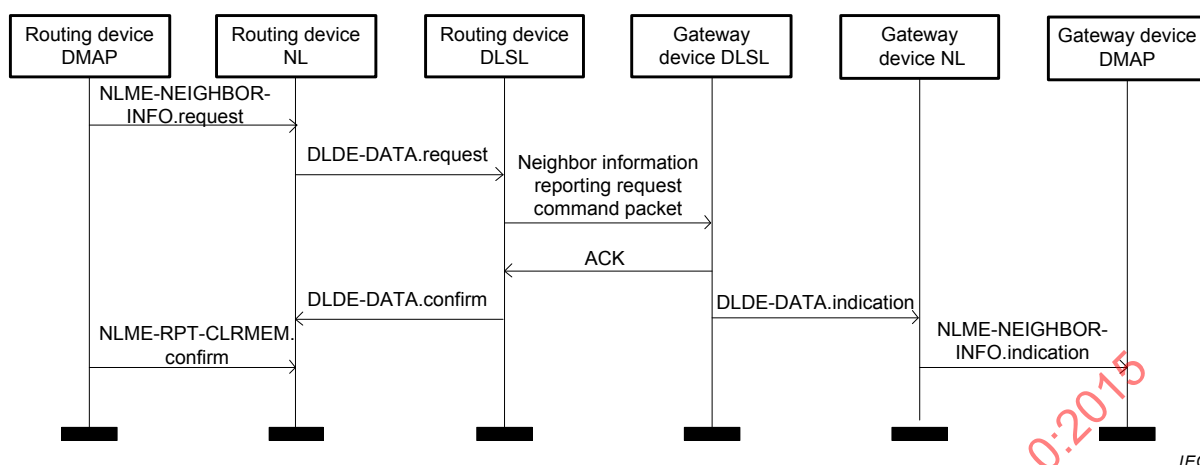

IEC

**Figure 50 – Neighbour information reporting process**

## 9.5.7 Route allocation services

### 9.5.7.1 Route adding services

#### 9.5.7.1.1 NLME-ADD\_ROUTE.request

NLME-ADD\_ROUTE.request is used to add a record to the routing table of a routing device.

The semantics of NLME-ADD\_ROUTE.request are described as follows:

```

NLME-ADD_ROUTE.request (
 DstAddr,
 RoutingTableRecord
)

```

Table 90 specifies the parameters for NLME-ADD\_ROUTE.request.

**Table 90 – NLME-ADD\_ROUTE.request parameters**

| Name               | Data type                                  | Valid range | Description                                    |
|--------------------|--------------------------------------------|-------------|------------------------------------------------|
| DstAddr            | Unsigned16                                 | 0 to 65 535 | The 16-bit short address of the routing device |
| RoutingTableRecord | NLRoute_Struct structure<br>(see Table 15) |             | A routing table item                           |

#### 9.5.7.1.2 NLME-ADD\_ROUTE.confirm

NLME-ADD\_ROUTE.confirm reports the result of a NLME-ADD\_ROUTE.request.

The semantics of NLME\_ADD-ROUTE.confirm are described as follows:

```

NLME-ADD_ROUTE.confirm(
 Status
)

```

Table 91 specifies the parameters for NLME-ADD\_ROUTE.confirm.

**Table 91 – NLME-ADD\_ROUTE.confirm parameters**

| Name   | Data type | Valid range | Description                                                                                      |
|--------|-----------|-------------|--------------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | The result of an NLME-ADD_ROUTE.request:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

On receipt of NLME-ADD\_ROUTE.request, the NL should transmit an adding-route-request packet to the routing device and should return an NLME-ADD\_ROUTE.confirm to report the result.

#### **9.5.7.1.3 NLME-ADD\_ROUTE.indication**

NLME-ADD\_ROUTE.indication is used to report to the DMAP that a device has successfully received a route adding request packet.

The semantics of NLME\_ADD-ROUTE.confirm are described as follows:

```
NLME-ADD_ROUTE.indication (
 RoutingTableRecord
)
```

Table 90 specifies the parameters for NLME-ADD\_ROUTE.indication.

#### **9.5.7.1.4 NLME-ADD\_ROUTE.response**

NLME-ADD\_ROUTE.response is the response of NLME-ADD\_ROUTE.indication.

The semantics of NLME-ADD\_ROUTE.response are described as follows:

```
NLME-ADD_ROUTE.response (
 Status
)
```

Table 91 specifies the parameters for NLME-ADD\_ROUTE.response.

#### **9.5.7.1.5 Time sequence for route adding**

The time sequence diagram for adding a record to the routing table of a routing device is shown in Figure 51.

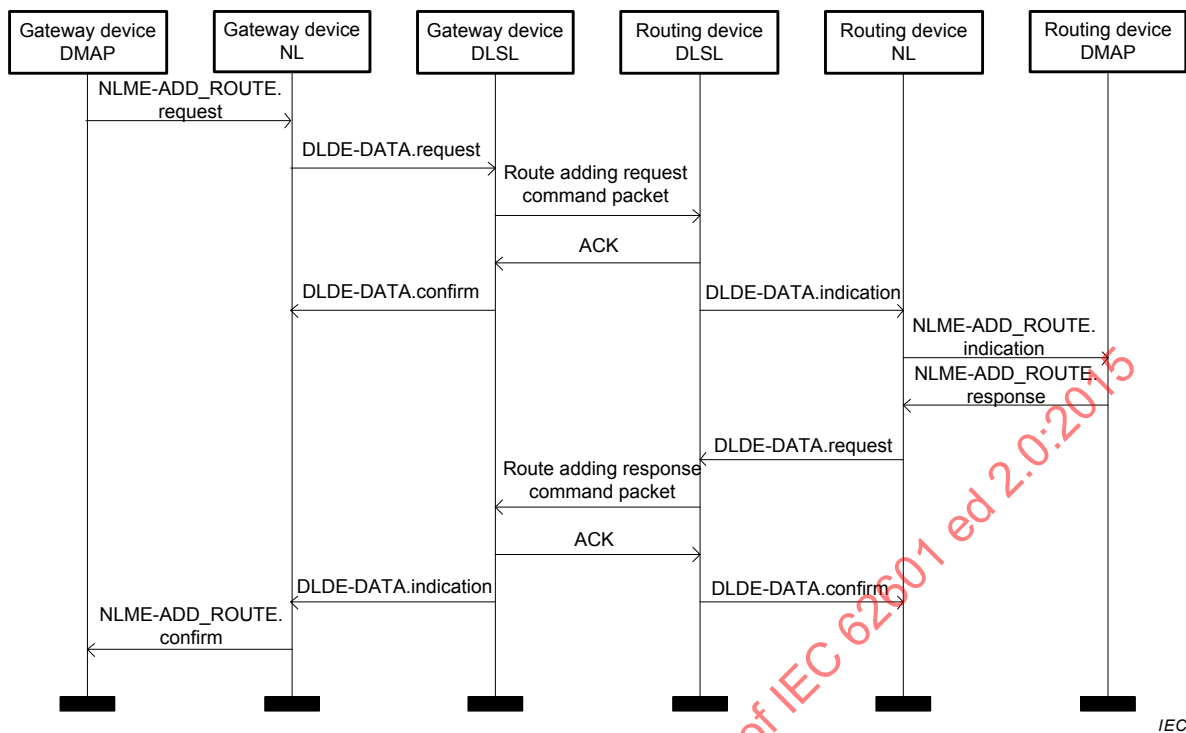


Figure 51 – Time sequence for route adding

## 9.5.7.2 Route update services

### 9.5.7.2.1 NLME-UPDATE\_ROUTE.request

NLME-UPDATE\_ROUTE.request updates a record in the routing table of a routing device.

The semantics of NLME-UPDATE\_ROUTE.request are described as follows:

NLME-UPDATE\_ROUTE.request (

DstAddr,

RoutingTableRecord

)

Table 92 specifies the parameters for NLME-UPDATE\_ROUTE.request.

Table 92 – NLME-UPDATE\_ROUTE.request parameters

| Name               | Data type                                  | Valid range | Description                            |
|--------------------|--------------------------------------------|-------------|----------------------------------------|
| DstAddr            | Unsigned16                                 | 0 to 65 535 | 16-bit short address of routing device |
| RoutingTableRecord | NLRoute_Struct structure<br>(see Table 15) |             | A routing table item                   |

The NM invokes NLME-UPDATE\_ROUTE.request to update a record in the routing table of routing devices.

### 9.5.7.2.2 NLME-UPDATE\_ROUTE.confirm

The NLME\_UPDATE-ROUTE.confirm reports the execution result of an NLME-UPDATE\_ROUTE.request.

The semantics of NLME\_UPDATE-ROUTE.confirm are described as follows:



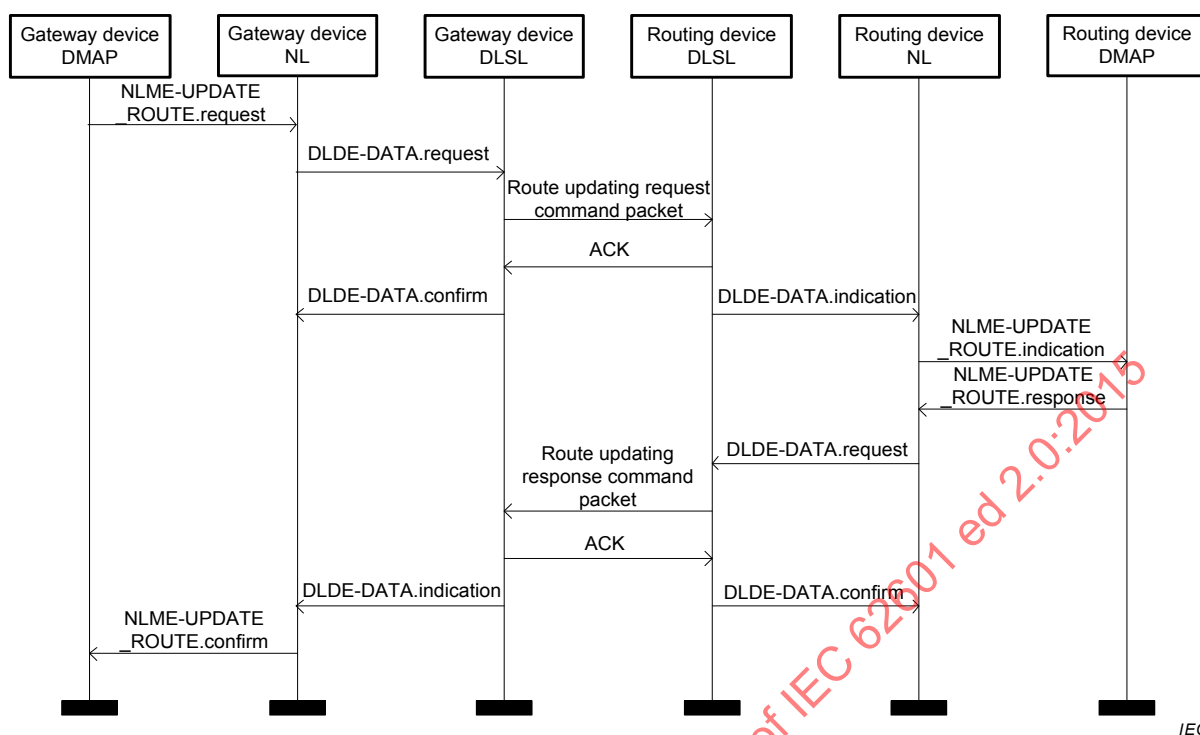


Figure 52 – Time sequence for route updating

### 9.5.7.3 Route deleting services

#### 9.5.7.3.1 NLME-DELETE\_ROUTE.request

The NM invokes NLME-DELETE\_ROUTE.request to delete a record in the routing table of a routing device.

The semantics of NLME\_DELETE\_ROUTE.confirm are described as follows:

NLME-DELETE\_ROUTE.request(  
                                                 DstAddr,  
                                                 RouteID  
                                                 )

Table 94 specifies the parameters for NLME-DELETE\_ROUTE.request.

Table 94 – NLME-DELETE\_ROUTE.request parameters

| Name    | Data type  | Valid range | Description                                                |
|---------|------------|-------------|------------------------------------------------------------|
| DstAddr | Unsigned16 | 0 to 65 535 | The 16-bit short address of the destination routing device |
| RouteID | Unsigned16 | 0 to 65 535 | Route ID                                                   |

#### 9.5.7.3.2 NLME-DELETE\_ROUTE.confirm

The NLME\_DELETE\_ROUTE.confirm reports the result of executing an NLME-DELETE\_ROUTE.request.

The semantics of NLME\_DELETE\_ROUTE.confirm are described as follows:

```

NLME-DELETE_ROUTE.confirm(
 Status
)

```

Table 95 specifies the parameters for NLME-DELETE\_ROUTE.confirm.

**Table 95 – NLME-DELETE\_ROUTE.confirm parameters**

| Name   | Data type | Valid range | Description                                                                                         |
|--------|-----------|-------------|-----------------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | The result of an NLME-DELETE_ROUTE.request:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

On receipt of NLME-DELETE\_ROUTE.request, the NL should transmit a route deleting request packet to the routing device and return an NLME-DELETE\_ROUTE.confirm to report the result.

#### 9.5.7.3.3 NLME-DELETE\_ROUTE.indication

NLME-DELETE\_ROUTE.indication is used to report to the DMAP that the device has successfully received a route deleting request packet.

The semantics of NLME-DELETE\_ROUTE.confirm are described as follows:

```

NLME-DELETE_ROUTE.indication (
 RouteID
)

```

Table 94 specifies the parameters for NLME-DELETE\_ROUTE.indication.

#### 9.5.7.3.4 NLME-DELETE\_ROUTE.response

The NLME-NLME-DELETE\_ROUTE.response is the response of NLME-DELETE\_ROUTE.indication.

The semantics of NLME-DELETE\_ROUTE.response are described as follows:

```

NLME-DELETE_ROUTE.response (
 Status
)

```

Table 95 specifies the parameters for NLME-DELETE\_ROUTE.response.

#### 9.5.7.3.5 Time sequence for route deleting

The time sequence diagram for deleting records in the routing tables of routing devices is shown in Figure 53.

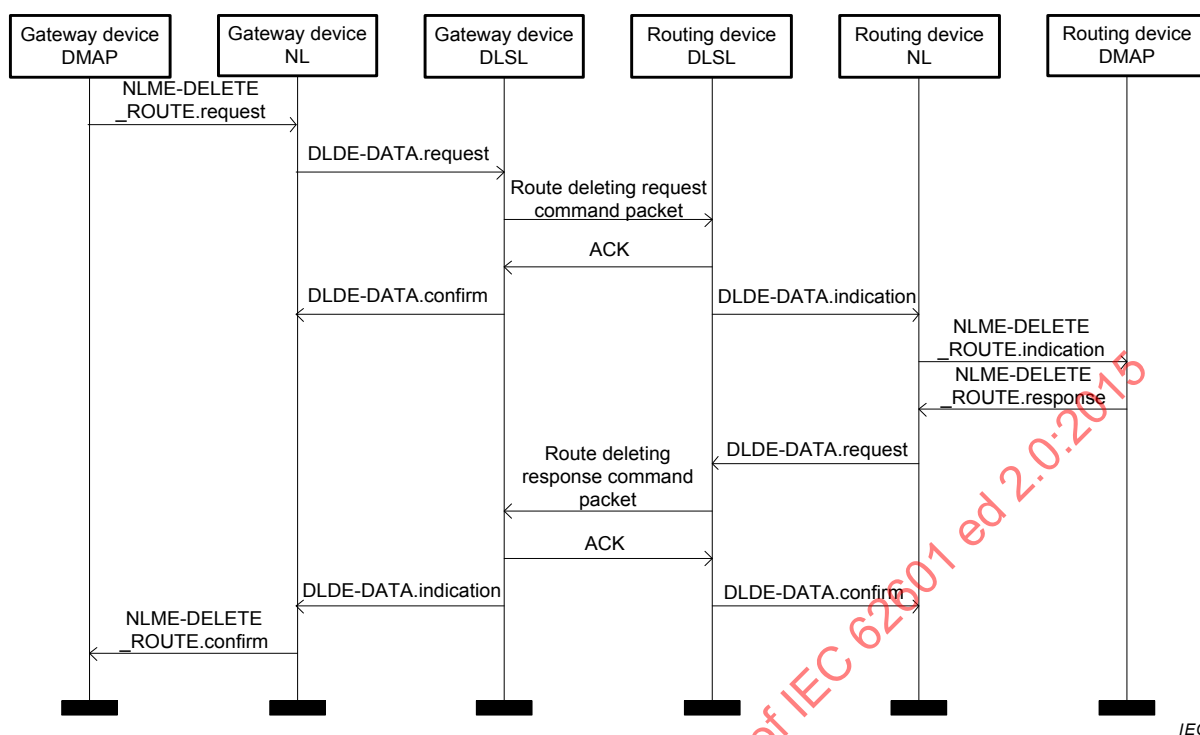


Figure 53 – Time sequence for route deleting

## 9.5.8 Communication resource allocation services

### 9.5.8.1 General

Communication resource allocation includes the allocation of link and superframe. These services provide the following primitives.

- Link adding services:
  - NLME-ADD-LINK.request,
  - NLME-ADD-LINK.confirm,
  - NLME-ADD-LINK.response, and
  - NLME-ADD-LINK.indication;
- Link update services:
  - NLME-UPDATE-LINK.request,
  - NLME-UPDATE-LINK.confirm,
  - NLME-UPDATE-LINK.response, and
  - NLME-UPDATE-LINK.indication;
- Link release services:
  - NLME-RELEASE-LINK.request,
  - NLME-RELEASE-LINK.confirm,
  - NLME-RELEASE-LINK.response, and
  - NLME-RELEASE-LINK.indication;
- Superframe adding services:
  - NLME-ADD-SFR.request,
  - NLME-ADD-SFR.confirm,
  - NLME-ADD-SFR.response, and

- NLME-ADD-SFR.indication;
- Superframe update services:
  - NLME-UPDATE-SFR.request,
  - NLME-UPDATE-SFR.confirm,
  - NLME-UPDATE-SFR.response, and
  - NLME-UPDATE-SFR.indication;
- Superframe release services:
  - NLME-RELEASE-SFR.request,
  - NLME-RELEASE-SFR.confirm,
  - NLME-RELEASE-SFR.response, and
  - NLME-RELEASE-SFR.indication.

### 9.5.8.2 Link adding services

#### 9.5.8.2.1 NLME-ADD-LINK.request

NLME-ADD-LINK.request is used to add one or more record(s) of new link(s), which is originated either from the gateway device to a routing device or from a routing device to a field device.

The semantics of NLME-ADD-LINK.request are described as follows:

NLME-ADD-LINK.request (

DstAddr,  
 LinkCount,  
 LinkStructure

)

Table 96 specifies the parameters for NLME-ADD-LINK.request.

**Table 96 – NLME-ADD-LINK.request parameters**

| Name          | Data type                               | Valid range | Description                                                     |
|---------------|-----------------------------------------|-------------|-----------------------------------------------------------------|
| DstAddr       | Unsigned16                              | 0 to 65 535 | 16-bit destination address                                      |
| LinkCount     | Unsigned16                              | 0 to 65 535 | Count of added links to support adding multiple links each time |
| LinkStructure | Link_Struct structure<br>(See Table 17) |             | Information of the links                                        |

#### 9.5.8.2.2 NLME-ADD-LINK.confirm

NLME-ADD-LINK.confirm reports the results of NLME-ADD-LINK.request.

The semantics of NLME-ADD-LINK.confirm are described as follows:

NLME-ADD-LINK.confirm (

Status

)

Table 97 specifies the parameters for NLME-ADD-LINK.confirm.



**Table 97 – NLME-ADD-LINK.confirm parameters**

| Name   | Data type | Valid range | Description                                                                             |
|--------|-----------|-------------|-----------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | Results of link adding request:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

#### 9.5.8.2.3 NLME-ADD-LINK.indication

NLME-ADD-LINK.indication is used to report to the DMAP that the device has successfully received a link adding request packet.

The semantics of NLME-ADD-LINK.indication are described as follows:

NLME-ADD-LINK.indication (

LinkCount,  
LinkStructure

)

Table 96 specifies the parameters for NLME-ADD-LINK.indication.

#### 9.5.8.2.4 NLME-ADD-LINK.response

NLME-ADD-LINK.response is the response of NLME-ADD-LINK.indication.

The semantics of NLME-ADD-LINK.response are described as follows:

NLME-ADD-LINK.response (

Status

)

Table 97 specifies the parameters for NLME-ADD-LINK.response.

#### 9.5.8.2.5 Time sequence for link adding

The time sequence for adding a link originating from the gateway device to a routing device is shown in Figure 54.

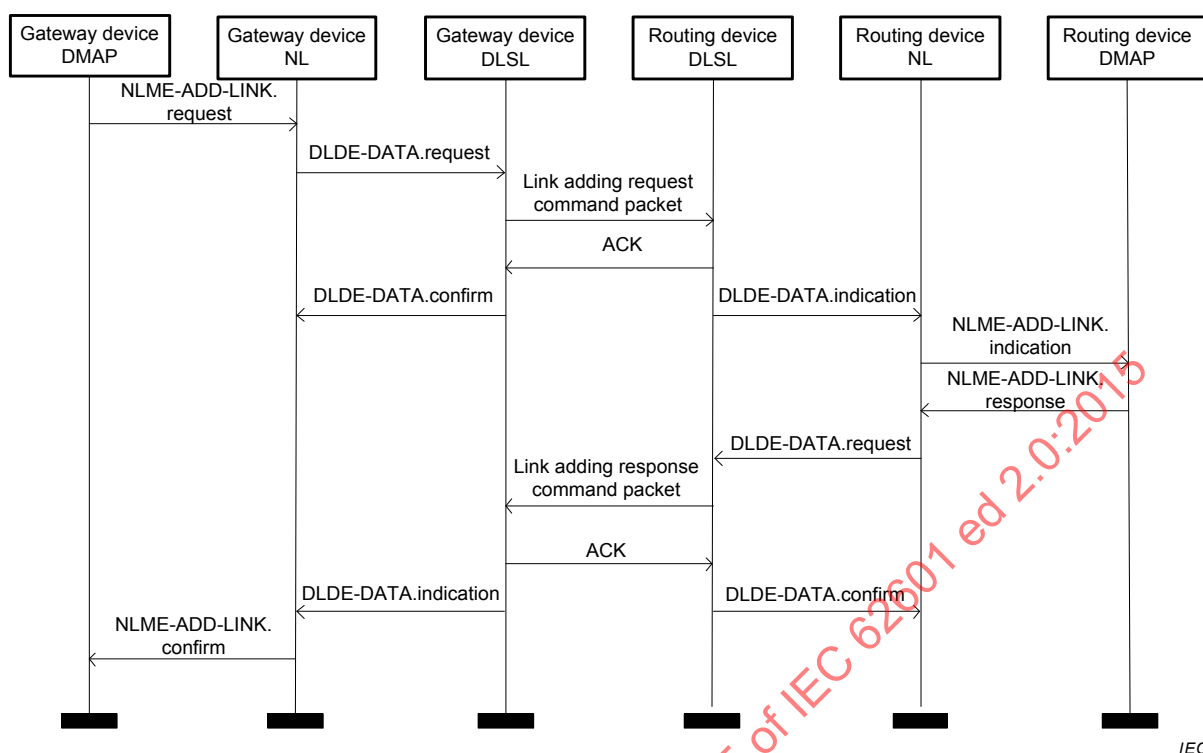


**Figure 54 – Adding a link originating from gateway device to routing device**

The time sequence for adding a link originating from a routing device to a field device is shown in Figure 55.

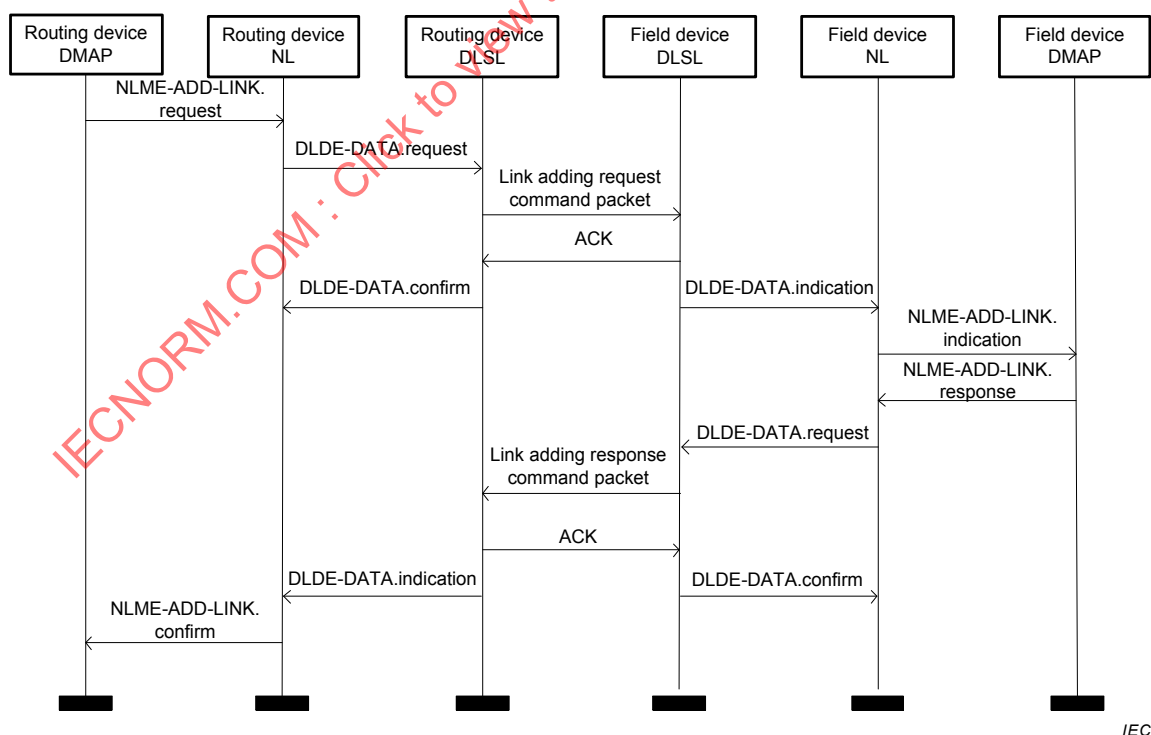


**Figure 55 – Adding a link originating from routing device to field device**

### 9.5.8.3 Link update services

#### 9.5.8.3.1 NLME-UPDATE-LINK.request

NLME-UPDATE-LINK.request is used to update one or more record(s) of existing link(s), which is originating either from the gateway device to a routing device or from a routing device to a field device.

The semantics of NLME-UPDATE-LINK.request are described as follows:

```
NLME-UPDATE-LINK.request (
 DstAddr,
 LinkCount,
 LinkStructure
)
```

Table 98 specifies the parameters for NLME-UPDATE-LINK.request.

**Table 98 – NLME-UPDATE-LINK.request parameters**

| Name          | Data type                               | Valid range | Description                                                       |
|---------------|-----------------------------------------|-------------|-------------------------------------------------------------------|
| DstAddr       | Unsigned16                              | 0 to 65 535 | 16-bit destination address                                        |
| LinkCount     | Unsigned16                              | 0 to 65 535 | Count of added links to support updating multiple links each time |
| LinkStructure | Link_Struct structure<br>(See Table 17) |             | Information of the links                                          |

#### 9.5.8.3.2 NLME-UPDATE-LINK.confirm

NLME-UPDATE-LINK.confirm reports the results of NLME-UPDATE-LINK.request.

The semantics of NLME-UPDATE-LINK.confirm are described as follows:

```
NLME-UPDATE-LINK.confirm (
 Status
)
```

Table 99 specifies the parameters for NLME-UPDATE-LINK.confirm.

**Table 99 – NLME-UPDATE-LINK.confirm parameters**

| Name   | Data type | Valid range | Description                                                                                 |
|--------|-----------|-------------|---------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | Results of the link update request:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

#### 9.5.8.3.3 NLME-UPDATE-LINK.indication

NLME-UPDATE-LINK.indication is used to report to the DMAP that the device has successfully received a link update request packet.

The semantics of NLME-UPDATE-LINK.indication are described as follows:

```
NLME-UPDATE-LINK.indication (
 LinkCount,
 LinkStructure
)
```

Table 98 specifies the parameters for NLME-UPDATE-LINK.indication.

#### 9.5.8.3.4 NLME-UPDATE-LINK.response

NLME-UPDATE-LINK.response is the response to NLME-UPDATE-LINK.indication.


The semantics of NLME-UPDATE-LINK.response are described as follows:

NLME-UPDATE-LINK.response (   
 Status   
 )

Table 99 specifies the parameters for NLME-UPDATE-LINK.response.

#### 9.5.8.3.5 Time sequence for link update

The time sequence for updating a link originating from the gateway device to a routing device is shown in Figure 56.

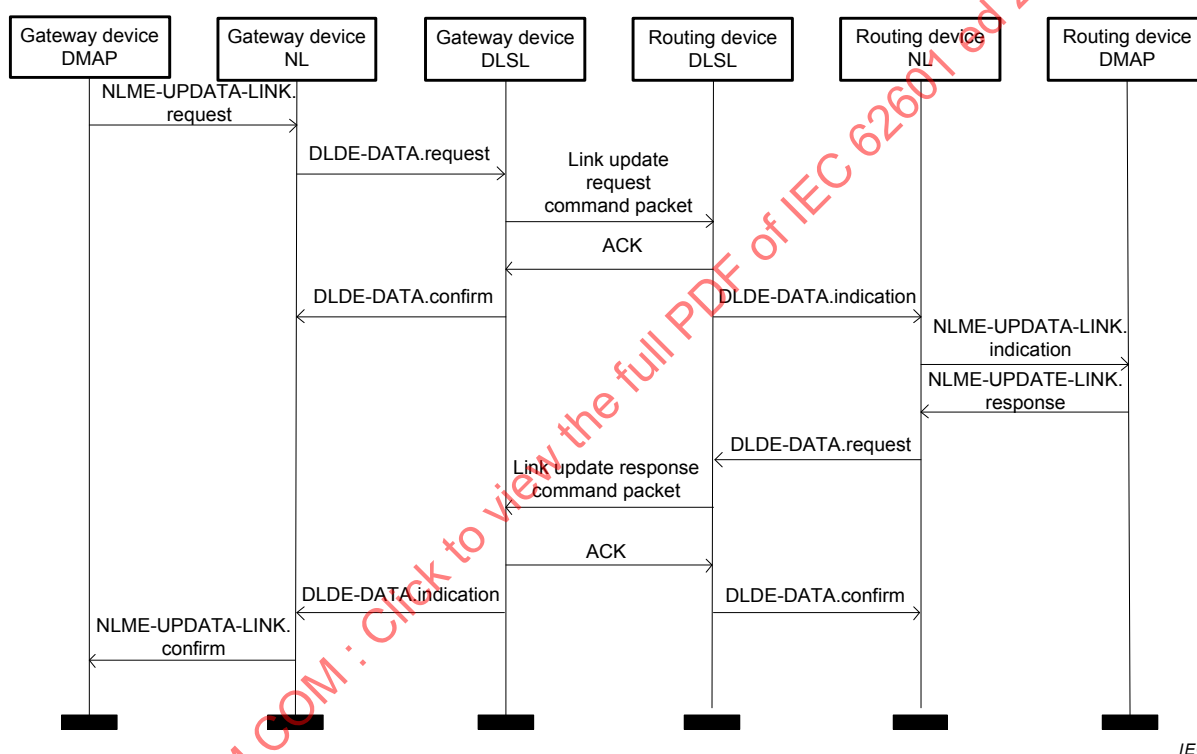

IEC

**Figure 56 – Updating a link originating by gateway device to routing device**

The time sequence for updating a link originating from a routing device to a field device is shown in Figure 57.

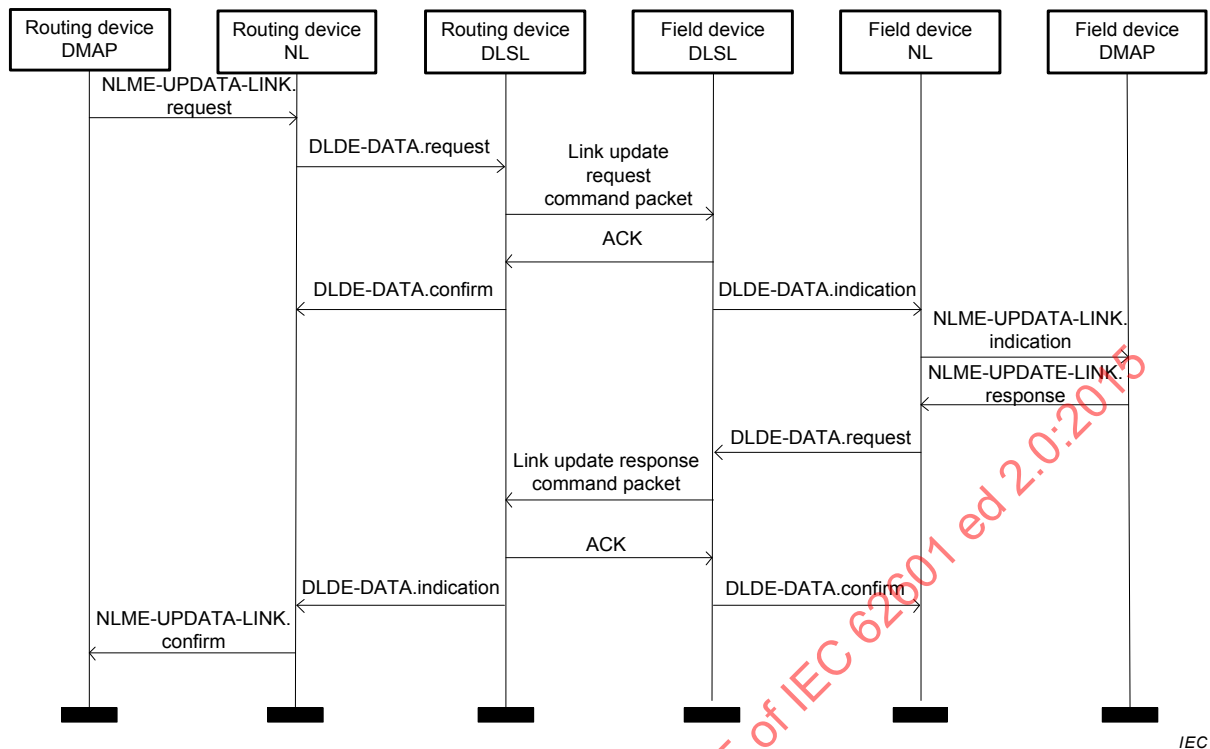


Figure 57 – Updating a link originating from routing device to field device

#### 9.5.8.4 Link release services

##### 9.5.8.4.1 NLME-RELEASE-LINK.request

NLME-RELEASE-LINK.request is used to delete one or more existing link(s), which is originated either from the gateway device to a routing device or from a routing device to a field device.

The semantics of NLME-RELEASE-LINK.request are described as follows:

NLME-RELEASE-LINK.request (

DstAddr,  
LinkCount,  
LinkID[LinkCount]

)

Table 100 specifies the parameters for NLME-RELEASE-LINK.request.

Table 100 – NLME-RELEASE-LINK.request parameters

| Name              | Data type  | Valid range | Description                                                        |
|-------------------|------------|-------------|--------------------------------------------------------------------|
| DstAddr           | Unsigned16 | 0 to 65 535 | 16-bit destination address                                         |
| LinkCount         | Unsigned16 | 0 to 65 535 | Count of added links to support releasing multiple links each time |
| LinkID[LinkCount] | Unsigned16 | 0 to 65 535 | IDs of the deleted links                                           |

##### 9.5.8.4.2 NLME-RELEASE-LINK.confirm

NLME-RELEASE-LINK.confirm reports the results of NLME-RELEASE-LINK.request.

The semantics of NLME-RELEASE-LINK.confirm are described as follows:



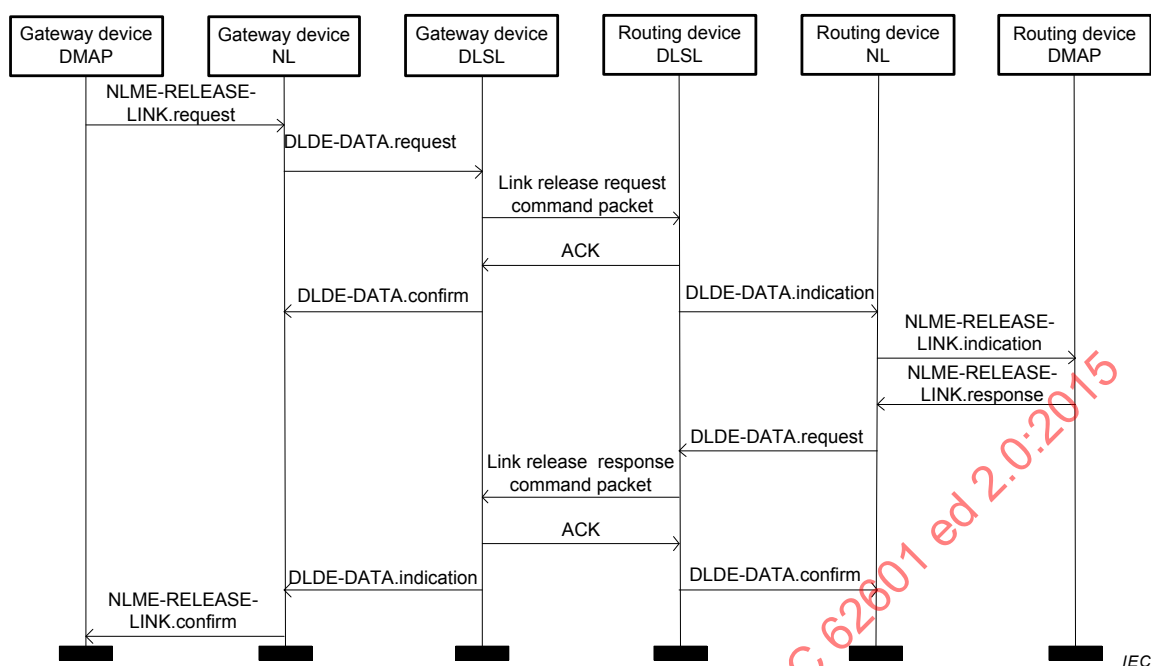


**Figure 58 – Releasing a link originating from gateway device to routing device**

The time sequence for releasing a link originating from a routing device to a field device is shown in Figure 59.

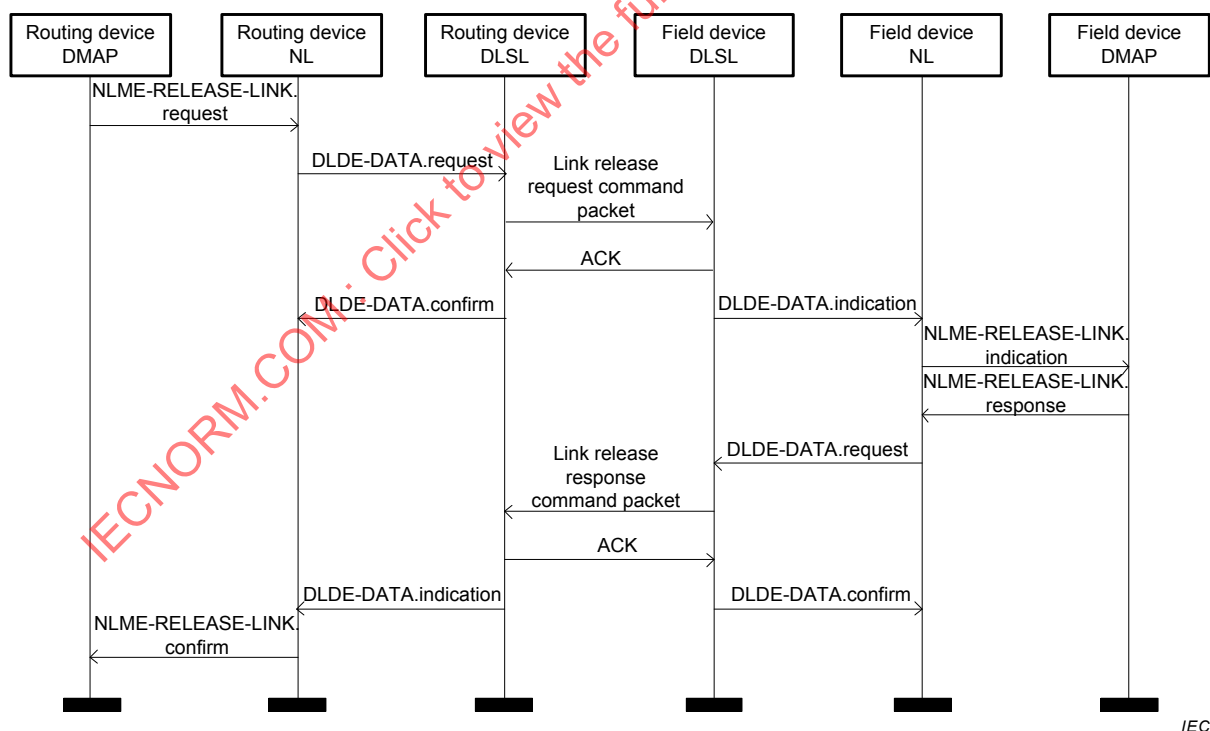


**Figure 59 – Releasing a link originating from routing device to field device**

### 9.5.8.5 Superframe adding services

#### 9.5.8.5.1 NLME-ADD-SFR.request

NLME-ADD-SFR.request is used to add a record of a new superframe, which is originated either from the gateway device to a routing device or from a routing device to a field device.

The semantics of NLME-ADD-SFR.request are described as follows:

```
NLME-ADD-SFR.request (
 DstAddr,
 SuperframeStructure
)
```

Table 102 specifies the parameters for NLME-ADD-SFR.request.

**Table 102 – NLME-ADD-SFR.request parameters**

| Name                | Data type                                    | Valid range | Description                         |
|---------------------|----------------------------------------------|-------------|-------------------------------------|
| DstAddr             | Unsigned16                                   | 0 to 65 535 | 16-bit destination address          |
| SuperframeStructure | Superframe_Structstructure<br>(See Table 16) |             | Information of superframe attribute |

#### 9.5.8.5.2 NLME-ADD-SFR.confirm

NLME-ADD-SFR.confirm reports the result of NLME-ADD-SFR.request.

The semantics of NLME-ADD-SFR.confirm are described as follows:

```
NLME-ADD-SFR.confirm (
 Status
)
```

Table 103 specifies the parameters for NLME-ADD-SFR.confirm.

**Table 103 – NLME-ADD-SFR.confirm parameters**

| Name   | Data type | Valid range | Description                                                                                    |
|--------|-----------|-------------|------------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | Results of superframe release request:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

#### 9.5.8.5.3 NLME-ADD-SFR.indication

NLME-ADD-SFR.indication is used to report to the DMAP that the device has successfully received a superframe adding request packet.

The semantics of NLME-ADD-SFR.indication are described as follows:

```
NLME-ADD-SFR.indication (
 SuperframeStructure
)
```

Table 102 specifies the parameters for NLME-ADD-SFR.indication.

#### 9.5.8.5.4 NLME-ADD-SFR.response

NLME-ADD-SFR.response is the response to NLME-ADD-SFR.indication.

The semantics of NLME-ADD-SFR.response are described as follows:

```
NLME-ADD-SFR.response (
 Status
)
```

Table 103 specifies the parameters for NLME-ADD-SFR.response.



### 9.5.8.5.5 Time sequence for superframe adding

The time sequence for adding a superframe originating from the gateway device to a routing device is shown in Figure 60.

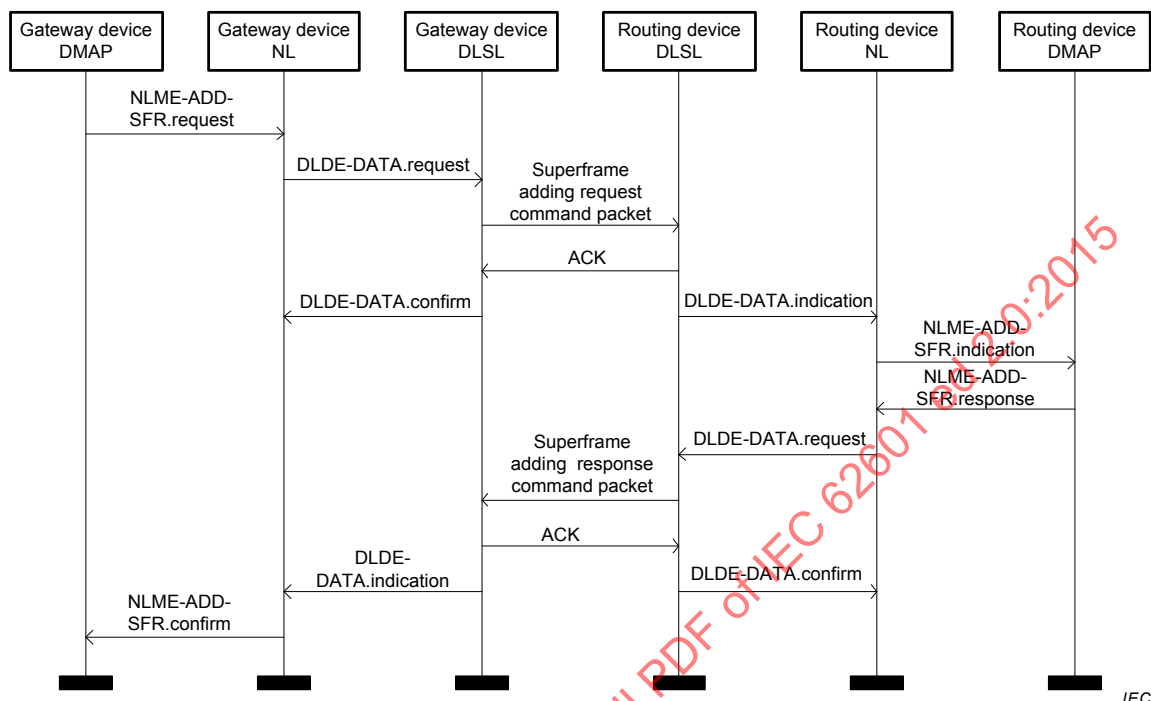


Figure 60 – Adding a superframe originating from gateway device to routing device

The time sequence for adding a superframe originating from a routing device to a field device is shown in Figure 61.

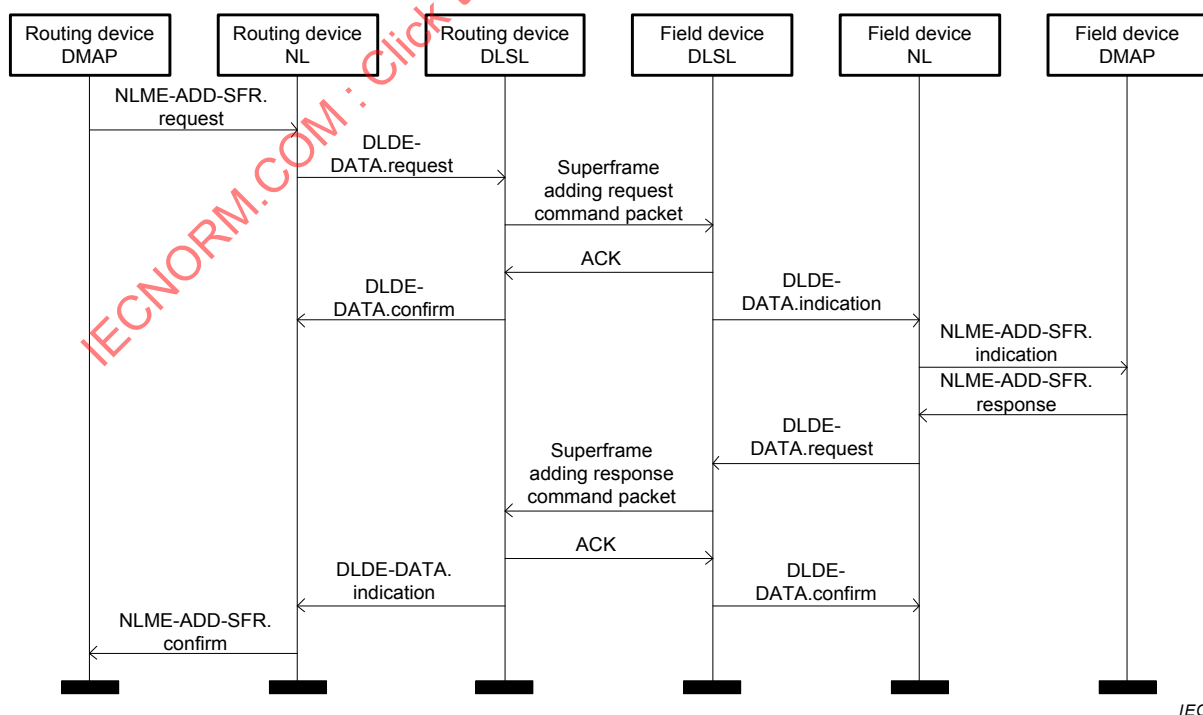


Figure 61 – Adding a superframe originating from routing device to field device

### 9.5.8.6 Superframe update services

#### 9.5.8.6.1 NLME-UPDATA-SFR.request

NLME-UPDATA-SFR.request is used to modify a record of an existing superframe, which is originated from the gateway device to a routing device or from a routing device to a field device.

The semantics of NLME-UPDATA-SFR.request are described as follows:

```
NLME-UPDATA-SFR.request (
 DstAddr,
 SuperframeStructure
)
```

Table 104 specifies the parameters for NLME-UPDATA-SFR.request.

**Table 104 – NLME-UPDATA-SFR.request parameters**

| Name                | Data type                                  | Valid range | Description                          |
|---------------------|--------------------------------------------|-------------|--------------------------------------|
| DstAddr             | Unsigned16                                 | 0 to 65 535 | 16-bit address of destination device |
| SuperframeStructure | Superframe_Struct structure (See Table 16) |             | Information of superframe attribute  |

#### 9.5.8.6.2 NLME-UPDATE-SFR.confirm

NLME-UPDATE-SFR.confirm reports the results of NLME-UPDATA-SFR.request.

The semantics of NLME-UPDATE-SFR.confirm are described as follows:

```
NLME-UPDATE-SFR.confirm (
 Status
)
```

Table 105 specifies the parameters for NLME-UPDATE-SFR.confirm.

**Table 105 – NLME-UPDATE-SFR.confirm parameters**

| Name   | Data type | Valid range | Description                                                                                   |
|--------|-----------|-------------|-----------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | Results of superframe update request:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

#### 9.5.8.6.3 NLME-UPDATE-SFR.indication

NLME-UPDATE-SFR.indication is used to report to the DMAP that the device has successfully received a superframe update request packet.

The semantics of NLME-UPDATE-SFR.indication are described as follows:

```
NLME-UPDATE-SFR.indication (
 SuperframeStructure
)
```

Table 104 specifies the parameters for NLME-UPDATE-SFR.indication.

#### 9.5.8.6.4 NLME-UPDATE-SFR.response

NLME-UPDATE-SFR.response is the response to NLME-UPDATE-SFR.indication.

The semantics of NLME-UPDATE-SFR.response are described as follows:

NLME-UPDATE-SFR.response (   
 Status   
 )

Table 105 specifies the parameters for NLME-UPDATE-SFR.response.

#### 9.5.8.6.5 Time sequence for superframe update

The time sequence for updating a superframe originating from the gateway device to a routing device is shown in Figure 62.

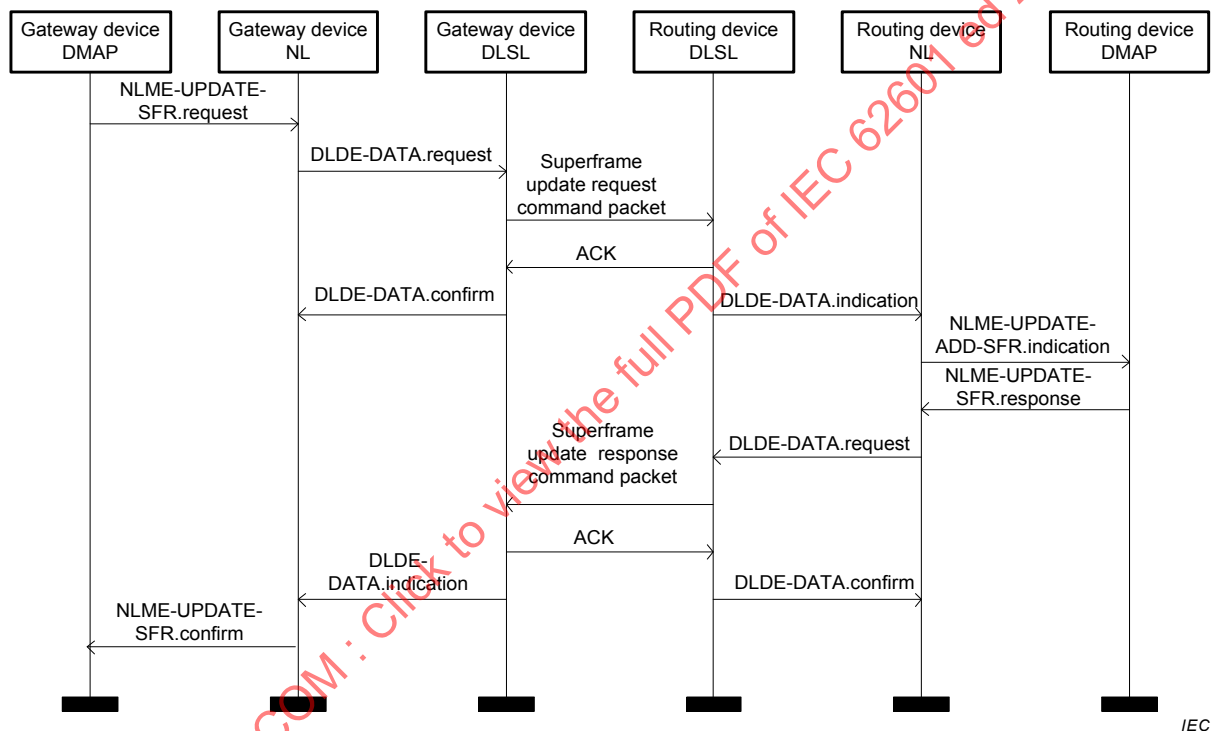


Figure 62 – Updating a superframe originating from gateway device to routing device

The time sequence for updating a superframe originating from a routing device to a field device is shown in Figure 63.

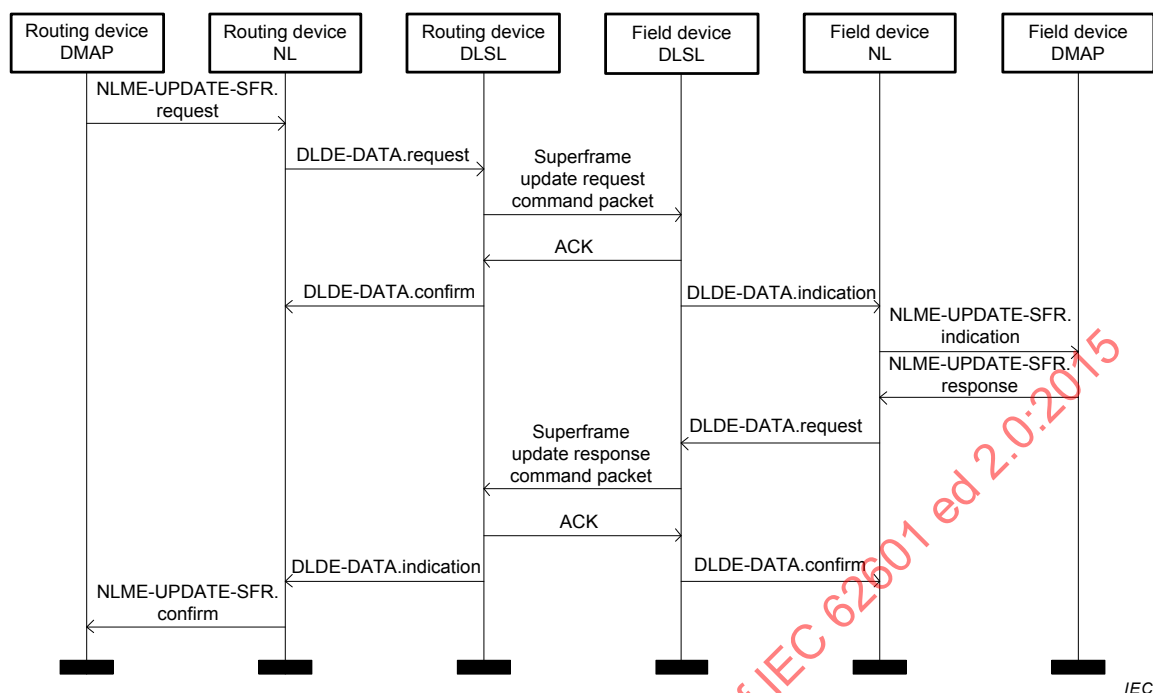


**Figure 63 – Updating a superframe originating from routing device to field device**

### 9.5.8.7 Superframe release services

#### 9.5.8.7.1 NLME-RELEASE-SFR.request

NLME-RELEASE-SFR.request is used to delete a record of an existing superframe, which is originated either from the gateway device to a routing device or from a routing device to a field device.

The semantics of NLME-RELEASE-SFR.request are described as follows:

NLME-RELEASE-SFR.request (

DstAddr,

SuperframeID

)

Table 106 specifies the parameters for NLME-RELEASE-SFR.request.

**Table 106 – NLME-RELEASE-SFR.request parameters**

| Name         | Data type  | Valid range | Description                  |
|--------------|------------|-------------|------------------------------|
| DstAddr      | Unsigned16 | 0 to 65 535 | 16-bit destination address   |
| SuperframeID | Unsigned16 | 0 to 65 535 | ID of the deleted superframe |

#### 9.5.8.7.2 NLME-RELEASE-SFR.confirm

NLME-RELEASE-SFR.confirm reports the result of NLME-RELEASE-SFR.request.

The semantics of NLME-RELEASE-SFR.confirm are described as follows:

NLME-RELEASE-SFR.confirm (

Status

)

Table 107 specifies the parameters for NLME-RELEASE-SFR.confirm.

**Table 107 – NLME-RELEASE-SFR.confirm parameters**

| Name   | Data type | Valid range | Description                                                                                    |
|--------|-----------|-------------|------------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | Results of superframe release request:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

#### **9.5.8.7.3 NLME-RELEASE-SFR.indication**

NLME-RELEASE-SFR.indication is used to report to the DMAP that the device has successfully received a superframe release request packet.

The semantics of NLME-RELEASE-SFR.indication are described as follows:

NLME-RELEASE-SFR.indication (   
 SuperframeID  
 )

Table 106 specifies the parameters for NLME-RELEASE-SFR.indication.

#### **9.5.8.7.4 NLME-RELEASE-SFR.response**

NLME-RELEASE-SFR.response is the response of NLME-RELEASE-SFR.indication.

The semantics of NLME-RELEASE-SFR.response are described as follows:

NLME-RELEASE-SFR.response (   
 Status  
 )

Table 107 specifies the parameters for NLME-RELEASE-SFR.response.

#### **9.5.8.7.5 Time sequence for superframe release**

The time sequence for releasing a superframe originating from the gateway device to a routing device is shown in Figure 64.

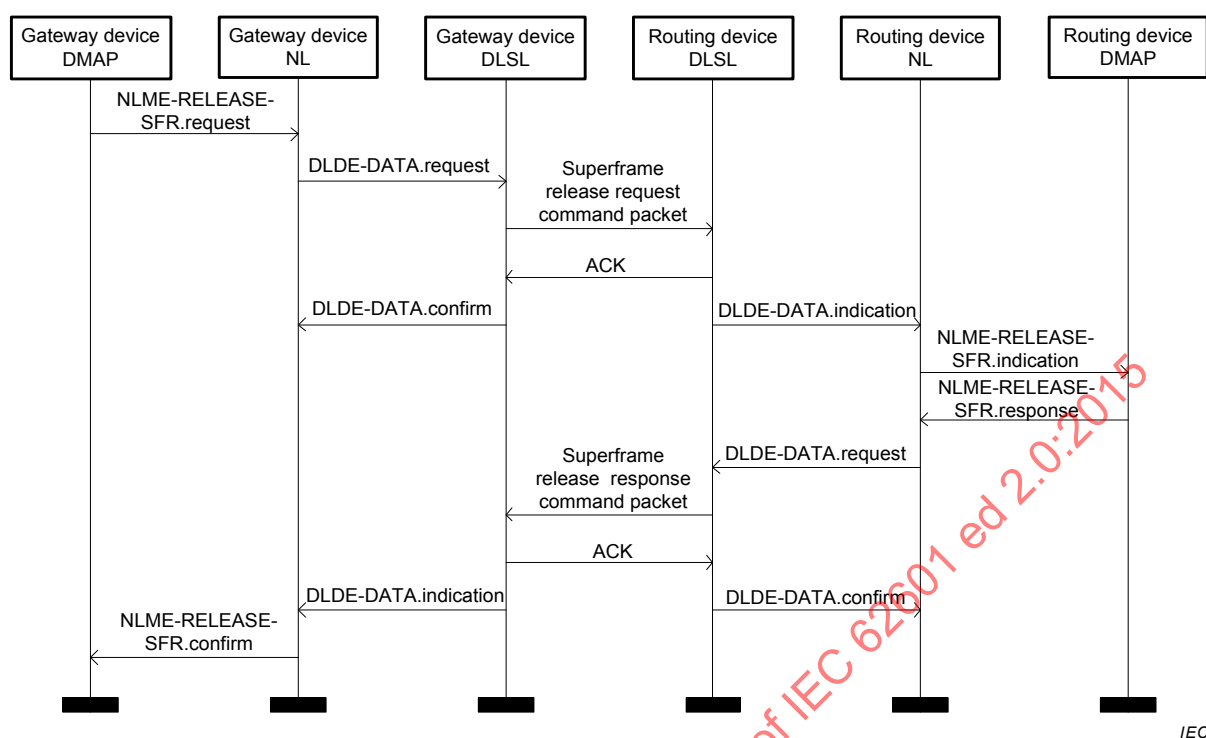


**Figure 64 – Releasing a superframe originating from gateway device to routing device**

The time sequence for releasing a superframe originating from a routing device to a field device is shown in Figure 65.

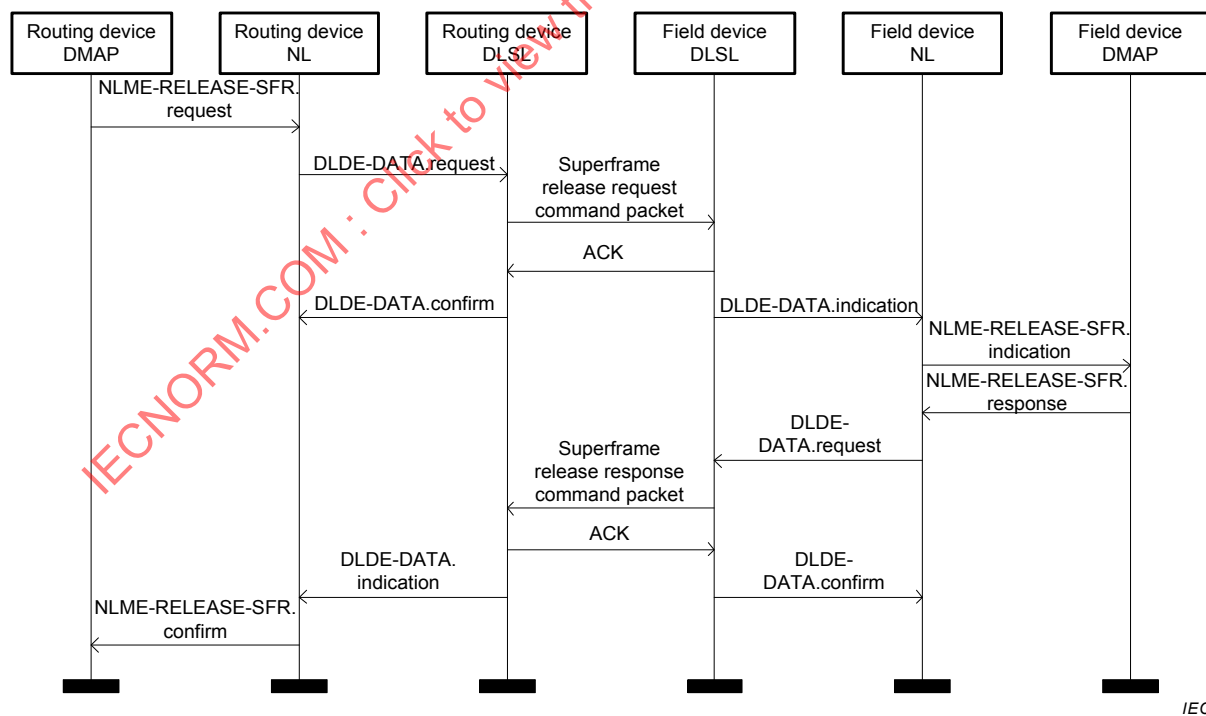


**Figure 65 – Releasing a superframe originating from routing device to field device**

## 9.5.9 Aggregation and disaggregation services

### 9.5.9.1 NLME-AGG.indication

NLME-AGG.indication is used for the NL to report to the DMAP that the received packets need to be aggregated.

The semantics of NLME-AGG.indication are described as follows:

```
NLME-AGG.indication (
 SrcAddr,
 NwkPayload
)
```

Table 108 specifies the parameters for NLME-AGG.indication.

**Table 108 – NLME-AGG.indication parameters**

| Name       | Data type   | Valid range | Description               |
|------------|-------------|-------------|---------------------------|
| SrcAddr    | Unsigned16  | 0 to 65 535 | ID of the aggregation VCR |
| NwkPayload | Octetstring |             | Payload of NL             |

### 9.5.9.2 NLME-AGO-SEND.request

NLME-AGO-SEND.request is used by the DMAP asking the NL to send the aggregated packet after the aggregation is completed.

The semantics of NLME-AGO-SEND.request are described as follows:

```
NLME-AGO-SEND.request (
 GatewayAddr,
 AggPacketFlag,
 Priority,
 AggNumber,
 AGGRouteID,
 PSFlag,
 AggPayload
)
```

Table 109 specifies the parameters for NLME-AGO-SEND.request.

**Table 109 – NLME-AGO-SEND.request parameters**

| Name          | Data type   | Valid range | Description                                                                                                           |
|---------------|-------------|-------------|-----------------------------------------------------------------------------------------------------------------------|
| GatewayAddr   | Unsigned16  | 0 to 65 535 | Network address of the gateway device                                                                                 |
| AggPacketFlag | Unsigned8   | 0, 1        | Indicating whether this packet is a data packet or aggregation packet:<br>0 = Data packet;<br>1 = Aggregation packet. |
| Priority      | Unsigned8   | 0 to 15     | Priority of process data                                                                                              |
| AggNumber     | Unsigned8   | 0 to 255    | Number of aggregated packets                                                                                          |
| AGGRouteID    | Unsigned16  | 0 to 65 535 | RouteID of the aggregation                                                                                            |
| PSFlag        | Unsigned8   | 0, 1        | Indicating whether this packet is P/S type:<br>0 = Not P/S type;<br>1 = P/S type.                                     |
| AggPayload    | Octetstring |             | DMAP aggregated packet                                                                                                |

### 9.5.9.3 NLME-DAG.indication

NLME-DAG.indication is used to send the aggregated packet to the DMAP for disaggregating when the NL receives an aggregated packet.

The semantics of NLME-DAG.indication are described as follows:

NLME-DAG.indication (

AggNumber,  
NwkPayload

)

Table 110 specifies the parameters for NLME-DAG.indication.

**Table 110 – NLME-DAG.indication parameter**

| Name       | Data type   | Valid range | Description                  |
|------------|-------------|-------------|------------------------------|
| AggNumber  | Unsigned8   | 0 to 255    | Number of aggregated packets |
| NwkPayload | Octetstring |             | Payload of NL                |

### 9.5.10 Device status report services

#### 9.5.10.1 NLME-DEVICE-STATUS.request

NLME-DEVICE-STATUS.request is used to report the device status either to the routing devices by a field device or to the gateway device by a routing device.

The semantics of NLME-DEVICE -STATUS.request are described as follows:

NLME-CHANNEL-DEVICE.request(

DstAddr,  
DeviceCount,  
DeviceConditionInfo

)

Table 111 specifies the parameters for NLME-DEVICE -STATUS.request.

**Table 111 – NLME-DEVICE -STATUS.request parameters**

| Name                | Data type                                    | Valid range | Description                                |
|---------------------|----------------------------------------------|-------------|--------------------------------------------|
| DstAddr             | Unsigned16                                   | 0 to 65 535 | Destination address                        |
| DeviceCount         | Unsigned8                                    | 0 to 255    | Total number of reported devices           |
| DeviceConditionInfo | DevConRep_Struct<br>structure (see Table 22) |             | Information of device condition attributes |

#### 9.5.10.2 NLME-DEVICE-STATUS.indication

NLME-DEVICE-STATUS.indication is used to report the receipt of a device condition report command packet to the DMAP.

The semantics of NLME-DEVICE -STATUS.indication are described as follows:

NLME- DEVICE -STATUS.indication (

SrcAddr,  
DeviceCount,  
DeviceConditionInfo

)



Table 112 specifies the parameters for NLME-DEVICE -STATUS.indication.

**Table 112 – NLME-DEVICE -STATUS.indication parameters**

| Name                | Data type                                 | Valid range | Description                                |
|---------------------|-------------------------------------------|-------------|--------------------------------------------|
| SrcAddr             | Unsigned16                                | 0 to 65 535 | Source address                             |
| DeviceCount         | Unsigned8                                 | 0 to 255    | Total number of reported devices           |
| DeviceConditionInfo | DevConRep_Struct structure (see Table 22) |             | Information of device condition attributes |

#### 9.5.10.3 NLME-DEVICE-STATUS.confirm

NLME-DEVICE-STATUS.confirm is used to return the results of NLME-DEVICE-STATUS.request.

The semantics of NLME-DEVICE-STATUS.confirm are described as follows:

NLME- DEVICE -STATUS.confirm (

    Status  
)


Table 113 specifies the parameters for NLME-DEVICE -STATUS.confirm.

**Table 113 – NLME-DEVICE -STATUS.confirm parameter**

| Name   | Data type | Valid range | Description                                                                                             |
|--------|-----------|-------------|---------------------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | Result of the channel condition report request:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

#### 9.5.10.4 Time sequence for device status reporting

The time sequence diagram for device status information is shown in Figure 66 and Figure 67.

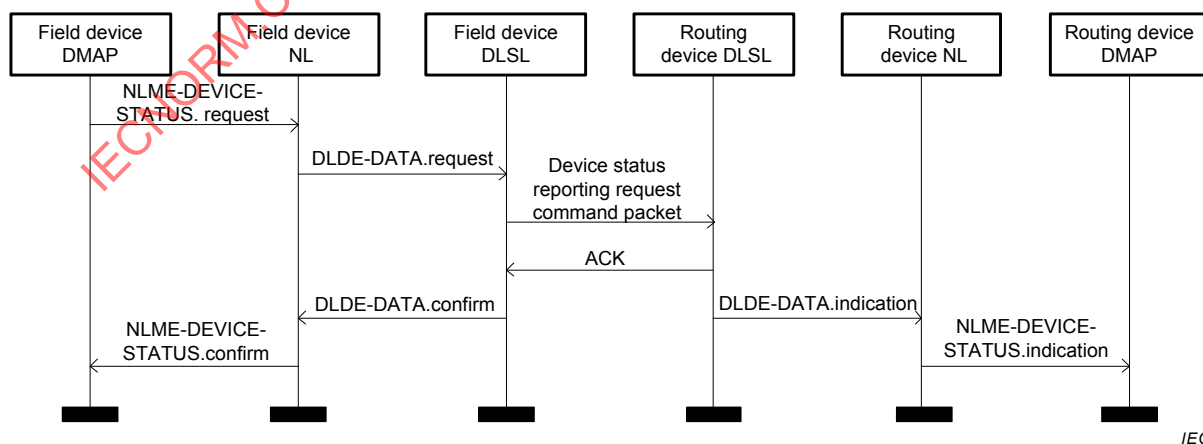

IEC

**Figure 66 – Device status reporting process from field device to routing device**

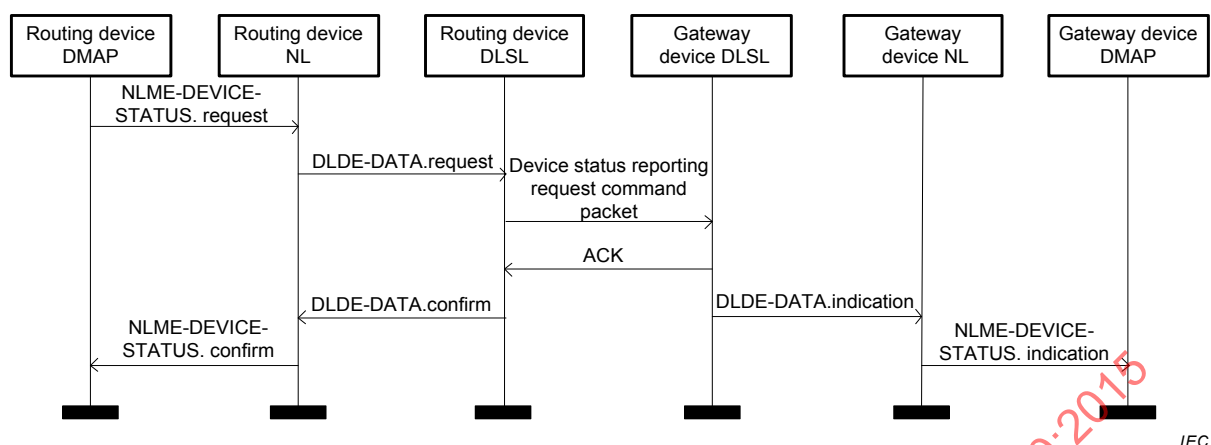


**Figure 67 – Device status reporting process from routing device to gateway device**

### 9.5.11 Channel condition report services

#### 9.5.11.1 NLME-CHANNEL-CONDITION.request

NLME-CHANNEL-CONDITION.request is used to report the communication channel condition either to the routing device by a field device or to the gateway device by a routing device.

The semantics of NLME-CHANNEL-CONDITION.request are described as follows:

NLME-CHANNEL-CONDITION.request(

DstAddr,  
ChannelCount,  
ChannelConditionInfo

Table 114 specifies the parameters for NLME-CHANNEL-CONDITION.request.

**Table 114 – NLME-CHANNEL-CONDITION.request parameters**

| Name                 | Data type                               | Valid range | Description                                 |
|----------------------|-----------------------------------------|-------------|---------------------------------------------|
| DstAddr              | Unsigned16                              | 0 to 65 535 | Destination address                         |
| ChannelCount         | Unsigned8                               | 0 to 255    | Total number of channels                    |
| ChannelConditionInfo | ChanCon_Struct structure (See Table 19) |             | Information of channel condition attributes |

#### 9.5.11.2 NLME-CHANNEL-CONDITION.indication

NLME-CHANNEL-CONDITION.indication is used to report the receipt of a channel condition report command packet to the DMAP.

The semantics of NLME-CHANNEL-CONDITION.indication are described as follows:

NLME-CHANNEL-CONDITION.indication (

SrcAddr,  
ChannelCount,  
ChannelConditionInfo  
)

Table 115 specifies the parameters for NLME-CHANNEL-CONDITION.indication.

**Table 115 – NLME-CHANNEL-CONDITION.indication parameters**

| Name                 | Data type                               | Valid range | Description                                 |
|----------------------|-----------------------------------------|-------------|---------------------------------------------|
| SrcAddr              | Unsigned16                              | 0 to 65 535 | Source address                              |
| ChannelCount         | Unsigned8                               | 0 to 255    | Total number of channels                    |
| ChannelConditionInfo | ChanCon_Struct structure (see Table 19) |             | Information of channel condition attributes |

#### 9.5.11.3 NLME-CHANNEL-CONDITION.confirm

NLME-CHANNEL-CONDITION.confirm is used to return the results of NLME-CHANNEL-CONDITION.request.

The semantics of NLME-CHANNEL-CONDITION.confirm are described as follows:

NLME-CHANNEL-CONDITION.confirm (

Status  
)


Table 116 specifies the parameters for NLME-CHANNEL-CONDITION.confirm.

**Table 116 – NLME-CHANNEL-CONDITION.confirm parameter**

| Name   | Data type | Valid range | Description                                                                                             |
|--------|-----------|-------------|---------------------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | Result of the channel condition report request:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |


#### 9.5.11.4 Time sequence for channel condition reporting

The time sequence diagram for channel condition information is shown in Figure 68 and Figure 69.

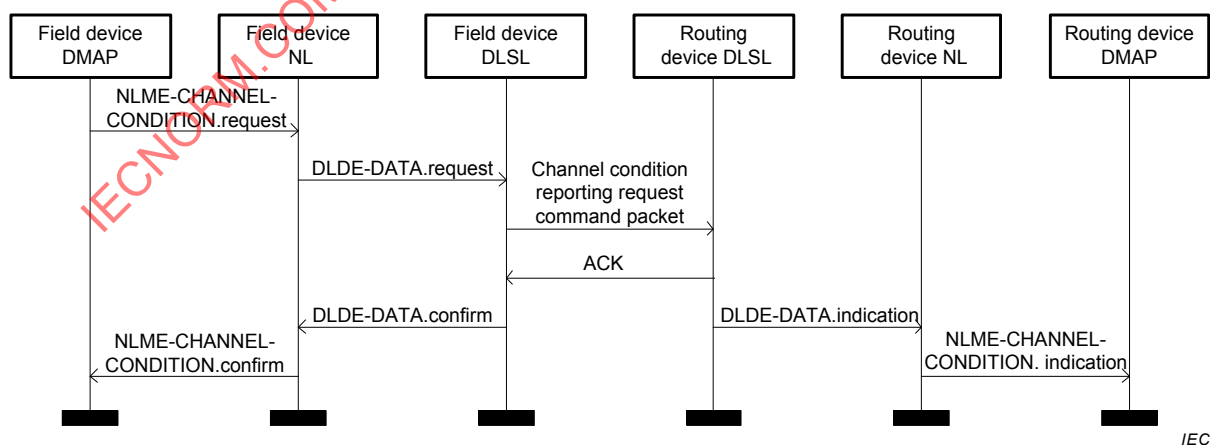

IEC

**Figure 68 – Channel condition reporting process from field device to routing device**

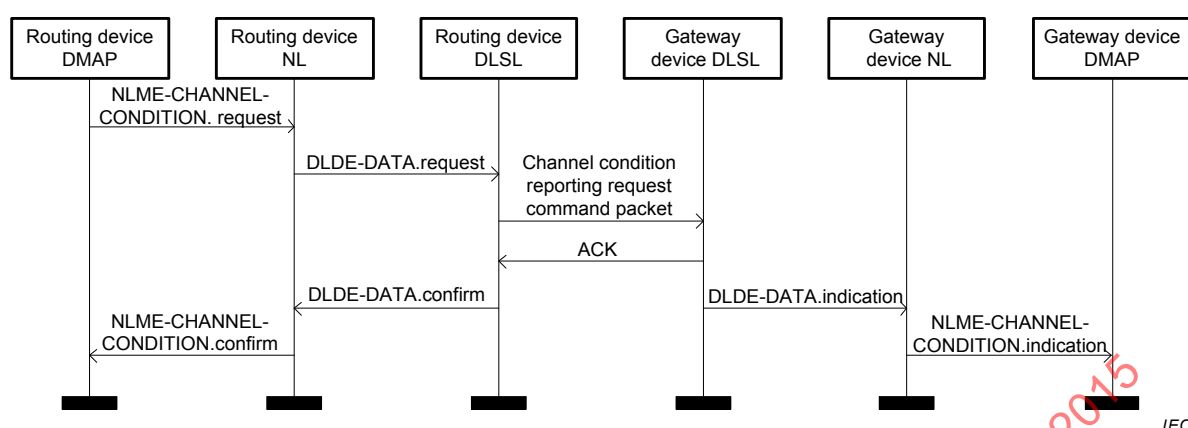

IEC

**Figure 69 – Channel condition reporting process from routing device to gateway device**

### 9.5.12 Failure path report services

#### 9.5.12.1 General

All routing devices on a path record the value of RetryCounter (see Table 69) with next hop routing device. If RetryCounter value of the source routing device or an intermediate routing device exceeds the value of MaxEtoERetry, the source routing device reports the failure of related RouteID to the GW by using the redundant path and the intermediate reports the failure of related RouteID to the GW by using its pre-configured path (see 6.5.1 for redundant path).

#### 9.5.12.2 NLME-PATH\_FAILURE.request

NLME-PATH\_FAILURE.request is used to report failed paths to the GW by routing devices.

The semantics of NLME-PATH\_FAILURE.request are described as follows:

NLME-PATH\_FAILURE.request (

SrcAddr,  
DstAddr,  
RouteID

)

Table 117 specifies the parameters for NLME-PATH\_FAILURE.request.

**Table 117 – NLME-PATH\_FAILURE.request parameters**

| Name    | Data type  | Valid range | Description                           |
|---------|------------|-------------|---------------------------------------|
| SrcAddr | Unsigned16 | 0 to 65 535 | 16-bit source address of packets      |
| DstAddr | Unsigned16 | 0 to 65 535 | 16-bit destination address of packets |
| RouteID | Unsigned16 | 0 to 65 535 | Route ID of failing path              |

#### 9.5.12.3 NLME-PATH\_FAILURE.indication

NLME-PATH\_FAILURE.indication is used by the NL to report to the DMAP that the device has successfully received a failed-path reporting request packet.

The semantics of NLME-PATH\_FAILURE.indication are described as follows:

NLME-PATH\_FAILURE.indication (

SrcAddr,  
RouteID

)

Table 118 specifies the parameters for NLME-LEAVE.response.

**Table 118 – NLME-PATH\_FAILURE.indication parameters**

| Name    | Data type  | Valid range | Description                      |
|---------|------------|-------------|----------------------------------|
| SrcAddr | Unsigned16 | 0 to 65 535 | 16-bit source address of packets |
| RouteID | Unsigned16 | 0 to 65 535 | Route ID of failing path         |

#### 9.5.12.4 NLME-PATH\_FAILURE.confirm

NLME-PATH\_FAILURE.confirm is used to return the results of NLME-PATH\_FAILURE.request.

The semantics of NLME-PATH\_FAILURE.confirm are described as follows:

NLME-PATH\_FAILURE.confirm (   
 Status   
 )


Table 119 specifies the parameters for NLME-PATH\_FAILURE.confirm.

**Table 119 – NLME-PATH\_FAILURE.confirm parameters**

| Name   | Data type | Valid range | Description                                                                                      |
|--------|-----------|-------------|--------------------------------------------------------------------------------------------------|
| Status | Unsigned8 | 0 to 255    | The result of NLME-PATH_FAILURE.request:<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved. |

#### 9.5.12.5 Time sequence for failure path reporting

The time sequence diagram for failure path reporting is shown in Figure 70.

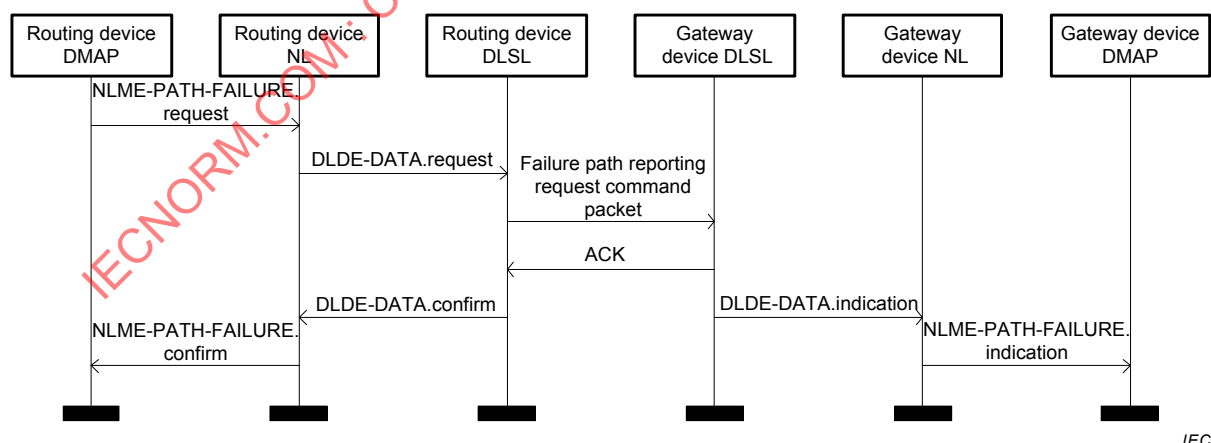

IEC

**Figure 70 – Failure path reporting process**

### 9.5.13 Network attribute getting services

#### 9.5.13.1 NLME-INFO\_GET.request

NLME-INFO\_GET.request is used to remotely read the values of the attributes in the MIB.

The semantics of NLME-INFO\_GET.request are described as follows:

NLME-INFO\_GET.request (

DstAddr,  
AttributeID,  
AttributeMemID,  
FirstValueStorIndex,  
Count  
)

Table 120 specifies the parameters for NLME-INFO\_GET.request.

**Table 120 – NLME-INFO\_GET.request parameters**

| Name                | Data type  | Valid range | Description                                                                                                                                                                      |
|---------------------|------------|-------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DstAddr             | Unsigned16 | 0 to 65 535 | 16-bit short address of destination                                                                                                                                              |
| AttributeID         | Unsigned8  | 0 to 255    | ID of attribute in MIB                                                                                                                                                           |
| AttributeMemID      | Unsigned8  | 0 to 255    | The ID of attribute member, which is used to read the structured MIB attributes<br>The value 255 means that all attributes should be read.                                       |
| FirstValueStorIndex | Unsigned16 | 0 to 65 535 | The first storage index of multiple attribute values, which is used to read the structured MIB attributes                                                                        |
| Count               | Unsigned8  | 0 to 255    | Number of attribute values or attributes member values, which is used to read the structured MIB attributes; getting all attribute values from FirstValueStorIndex if Count = 0. |

#### 9.5.13.2 NLME-INFO\_GET.indication

NLME-INFO\_GET.indication is used to inform the DMAP of the successful receipt of an attribute getting request packet.

The semantics of NLME-INFO\_GET.indication are described as follows:

NLME-INFO\_GET.indication (

SrcAddr,  
AttributeID,  
AttributeMemID,  
FirstValueStorIndex,  
Count  
)

Table 121 specifies the parameters for NLME-INFO\_GET.indication.

**Table 121 – NLME-INFO\_GET.indication parameters**

| Name                | Data type  | Valid range | Description                                                                                                                                                              |
|---------------------|------------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SrcAddr             | Unsigned16 | 0 to 65 535 | 16-bit short address of source                                                                                                                                           |
| AttributeID         | Unsigned8  | 0 to 255    | The ID of attribute in MIB                                                                                                                                               |
| AttributeMemID      | Unsigned8  | 0 to 255    | The ID of attribute member, which is used to read the structured MIB attributes<br>The value 255 means that all attributes should be read.                               |
| FirstValueStorIndex | Unsigned16 | 0 to 65 535 | The first storage index of multiple attribute values, which is used to read the structured MIB attributes                                                                |
| Count               | Unsigned8  | 0 to 255    | Number of attribute values or attributes member values, which is used to read the structured MIB attributes; all attribute values from FirstValueStorIndex if Count = 0. |

### 9.5.13.3 NLME-INFO\_GET.response

NLME-INFO\_GET.response is used to respond to NLME-INFO\_GET.request.

The semantics of NLME-INFO\_GET.response are described as follows:

NLME-INFO\_GET.response (

DstAddr,  
Status,  
AttributeID,  
AttributeMemID,  
FirstValueStorIndex,  
Count,  
AttributeValue

)

Table 122 specifies the parameters for NLME-INFO\_GET.response.

**Table 122 – NLME-INFO\_GET.response parameters**

| Name                | Data type   | Valid range | Description                                                                                                                                                              |
|---------------------|-------------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DstAddr             | Unsigned16  | 0 to 65 535 | 16-bit short address of the destination                                                                                                                                  |
| Status              | Unsigned8   | 0 to 255    | Result of the attribute read request:<br>0 = SUCCESS;<br>1 = UNSUPPORTED_ATTRIBUTE;<br>2 = UNSUPPORTED_ATTRIBUTE_MEMBER;<br>3 = UNMATCHED_COUNT;<br>Others are reserved. |
| AttributeID         | Unsigned8   | 0 to 255    | ID of attribute in MIB                                                                                                                                                   |
| AttributeMemID      | Unsigned8   | 0 to 255    | ID of attribute member, which is used to read the structured MIB attributes. The value 255 means that all attributes should be read.                                     |
| FirstValueStorIndex | Unsigned16  | 0 to 65 535 | The first storage index of multiple attribute values, which is used to read the structured MIB attributes                                                                |
| Count               | Unsigned8   | 0 to 255    | Number of attribute values or attributes member values, which is used to read the structured MIB attributes; all attribute values from FirstValueStorIndex if Count = 0. |
| AttributeValue      | Octetstring |             | Value of the attribute to be read                                                                                                                                        |

If the operation of getting attributes is successful, the Status should be SUCCESS; if the MIB does not have the needed attributes or attribute members, the Status should be UNSUPPORTED\_ATTRIBUTE or UNSUPPORTED\_ATTRIBUTE\_MEMBER; otherwise, if the number of attributes does not equal to the required number, the Status should be UNMATCHED\_COUNT.

#### 9.5.13.4 NLME-INFO\_GET.confirm

NLME-INFO\_GET.confirm is used to return the result of NLME-INFO\_GET.request.

The semantics of NLME-INFO\_GET.confirm are described as follows:

NLME-INFO\_GET.confirm (

SrcAddr,  
Status,  
AttributeID,  
AttributeMemID,  
FirstValueStorIndex,  
Count,  
AttributeValue

)

Table 123 specifies the parameters for NLME-INFO\_GET.confirm.



**Table 123 – NLME-INFO\_GET.confirm parameters**

| Name                | Data type   | Valid range | Description                                                                                                                                                              |
|---------------------|-------------|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SrcAddr             | Unsigned16  | 0 to 65 535 | 16-bit short address of the source                                                                                                                                       |
| Status              | Unsigned8   | 0 to 255    | Result of the attribute read request:<br>0 = SUCCESS;<br>1 = UNSUPPORTED_ATTRIBUTE;<br>2 = UNSUPPORTED_ATTRIBUTE_MEMBER;<br>3 = UNMATCHED_COUNT;<br>Others are reserved. |
| AttributeID         | Unsigned8   | 0 to 255    | ID of attribute in MIB                                                                                                                                                   |
| AttributeMemID      | Unsigned8   | 0 to 255    | ID of attribute member, which is used to read the structured MIB attributes<br>The value 255 means that all attributes should be read.                                   |
| FirstValueStorIndex | Unsigned16  | 0 to 65 535 | The first storage index of multiple attribute values, which is used to read the structured MIB attributes                                                                |
| Count               | Unsigned8   | 0 to 255    | Number of attribute values or attributes member values, which is used to read the structured MIB attributes; all attribute values from FirstValueStorIndex if Count = 0. |
| AttributeValue      | Octetstring |             | Value of the attribute to be read                                                                                                                                        |

#### 9.5.14 Network attribute setting services

##### 9.5.14.1 NLME-INFO\_SET.request

NLME-INFO\_SET.request is used by GW to remotely modify the MIB attribute values of routing devices or field devices.

The semantics of NLME-INFO\_SET.request are described as follows:

```

NLME-INFO_SET.request (
 DstAddr,
 AttributeID,
 AttributeMemID,
 FirstValueStorIndex,
 Count,
 AttributeValue
)

```

Table 124 specifies the parameters for NLME-INFO\_SET.request.

**Table 124 – NLME-INFO\_SET.request parameters**

| Name                | Data type   | Valid range | Description                                                                                                                                   |
|---------------------|-------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| DstAddr             | Unsigned16  | 0 to 65 535 | 16-bit short address of the destination                                                                                                       |
| AttributeID         | Unsigned8   | 0 to 255    | ID of attribute in MIB                                                                                                                        |
| AttributeMemID      | Unsigned8   | 0 to 255    | The ID of attribute member, which is used to write the structured MIB attributes<br>The value 255 means that all attributes should be written |
| FirstValueStorIndex | Unsigned16  | 0 to 65 535 | The first storage index of multiple attribute values, which is used to write the structured MIB attributes                                    |
| Count               | Unsigned8   | 0 to 255    | Number of attribute values or attributes member values, which is used to read the structured MIB attributes                                   |
| AttributeValue      | Octetstring |             | Value of the attribute to be written                                                                                                          |

#### 9.5.14.2 NLME-INFO\_SET.indication

NLME-INFO\_SET.indication is used to inform the DMAP of the successful receipt of an attribute setting request command packet.

The semantics of NLME-INFO\_SET.indication are described as follows:

NLME-INFO\_SET.indication (

SrcAddr,  
AttributeID,  
AttributeMemID,  
FirstValueStorIndex,  
Count,  
AttributeValue

)

Table 125 specifies the parameters for NLME-INFO\_SET.indication.

**Table 125 – NLME-INFO\_SET.indication parameters**

| Name                | Data type   | Valid range | Description                                                                                                                              |
|---------------------|-------------|-------------|------------------------------------------------------------------------------------------------------------------------------------------|
| SrcAddr             | Unsigned16  | 0 to 65 535 | 16-bit short address of the source                                                                                                       |
| AttributeID         | Unsigned8   | 0 to 255    | ID of attribute in MIB                                                                                                                   |
| AttributeMemID      | Unsigned8   | 0 to 255    | ID of attribute member, which is used to write the structured MIB attributes. The value 255 means that all attributes should be written. |
| FirstValueStorIndex | Unsigned16  | 0 to 65 535 | The first storage index of multiple attribute values, which is used to write the structured MIB attributes                               |
| Count               | Unsigned8   | 0 to 255    | Number of attribute values or attributes member values, which is used to read the structured MIB attributes                              |
| AttributeValue      | Octetstring |             | Value of the attribute to be written                                                                                                     |

### 9.5.14.3 NLME-INFO\_SET.response

NLME-INFO\_SET.response is used to respond to NLME-INFO\_SET.indication.

The semantics of NLME-INFO\_SET.response are described as follows:

```
NLME-INFO_SET.response (
 DstAddr,
 Status,
 AttributeID,
 AttributeMemID,
 FirstValueStorIndex,
 Count
)
```

Table 126 specifies the parameters for NLME-INFO\_SET.response.

**Table 126 – NLME-SET.response parameters**

| Name                | Data type   | Valid range | Description                                                                                                                                                                 |
|---------------------|-------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| DstAddr             | Unsigned16  | 0 to 65 535 | 16-bit short address of the destination                                                                                                                                     |
| Status              | Unsigned8   | 0 to 255    | Result of the attribute setting request:<br>0 = SUCCESS;<br>1 = UNSUPPORTED_ATTRIBUTE;<br>2 = UNSUPPORTED_ATTRIBUTE_MEMBER;<br>3 = UNMATCHED_COUNT;<br>Others are reserved. |
| AttributeMemID      | Unsigned8   | 0 to 255    | ID of attribute member, which is used to write the structured MIB attributes. The value 255 means that all attributes should be written.                                    |
| FirstValueStorIndex | Unsigned16  | 0 to 65 535 | The first storage index of multiple attribute values, which is used to write the structured MIB attributes                                                                  |
| AttributeValue      | Octetstring |             | Value of the attribute to be written                                                                                                                                        |

If the operation of setting attributes is successful, the Status should be SUCCESS; if the MIB does not have the needed attributes or attribute members, the Status should be UNSUPPORTED\_ATTRIBUTE or UNSUPPORTED\_ATTRIBUTE\_MEMBER; otherwise, if the number of attributes does not equal to the required number, the Status should be UNMATCHED\_COUNT.

### 9.5.14.4 NLME-INFO\_SET.confirm

NLME-INFO\_SET.confirm is used to return the results of NLME-INFO\_SET.request.

The semantics of NLME-INFO\_SET.confirm are described as follows:

```
NLME-INFO_SET.confirm (
 SrcAddr,
 Status,
 AttributeID,
 AttributeMemID,
 FirstValueStorIndex,
 Count
)
```

Table 127 specifies the parameters for NLME-INFO\_SET.confirm.

**Table 127 – NLME-SET.confirm parameters**

| Name                | Data type   | Valid range | Description                                                                                                                                                                 |
|---------------------|-------------|-------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| SrcAddr             | Unsigned16  | 0 to 65 535 | 16-bit short address of the source                                                                                                                                          |
| Status              | Unsigned8   | 0 to 255    | Result of the attribute setting request:<br>0 = SUCCESS;<br>1 = UNSUPPORTED_ATTRIBUTE;<br>2 = UNSUPPORTED_ATTRIBUTE_MEMBER;<br>3 = UNMATCHED_COUNT;<br>Others are reserved. |
| AttributeMemID      | Unsigned8   | 0 to 255    | ID of attribute member, which is used to write the structured MIB attributes. The value 255 means that all attributes should be written.                                    |
| FirstValueStorIndex | Unsigned16  | 0 to 65 535 | The first storage index of multiple attribute values, which is used to write the structured MIB attributes                                                                  |
| AttributeValue      | Octetstring |             | Value of the attribute to be written                                                                                                                                        |

## 9.6 Network layer packet formats

### 9.6.1 Common packet format

The NL packet format is shown in Table 128.

**Table 128 – Network layer common packet format**

|                    | Network layer common packet format |                     |                |          |            |          |                 |                     |                          |                |                       |
|--------------------|------------------------------------|---------------------|----------------|----------|------------|----------|-----------------|---------------------|--------------------------|----------------|-----------------------|
|                    | Network layer header               |                     |                |          |            |          |                 |                     |                          |                | Network layer payload |
| Length in octet(s) | 1                                  | 2                   | 2              | 2        | 4          | 1        | 1               | 0/1                 | 0/1                      | 1              | Variable length       |
| Field name         | Control                            | Destination address | Source address | Route-ID | Time-stamp | Priority | Sequence Number | Number of fragments | Fragment sequence number | Payload length | Network layer payload |
|                    |                                    | Routing             |                |          |            |          |                 |                     |                          |                |                       |

The control field format is shown in Table 129.

**Table 129 – Control field format**

| Control field format |             |               |          |                     |          |
|----------------------|-------------|---------------|----------|---------------------|----------|
| Length in bit(s)     | 2           | 1             | 1        | 1                   | 4        |
| Subfield name        | Packet type | Fragment flag | P/S flag | Authentication flag | Reserved |

The NL header field has the following subfields:

a) Control subfield, which includes:

- Packet type: this subfield has 2-bit length; the value 0 indicates a data packet, 1 indicates an aggregation packet, 2 indicates a command packet, and others are reserved;
- Fragment flag: this subfield has 1-bit length and is used to indicate whether this packet is a fragment packet; the value 0 indicates no fragment and 1 indicates fragment;

- P/S flag: this subfield has 1-bit length, which is used to indicate whether the data in this packet is P/S type; the value 0 indicates non P/S type and 1 indicates P/S type;
  - Reserved: this subfield has 4-bit length and is used for extension.
- b) Routing field, which includes:
- Destination address: final destination address of a packet (16 bits);
  - Source address: the address from which a packet originates (16 bits);
  - RouteID: unique identifier of the path (16 bits);
- c) Timestamp: this subfield has 4-octet length and is labelled in seconds;
- d) Priority: this subfield has 1-octet length and indicates the priority of a packet;
- e) Sequence number: this subfield has 1-octet length and indicates the sequence number of the NL packet;
- f) Number of fragments: this subfield has 0- or 1-octet length; it is used to indicate the number of fragments; if the packet is a fragment packet, this subfield has 1-octet length and its value is valid; otherwise, this subfield is 0-octet length.
- g) Fragment sequence number: the fragment sequence number subfield is used to indicate the fragment sequence of the fragmentation packet. If the packet is a fragmentation packet, this field has 1-octet length and is valid; otherwise, this field is invalid.
- h) Payload length: this field has 1-octet length and is used to indicate the length of the NL payload;
- i) Network layer payload: this field has variable length and is used to fill in the NL data.

### 9.6.2 Data packet format

The data packet format is shown in Table 130.

**Table 130 – Network layer data packet format**

|                    | Network layer common packet format |                     |                |         |            |          |                 |                     |                          |                |                       |
|--------------------|------------------------------------|---------------------|----------------|---------|------------|----------|-----------------|---------------------|--------------------------|----------------|-----------------------|
|                    | Network layer header               |                     |                |         |            |          |                 |                     |                          |                | Network layer payload |
| Length in octet(s) | 1                                  | 2                   | 2              | 2       | 4          | 1        | 1               | 0/1                 | 0/1                      | 1              | Variable length       |
| Field name         | Control field                      | Destination address | Source address | RouteID | Time-stamp | Priority | Sequence Number | Number of fragments | Fragment sequence number | Payload length | Network layer payload |
|                    |                                    | Routing field       |                |         |            |          |                 |                     |                          |                |                       |

The value of packet type in control field of Network layer header = 0, which indicates a data packet.

The definitions of all the subfields are the same as those in Table 128.

### 9.6.3 Aggregated packet format

The aggregated packet format is described in Table 131.

**Table 131 – Aggregated packet format**

|                    | Aggregated packet format |                       |                           |              |                 |     |                                     |               |                 |
|--------------------|--------------------------|-----------------------|---------------------------|--------------|-----------------|-----|-------------------------------------|---------------|-----------------|
|                    | Network layer header     | Network layer payload |                           |              |                 |     |                                     |               |                 |
| Length in octet(s) | 14/16                    | 1                     | 2                         | 1            | Variable length | ... | 2                                   | 1             | Variable length |
| Field name         | Network layer header     | Aggregated number     | Source address 1          | Data length1 | Data1           | ... | Source address n                    | Data length n | Data n          |
|                    |                          |                       | The first aggregated data |              |                 | ... | The n <sup>th</sup> aggregated data |               |                 |

The value of packet type in control field of Network layer header = 1, which indicates an aggregation packet.

The aggregated packet has the following fields or subfields:

- a) Network layer header: the definition of the network layer header is the same as in Table 127;
- b) Aggregated number: this subfield is used to record the number of packets that are aggregated;
- c) First aggregated data: this subfield is used to fill in the first aggregated data, which includes:
  - Source address 1: this field has 2-octet length and indicates the 16-bit address of the first aggregated data;
  - Data length 1: this field has 1-octet length, which is used to fill in the length of the first aggregated data;
  - Data 1: this field has variable length and is used to fill in the first aggregated data.
- d) n<sup>th</sup> aggregated data: this subfield is used to fill in the n<sup>th</sup> aggregated data, which is the same as the first aggregated data.

### 9.6.4 Command packet format

#### 9.6.4.1 Common format of command packet

The NL command packets encapsulate the NL commands to accomplish some management functions. The format of the command packet is shown in Table 132.

**Table 132 – Format of NL command packet**

|                    | Network layer common packet format |                     |                |           |            |          |                 |                    |                          |                |                       |
|--------------------|------------------------------------|---------------------|----------------|-----------|------------|----------|-----------------|--------------------|--------------------------|----------------|-----------------------|
|                    | Network layer header               |                     |                |           |            |          |                 |                    |                          |                | Network layer payload |
| Length in octet(s) | 1                                  | 2                   | 2              | 2         | 4          | 1        | 1               | 0/1                | 0/1                      | 1              | Variable length       |
| Field name         | Control field                      | Destination address | Source address | Router ID | Time-stamp | Priority | Sequence Number | Number of fragment | Fragment sequence number | Payload length | Network layer payload |
|                    |                                    | Routing field       |                |           |            |          |                 |                    |                          |                |                       |

The value of packet type in control field of Network layer header = 2, which indicates a command packet.

The data packet has the following fields or subfields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- The network layer payload field includes the following subfields:
  - Command packet identifier: this subfield has 1-octet length and is used to indicate the identifier of the NL command packet (see Table 133);
  - Command packet payload: this subfield has variable length and is used to fill in the payload of the NL command packet.

The NL command packets are listed in Table 133.

**Table 133 – Network layer command packet**

| Command packet identifier | Command                              | User                           |
|---------------------------|--------------------------------------|--------------------------------|
| 0                         | Joining request                      | Routing device                 |
| 1                         | Joining response                     | Gateway device                 |
| 2                         | Communication status report request  | Routing device                 |
| 3                         | Leaving request                      | Routing device/ Gateway device |
| 4                         | Leaving response                     | Gateway device/ Routing device |
| 5                         | Cluster member report request        | Routing device                 |
| 6                         | Cluster member report response       | Gateway device                 |
| 7                         | Neighbour information report request | Routing device                 |
| 8                         | Routeadding request                  | Gateway device                 |
| 9                         | Routeadding response                 | Routing device                 |
| 10                        | Routeupdate request                  | Gateway device                 |
| 11                        | Route update response                | Routing device                 |
| 12                        | Route deleting request               | Gateway device                 |
| 13                        | Route deleting response              | Routing device                 |
| 14                        | Link adding request                  | Gateway device/ Routing device |
| 15                        | Link adding response                 | Routing device / Field device  |
| 16                        | Link update request                  | Gateway device/ Routing device |
| 17                        | Link update response                 | Routing device / Field device  |
| 18                        | Link release request                 | Gateway device/ Routing device |
| 19                        | Link release response                | Routing device / Field device  |
| 20                        | Superframe adding request            | Gateway device/ Routing device |
| 21                        | Superframe adding response           | Routing device / Field device  |

| Command packet identifier | Command                         | User                           |
|---------------------------|---------------------------------|--------------------------------|
| 22                        | Superframe update request       | Gateway device/ Routing device |
| 23                        | Superframe update response      | Routing device / Field device  |
| 24                        | Superframe release request      | Gateway device/ Routing device |
| 25                        | Superframe release response     | Routing device / Field device  |
| 26                        | Device condition report request | Field device/Routing device    |
| 27                        | Channel status report request   | Field device/Routing device    |
| 28                        | Failure path report request     | Routing device                 |
| 29                        | Attribute getting request       | Gateway device/ Routing device |
| 30                        | Attribute getting response      | Routing device / Field device  |
| 31                        | Attribute setting request       | Gateway device/ Routing device |
| 32                        | Attribute setting response      | Routing device / Field device  |
| 33 to 255                 | Reserved                        | Reserved                       |

The execution results of command are shown in Table 134.

**Table 134 – Execution results of commands**

| Command implementing result | Identifier | Description                 |
|-----------------------------|------------|-----------------------------|
| SUCCESS                     | 0          | Command execution succeeds. |
| FAILURE                     | 1          | Command execution fails.    |

#### 9.6.4.2 Joining request and response

The joining request packet is used by a routing device to forward the joining request. The format of the joining request packet is shown in Table 135.

**Table 135 – Format of joining request packet**

|                    | Format of joining request packet |                |                                    |                   |             |
|--------------------|----------------------------------|----------------|------------------------------------|-------------------|-------------|
| Length in octet(s) | 14/16                            | 1              | 8                                  | 0/4               | 1           |
| Field name         | Network layer header             | Command ID = 0 | Physical address of the new device | Security material | Device type |

The joining request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 0;
- Physical address of the new device: this field is used to indicate the 64-bit physical address of the device that is joining the network;
- Security material: this field has 0- or 4-octet length; if the authentication flag in the NL header is 0, the Security material is 0-octet long; otherwise, it is 4-octet long (see Clause 11 for the detailed information);
- Device type: this field has 1-octet length and is used to indicate the type of the joining device. The value 0 indicates the gateway device, 1 indicates a routing device, 2 indicates a field device, and 3 indicates a handheld device; otherwise, this field is reserved.

The joining response packet is used to return the joining request result. The format of the joining response packet is shown in Table 136.



**Table 136 – Format of joining response packet**

|                    | Format of joining response packet |                |                  |                                    |                                 |
|--------------------|-----------------------------------|----------------|------------------|------------------------------------|---------------------------------|
| Length in octet(s) | 14/16                             | 1              | 1                | 8                                  | 2                               |
| Field name         | Network layer header              | Command ID = 1 | Execution result | Physical address of the new device | Short address of the new device |

The joining response packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 1;
- Execution result: this field has 1-octet length. The value 0 indicates that the joining process is SUCCESS; otherwise, 1 indicates that the joining process is FAILURE (see Table 134);
- Physical address of the new device: this field is used to indicate the 64-bit physical address of the device that is joining the network;
- Short address of the new device: this field has 2-octet length. If the value of the Execution result field is 0, this field is valid and the value is the newly allocated 16-bit short address for the joining device; otherwise, this field is invalid.

#### 9.6.4.3 Communication status report request

The communication status report request packet is used by a routing device to forward the communication status report request. The format of the communication status report request packet is shown in Table 137.

**Table 137 – Format of communication status report request packet**

|                    | Format of communication status report request packet |                |                                    |             |        |
|--------------------|------------------------------------------------------|----------------|------------------------------------|-------------|--------|
| Length in octet(s) | 14/16                                                | 1              | 8                                  | 1           | 1      |
| Field name         | Network layer header                                 | Command ID = 2 | Physical address of the new device | Device type | Status |

The communication status report request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 2;
- Physical address of the new device: this field is used to indicate the 64-bit physical address of the device that has just joined the network;
- Device type: this field has 1-octet length and is used to indicate the type of newly joined device. The value 0 indicates the gateway device, 1 indicates a routing device, 2 indicates a field device, and 3 indicates a handheld device; otherwise, this field is reserved;
- Status: this field has 1-octet length and is used to indicate the result of the joining process; the value 0 indicates that the joining process is successful and 1 indicates that the joining process fails.

#### 9.6.4.4 Leaving request and response

The leaving request packet is used either by a routing device to request departure from the gateway device or by the gateway device to request a routing device to leave the network. The format of the leaving request packet is shown in Table 138.

**Table 138 – Format of leaving request packet**

|                    | Format of leaving request packet |                |                |
|--------------------|----------------------------------|----------------|----------------|
| Length in octet(s) | 14/16                            | 1              | 1              |
| Field name         | Network layer header             | Command ID = 3 | Leaving reason |

The leaving request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 3;
- Leaving reason: this field is 1 octet, the valid value of which is shown in Table 139.

**Table 139 – Value of Leaving reason**

| Value    | Description                                           |
|----------|-------------------------------------------------------|
| 0        | Reserved                                              |
| 1        | Passive leaving of a routing device or a field device |
| 2        | Active leaving of a routing device                    |
| 3 to 255 | Reserved                                              |

The leaving response packet is used to return the execution results. The format of the leaving response packet is shown in Table 140.

**Table 140 – Format of leaving response packet**

|                    | Format of leaving response packet |                |                  |
|--------------------|-----------------------------------|----------------|------------------|
| Length in octet(s) | 14/16                             | 1              | 1                |
| Field name         | Network layer header              | Command ID = 4 | Execution result |

The leaving response packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 4;
- Execution result: this field has 1-octet length and indicates the result of the departure process. If the departure process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.5 Cluster member report request and response

The cluster member report request packet is used by routing devices to report cluster member information to the gateway device. The format of the cluster member report request packet is described in Table 141.

**Table 141 – Format of cluster member report request packet**

|                    | Format of cluster member report request packet |                |                                  |                        |
|--------------------|------------------------------------------------|----------------|----------------------------------|------------------------|
| Length in octet(s) | 14/16                                          | 1              | 1                                | 2                      |
| Field name         | Network layer header                           | Command ID = 5 | Cluster member modification flag | Cluster member address |

The cluster member report request packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 5;
- c) Cluster member modification flag: this field has 1-octet length and indicates the kinds of modification; the value 0 indicates the adding action, and 1 indicates the deleting action; otherwise, this field is reserved;
- d) Cluster member address: this field has 2-octet length and indicates the 16-bit address of the modified cluster member.

The cluster member report response packet is used to return the execution results of the cluster member report request command. The format of the cluster member report response packet is described in Table 142.

**Table 142 – Format of cluster member report response packet**

|                    | Format of cluster member report response packet |                |                  |
|--------------------|-------------------------------------------------|----------------|------------------|
| Length in octet(s) | 14/16                                           | 1              | 1                |
| Field name         | Network layer header                            | Command ID = 6 | Execution result |

The cluster member report response packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 6;
- c) Execution result: this field has 1-octet length and indicates the result of the cluster member report process. If the report process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.6 Neighbour information report request

The neighbour information report request packet is used by routing devices to report its one-hop neighbour information to the NM. The format of the neighbour information report request packet is described in Table 143.

**Table 143 – Format of neighbour information report request packet**

|                    | Format of neighbour information report request packet |                |                      |                          |
|--------------------|-------------------------------------------------------|----------------|----------------------|--------------------------|
| Length in octet(s) | 14/16                                                 | 1              | 1                    | Variable length          |
| Field name         | Network layer header                                  | Command ID = 7 | Number of neighbours | Items of neighbour table |

The neighbour information report request packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 7;
- c) Number of neighbours: this field has 1-octet length and indicates the number of reported neighbours;
- d) Items of neighbour table: this field has variable length; the structure of neighbour table item is shown in Table 15.

#### 9.6.4.7 Route adding request and response

The route adding request packet is generated by the NM, and is sent to the destination routing device for adding a new routing record into its routing table.

The format of the route adding request packet is illustrated in Table 144.

**Table 144 – Format of route adding request packet**

|                    | Format of route adding request packet |                |                           |
|--------------------|---------------------------------------|----------------|---------------------------|
| Length in octet(s) | 14/16                                 | 1              | 9                         |
| Field name         | Network layer header                  | Command ID = 8 | A record of routing table |

The route adding request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 8;
- A record of routing table: this field has 9-octet length; the detailed information is shown in Table 15.

The route adding response packet is used to return the execution results of the route adding request command.

The format of the route adding response packet is illustrated in Table 145.

**Table 145 – Format of route adding response packet**

|                    | Format of route adding response packet |                |                  |
|--------------------|----------------------------------------|----------------|------------------|
| Length in octet(s) | 14/16                                  | 1              | 1                |
| Field name         | Network layer header                   | Command ID = 9 | Execution result |

The route adding response packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 9;
- Execution result: this field has 1-octet length and indicates the results of the route adding response process. If the response process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.8 Route update request and response

The route update request packet is generated by the NM, and is sent to the destination routing device for modifying a routing table record in its routing table.

The format of the route update request packet is illustrated in Table 146.

**Table 146 – Format of route update request packet**

|                    | Format of route update request packet |                 |                           |
|--------------------|---------------------------------------|-----------------|---------------------------|
| Length in octet(s) | 14/16                                 | 1               | 9                         |
| Field name         | Network layer header                  | Command ID = 10 | A record of routing table |

The route update request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 10;

- c) A record of routing table: this field has 9-octet length; the detailed information is shown in Table 15.

The route update response packet is used to return the execution results of the route update request command.

The format of the route update response packet is illustrated in Table 147.

**Table 147 – Format of route update response packet**

|                    | Format of route update response packet |                 |                  |
|--------------------|----------------------------------------|-----------------|------------------|
| Length in octet(s) | 14/16                                  | 1               | 1                |
| Field name         | Network layer header                   | Command ID = 11 | Execution result |

The route update response packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 11;
- Execution result: this field has 1-octet length and indicates the result of the route update response process. If the response process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.9 Route deleting request and response

The route deleting request packet is generated by the NM, and is sent to the destination routing device for deleting a routing record from its routing table.

The format of the route deleting request packet is illustrated in Table 148.

**Table 148 – Format of route deleting request packet**

|                    | Format of route update request packet |                 |          |
|--------------------|---------------------------------------|-----------------|----------|
| Length in octet(s) | 14/16                                 | 1               | 2        |
| Field name         | Network layer header                  | Command ID = 12 | Route ID |

The route update request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 12;
- Route ID: this field has 2-octet length and indicates the identifier of the deleted route.

The route deleting response packet is used to return the execution result of the Route deleting request command.

The format of the route deleting response packet is illustrated as Table 149.

**Table 149 – Format of route deleting response packet**

|                    | Format of route update response packet |                 |                  |
|--------------------|----------------------------------------|-----------------|------------------|
| Length in octet(s) | 14/16                                  | 1               | 1                |
| Field name         | Network layer header                   | Command ID = 13 | Execution result |

The route deleting response packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 13;
- c) Execution result: this field has 1-octet length and indicates the result of the route deleting response process. If the response process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.10 Link adding request and response

The link adding request packet is used by the NM to add one or more new link(s) to a routing device, and is also used by the routing device to add one or more new link(s) to a field device. After receiving this command packet, the routing device or field device should add a record to its link table.

The format of the link adding request packet is shown in Table 150.

**Table 150 – Format of link adding request packet**

|                    | Format of link adding request packet |                 |                 |                   |     |                   |
|--------------------|--------------------------------------|-----------------|-----------------|-------------------|-----|-------------------|
| Length in octet(s) | 14/16                                | 1               | 2               | 12                | ... | 12                |
| Field name         | Network layer header                 | Command ID = 14 | Number of links | Link table item 1 | ... | Link table item N |

The link adding request packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 14;
- c) Number of links: this field has 2-octet length and indicates the number of added links;
- d) Link table item 1 to N (N = Number of links): each of these link table items has 12-octet length, which indicates the detailed information of the added link. The structure of the link table item is shown in Table 17.

The link adding response packet is used to return the execution results of link adding. The format of the link adding response packet is shown in Table 151.

**Table 151 – Format of link adding response packet**

|                    | Format of link adding response packet |                 |                  |
|--------------------|---------------------------------------|-----------------|------------------|
| Length in octet(s) | 14/16                                 | 1               | 1                |
| Field name         | Network layer header                  | Command ID = 15 | Execution result |

The link adding response packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 15;
- c) Execution result: this field has 1-octet length and indicates the result of the link adding response process. If the response process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.11 Link update request and response

The link update request packet is used by the NM to update one or more existing link(s) of a routing device, and is also used by the routing device to update one or more existing link(s) to a field device. After receiving this command packet, the routing device or field device should update a record in its link table.

The format of the link update request packet is shown in Table 152.

**Table 152 – Format of link update request packet**

|                    | Format of link update request packet |                 |                 |                   |     |                   |
|--------------------|--------------------------------------|-----------------|-----------------|-------------------|-----|-------------------|
| Length in octet(s) | 14/16                                | 1               | 2               | 12                | ... | 12                |
| Field name         | Network layer header                 | Command ID = 16 | Number of links | Link table item 1 | ... | Link table item N |

The link update request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 16;
- Number of links: this field has 2-octet length and indicates the number of updated links;
- Link table item 1 to N (N = Number of links): each of these link table items has 12-octet length, which indicates the detailed information of the updated links. The structure of the link table item is shown in Table 17.

The link update response packet is used to return the execution results of link update. The format of the link update response packet is shown in Table 153.

**Table 153 – Format of link update response packet**

|                    | Format of route update response packet |                 |                  |
|--------------------|----------------------------------------|-----------------|------------------|
| Length in octet(s) | 14/16                                  | 1               | 1                |
| Field name         | Network layer header                   | Command ID = 17 | Execution result |

The link update response packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 17;
- Execution result: this field has 1-octet length and indicates the result of the link update response process. If the response process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.12 Link release request and response

The link release request packet is used by the NM to release one or more existing link(s) to a routing device, and is also used by the routing device to release one or more existing link(s) to a field device. After receiving this command packet, the routing device or field device should release a record in its link table.

The format of the link release request packet is shown in Table 154.

**Table 154 – Format of link release request packet**

|                    | Format of link release request packet |                 |                 |           |     |           |
|--------------------|---------------------------------------|-----------------|-----------------|-----------|-----|-----------|
| Length in octet(s) | 14/16                                 | 1               | 1               | 2         | ... | 2         |
| Field name         | Network layer header                  | Command ID = 18 | Number of links | Link ID 1 | ... | Link ID N |

The link release request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 18;
- Number of links: this field has 2-octet length and indicates the number of released links;
- Link ID 1 to N of link table (N = Number of links): each Link ID has 2-octet length, which indicates the identifiers of the released links.

The link release response packet is used to return the execution results of link release. The format of the link release response packet is shown in Table 155.

**Table 155 – Format of link release response packet**

|                    | Format of link release response packet |                 |                  |
|--------------------|----------------------------------------|-----------------|------------------|
| Length in octet(s) | 14/16                                  | 1               | 1                |
| Field name         | Network layer header                   | Command ID = 19 | Execution result |

The link release response packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 19;
- Execution result: this field has 1-octet length and indicates the result of the link release response process. If the response process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.13 Superframe adding request and response

The superframe adding request packet is used by the NM to add a new superframe to a routing device, and is also used by the routing device to add a new superframe to a field device. After receiving this command packet, the routing device or field device should add a record in its superframe table.

The format of the superframe adding request packet is shown in Table 156.

**Table 156 – Format of superframe adding request packet**

|                    | Format of superframe adding request packet |                 |                       |
|--------------------|--------------------------------------------|-----------------|-----------------------|
| Length in octet(s) | 14/16                                      | 1               | 12                    |
| Field name         | Network layer header                       | Command ID = 20 | Superframe table item |



The superframe adding request packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 20;
- c) Superframe table item: this field has 12-octet length and indicates the detailed information of the added superframe (see Table 16).

The superframe adding response packet is used to return the execution results of superframe adding. The format of the superframe adding response packet is shown in Table 157.

**Table 157 – Format of superframe adding response packet**

|                    | Format of superframe adding response packet |                 |                  |
|--------------------|---------------------------------------------|-----------------|------------------|
| Length in octet(s) | 14/16                                       | 1               | 1                |
| Field name         | Network layer header                        | Command ID = 21 | Execution result |

The superframe adding response packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 21;
- c) Execution result: this field has 1-octet length and indicates the result of the superframe adding response process. If the response process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.14 Superframe update request and response

The superframe update request packet is used by the NM to update an existing superframe to a routing device, and is also used by the routing device to update an existing superframe to a field device. After receiving this command packet, the routing device or field device should update a record in its superframe table.

The format of the superframe update request packet is shown in Table 158.

**Table 158 – Format of superframe update request packet**

|                    | Format of superframe update request packet |                 |                       |
|--------------------|--------------------------------------------|-----------------|-----------------------|
| Length in octet(s) | 14/16                                      | 1               | 12                    |
| Field name         | Network layer header                       | Command ID = 22 | Superframe table item |

The superframe update request packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 22;
- c) Superframe table item: this field has 12-octet length and indicates the detailed information of the updated superframe (see Table 16).

The superframe update response packet is used to return the execution results of superframe update. The format of the superframe update response packet is shown in Table 159.

**Table 159 – Format of superframe update response packet**

|                    | Format of superframe update response packet |                 |                  |
|--------------------|---------------------------------------------|-----------------|------------------|
| Length in octet(s) | 14/16                                       | 1               | 1                |
| Field name         | Network layer header                        | Command ID = 23 | Execution result |

The superframe update response packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 23;
- Execution result: this field has 1-octet length and indicates the result of the superframe update response process. If the response process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.15 Superframe release request and response

The superframe release request command frame is used by the NM to release an existing superframe to a routing device, and is also used by the routing device to release an existing superframe to a field device. After receiving this command packet, the routing device or field device should release a record in its superframe table.

The format of the superframe release request packet is shown in Table 160.

**Table 160 – Format of superframe release request packet**

|                    | Format of superframe release request packet |                 |               |
|--------------------|---------------------------------------------|-----------------|---------------|
| Length in octet(s) | 14/16                                       | 1               | 2             |
| Field name         | Network layer header                        | Command ID = 24 | Superframe ID |

The superframe release request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 24;
- Superframe ID: this field has 2-octet length and indicates the identifier of the superframe to be the released (see Table 16).

The superframe release response packet is used to return the execution results of superframe release. The format of the superframe release response packet is shown in Table 161.

**Table 161 – Format of superframe release response packet**

|                    | Format of superframe release response packet |                 |                  |
|--------------------|----------------------------------------------|-----------------|------------------|
| Length in octet(s) | 14/16                                        | 1               | 1                |
| Field name         | Network layer header                         | Command ID = 25 | Execution result |

The superframe release response packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 25;
- Execution result: this field has 1-octet length and indicates the result of the superframe release response process. If the response process is successful, the value of this field is 0; otherwise, the value of this field is 1 (see Table 134).

#### 9.6.4.16 Device condition report request

The device condition report request packet is used to report the conditions of the devices remotely. The format of the device condition report request packet is described in Table 162.

**Table 162 – Format of device condition report request packet**

|                    | Format of device condition report request packet |                 |                   |                                       |
|--------------------|--------------------------------------------------|-----------------|-------------------|---------------------------------------|
| Length in octet(s) | 14/16                                            | 1               | 1                 | Variable length                       |
| Field name         | Network layer header                             | Command ID = 26 | Number of devices | Items of device condition information |

The device condition report request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 26;
- Number of devices: this field has 1-octet length and indicates the number of reported devices.
- Items of device condition information: the detailed format of the device condition information field is described in Table 163. This field has  $N \times 11$  octet length, where  $N$  = Number of devices.

**Table 163 – Format of device condition information field**

|                    | Format of device condition information field |                                                 |                                                               |                                                          |               |                                           |        |
|--------------------|----------------------------------------------|-------------------------------------------------|---------------------------------------------------------------|----------------------------------------------------------|---------------|-------------------------------------------|--------|
| Length in octet(s) | 2                                            | 2                                               | 2                                                             | 2                                                        | 1             | 2                                         | 4      |
| Field name         | Device short address                         | Number of packets transmitted after last report | Number of packets terminated in this device after last report | Number of packets with MAC MIC failure after last report | Battery level | Restart count of device after last report | Uptime |

The device condition information field includes the following subfields (see Table 22):

- Device short address: this subfield has 2-octet length and indicates the short address of the reported device;
- Number of packets transmitted after last report: this subfield has 2-octet length and indicates the number of transmitted packets since the last report of the reported device;
- Number of packets terminated in this device after last report: this subfield has 2-octet length and indicates the number of received packets since the last report of the reported device;
- Number of packets with MAC MIC failure after last report: this subfield has 2-octet length and indicates the number of packets with MAC MIC failure since the last report;
- Battery level: this subfield has 1-octet length and indicates the residual power level;
- Restart count of device after last report: this subfield has 2-octet length and indicates the number of restarts since the last report.
- Uptime: this subfield has 4-octet length and indicates the uptime of a device.

#### 9.6.4.17 Channel condition report request

The channel condition report request packet is used to report the quality status of the communication channels remotely. The format of the channel condition report request packet is described in Table 164.

**Table 164 – Format of channel condition report request packet**

|                    | Format of channel condition report request packet |                 |                    |                                      |
|--------------------|---------------------------------------------------|-----------------|--------------------|--------------------------------------|
| Length in octet(s) | 14/16                                             | 1               | 1                  | Variable length                      |
| Field name         | Network layer header                              | Command ID = 27 | Number of channels | Items of channel quality information |

The channel condition report request packet has the following fields:

- Network layer header: the definition of the network layer header is the same as in Table 128;
- Command ID: this field has 1-octet length and the value of it is 27;
- Number of channels: this field has 1-octet length and indicates the number of reported channels;
- Channel quality information: this field has variable length;
- Items of channel quality information: the detailed format of the channel quality information is shown in Table 165. This field has  $N \times 5$  octet length, where  $N$  = Number of channels.

**Table 165 – Format of channel quality information field**

|                    | Format of channel quality information field |              |                  |                   |
|--------------------|---------------------------------------------|--------------|------------------|-------------------|
| Length in octet(s) | 1                                           | 1            | 2                | 1                 |
| Field name         | Channel index                               | Link quality | Packet loss rate | Number of retries |

The channel quality information field includes the following subfields:

- Channel index: this field has 1-octet length and indicates the sequence number of channels;
- Link quality: this field has 1-octet length and indicates the LQI value of each channels;
- Packet loss rate: this field has 2-octet length and indicates the packet loss rate of each channel;
- Number of retries: this field has 1-octet length and indicates the number of retransmissions of each channel.

#### 9.6.4.18 Path failure report request

The path failure report request packet is used by routing devices to report the failure of a path. The format of the path failure report request packet is described in Table 166.

**Table 166 – Format of path failure report request packet**

|                    | Format of path failure report request packet |                 |          |
|--------------------|----------------------------------------------|-----------------|----------|
| Length in octet(s) | 14/16                                        | 1               | 2        |
| Field name         | Network layer header                         | Command ID = 28 | Route ID |

The path failure report request packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 28;
- c) Route ID: this field has 1-octet length and indicates the identifier of the reported route.

#### 9.6.4.19 Attribute getting request

The attribute getting request packet is used to ask a specified device to report the attributes of its MIB. The format of the attribute getting request packet is described in Table 167.

**Table 167 – Format of attribute getting request packet**

| Format of attribute getting request packet |                      |                 |              |                     |                                                  |                      |
|--------------------------------------------|----------------------|-----------------|--------------|---------------------|--------------------------------------------------|----------------------|
| Length in octet(s)                         | 14/16                | 1               | 1            | 1                   | 2                                                | 1                    |
| Field name                                 | Network layer header | Command ID = 29 | Attribute ID | Attribute member ID | First storage index of multiple attribute values | Number of attributes |

The attribute getting request packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 29;
- c) Attribute ID: this field has 1-octet length and indicates the index of the requested attribute;
- d) Attributed member ID: this field has 1-octet length and indicates the index of the requested attribute member;
- e) First storage index of multiple attribute values: this field has 2-octet length and indicates the first storage index of multiple attribute values;
- f) Number of attributes: this field has 1-octet length and indicates either the number of attribute values or the number of attribute member values.

#### 9.6.4.20 Attribute getting response

The attribute getting response packet is used to respond to the attribute getting request, which should return the values of the attributes. The format of the attribute getting response packet is described in Table 168.

**Table 168 – Format of attribute getting response packet**

| Format of attribute getting response packet |                      |                 |        |              |                     |                                                  |                      |                 |
|---------------------------------------------|----------------------|-----------------|--------|--------------|---------------------|--------------------------------------------------|----------------------|-----------------|
| Length in octet(s)                          | 14/16                | 1               | 1      | 1            | 1                   | 2                                                | 1                    | Variable length |
| Field name                                  | Network layer header | Command ID = 30 | Status | Attribute ID | Attribute member ID | First storage index of multiple attribute values | Number of attributes | Attribute value |

The attribute getting response packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 30;
- c) Status: this field has 1-octet length and indicates the result of the attribute getting; the value 0 indicates the getting process is successful, and 1 indicates that the requested attribute is unsupported; otherwise, this field is reserved (see Table 122);

- d) Attribute ID: this field has 1-octet length and indicates the index of the requested attribute;
- e) Attributed member ID: this field has 1-octet length and indicates the index of the requested attribute member;
- f) First storage index of multiple attribute values: this field has 2-octet length and indicates the first storage index of multiple attribute values;
- g) Number of attributes: this field has 1-octet length and indicates either the number of attribute values or the number of attribute member values.
- h) Attribute values: this field has variable length and indicates the requested attribute values.

#### 9.6.4.21 Attribute setting request

The attribute setting request packet is used to ask a device to add or modify the attribute value in its MIB. The format of the attribute setting request packet is described in Table 169.

**Table 169 – Format of attribute setting request packet**

|                    | Format of attribute setting request packet |                 |              |                     |                                                  |                      |                 |
|--------------------|--------------------------------------------|-----------------|--------------|---------------------|--------------------------------------------------|----------------------|-----------------|
| Length in octet(s) | 14/16                                      | 1               | 1            | 1                   | 2                                                | 1                    | Variable length |
| Field name         | Network layer header                       | Command ID = 31 | Attribute ID | Attribute member ID | First storage index of multiple attribute values | Number of attributes | Attribute value |

The attribute setting request packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;
- b) Command ID: this field has 1-octet length and the value of it is 31;
- c) Attribute ID: this field has 1-octet length and indicates the index of the requested attribute;
- d) Attributed member ID: this field has 1-octet length and indicates the index of the requested attribute member;
- e) First storage index of multiple attribute values: this field has 2-octet length and indicates the first storage index of multiple attribute values;
- f) Number of attributes: this field has 1-octet length and indicates either the number of attribute values or the number of attribute member values.
- g) Attribute values: this field has variable length and indicates the attribute values to be set.

#### 9.6.4.22 Attribute setting response

The attribute setting response packet is used to respond to the attribute setting request. The format of the attribute setting response packet is described in Table 170.

**Table 170 – Format of attribute setting response packet**

|                    | Format of attribute setting response packet |                 |        |              |                     |                                                  |                      |
|--------------------|---------------------------------------------|-----------------|--------|--------------|---------------------|--------------------------------------------------|----------------------|
| Length in octet(s) | 14/16                                       | 1               | 1      | 1            | 1                   | 2                                                | 1                    |
| Field name         | Network layer header                        | Command ID = 32 | Status | Attribute ID | Attribute member ID | First storage index of multiple attribute values | Number of attributes |

The attribute setting response packet has the following fields:

- a) Network layer header: the definition of the network layer header is the same as in Table 128;

- b) Command ID: this field has 1-octet length and the value of it is 32;
- c) Status: this field has 1-octet length and indicates the result of the attribute setting; the value 0 indicates the setting process is successful, and 1 indicates that the requested attribute is unsupported; otherwise, this field is reserved (see Table 126);
- d) Attribute ID: this field has 1-octet length and indicates the index of the requested attribute;
- e) Attributed member ID: this field has 1-octet length and indicates the index of the requested attribute member;
- f) First storage index of multiple attribute values: this field has 2-octet length and indicates the first storage index of multiple attribute values;
- g) Number of attributes: this field has 1-octet length and indicates either the number of attribute values or the number of attribute member values.

## 10 Application layer

### 10.1 Overview

#### 10.1.1 General

The WIA-PA AL is comprised of UAP and ASL. AL defines application objects that interact with the industrial processes. It also defines communication services that support communications among multiple objects for the distributed industry applications.

The local operations among UAOs are not specified in this document.

#### 10.1.2 AL structure

The AL structure is shown in Figure 71.

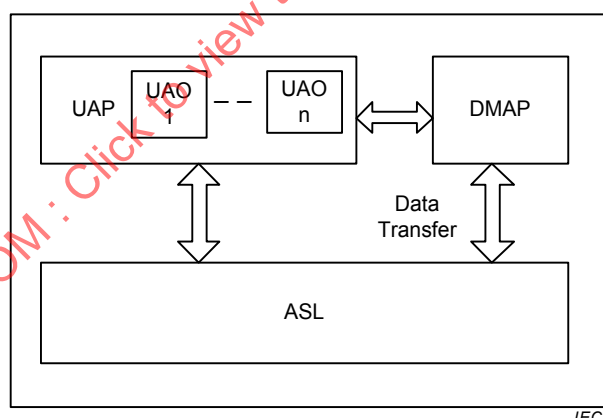


**Figure 71 – AL structure**

The distributed applications of industrial processes may be implemented by UAPs. A UAP is comprised of one or more UAOs. All UAOs in a device can interact with each other. The UAOs in different devices may interact with each other through the communication services that are provided by AL.

ASL provides transparent services of data transmission: between ASL and UAP.

#### 10.1.3 Functions of UAP

AUAP has the following functions:

- a) collecting process data, such as the process data of temperature, pressure, and flow;

- b) processing collected process data, such as conversion, linearization, compensation, and filtration;
- c) computing and generating output data based on the processed data of the device and that of other devices;
- d) controlling the process;
- e) generating and reporting alarm: UAP should report an alarm event, e.g. the process data is beyond the limits, the unexpected state of UAO changes, etc.; and
- f) inter-operating among devices in WIA-PA network.

#### 10.1.4 Functions of ASL

ASL provides data services and management services as follows:

- a) Data transmission services: ASL provides end-to-end transparent data transmission services for UAP, and it supports C/S, P/S, and R/S data transmissions; and
- b) ASL management services are not specified in this document.

### 10.2 UAP

#### 10.2.1 General

UAP is a unit for processing information for specific applications and is used to implement the distributed applications within WIA-PA network.

A UAP may be constructed as an application process either according to IEC 61499-1 and IEC 61499-2 or IEC 61804-2. A UAP may also be an application process that is defined by users. The implementation of a UAP may be achieved either with function blocks or by other approaches, which is shown in Figure 72.

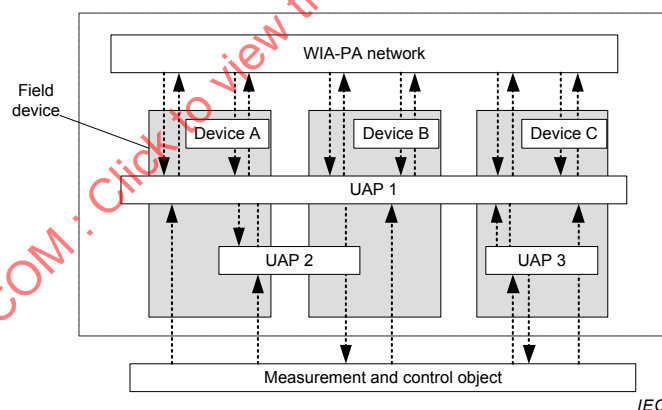


**Figure 72 – User application process**

A UAP may be composed of several UAOs within one device, which is shown as UAP 3 in Figure 72. A UAP may also be composed of several UAOs locating in different devices, which is shown as UAP 1 and UAP 2 in Figure 72.

#### 10.2.2 UAO

##### 10.2.2.1 General

UAO is defined according to different functions, which may be defined as function blocks by other approaches.



In order to support the interoperability among different devices, each UAO has its own attributes. The attributes of UAO are used to describe application profiles, which the application objects shall follow.

Each UAO shall be identified by object ID and instance ID. If some attributes of the UAO may be operated remotely, they shall be accessed further by the attribute identifier.

### 10.2.2.2 Functions of UAO

In WIA-PA, UAOs collect and process the data from industrial processes (such as temperature, pressure, and flow) by using different kinds of sensors, and control the process with actuators. The functions of a UAO are described in the following.

#### a) Range scaling

Range scaling is a linear transformation, which converts the process data from one unit to another unit in order to simplify further measurement and computation. For example, 4 mA ~ 20 mA signals may be converted into 0 Kpa to 10 Kpa signals. Range scaling may also convert the data with units into data without units, such as percentage.

#### b) Linearization

Sensor characteristics mostly are nonlinear and irregular. Therefore, linearization is necessary for dealing with the sensed data.

#### c) Compensation

Measured values of sensors may have linear drift due to the environment influence. Therefore, compensation is necessary.

#### d) Filtering

In industrial process, sensors may be interfered and result in a relatively abrupt jump in the measured values. In order to avoid this situation, filtering is used to eliminate the influence of the jump signals.

#### e) Storage

Storage involves copying the data to a temporary storage area so that it can be resent if the original data is lost.

#### f) Engineering unit conversion

Engineering unit conversion involves converting the units of input signals to other units that may be identified by I/O subsystems.

#### g) Measuring timestamp

The current time is added to the measured data as a timestamp.

UAO is not specified in this document. See Annex C for an example of UAO.

### 10.2.3 Method definition

#### 10.2.3.1 General

Table 171 specifies the methods that are used to handle parameters of UAOs.

**Table 171 – UAO method definition**

| Method     | Method identifier | Scope     |           | Description                                |
|------------|-------------------|-----------|-----------|--------------------------------------------|
|            |                   | Object    | Instance  |                                            |
| READ       | request: 0x00     | Mandatory | Mandatory | Reading the attributes of UAOs             |
|            | response: 0x80    | Mandatory | Mandatory | Response of reading the attributes of UAOs |
| WRITE      | request: 0x01     | Unsupport | Optional  | Writing the attributes of UAOs             |
|            | response: 0x81    | Unsupport | Optional  | Response of writing the attributes of UAOs |
| PUBLISH    | request: 0x02     | Unsupport | Optional  | Publishing attributes of UAOs              |
| REPORT     | request: 0x03     | Unsupport | Optional  | Reporting alarm and event data             |
| REPORT ACK | request: 0x04     | Unsupport | Optional  | Alarm acknowledgement                      |

**10.2.3.2 READ format**

The request format of the READ method is shown in Table 172.

**Table 172 – Request format of READ method**

|                    | Request format of the READ method |                            |                             |
|--------------------|-----------------------------------|----------------------------|-----------------------------|
| Length in octet(s) | 1                                 | 1                          | 1                           |
| Field name         | Object identifier                 | Object instance identifier | Object attribute identifier |

The request format of the READ method includes the following fields:

- Object identifier: this field has 1-octet length and indicates the identifier of a UAO;
- Object instance identifier: this field has 1-octet length and indicates the identifier of an object instance;
- Object attribute identifier: this field has 1-octet length and indicates the identifier of an object attribute; when the object attribute identifier is 0, all attributes of the instance should be read.

The response format of the READ method is shown in Table 173.

**Table 173 – Response format of READ method**

|                    | Response format of the READ method |                            |                             |             |                 |
|--------------------|------------------------------------|----------------------------|-----------------------------|-------------|-----------------|
| Length in octet(s) | 1                                  | 1                          | 1                           | 1           | Variable length |
| Field name         | Object identifier                  | Object instance identifier | Object attribute identifier | Data length | Data            |

The response format of the READ method includes the following fields:

- Object identifier: this field has 1-octet length and indicates the identifier of a UAO;
- Object instance identifier: this field has 1-octet length and indicates the identifier of an object instance;
- Object attribute identifier: this field has 1-octet length and indicates the identifier of an object attribute; if value the object attribute identifier is 0, all attributes of the instance should be read;
- Data length: this field has 1-octet length and indicates the data length of the object attribute; the value 0 of Data length indicates the read operation fails.

- e) Data: this field has variable length, which indicates the data of the object attribute. If the value of Data length is 0, this field shall be ignored.

### 10.2.3.3 WRITE format

The request format of the WRITE method is shown in Table 174.

**Table 174 – Request format of WRITE method**

|                    | Request format of the WRITE method |                            |                             |             |                 |
|--------------------|------------------------------------|----------------------------|-----------------------------|-------------|-----------------|
| Length in octet(s) | 1                                  | 1                          | 1                           | 1           | Variable length |
| Field name         | Object identifier                  | Object instance identifier | Object attribute identifier | Data length | Data            |

The request format of the WRITE method includes the following fields:

- Object identifier: this field has 1-octet length and indicates the identifier of a UAO;
- Object instance identifier: this field has 1-octet length and indicates the identifier of an object instance;
- Object attribute identifier: this field has 1-octet length and indicates the identifier of an object attribute; when the value object attribute identifier is 0, all attributes of the instance should be written.
- Data length: this field has 1-octet length and indicates the data length of the object attribute;
- Data: this field has variable length, which indicates the data of the object attribute.

The response format of the WRITE method is shown in Table 175.

**Table 175 – Response format of WRITE method**

|                    | Response format of the WRITE method |                            |                             |        |
|--------------------|-------------------------------------|----------------------------|-----------------------------|--------|
| Length in octet(s) | 1                                   | 1                          | 1                           | 1      |
| Field name         | Object identifier                   | Object instance identifier | Object attribute identifier | Status |

The response format of the WRITE method includes the following fields:

- Object identifier: this field has 1-octet length and indicates the identifier of a UAO;
- Object instance identifier: this field has 1-octet length and indicates the identifier of an object instance;
- Object attribute identifier: this field has 1-octet length and indicates the identifier of an object attribute;
- Status: this field has 1-octet length and indicates the result of the WRITE operation; the value 0 indicates the process is successful and 1 indicates that the process fails.

### 10.2.3.4 PUBLISH format

The format of the PUBLISH method is shown in Table 176.

**Table 176 – Format of PUBLISH method**

|                    | Format of the PUBLISH method |                            |                             |             |                 |
|--------------------|------------------------------|----------------------------|-----------------------------|-------------|-----------------|
| Length in octet(s) | 1                            | 1                          | 1                           | 1           | Variable length |
| Field name         | Object identifier            | Object instance identifier | Object attribute identifier | Data length | Data            |

The format of the PUBLISH method includes the following fields:

- Object identifier: this field has 1-octet length and indicates the identifier of a UAO;
- Object instance identifier: this field has 1-octet length and indicates the identifier of an object instance;
- Object attribute identifier: this field has 1-octet length and indicates the identifier of an object attribute; when the object attribute identifier is 0, all attributes of the instance should be published.
- Data length: this field has 1-octet length and indicates the data length of the published object attribute;
- Data: this field has variable length and indicates the data of the published object attribute.

#### 10.2.3.5 REPORT format

The format of the REPORT method is shown in Table 177.

**Table 177 – Format of REPORT method**

|                    | Format of the REPORT method |                            |                             |             |                 |
|--------------------|-----------------------------|----------------------------|-----------------------------|-------------|-----------------|
| Length in octet(s) | 1                           | 1                          | 1                           | 1           | Variable length |
| Field name         | Object identifier           | Object instance identifier | Object attribute identifier | Data length | Data            |

The format of the REPORT method includes the following fields:

- Object identifier: this field has 1-octet length and indicates the identifier of a UAO;
- Object instance identifier: this field has 1-octet length and indicates the identifier of an object instance;
- Object attribute identifier: this field has 1-octet length and indicates the identifier of an object attribute; when the object attribute identifier is 0, all attributes of the instance should be reported.
- Data length: this field has 1-octet length and indicates the data length of the reported object attribute;
- Data: this field has variable length and indicates the data of the reported object attribute.

#### 10.2.3.6 REPORT ACK format

The format of the REPORT ACK method is shown in Table 178.

**Table 178 – Format of REPORT ACK method**

|                    | Format of REPORT ACK method |                            |                             |        |
|--------------------|-----------------------------|----------------------------|-----------------------------|--------|
| Length in octet(s) | 1                           | 1                          | 1                           | 1      |
| Field name         | Object identifier           | Object instance identifier | Object attribute identifier | Status |

The format of the REPORT ACK method includes the following fields:

- a) Object identifier: this field has 1-octet length and indicates the identifier of a UAO;
- b) Object instance identifier: this field has 1-octet length and indicates the identifier of an object instance;
- c) Object attribute identifier: this field has 1-octet length and indicates the identifier of the reported object attribute;
- d) Status: this field has 1-octet length and indicates the result of the REPORT process; the value 0 indicates to clear the alarm event and 1 indicates to keep the alarm event.

### 10.3 Application sub-layer

#### 10.3.1 General

ASL provides data communication services among UAOs in the WIA-PA network.

#### 10.3.2 Application sub-layer data entity

##### 10.3.2.1 General

ASL defines the ASLDE, which provides transparent interfaces for sending and receiving data between ASL and NL. ASLDE supports the transport of APDU between UAOs.

The ASL supports three communication modes: C/S mode, P/S mode, and R/S mode:

- a) C/S mode supports unicast transmission of dynamic and aperiodic data;
- b) P/S mode supports unicast and multicast transmission of the periodic data;
- c) R/S mode supports unicast and multicast transmission of aperiodic data, such as alarms, alerts or events.

These communication modes are supported by corresponding types of VCRs.

The AL data services should be supported by three primitives: ASLDE-DATA.request, ASLDE-DATA.confirm, and ASLDE-DATA.indication.

##### 10.3.2.2 ASLDE-DATA.request

The upper layer sends data to the ASL by using the ASLDE-DATA.request primitive.

The semantics of this primitive are as follows:

ASLDE-DATA.request (

VcrID,  
Priority,  
MethodIdentifier  
AsduLength,  
Asdu  
)

Table 179 specifies the parameters of the ASLDE-DATA.request primitive.

**Table 179 – ASLDE-DATA.request parameters**

| Name             | Data type   | Valid range | Description                                            |
|------------------|-------------|-------------|--------------------------------------------------------|
| VcrID            | Unsigned16  | 0 to 65 535 | VCR used for the transmission                          |
| Priority         | Unsigned8   | 0 to 255    | Priority of UAO data                                   |
| MethodIdentifier | Unsigned8   | 0 to 255    | The identifier of method (see Table 171)               |
| AsduLength       | Unsigned16  | 0 to 65 535 | Number of octets consisting the ASDU to be transferred |
| Asdu             | Octetstring |             | Set of octets comprising the ASDU to be transferred    |

When ASL receives a data request from the upper layer, it should encapsulate the ASDU according to the ASL packet format and send it to NL. After transporting the data, the ASL should issue ASLDE-DATA.confirm to the upper layer with the Status parameter set to the status value returned by the NL.

### 10.3.2.3 ASLDE-DATA.confirm

The ASLDE-DATA.confirm primitive is invoked to indicate the transmission result. When the data is transferred successfully, the Status parameter in this primitive should be set to SUCCESS. Otherwise, the Status parameter should be set to corresponding error code to indicate the reason for the failure.

The semantics of this primitive are as follows:

```
ASLDE-DATA.confirm (
 VcrID,
 Status
)
```

Table 180 specifies the parameters for the ASLDE-DATA.confirm primitive.

**Table 180 – ASLDE-DATA.confirm parameters**

| Name   | Data type  | Valid range | Description                                                                                                           |
|--------|------------|-------------|-----------------------------------------------------------------------------------------------------------------------|
| VcrID  | Unsigned16 | 0 to 65 535 | VCR unique identifier used for this transmission                                                                      |
| Status | Unsigned8  | 0 to 255    | The status of the corresponding request:<br>0 = SUCCESS;<br>1 = INVALID_ADDRESS;<br>2 = FAIL;<br>Others are reserved. |

### 10.3.2.4 ASLDE-DATA.indication

After receiving packets from the NL, the ASL transfers the user data to the upper layer by using the ASLDE-DATA.indication primitive; the upper layer then performs the corresponding operation and processes the user data according to different service types.

The semantics of this primitive are as follows:

```
ASLDE-DATA.indication(
 MethodIdentifier,
 Priority,
 AsduLength,
 Asdu
)
```

Table 181 specifies the parameters for the ASLDE-DATA.indication primitive.

**Table 181 – ASLDE-DATA.indication parameters**

| Name             | Data type   | Valid range | Description                                   |
|------------------|-------------|-------------|-----------------------------------------------|
| MethodIdentifier | Unsigned8   | 0 to 255    | The identifier of method (see Table 171)      |
| Priority         | Unsigned8   | 0 to 255    | Priority of packet                            |
| AsduLength       | Unsigned16  | 0 to 65 535 | Number of octets comprising the ASDU received |
| Asdu             | Octetstring |             | Set of octets comprising the ASDU received    |

### 10.3.2.5 ASLDE-AGG.request

The ASLDE-AGG.request primitive is invoked by the DMAP to request the ASL to send the aggregated packet.

The semantics of this primitive are as follows:

```
ASLDE-AGG.request(
 VcrID,
 SrcAddr,
 GatewayAddr,
 Priority,
 AggPacketFlag,
 AggRouteID,
 AggPayload
)
```

Table 182 specifies the parameters for the ASLDE-AGG.request primitive.

**Table 182 – ASLDE-AGG.request parameters**

| Name          | Data type   | Valid range | Description                                                                                                           |
|---------------|-------------|-------------|-----------------------------------------------------------------------------------------------------------------------|
| VcrID         | Unsigned16  | 0 to 65 535 | VCR unique identifier used for this transmission                                                                      |
| SrcAddr       | Unsigned16  | 0 to 65 535 | Network address of source                                                                                             |
| GatewayAddr   | Unsigned16  | 0 to 65 535 | Network address of gateway device                                                                                     |
| Priority      | Unsigned8   | 0 to 255    | Priority of process data                                                                                              |
| AggPacketFlag | Unsigned8   | 0 to 255    | Indicating whether this packet is a data packet or aggregation packet:<br>0 = Data packet;<br>1 = Aggregation packet. |
| AggRouteID    | Unsigned16  | 0 to 65 535 | Route identifier for aggregation data                                                                                 |
| AggPayload    | Octetstring |             | DMAP aggregated packet                                                                                                |

### 10.3.2.6 ASLDE-DAG.indication

The ASLDE-DAG.indication primitive is invoked by the ASL to instruct the DMAP to disaggregate the packet.

The semantics of this primitive are as follows:

```
ASLDE-DAG.indication (
 AggPayload
)
```

Table 183 specifies the parameters for the ASLDE-DAG.indication primitive.

**Table 183 – ASLDE-DAG.indication parameters**

| Name       | Data type   | Valid range | Description       |
|------------|-------------|-------------|-------------------|
| AggPayload | Octetstring |             | Aggregated packet |

### 10.3.2.7 Communication modes

#### 10.3.2.7.1 General

The ASL provides three data communication modes for the data transmission services: C/S mode, P/S mode, and R/S mode.


#### 10.3.2.7.2 Client/Server mode

The ASL provides the C/S mode to read or write UAOs and their attributes so as to support information getting or setting operations. The C/S mode is supported by the C/S VCRs.

The Client user application should send a read or write request to the Server user application. The Server UAO should perform corresponding operation on its attributes according to different service types and then return the results as a response to the requesting Client UAO.

The Client ASL should maintain a sequence number for each sending request, which is used for matching the response and acknowledge from the server.

The C/S communication process is shown in Figure 73.

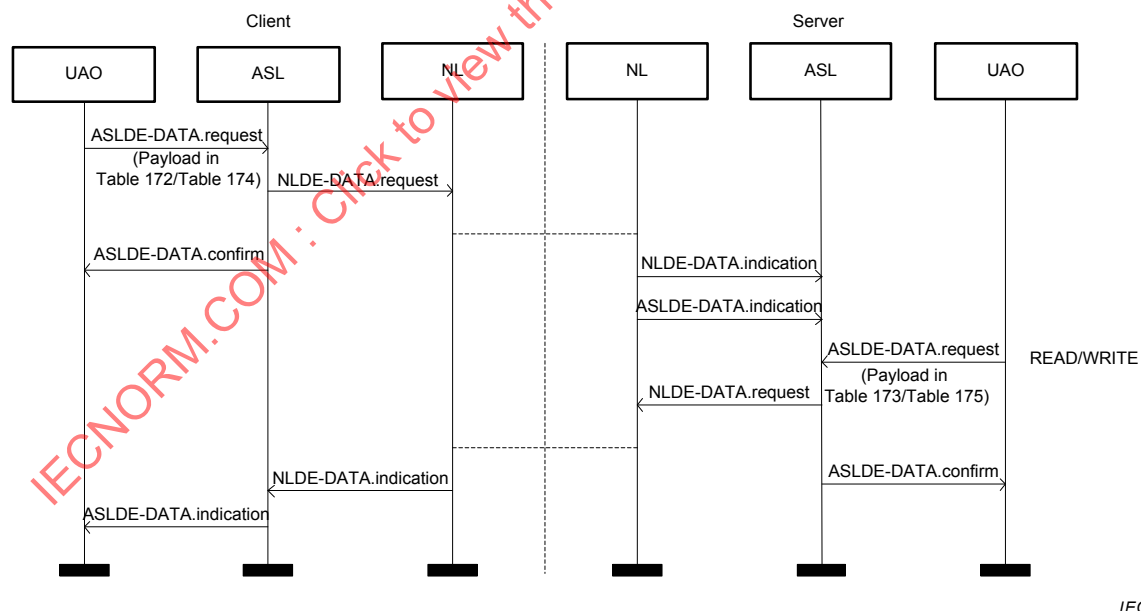

IEC

**Figure 73 – C/S communication process**

#### 10.3.2.7.3 Publisher/Subscriber mode

The ASL provides the P/S mode to support the periodic data transmission of UAOs. The P/S mode is supported by P/S VCRs.

In Publisher, the corresponding VCRs have attributes to define the sending time for periodic data (DataUpdateRate), and the NM and the cluster head should allocate communication



resources to the device according to this attribute. In Subscriber, the corresponding VCRs have attributes including the address information of the Publisher data and the Subscriber UAOs, respectively. The published data should be transferred to the corresponding UAOs.

The P/S communication process is shown in Figure 74 and Figure 75. Figure 74 shows the P/S communication process when the devices disable the aggregation function. Figure 75 shows the P/S communication process when the devices enable the aggregation function.

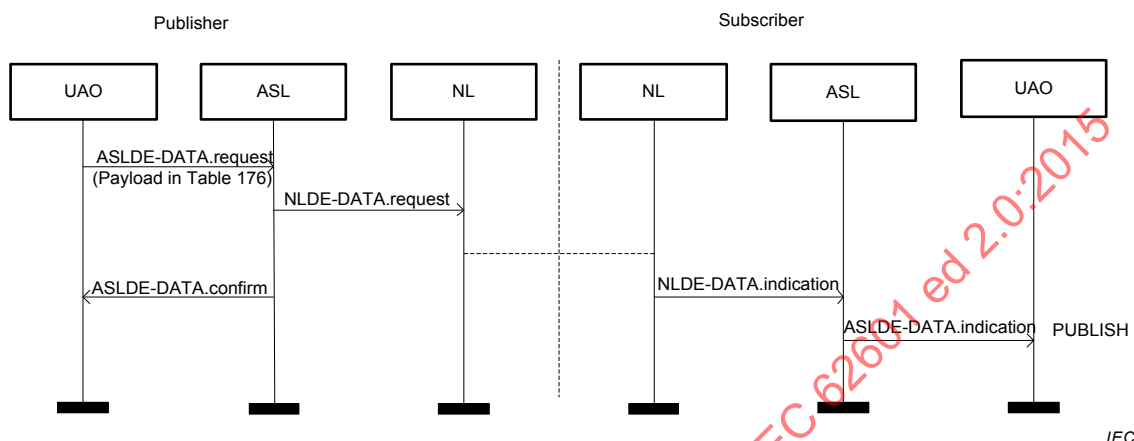


**Figure 74 – P/S communication process (disable aggregation function)**

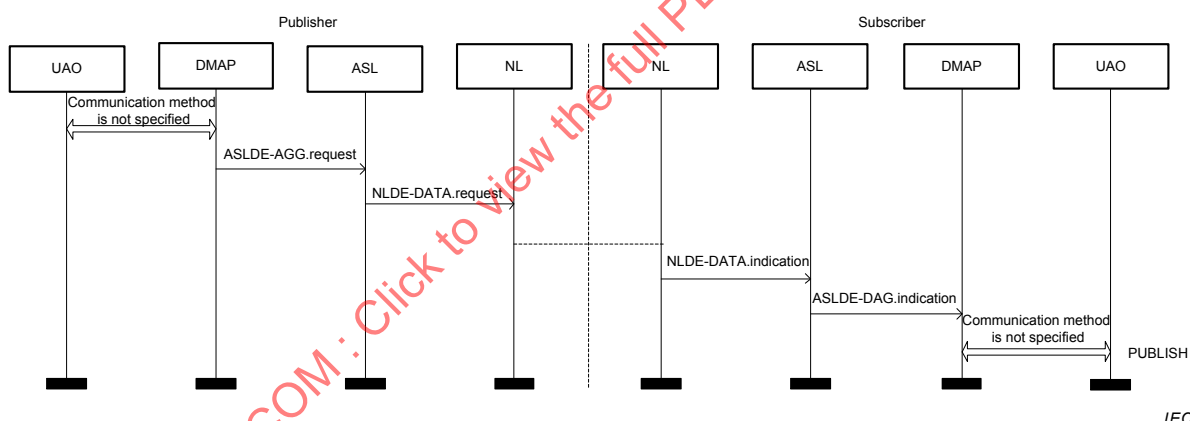


**Figure 75 – P/S communication process (enable aggregation function)**

#### 10.3.2.7.4 Report source/Sink communication mode

The ASL provides the R/S mode to support the aperiodic alarm or event reports and to report the acknowledgement of the UAOs. The R/S mode is supported by the R/S VCRs.

In the R/S mode, the UAO should send the alarm or event produced by it through an allocated R/S VCR. In Report/Sink, the alarm or event received should be transferred to the corresponding UAOs.

The R/S communication process is shown in Figure 76.

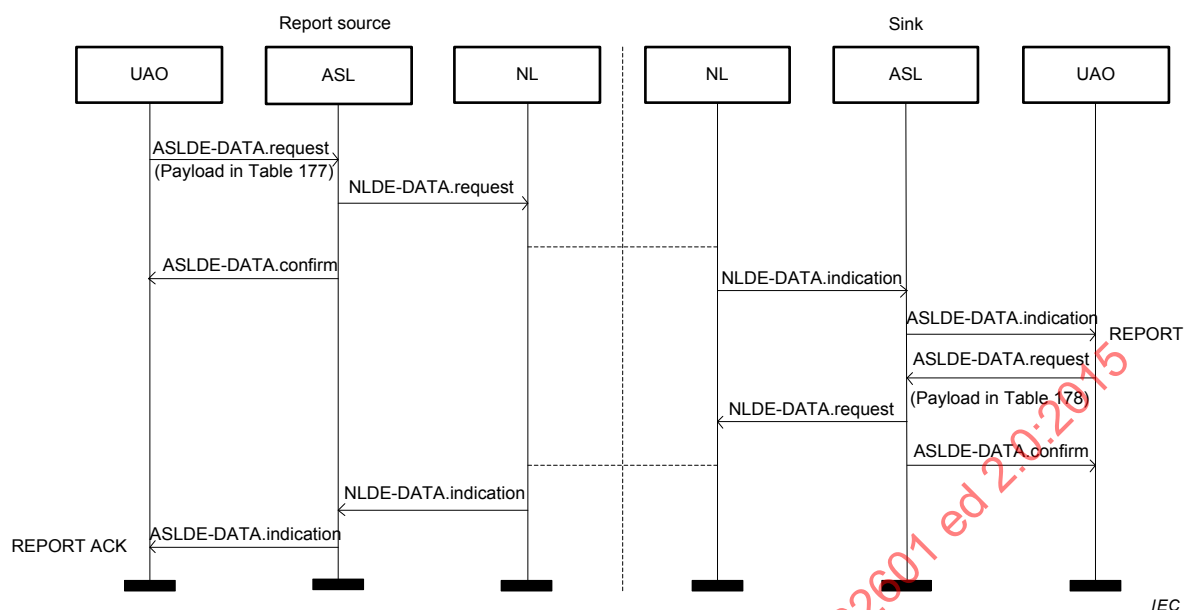


Figure 76 – R/S communication process

## 10.4 Application sub-layer packet formats

### 10.4.1 General

This part specifies the application sub-layer packet formats. Each application sub-layer packet includes the following two parts:

- Application sub-layer packet header (ASL Header), which includes the packet control field, sequence number, method identifier, and payload length;
- Application sub-layer packet payload (ASL Payload), whose length is variable.

### 10.4.2 ASL general packet format

#### 10.4.2.1 General

The format of the ASL general packet is shown in Table 184.

Table 184 – Application sub-layer general packet format

|                    | Format of ASL general packet |                 |                   |                |                 |
|--------------------|------------------------------|-----------------|-------------------|----------------|-----------------|
|                    | ASL header                   |                 |                   |                | ASL payload     |
| Length in octet(s) | 1                            | 1               | 1                 | 2              | Variable length |
| Field name         | Packet control               | Sequence Number | Method identifier | Payload length | Payload         |

The ASL general packet includes the following fields or subfields:

- ASL packet head, which includes the following subfields:
  - Packet control: this subfield has 1-octet length and is described in Table 185;
  - Sequence number: this subfield has 1-octet length and indicates the sequence number of the ASL packet;
  - Method identifier: this subfield has 1-octet length and indicates the identifier of the method (see 10.2.3);

- Payload length: this subfield has 2-octet length and indicates the length of the ASL payload;

b) ASL payload: this subfield has variable length and is used to fill in the ASL data.

#### 10.4.2.2 ASL packet control field

##### 10.4.2.2.1 General

The length of the packet control field is 8-bit. The format of the packet control field is shown in Table 185.

**Table 185 – Packet control field format**

|                  | Packet control field format |          |     |          |
|------------------|-----------------------------|----------|-----|----------|
| Length in bit(s) | 2                           | 1        | 1   | 4        |
| Subfield name    | Packet type                 | Security | ACK | Reserved |

The packet control field includes the packet type, security, ACK, and reserved subfields, which should be described in the following sections.

##### 10.4.2.2.2 Packet type subfield

The length of the packet type subfield is 2-bit. Its value is shown in Table 186.

**Table 186 – Packet type subfield value**

| Packet type value<br>b0b1 | Packet type name  |
|---------------------------|-------------------|
| 00                        | Data              |
| 01                        | Reserved          |
| 10                        | Acknowledgement   |
| 11                        | Aggregated packet |

##### 10.4.2.2.3 Security subfield

The length of the security subfield is 1 bit. The security subfield is used to control whether the AL uses the security function when transmitting the data. If the security subfield (namely b2) is set to 0, it indicates that the AL does not use security operation; if b2 is 1, it indicates that the AL uses the security operation to encrypt the data payload part of the application packet.

##### 10.4.2.2.4 Acknowledgement subfield

The length of the acknowledgement subfield is 1 bit. It is used to specify whether application packet acknowledgement is needed. If the acknowledgement subfield (namely b3) is set to 0, it indicates that the acknowledgement is not needed; if the value of this bit is set to 1, it indicates that the acknowledgement is needed.

##### 10.4.2.3 Sequence number field

The length of the sequence number field is 1 octet. The ASL should maintain the packet sequence number. If it transmits an AL packet, the sequence number should be increased by one. For the response data packet transmitted in the C/S communication mode, its sequence number is consistent with the corresponding request packet. The sequence number is used to match the request/response and acknowledgement packet. When the sequence number reaches its maximum value, it should be reset to 0.

#### 10.4.2.4 Method identifier field

The length of the method identifier field is 1 octet (see Table 171).

#### 10.4.2.5 Payload length field

The length of the payload length field is 1 octet. This field is used to indicate the length of the ASL payload in octets.

#### 10.4.2.6 ASL payload

The length of the ASL payload is variable.

### 10.4.3 Packet formats

#### 10.4.3.1 General

Two types of packet formats are defined in the ASL: ASL data packet and ASL acknowledgement packet.

#### 10.4.3.2 ASL data packet

##### 10.4.3.2.1 General

The format of the ASL data packet is shown in Table 187.

**Table 187 – ASL data packet format**

|                    | ASL data packet format                 |                 |                   |                |                 |
|--------------------|----------------------------------------|-----------------|-------------------|----------------|-----------------|
|                    | ASL header                             |                 |                   |                | ASL payload     |
| Length in octet(s) | 1                                      | 1               | 1                 | 2              | Variable length |
| Field name         | Packet control<br>(Packet type = 0b00) | Sequence Number | Method identifier | Payload length | Data payload    |

The ASL header of the data packet includes the packet control, sequence number, method identifier, and payload length subfields. Detailed descriptions of these subfields are listed in 10.4.3.2.2 to 10.4.3.2.3.

##### 10.4.3.2.2 ASL header field of data packet

The ASL header of the data packet includes the packet control field, sequence number field, method identifier, and payload length. The packet type subfield of the packet control field should be set to 0b00 in order to indicate that it is an ASL data packet. Other fields should be set according to the ASLDE-DATA.request of the ASL.

Once the AL transmits an application layer packet, its sequence number should increase by one. The sequence number of the response data packet that transmitted in the C/S communication mode is consistent with the corresponding request data packet.

##### 10.4.3.2.3 ASL payload field

The ASL payload field includes the request data of the upper layer (see 10.3.2).

#### 10.4.3.3 ASL acknowledgement packet

The acknowledgement is used to confirm whether or not the destination device has received the packet. If the acknowledgement is not returned after a certain period (configurable by EtoEACKTimeout, see 6.9.1.2.1), the source device should retry the previous packet.

For the data packet sent by P/S mode, broadcast packet and acknowledgement packet, the ASL does not need to be acknowledged, and the acknowledgement subfield of the packet control field is set to 0.

The ASL indicates that the current packet needs to be acknowledged by setting the acknowledgement subfield of the packet control field to 1.

After receiving the AL packet that needs to be acknowledged, the local ASL should confirm it by returning an acknowledgement packet. The sequence number of the acknowledgement packet should be the same as that in the corresponding request packet.

The format of the acknowledgement packet is shown in Table 188.

**Table 188 – ASL acknowledgement packet format**

|                    | ASL acknowledgement packet format      |                 |                   |                |
|--------------------|----------------------------------------|-----------------|-------------------|----------------|
|                    | ASL header                             |                 |                   |                |
| Length in octet(s) | 1                                      | 1               | 1                 | 2              |
| Field name         | Packet control<br>(Packet type = 0b10) | Sequence Number | Method identifier | Payload length |

The acknowledgement packet has only the ASL header, which includes the following subfields.

- Packet control: this subfield has 1-octet length and is described in Table 185. The packet type subfield of the packet control field should be set to 0b10 in order to indicate that this packet is an acknowledgement packet. If using security, the security subfield should be set to 1; otherwise, the security subfield should be set to 0.
- Sequence number: this subfield has 1-octet length and indicates the sequence number of the ASL acknowledgement packet; the sequence number subfield should be set to the same sequence number as that of in the corresponding received request packet.
- Method identifier: this subfield has 1-octet length and indicates the identifier of the method (see 10.2.3); the method identifier of the acknowledgement packet is 0b04.
- Payload length: this subfield has 2-octet length and indicates the length of the ASL payload; the payload length of the acknowledgement packet is 0.

## 11 Security

### 11.1 General

The security requirements, security principles and security objectives of the WIA-PA network should be analyzed before establishing the security strategies and security measures for the WIA-PA network. See Clauses A.1 to A.3 for the recommendation of the WIA-PA security risk analysis, security principles, and security objectives.

The WIA-PA MAC layer applies the security services defined in the IEEE STD 802.15.4-2011 MAC layer. The WIA-PA upper layers provide the following security services:

- Data integrity. The data integrity check service is provided in the AL and the DLSSL. A source device generates a check code with a check algorithm; the destination device verifies the check code and determines whether the received packet has been compromised.
- Data confidentiality. The data confidentiality service is provided in the AL and the DLSSL. A source device encrypts packets by using a symmetric key algorithm and sends the encrypted packets out. The destination device decrypts the encrypted packets using the same symmetric key algorithm.

- c) Device authentication. The SM uses the security material to authenticate a device. The security material is generated by the Join Key and the long address. It should be irreversible.

The definition of the check algorithm and the symmetric key algorithm are not included in this document.

## 11.2 Security management framework

Considering the real-time requirement and the limited resources of devices, the WIA-PA network needs different security strategies and measures to be achieved in different layers. The recommendation of the graded and layered measures of the system and the graded measures of the secure packets are defined in Clause A.4. The security management framework of the WIA-PA network is shown in Figure 77.

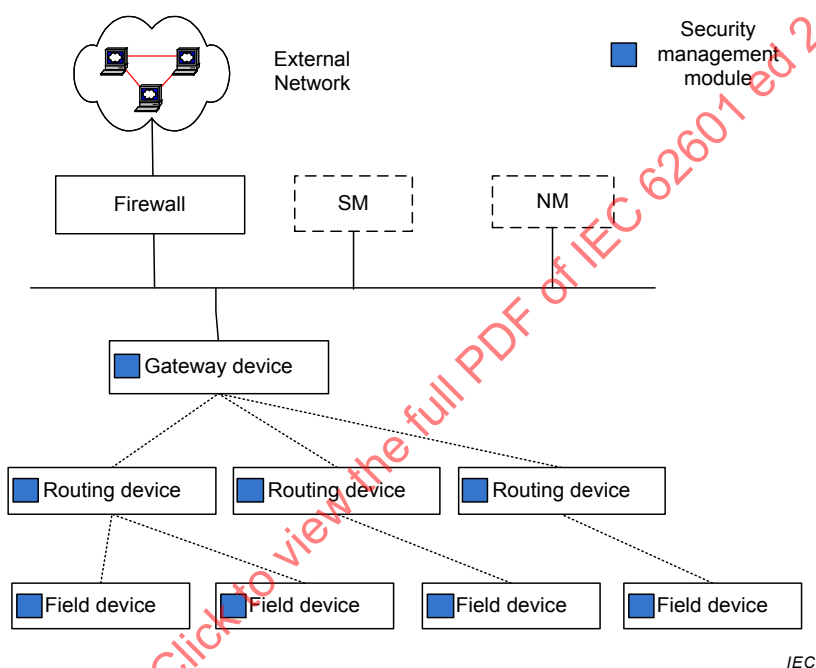


**Figure 77 – Security management framework of WIA-PA network**

As shown in Figure 77, the security management framework is comprised of an SM and security management modules in the gateway device, routing devices and field devices.

The security management framework interacts with external networks through the firewall. It protects the border of the whole WIA-PA network, and guarantees the normal operations of the WIA-PA network. The firewall is not specified in this document.

The SM should configure the security measures of the WIA-PA network, manage keys, and authenticate devices. It performs the following functions:

- configuring the system security strategies and the security measures of the WIA-PA network according to specific applications;
- configuring and monitoring the gateway device and routing devices according to specific applications and system security strategies;
- authorizing the routing devices and field devices that are attempting to join in the WIA-PA network;
- key management, including key generation, key distribution, key recovery, and key update.

The security management module of gateway device provides the following functions:

- a) managing self security measures;
- b) providing the functions of security management module in the routing devices.

The security management module in the routing device provides the following functions:

- a) managing the keys used by the cluster and forwarding the keys allocated by the SM;
- b) implementing the security measures of data encryption, decryption and data integrity check;
- c) sending authentication request.

The security management module in the field device performs the following functions:

- a) managing security measures of DLSL and ASL;
- b) implementing the security measures of data encryption, decryption and data integrity check;
- c) managing the keys.


The routing devices and field devices also provide alert reporting function. When the Attacked count reach to MaxAttackedCnt or the KeyAttackCnt reach MaxKeyAttackedCnt, the routing devices/field devices should report Alert to gateway device by using NLME\_INFO\_SET.

Redundant devices connect with primary devices by wires. The redundant device has the same KJ as the primary device. When security authentication is needed, the primary device uses the long address of the redundant device and the KJ to authenticate the latter.

### 11.3 Secure communication protocol stack

#### 11.3.1 General

The secure communication protocol stack includes the security measures for each layer. Keys are stored in the MIB (see Table 23). Coordinating with SM, the security management module of the DMAP also provides management and maintenance of keys (see 11.4). DLSL and ASL deal with the secure transportation independently. The secure communication protocol stack is shown in Figure 78, where the grey modules are related to the security. The attributes related to security in MIB are defined as security management information base. The security management module uses the network attribute setting services to set security management information base.

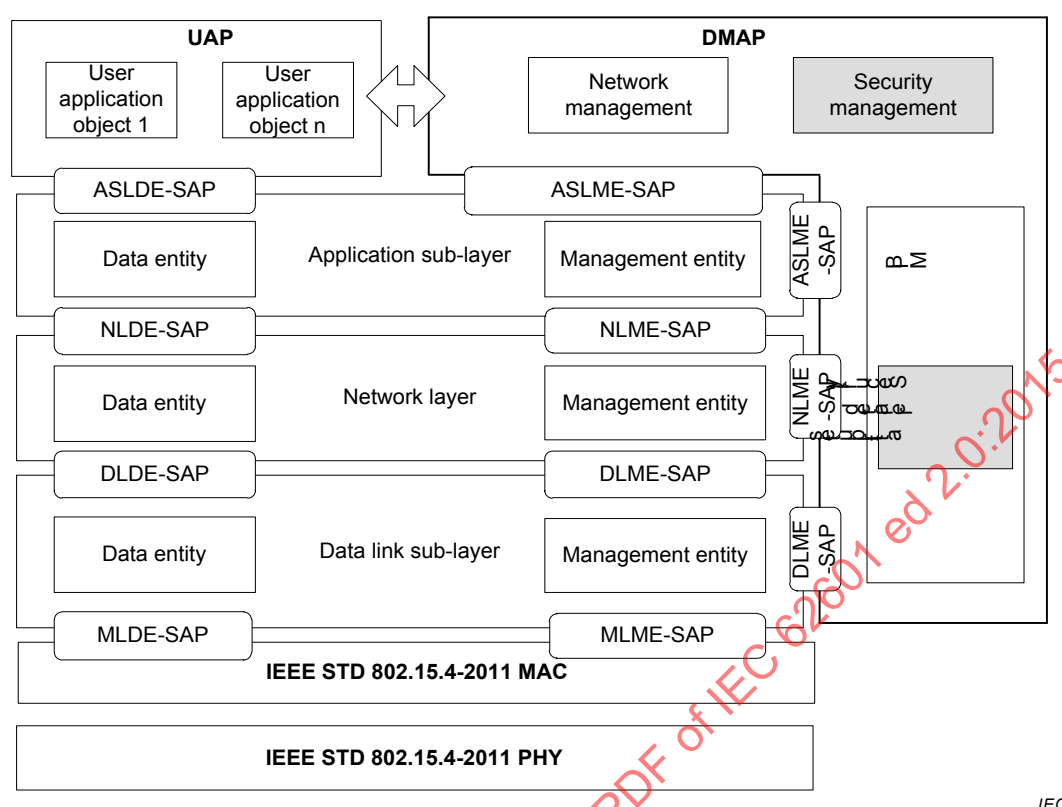

IEC

Figure 78 – Security communication protocol stack

### 11.3.2 Data link sub-layer security

#### 11.3.2.1 General

The security measures are provided by DLSL in the WIA-PA network. The security of MAC layer is disabled. DLSL uses CCM MIC and the data encryption to guarantee point-to-point transportation security, in which the frame counter is replaced by ASN. The MIC is generated with the DLSL keys and the DLSL header and DLSL payload. It is used for message integrity check. The data encryption is used for data confidentiality. Encryption key getting is implemented by network attribute getting services (see 9.5.13).

The security manager can configure or read the key of devices by using NLME\_INFO\_SET or NLME\_INFO\_GET services.

#### 11.3.2.2 Data link sub-layer frame security

The format of a security DLPDU is shown in Table 189.

Table 189 – Format of security DLPDU

|                    | Format of security DLPDU |                      |                 |          |
|--------------------|--------------------------|----------------------|-----------------|----------|
| Length in octet(s) | 1                        | 1                    | Variable length | 0/4/8/16 |
| Subfield name      | DLSL frame control       | DLSL security header | DLSL payload    | MIC      |

If the security enabled subfield in the DLSL frame control field is set to 1, it should use the DLSL security header, as shown in Table 190.



**Table 190 – Format of DLSL security header**

|                  | Format of DLSL security header |                                 |          |
|------------------|--------------------------------|---------------------------------|----------|
| Length in bit(s) | 3                              | 2                               | 3        |
| Subfield name    | Security control field         | Security material control field | Reserved |

The size of the security control field is 3 bits, as described in Table 191. The security control field defines the security attributes.

**Table 191 – Structure of security control field in DLSL security header**

| Security control field<br>b2b1b0 | Security attributes |
|----------------------------------|---------------------|
| 000                              | None                |
| 001                              | MIC-32              |
| 010                              | MIC-64              |
| 011                              | MIC-128             |
| 100                              | ENC                 |
| 101                              | ENC-MIC-32          |
| 110                              | ENC-MIC-64          |
| 111                              | ENC-MIC-128         |

If encryption and MIC check are both provided, the sender calculates MIC firstly and then encrypts the frames. Furthermore, the receiver should decrypt the frames and then check the MIC.

The security material control field defines packet type of the device security material service in Table 192.

**Table 192 – Structure of security material control field in DLSL security header**

| Security material control field<br>b1b0 | Security attributes                                  |
|-----------------------------------------|------------------------------------------------------|
| 00                                      | Data packet                                          |
| 01                                      | The device security material getting request packet  |
| 10                                      | The device security material getting response packet |
| 11                                      | Reserve                                              |

### 11.3.3 Application sub-layer security

#### 11.3.3.1 General

The ASL security implements end-to-end data transportation security. ASL uses CCM data encryption and MIC to guarantee end-to-end transportation security, in which the frame counter is replaced by ASN. The ASL establishes and maintains the keys in the security management information base. The MIC is generated with the ASL keys and ASL payload. It is used for message integrity check.

#### 11.3.3.2 Application sub-layer packet security

The structure of a security APDU is shown in Table 193.

**Table 193 – Security APDU structure**

|                           | <b>Security APDU structure</b> |                     |                 |     |
|---------------------------|--------------------------------|---------------------|-----------------|-----|
| <b>Length in octet(s)</b> | 5                              | 1                   | Variable length | 0/4 |
| <b>Field name</b>         | ASL header                     | ASL security header | ASL payload     | MIC |

If the security enabled subfield in the packet control of the ASL header is set to 1, it should use the ASL security header, as shown in Table 194.

**Table 194 – Structure of ASL security header field**

| <b>Bits: 0 to 1</b>                                     | <b>2 to 7</b> |
|---------------------------------------------------------|---------------|
| 00 = NONE<br>01 = ENC<br>10 = MIC-32<br>11 = ENC-MIC-32 | Reserved      |

If encryption and MIC check are both provided, the sender calculates MIC firstly and then encrypts the frames. Furthermore, the receiver should decrypt the frames and then check the MIC.

## 11.4 Key management

### 11.4.1 Key type

The SM and the security management modules manage the keys used in the WIA-PA network. The following cryptographic keys are defined.

#### a) Join Key (KJ)

It is a temporary key used during the device joining. The KJ is established in the provisioning process. It is distributed by the security manager through the handheld devices. It is used to encrypt the 64-bit long address of the new device to produce the security material. After the device successfully joins the network, KJ is also used to protect the KEK when the KEK is distributed for the first time.

#### b) Share Key (KS)

It is a share key with unified value. The KS is established in the provisioning process. It is distributed by the security manager through the handheld devices. It is used to encrypt beacon and broadcast frame. During the joining process, the NM will return joining result, in the last hop, the KS is used to encrypt the joining response by the online routing device or gateway device,

#### c) Key Encryption Key (KEK)

KEK is distributed by the SM after a device has joined the WIA-PA network. It is used to encrypt other keys. When the SM distributes the KEK for the first time, the KEK is protected by KJ. After that, the new KEK is protected by the KEK which is used currently in its update period.

#### d) Data Encryption Key (KED)

KED is distributed by the SM after a device has joined the WIA-PA network, including the DLSL encryption key and the AL encryption key. It is used to protect data and check integrity during data transmission. The KED is protected by the KEK in its distribution and update period.

The key lifecycle is shown in Figure 79.

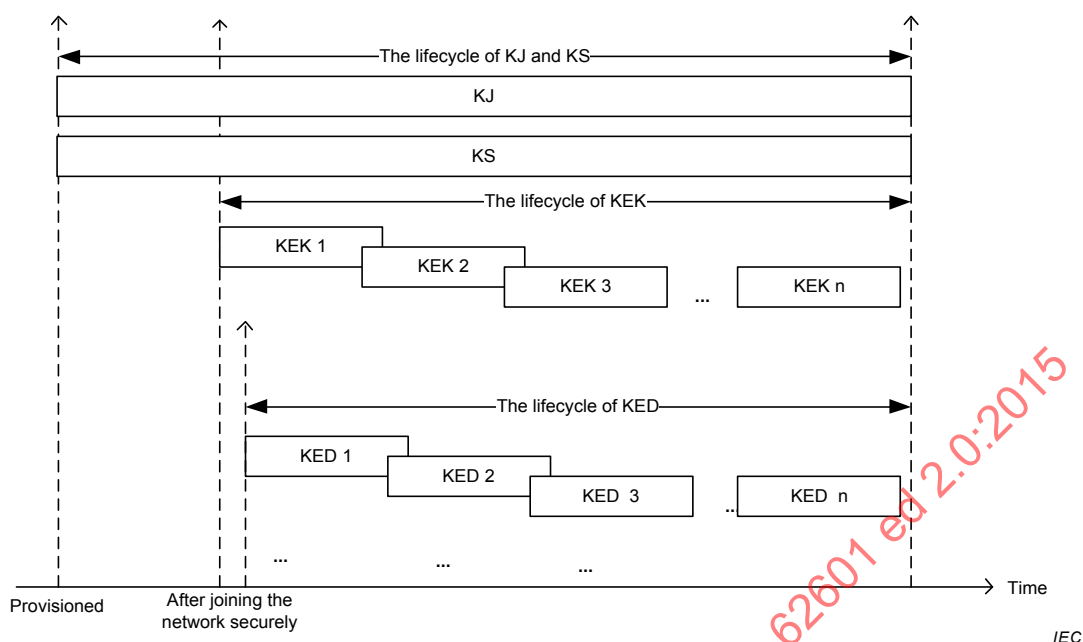


**Figure 79 – Key lifecycle**

The KEK and the KED need to be updated periodically by SM setting the key-related parameters in the MIB (see Table 23).

#### 11.4.2 Key distribution

Before a device joins the network, the KJ should be distributed to the device. The KJ should be directly distributed by the handheld devices.

After the device has joined the WIA-PA network, KEK and KED should be distributed to the joined devices by SM. The key distribution is implemented by the network attribute setting services (see 9.5.14).

#### 11.4.3 Key update

When the SM needs to update a device key, it should generate a new key. Then the new key is encrypted by the KEK and the encrypted new key is distributed to the WIA-PA device by using network attribute setting services (see 9.5.14).

Upon successful distribution of the new key, the device should decrypt the encrypted new key with its KEK and update its key.

The key update cycle is determined by users according to their requirements, and is recommended to be no more than 24 h in length.

The new key requires the following properties.

- The new key should be different from keys used by other devices in the WIA-PA network.
- The new key should be guaranteed to be the latest.
- The new key should be sent to the related devices in time.

#### 11.4.4 Key status

From its establishment to its abolition, a key should experience the following statuses:

- a) **BACKUP**: this status is defined as when a key has been established but has not been used for normal operation;
- b) **USING**: this status is defined as when a key is being used;
- c) **INVAILD**: this status is defined as when a key is not available.

When the KeyActiveTime (see Table 23) of a key with BACKUP is reached, the key changes its status from BACKUP to USING. At the same time the key in USING status (if it exists) changes to INVAILD status.


## 11.5 Secure joining process

### 11.5.1 Secure joining process of a new WIA-PA device

When a new field device or a new routing device joins the WIA-PA network, SM should authenticate the new field device or the new routing device.

A new device should have the KJ and 64-bit long address before joining the WIA-PA network. KJ should be written by handheld devices

The secure joining process of a new WIA-PA device is shown in Figure 80.

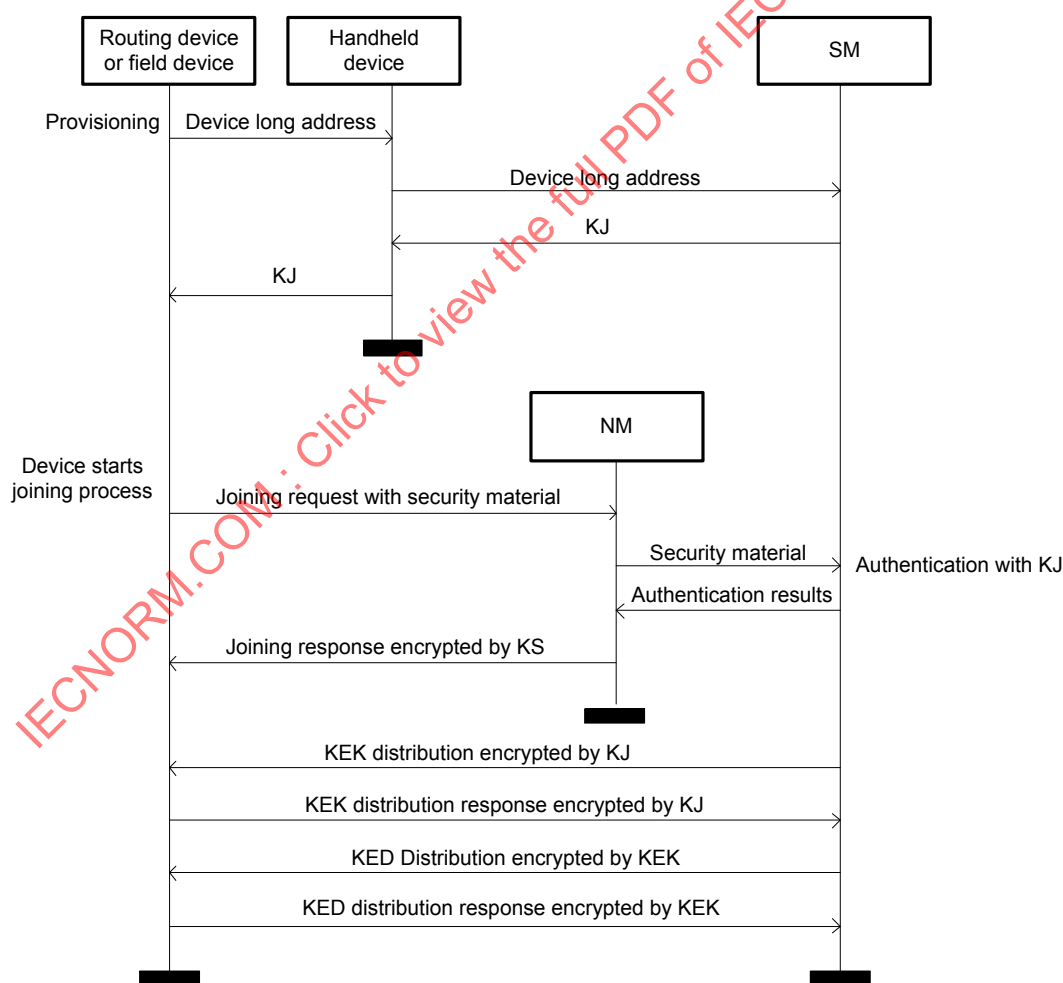

IEC

**Figure 80 – Secure joining process of WIA-PA device**

A new device that wants to join the WIA-PA network should proceed with the following steps.

- a) Before the new device joins the WIA-PA network, the handheld device reads the 64-bit long address of the new device and transfers it to the SM. The SM generates the KJ for the new device and the handheld device transfers the KJ to the new device.
- b) The new device with the KJ keeps scanning the available channels to get beacons from the online routing devices or the gateway device.
- c) The new device chooses an online routing device or the gateway device as the cluster head, and synchronizes with the network according to the received beacon.
- d) The new device generates the security material with the device long address and KJ, and sends it to the cluster head. The cluster head sends a joining request with security material to the NM for the new device.
- e) After the NM receives the joining request, it should forward the security material to the SM. The SM verifies the security material. If the authentication fails, the NM will return failure response. If authentication succeeds, the NM will return the success response.
- f) After the device completes the join process, the SM should generate the KEK for the new device and distribute the KEK encrypted by the KJ. Then the SM should generate the KED for the new device and distribute the KED encrypted by the KEK.

## 11.5.2 Device security material getting services

### 11.5.2.1 DLME-SEC.request

The routing devices use DLME-SEC.request to request the security material.

The semantics of DLME-SEC.request are described as follows:

DLME-SEC.request (   
 DstPhyAddr   
 )

Table 195 specifies the parameters for DLME-SEC.request.

**Table 195 – DLME-SEC.request parameters**

| Name       | Data type  | Valid range               | Description                               |
|------------|------------|---------------------------|-------------------------------------------|
| DstPhyAddr | Unsigned64 | 0 to (2 <sup>64</sup> -1) | 64-bit physical address of the new device |

### 11.5.2.2 DLME-SEC.indication

On receipt of device security material getting request packet, the DLSL of the new device will invoke DLME-SEC.indication and inform the DMAP.

The semantics of DLME-SEC. indication are described as follows:

DLME-SEC.indication (   
 DstPhyAddr   
 )

Table 196 specifies the parameters for DLME-SEC.request.

**Table 196 – DLME-SEC.indication parameters**

| Name       | Data type  | Valid range               | Description                               |
|------------|------------|---------------------------|-------------------------------------------|
| DstPhyAddr | Unsigned64 | 0 to (2 <sup>64</sup> -1) | 64-bit physical address of the new device |

**11.5.2.3 DLME-SEC.response**

The DMAP of the new device invokes DLME-SEC.response to provide its security material.

The semantics of DLME-SEC.response are described as follows:

```
DLME-SEC.response (
 ProxyAddr,
 PhyAddr,
 SecMaterial,
 Status
)
```

Table 197 specifies the parameters for DLME-SEC.response.

**Table 197 – DLME-SEC.response parameters**

| Name        | Data type  | Valid range         | Description                                                                                       |
|-------------|------------|---------------------|---------------------------------------------------------------------------------------------------|
| ProxyAddr   | Unsigned16 | 0 to 65 535         | The address of the routing device selected by the new device (Unicast address)                    |
| PhyAddr     | Unsigned64 | 0 to ( $2^{64}-1$ ) | 64-bit physical address of the new device                                                         |
| SecMaterial | Unsigned32 | 0 to ( $2^{32}-1$ ) | Device security material. It is generated with 64-bit address encrypted by KJ. Using bit 0-bit 31 |
| Status      | Unsigned8  | 0 to 255            | Execution result of the request<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved            |

**11.5.2.4 DLME-SEC.confirm**

On receipt of the device security material getting response packet, the DLSE of the new device will invoke DLME-SEC.confirm and inform the DMAP.

The semantics of DLME-SEC.confirm are described as follows:

```
DLME-SEC.confirm (
 PhyAddr,
 SecMaterial,
 Status
)
```

Table 198 specifies the parameters for DLME-SEC. confirm.

**Table 198 – DLME-SEC.confirm parameters**

| Name        | Data type  | Valid range       | Description                                                                                       |
|-------------|------------|-------------------|---------------------------------------------------------------------------------------------------|
| PhyAddr     | Unsigned64 | 0 to $(2^{64}-1)$ | The address of the routing device selected by the new device (unicast address)                    |
| SecMaterial | Unsigned32 | 0 to $(2^{32}-1)$ | Device security material. It is generated by 64-bit address encrypted by the KJ. Using 0-31 bits. |
| Status      | Unsigned8  | 0 to 255          | Execution result of the request<br>0 = SUCCESS;<br>1 = FAILURE;<br>Others are reserved.           |

#### 11.5.2.5 Time sequence for device security joining

In the star and mesh architecture, if the SecEnableFlag = 1 (see 6.9.1.2.1), Figure 81 and Figure 82 illustrate examples of the security joining process of field devices.

IECNORM.COM : Click to view the full PDF of IEC 62601 ed 2.0:2015

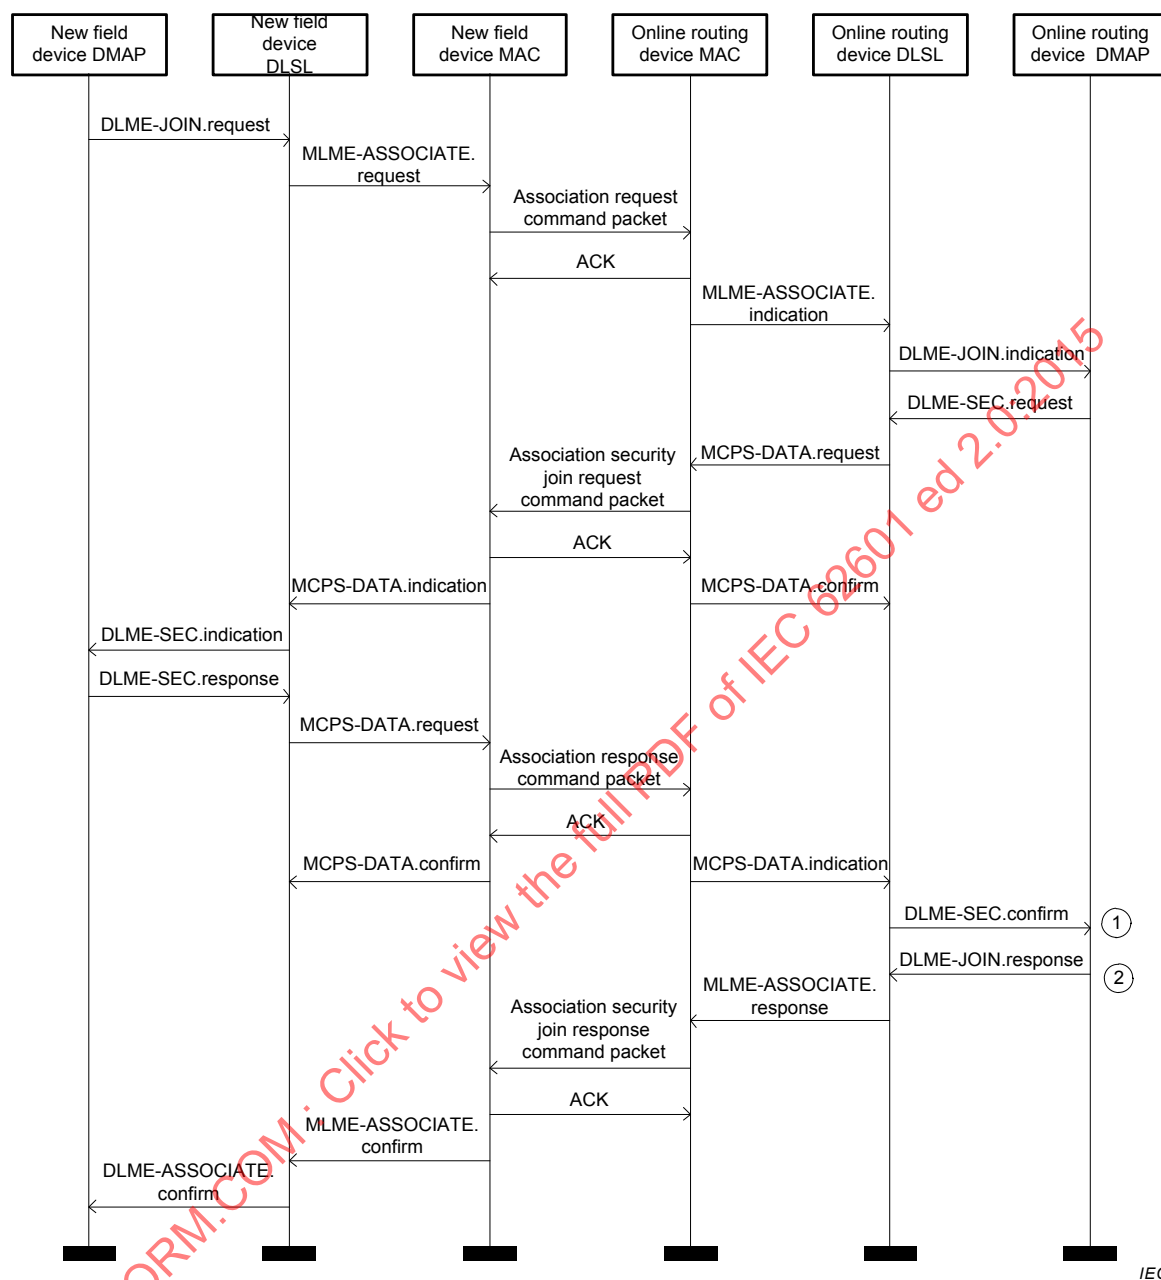


**Figure 81 – Time sequence for field device joining (field device to routing device)**




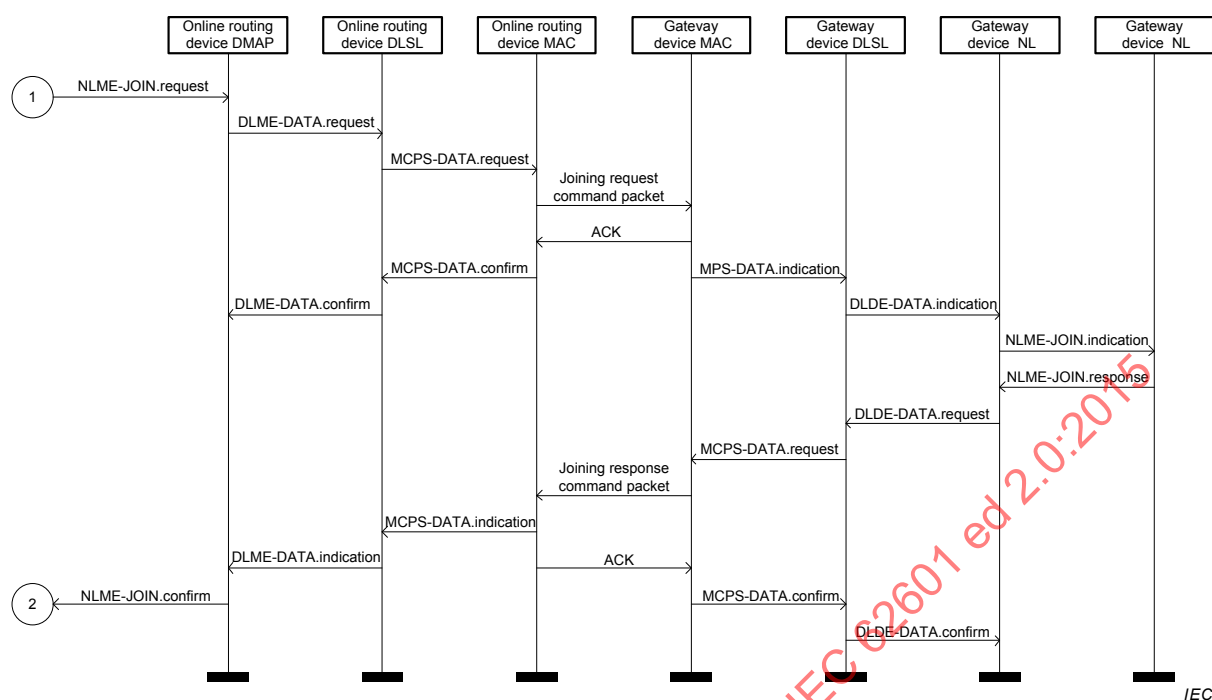


**Figure 82 – Time sequence for field device joining (routing device to gateway device)**

Figure 83, Figure 84, and Figure 85 illustrate examples of the join process of a routing device.

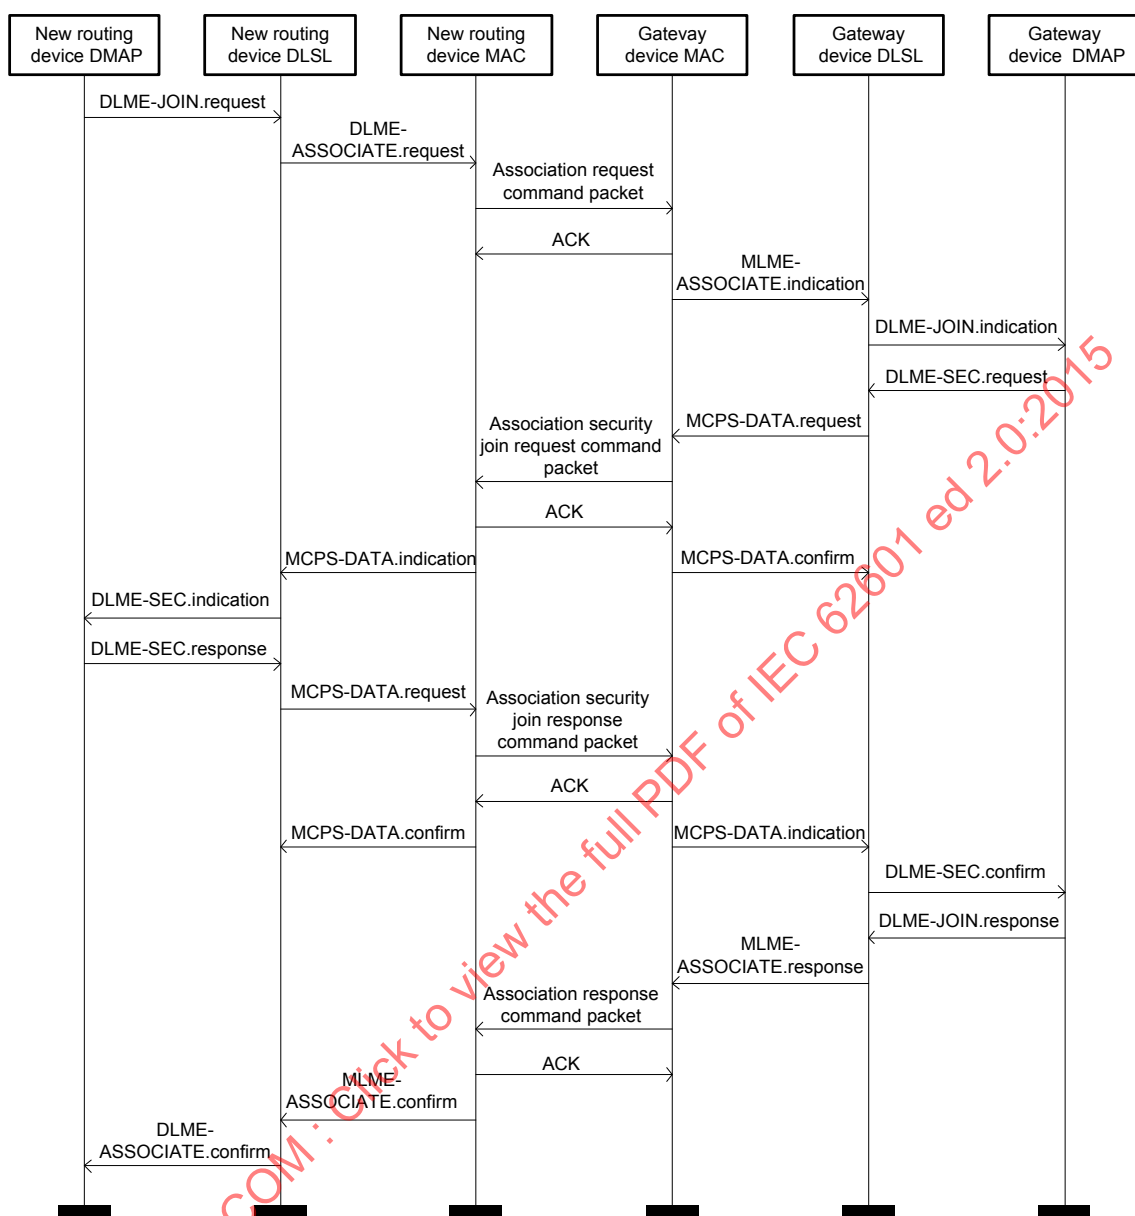

IEC

Figure 83 – One-hop joining process for routing device

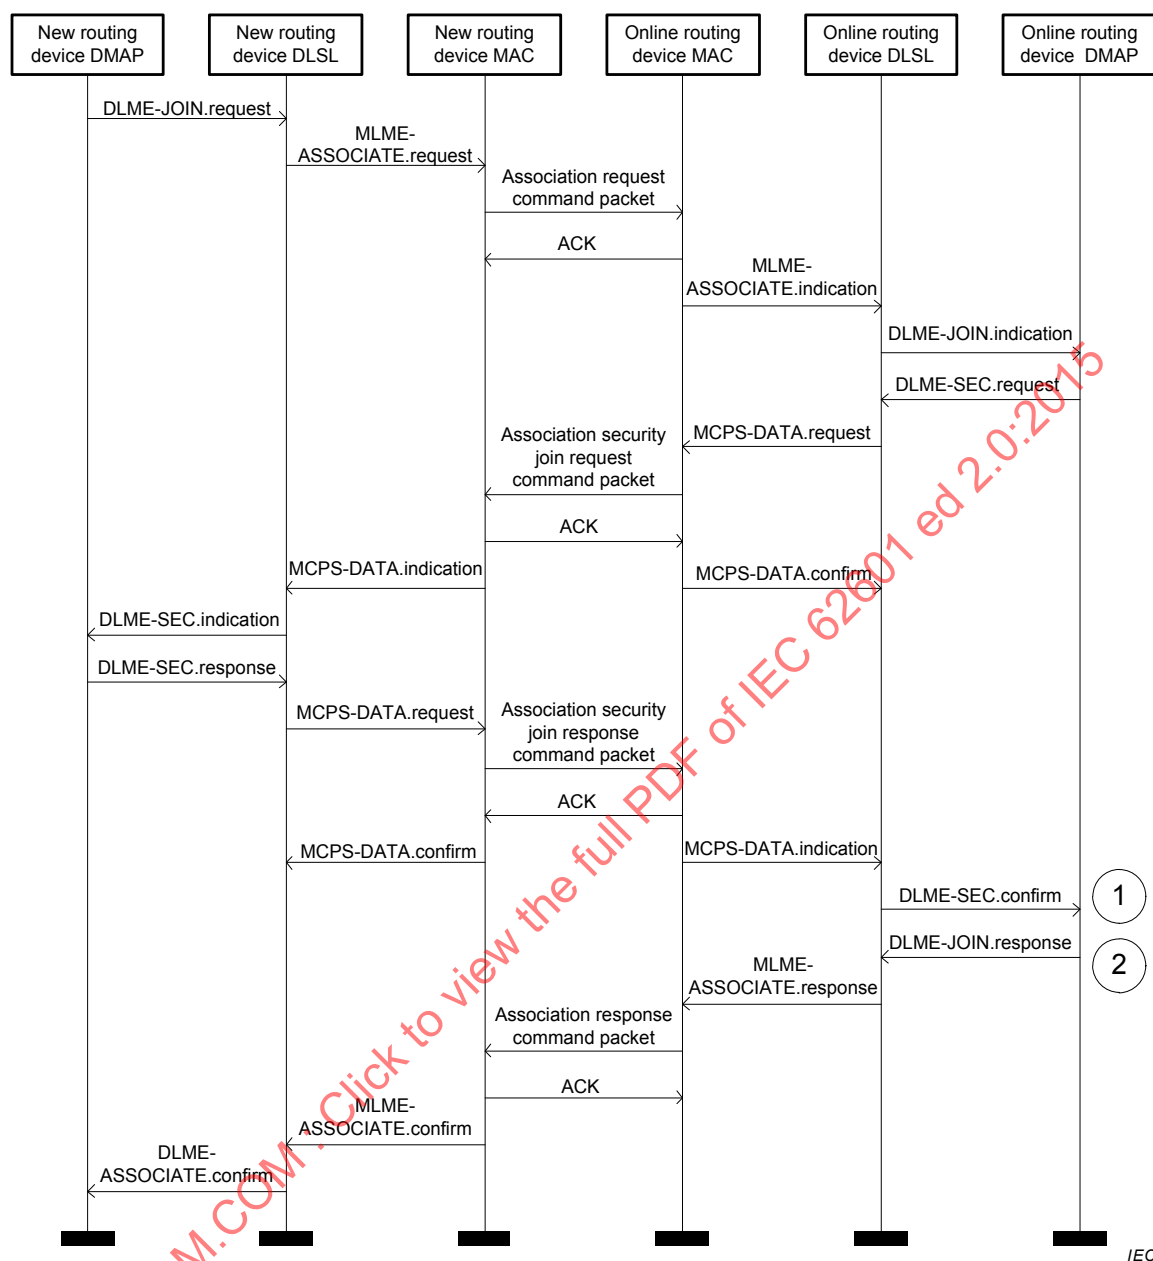


Figure 84 – Multi-hop join process of routing device (new routing device to routing device)

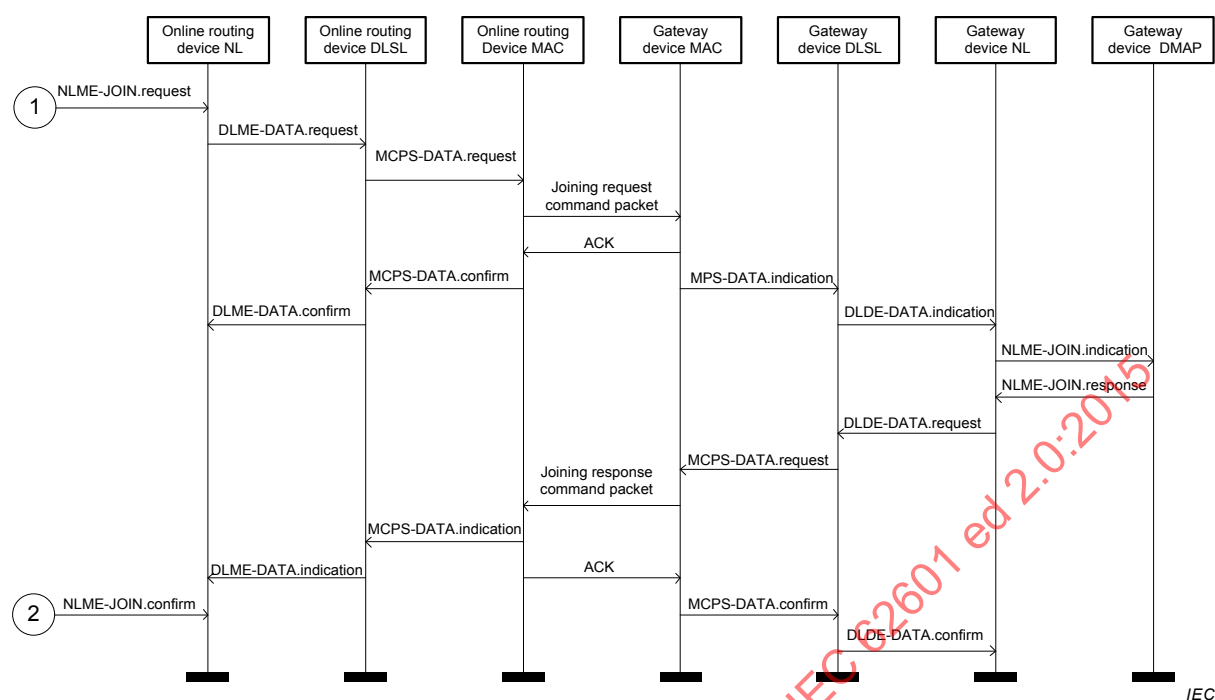


**Figure 85 – Multi-hop join process of routing device (routing device to gateway device)**

## 11.6 Secure transportation

### 11.6.1 Process of secure transportation from field device to host configuration computer

If the aggregation functions of routing devices and field device are not supported, the process of secure transportation from a field device to the host configuration computer includes the following steps.

- According to the SecMode and SecLevel in the MIB, the security management module of the DMAP in the field device encrypts the ASL payload, gets the integrity MIC in AL and sends it to the NL. According to the SecMode and SecLevel in the MIB, the security management module of the DMAP in the field device encrypts the DLSL payload and acquires the integrity MIC. Then it is sent to the routing device.
- When the routing device receives the packet, it decrypts the data frame and checks the integrity with the MIC in the DLSL, and then uses the next hop DLSL key to get the integrity MIC and encrypt the DLSL payload. Then the packet will be forwarded to the gateway device.
- When the gateway device receives the packet, the security management module will decrypt the packet and check the MIC on the DLSL and the ASL. Then the gateway device sends these data to the host configuration computer.

If the aggregation function of a field device is supported, the process of secure transportation from a field device to the host configuration computer includes the following steps.

- If the field device supports the data aggregation, it encrypts the payloads of multiple process data from multiple UAOs. According to the SecMode and SecLevel in the MIB, the security management module of the DMAP in the field device encrypts the ASL payload, acquires the integrity MIC in AL and sends it to the NL. According to the SecMode and SecLevel in the MIB, the security management module of the DMAP in the field device encrypts the DLSL payload and acquires the integrity MIC. Then the encrypted packet is sent to the routing device.
- If the aggregation function of a routing device is not supported, the routing device receives the packet. The routing device checks the MIC and decrypts the data packet on the DLSL. According to the SecMode and SecLevel in the MIB, the security management

module of the DMAP in the routing device encrypts the DLSL payload and gets the integrity MIC. Then the packet will be forwarded to the gateway device.

- c) If the aggregation function of a routing device is supported, the NL informs the DMAP to aggregate these payloads and obtains a new packet. According to the SecMode and SecLevel in the MIB, the security management module of the DMAP in the routing device firstly encrypts the ASL payload and acquires the integrity MIC; then the security management module of the DMAP in the routing device encrypts the DLSL payload and acquires the integrity MIC in the DLSL. The encrypted packet will be forwarded to the gateway device.
- d) When the gateway device receives the packet, the security management module checks the MIC and decrypts the packet in the DLSL and ASL. The packet is disaggregated and is sent to the host configuration computer.

#### **11.6.2 Process of secure transportation from host configuration computer to field device**

This process is the reverse transportation process from a field device to the host configuration computer.

IECNORM.COM : Click to view the full PDF of IEC 62601 ed 2.0:2015

## **Annex A** (informative)

### **Security strategy for WIA-PA network**

#### **A.1 Risk analysis for WIA-PA network**

As an open system, the WIA-PA network has potential security risks. According to the sources, these risks may either be from inter-networks or other intra-networks of a company or be from the internal WIA-PA networks. The WIA-PA network may suffer some threats, such as invasion, data destruction, and replay attacks.

Therefore, some security measures should be taken to ensure the security operations by the WIA-PA users, to protect the internal resources, and to maintain the normal system operations. The main objectives of the WIA-PA network security are to protect the normal system operations, to find the attacks and adopt corresponding methods as soon as possible, to limit the damage to the lowest level, and to return the network to its normal state as soon as possible after being attacked.

#### **A.2 Security principles for WIA-PA network**

According to the characteristics of the WIA-PA network, the following security measures and security principles are recommended:

- a) easy deployment and use;
- b) be optional for the security services and security measures;
- c) reduce the manual operation as much as possible;
- d) reduce the transmission of security information as much as possible;
- e) use encryption technologies based on hardware; and
- f) use the existing encryption and authentication technologies in addition to the published standard.

#### **A.3 Security objectives for WIA-PA network**

The objectives of security in the WIA-PA network include:

- a) border protection, which provides the border protection for the physical network;
- b) system availability, which is used to access system resources when needed by legal users;
- c) data integrity, which is used to ensure the consistency of the information and to prevent the illegal users in the system from modifying the data;
- d) device authenticity, which is used to authenticate the device identity in the WIA-PA network;
- e) confidentiality, which is used to ensure that the system hardware, software, and data can only be used by legal users;
- f) key management, which is used to perform the functions of security key updating and management.

#### **A.4 Graded and layered security system**

Based on their business, service types, and service objects, users employ different security methods and measures to confront security risks, risk grades, and required security levels. As for the limitations of the computing resources and the computing abilities of field devices, more attention should be paid to the border security of the WIA-PA network.

The graded and layered security system is shown in Table A.1.

**Table A.1 – Graded and layered security measures for WIA-PA network**

| <b>WIA-PA<br/>network security level</b> | <b>Level 0</b>                    | <b>Level 1</b>                                                        | <b>Level 2</b>                                                    |
|------------------------------------------|-----------------------------------|-----------------------------------------------------------------------|-------------------------------------------------------------------|
| Border protection                        | Gateway of message filtering      | Gateway of protocol translation and message filtering                 | Gateway of IPSec translation and message filtering                |
| Security measure                         | Authentication<br>Integrity check | Authentication<br>Access control<br>Integrity check<br>XOR encryption | Authentication<br>Access control<br>Integrity check<br>Encryption |

Both the DLSL and the AL in the WIA-PA network have the ability to establish secure connections. When a routing device forwards data packets, the security levels of the original data packets cannot be lowered. The security levels of the data packets are set according to Table A.2.

**Table A.2 – Security levels of data packets**

| <b>Incoming security level</b> | <b>Outgoing security level</b>  |                               |                               |                             |
|--------------------------------|---------------------------------|-------------------------------|-------------------------------|-----------------------------|
|                                | <b>Uncheck and unencryption</b> | <b>Encryption and Uncheck</b> | <b>Check and unencryption</b> | <b>Encryption and check</b> |
| Uncheck and unencryption       | allowed                         | allowed                       | allowed                       | allowed                     |
| Encryption and uncheck         | not allowed                     | allowed                       | not allowed                   | allowed                     |
| Check and unencryption         | not allowed                     | not allowed                   | allowed                       | allowed                     |
| Encryption and check           | not allowed                     | not allowed                   | not allowed                   | allowed                     |

## Annex B (informative)

### Format description

#### B.1 Time sequence diagram

Figure B.1 depicts the time sequence diagram. It is an interaction that focuses on the sequence of messages between stack layers of the WIA-PA network devices on the lifelines.

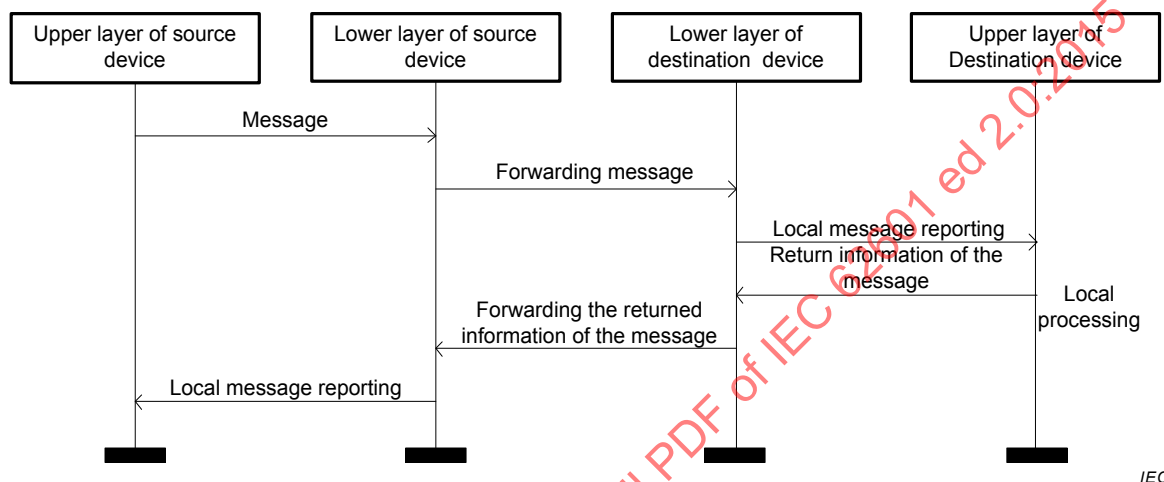


**Figure B.1 – Time sequence diagram**

The stack layers of the WIA-PA network devices are represented by rectangular blocks. Time is represented by vertical lines. A message is represented by an arrow. In this document, a full arrow is used to depict the general occurrence of a message independently of synchronous or asynchronous handling of the message. The sequence of messages is defined as the order of messages starting from the top of the diagram.

#### B.2 Packet or frame format

The definitions of a packet and a frame format have same structure. The main difference is their functional range. The packet format is used for NL and ASL, while the frame format is used for MAC and DLSL.

The field format in octet(s) of a packet or a frame is shown in Table B.1.

**Table B.1 – Packet or frame format in octet(s)**

|                    | Packet or frame format in octet(s) |         |     |         |
|--------------------|------------------------------------|---------|-----|---------|
| Length in octet(s) | $X_1$                              | $X_2$   | ... | $X_N$   |
| Field name         | Field 1                            | Field 2 | ... | Field N |

As shown in Table B.1, the value of  $X_i$  ( $i=1,2,\dots,N$ ) describes the length in the octet(s) of the corresponding packet/frame field. The transmission of a packet/frame should be from the least significant octet to the most significant octet, i.e. the least significant octet of Field 1 should be transmitted first.



One field may have several lengths, depending on different contexts. In those cases,  $X_{i1}/\dots/X_{iM}$  should be used instead of  $X_i$  to specify the length of Field  $i$ .

One field may contain subfields. Table B.2 specifies the definition of the subfield format if a field with 1-octet length is further divided into several subfields in bit(s).

**Table B.2 – Subfield format in bit(s)**

|                  | Subfield format in bit(s) |            |     |            |
|------------------|---------------------------|------------|-----|------------|
| Length in bit(s) | $X_1$                     | $X_2$      | ... | $X_N$      |
| Subfield name    | Subfield 1                | Subfield 2 | ... | Subfield m |

As shown in Table B.2, the value of  $X_i$  ( $i=1,2,\dots, N$ ) describes how many bits are occupied by the corresponding subfield, which is set from 1 to 8. The sum of  $X_1, X_2, \dots$  and  $X_N$  is fixed at 8. The subfields from left to right are allocated from bit 0 to bit 7. The transmission of the subfield format should be from the least significant bit to the most significant bit, i.e. the least significant bit of Subfield 1 should be transmitted first.

IECNORM.COM : Click to view the full PDF of IEC 62601:2015

## Annex C (informative)

### Example of UAO

#### C.1 General

This document specifies UAOs by using an object-oriented approach. An UAO has its own attributes and methods. The attributes include the object name, attribute name, attribute identifier, and data type of the attribute. The methods provided by the UAOs are used to realize the operations of these attributes.

The UAOs may include Analog Input Object (AIO), Analog Output Object (AOO), Digital Input Object (DIO), and Digital Output Object (DOO). These objects should be defined in the application profiles. This document utilizes AIO as an example to specify the use of UAOs. Furthermore, DAGO, PAGO, and DGO are regarded as special UAOs.

#### C.2 Analog input object

##### C.2.1 Overview

An AIO is used to sample the industrial process and convert the measured value to the data value with physical dimensions. The methods supported by the AIO are shown in Table 171.

##### C.2.2 Class attribute of AIO

Table C.1 specifies the class attribute of AIO.

**Table C.1 – AIO class attribute**

| Attribute name    | Attribute identifier | Data type | Supporting method | Description                                                            |
|-------------------|----------------------|-----------|-------------------|------------------------------------------------------------------------|
| Object identifier | 0                    | Unsigned8 | Read              | The unique identifier of an object that is used for object addressing. |

##### C.2.3 Instance attribute of AIO

Table C.2 specifies the instance attributes of AIO.

**Table C.2 – AIO instance attributes**

| Attribute identifier | Attribute name        | Data type  | Supporting method         | Description                                                                                                  |
|----------------------|-----------------------|------------|---------------------------|--------------------------------------------------------------------------------------------------------------|
| 1                    | Instance ID           | Unsigned8  | READ                      | The unique identifier of an object instance                                                                  |
| 2                    | ProcessValue          | Float      | READ                      | Industrial process variable                                                                                  |
| 3                    | OutValue              | Float      | READ<br>PUBLISH<br>REPORT | Output value based on ProcessValue                                                                           |
| 4                    | SimulateValue         | Float      | READ/WRITE                | Value written by operator to simulate the OutValue                                                           |
| 5                    | DefaultValue          | Float      | READ/WRITE                | Default value for the OutValue if a sensor or sensor electronic fault is detected                            |
| 6                    | HighWarning           | Float      | READ/WRITE                | High limit value of warning                                                                                  |
| 7                    | HighHighAlm           | Float      | READ/WRITE                | High limit value of alarm                                                                                    |
| 8                    | LowWarning            | Float      | READ/WRITE                | Low limit value of warning                                                                                   |
| 9                    | LowLowAlm             | Float      | READ/WRITE                | Low limit value of alarm                                                                                     |
| 10                   | EngineeringUnit       | Unsigned16 | READ/WRITE                | Engineering unit for all the values                                                                          |
| 10                   | Action                | Unsigned8  | READ/WRITE                | Start-up/stop measurement process                                                                            |
| 11                   | SamplePeriod          | Unsigned32 | READ/WRITE                | Used for setting sampling cycle                                                                              |
| 12                   | Alarm                 | Unsigned8  | READ                      | 0 = Normal;<br>1 = HighWarning;<br>2 = LowWarning;<br>3 = HighAlarm;<br>4 = LowAlarm<br>5 to 255 = Reserved. |
| 13 to 99             | Reserved              |            |                           | Reserved for future usage                                                                                    |
| 100 to 255           | Manufacturer specific |            |                           | Manufacturer specific attributes                                                                             |

## **Annex D** (informative)

### **Country-specific and region-specific provisions**

The WIA-PA field medium employs a widely used and accepted physical interface and is therefore appropriate for use in many geographic regions of the world. However, some regions have special considerations that may impose different regulatory requirements. Even if a product is designed to meet those regulatory requirements, its use is often not legally permitted until it has undergone compliance testing and any required local permits or certificates have been issued by country-specific regulatory agencies.

This document is designed to support operation within a fixed geographic area that operates under uniform regulations. As such it is intended to support operation anywhere in the world, as discussed in 8.4.11.

This document does not specify what regulatory certifications or permit a product compliant to this document needs; this is the responsibility of the product manufacturer and the end user to determine. A product may have certifications for operation in multiple countries or regions.

Annex E addresses specific provisions that have been made in this document to support regulatory approval of fixed-locale equipment and systems.

Radio regulations often require devices to operate at constrained power levels at all times, including during over-the-air provisioning. Some identified EIRP thresholds are: 10 mW/MHz (Japan); 10 dBm (China); 10 dBm, 10 dBm/MHz, or 20 dBm (EC in the 2,4 GHz ISM-band); 36 dBm with at most 6 dBi antenna gain (US FCC).

In some countries, such as France, emission levels on certain channels may need to be attenuated. In other countries, such as Korea, the number and range of channels needs to be constrained.

## Annex E (informative)

### Regional modification for compliance with ETSI standards

#### E.1 General

WIA-PA restricts the usage of the spectrum to the 2,4 GHz ISM band, see Clause 7.

Additional requirements apply in Europe to wide band radio frequency transmitting equipment operating in this 2,4 GHz ISM band. Some of these European requirements can be met by complying with two Harmonized Standards from ETSI, EN 300 328 and EN 300 440-2.

Annex E provides additional requirements for compliance of WIA-PA (IEC 62601) devices operating in the 2,4 GHz ISM band with these two ETSI standards:

- EN 300 440-2 is applicable for equipment (devices) with a maximum transmit power between 0 dBm and 10 dBm EIRP. (see Clause E.2);
- EN 300 328 is applicable for equipment (devices) with a maximum transmit power between 10 dBm and 100 dBm EIRP. (see Clause E.3).

NOTE In Annex E, the term “devices” refers to electronics with radios operating according to the appropriate standard; these include but are not limited to gateway devices, routing devices and field devices.

#### E.2 Compliance with EN 300 440-2

Table E.1 specifies the additional requirements which allow WIA-PA devices operating in the 2,4 GHz ISM band to satisfy the transmit power limitation requirements of EN 300 440-2.

NOTE EN 300 440-2 is listed as a Harmonized Standard under the R&TTE Directive 1999/5/EC which will be superseded by the Radio Equipment Directive 2014/53/EU.

**Table E.1 – Applicable EN 300 440-2 requirements list**

| Parameter              | EN 300 440-2 requirements | Additional requirements                                                                                                                                                                                                                                                                                                                                              |
|------------------------|---------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Maximum Transmit Power | 10 dBm (10 mW) EIRP       | Devices shall be configured to emit less than 10 dBm EIRP, that means less than 10 dBm electrical power with an antenna gain of 0 dBi. If the antenna gain is different from 0 dBi, then the resulting EIRP shall be less than 10 dBm by an adequate electrical power adjustment. This requirement overwrites the requirement about electrical power given in 7.3.6. |

#### E.3 Compliance with EN 300 328

Table E.2 specify the additional requirements which allow WIA-PA devices operating in the 2,4 GHz ISM band to satisfy various requirements of EN 300 328.

NOTE EN 300 328 V1.9.1 is listed as a Harmonized Standard under the R&TTE Directive 1999/5/EC which will be superseded by the Radio Equipment Directive 2014/53/EU.

**Table E.2 – Applicable EN 300 328 requirements list**

| Parameter              | EN 300 328 V1.9.1 requirements | Additional requirements                                                                   |
|------------------------|--------------------------------|-------------------------------------------------------------------------------------------|
| Maximum Transmit Power | 20 dBm (100 mW) EIRP           | Devices shall be configured to emit less than 10 dBm $\pm$ 3 dBm EIRP according to 7.3.6. |

| Parameter                       | EN 300 328 V1.9.1 requirements                                                                                                                                                                                                                                                                                                                                   | Additional requirements                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Maximum Power Spectral Density  | 10 mW/MHz EIRP                                                                                                                                                                                                                                                                                                                                                   | Due to the nature of DSSS (see IEEE 802.15.4-2011, Clause 10), a maximum EIRP of 13 dBm results in a spectral density below 10mW/MHz as required.                                                                                                                                                                                                                                                                                                                                                                      |
| Duty Cycle, Tx-sequence, Tx-gap | <p>For non-adaptive equipment with maximum EIRP above 10 dBm:</p> <p>The Duty Cycle shall be equal to or less than the maximum value declared by the supplier.</p> <p>Tx-sequence time <math>\leq</math> 10ms.</p> <p>The minimum Tx-gap time following a Tx-sequence shall be equal to the duration of that proceeding Tx-sequence with a minimum of 3.5 ms</p> | <p>No additional requirement needed. The requirements are fulfilled by the following characteristics.</p> <p>The maximum Tx-sequence time for a WIA-PA packet is 4,256 ms in a 10 ms time slot according to Table E.3, T<sub>maxPHY</sub> and the transmission time for a WIA-PA ACK is 352 <math>\mu</math>s according to Table E.3 TACK.</p> <p>The Maximum Tx-sequence Time for WIA-PA is identical to maximum transmission time; the Minimum Tx-gap Time for WIA-PA is identical to maximum transmission time.</p> |
| Medium Utilization Limit        | <p>For non-adaptive equipment with maximum EIRP above 10 dBm:</p> <p>Maximum Medium Utilization factor = 10 %.</p>                                                                                                                                                                                                                                               | <p>The Duty Cycle of a WIA-PA device cannot exceed 43 % based on a 10 ms timeslot and a maximum transmission time for a WIA-PA packet of 4,256 ms in a 10 ms time slot according to Table E.3. This results in a MU factor value of less than 10 % as required.</p> <p><math>MU = 13 \text{ dBm EIRP} \times 43 \% &lt; 9 \%</math></p>                                                                                                                                                                                |

Table E.3 – Timeslot timing definitions and calculations

| Symbol              | Time value    | Calculation basis                                                                                                                                                                                                                                                                                                                             |
|---------------------|---------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| T <sub>maxPHY</sub> | 4 256 $\mu$ s | For 2 400 to 2 483, 5 MHz frequency band and 250 Kbps bit rate, the maximum time to transmit a PHY packet is 4 256 $\mu$ s, which includes 128 $\mu$ s Preamble (see Table 71 of IEEE STD 802.15.4-2011), 32 $\mu$ s SFD (see Table 71 of IEEE STD 802.15.4-2011), and 4 096 $\mu$ s PHR/PHY Payload (see Table 70 of IEEE STD 802.15.4-2011) |
| T <sub>ACK</sub>    | 352 $\mu$ s   | WIA-PA devices shall use the IEEE STD 802.15.4-2011 ACK. The total length of ACK is 11 octets (see Figure 47 and Figure 67 in IEEE STD 802.15.4-2011,) and the time to transmit an ACK is 352 $\mu$ s for 2 400 – 2 483,5 MHz frequency band and 250 Kbps bit rate                                                                            |
| T <sub>Offset</sub> | 2 120 $\mu$ s | Beginning of the timeslot to when the receiver shall be listening                                                                                                                                                                                                                                                                             |
| T <sub>Delay</sub>  | 1 000 $\mu$ s | End of frame to start of Acknowledgment                                                                                                                                                                                                                                                                                                       |

## Bibliography

ISO/IEC/IEEE 60559:2011, *Information technology – Microprocessor Systems – Floating-Point arithmetic*

IEC 61804-2, *Function blocks (FB) for process control – Part 2: Specification of FB concept*

IEC 61499-1, *Function blocks – Part 1: Architecture*

IEC 61499-2, *Function blocks – Part 2: Software tools requirements*

IEC TR 62390:2005, *Common automation device – Profile guideline*

ISO/IEC 7498-1, *Information technology – Open Systems Interconnection – Basic Reference Model: The Basic Model*

ISO/IEC 9797-1:2011, *Information technology – Security techniques – Message Authentication Codes (MACs) – Part 1: Mechanisms using a block cipher*

ISO/IEC 9797-2:2011, *Information technology – Security techniques – Message Authentication Codes (MACs) – Part 2: Mechanisms using a dedicated hash-function*

ISO 3166-1, *Codes for the representation of names of countries and their subdivisions – Part 1: Country codes*

ISO 10181-2:1996, *Information technology – Open Systems Interconnection – Security frameworks for open systems: Authentication framework*

ISO 10181-4:1997, *Information technology – Open Systems Interconnection – Security frameworks for open systems: Non-repudiation framework*

ISO 10181-5:1996, *Information technology – Open Systems Interconnection – Security frameworks for open systems: Confidentiality framework*

ISO 10181-6:1996, *Information technology – Open Systems Interconnection – Security frameworks for open systems: Integrity framework*

ISO/IEC 15408-1, *Information technology – Security techniques – Evaluation criteria for IT security – Part 1: Introduction and general model*

ISO/IEC 15408-2, *Information technology – Security techniques – Evaluation criteria for IT security – Part 2: Security functional components*

ISO/IEC TR 10000-1:1998, *Information technology – Framework and taxonomy of International Standardized Profiles – Part 1: General principles and documentation framework*

ISO/IEC 17799:2005<sup>1</sup>, *Information technology – Security techniques – Code of practice for information security management*

ETSI EN 300 328 V1.8.1 (2012-06), *Electromagnetic compatibility and Radio spectrum Matters (ERM); Wideband transmission systems; Data transmission equipment operating in*

---

<sup>1</sup> Withdrawn.

*the 2,4 GHz ISM band and using wide band modulation techniques; Harmonized EN covering essential requirements under article 3.2 of the R&TTE Directive*

ETSI EN 300 440-2, V1.4.1 (2010-08), *Electromagnetic compatibility and Radio spectrum Matters (ERM); Short range devices; Radio equipment to be used in the 1 GHz to 40 GHz frequency range; Part 2: Harmonized EN covering the essential requirements of article 3.2 of the R&TTE Directive*

Directive 1999/5/EC of the European Commission, Radio equipment and telecommunication terminal equipment (R&TTE),  
available at: <[http://ec.europa.eu/enterprise/sectors/rtte/index\\_en.htm](http://ec.europa.eu/enterprise/sectors/rtte/index_en.htm)>

Directive 2014/53/EU of the European Parliament and of the Council, Radio Equipment (repealing Directive 1999/5/EC),  
available at: <[http://ec.europa.eu/enterprise/sectors/rtte/index\\_en.htm](http://ec.europa.eu/enterprise/sectors/rtte/index_en.htm)>

IEEE 64, *Guidelines for 64-bit Global Identifier (EUI-64™)*

IEEE 754:2008, *Standard for floating-point arithmetic*

---

IECNORM.COM : Click to view the full PDF of IEC 62601 ed 2.0:2015



## SOMMAIRE

|                                                                                         |     |
|-----------------------------------------------------------------------------------------|-----|
| AVANT-PROPOS .....                                                                      | 236 |
| 1 Domaine d'application .....                                                           | 238 |
| 2 Références normatives .....                                                           | 238 |
| 3 Termes, définitions et abréviations .....                                             | 238 |
| 3.1 Termes et définitions .....                                                         | 238 |
| 3.2 Abréviations .....                                                                  | 243 |
| 4 Définition des types de données .....                                                 | 245 |
| 5 Aperçu de WIA-PA .....                                                                | 245 |
| 5.1 Types d'appareils .....                                                             | 245 |
| 5.2 Topologie de réseau .....                                                           | 246 |
| 5.3 Architecture de protocole .....                                                     | 249 |
| 5.4 Interconnexions .....                                                               | 251 |
| 6 Gestion de système .....                                                              | 252 |
| 6.1 Généralités .....                                                                   | 252 |
| 6.2 Cadre de travail de la gestion système .....                                        | 254 |
| 6.3 Processus de rattachement .....                                                     | 256 |
| 6.3.1 Processus de mise en service .....                                                | 256 |
| 6.3.2 Processus de rattachement d'un appareil de routage .....                          | 256 |
| 6.3.3 Processus de rattachement d'un appareil de terrain .....                          | 258 |
| 6.3.4 Adressage et attribution d'adresses .....                                         | 260 |
| 6.4 Relation de communication virtuelle (VCR, Virtual Communication Relationship) ..... | 262 |
| 6.4.1 Définition .....                                                                  | 262 |
| 6.4.2 Prise en charge du protocole pour la VCR .....                                    | 263 |
| 6.4.3 Etablissement de VCR .....                                                        | 263 |
| 6.4.4 Libération de VCR .....                                                           | 264 |
| 6.5 Configuration du routage et allocation de ressources de communication .....         | 264 |
| 6.5.1 Configuration de routage .....                                                    | 264 |
| 6.5.2 Cadre de travail de l'allocation de ressources de communication .....             | 264 |
| 6.5.3 Règles de priorité des unités DLPDU et de programmation .....                     | 265 |
| 6.5.4 Affectation de ressources de communication à l'appareil de routage .....          | 266 |
| 6.5.5 Affectation de ressources de communication à l'appareil de terrain .....          | 268 |
| 6.6 Agrégation et désagrégation .....                                                   | 271 |
| 6.6.1 Agrégation .....                                                                  | 271 |
| 6.6.2 Désagrégation .....                                                               | 273 |
| 6.6.3 Exemple du processus d'agrégation à deux niveaux .....                            | 274 |
| 6.6.4 Gestion des objets d'agrégation et de désagrégation .....                         | 276 |
| 6.7 Surveillance de performance .....                                                   | 278 |
| 6.7.1 Rapport sur la défaillance des chemins .....                                      | 278 |
| 6.7.2 Rapport sur l'état des appareils .....                                            | 279 |
| 6.7.3 Rapport sur la condition des canaux .....                                         | 280 |
| 6.8 Processus de départ .....                                                           | 280 |
| 6.8.1 Généralités .....                                                                 | 280 |
| 6.8.2 Processus de départ d'un appareil de routage .....                                | 281 |
| 6.8.3 Processus de départ d'un appareil de terrain .....                                | 283 |
| 6.9 Services et base d'informations de gestion .....                                    | 286 |

|        |                                                                              |     |
|--------|------------------------------------------------------------------------------|-----|
| 6.9.1  | Base d'informations de gestion .....                                         | 286 |
| 6.9.2  | Services MIB .....                                                           | 301 |
| 7      | Couche physique .....                                                        | 304 |
| 7.1    | Généralités .....                                                            | 304 |
| 7.2    | Exigences générales basées sur l'IEEE 802.15.4-2011 .....                    | 305 |
| 7.3    | Exigences supplémentaires .....                                              | 306 |
| 7.3.1  | Généralités .....                                                            | 306 |
| 7.3.2  | Affectations de fréquence .....                                              | 306 |
| 7.3.3  | Numéros de canal et affectations de fréquence .....                          | 306 |
| 7.3.4  | Émetteurs-récepteurs radio .....                                             | 307 |
| 7.3.5  | Performance radio exigée améliorée ou non spécifiée .....                    | 307 |
| 7.3.6  | Puissance d'émission .....                                                   | 307 |
| 7.3.7  | Contrôle de la puissance de sortie .....                                     | 307 |
| 7.3.8  | Sensibilité du récepteur .....                                               | 307 |
| 7.3.9  | Attributs PIB de la PHY .....                                                | 308 |
| 8      | Couche liaison de données .....                                              | 309 |
| 8.1    | Généralités .....                                                            | 309 |
| 8.2    | Pile de protocole .....                                                      | 309 |
| 8.3    | Vue d'ensemble de la couche MAC et extension de fonction .....               | 309 |
| 8.3.1  | Vue d'ensemble de la couche MAC .....                                        | 309 |
| 8.3.2  | Exigences générales basées sur l'IEEE 802.15.4-2011 .....                    | 310 |
| 8.3.3  | Extension de fonction MAC .....                                              | 314 |
| 8.4    | Description de la fonction de la sous-couche liaison de données (DLSL) ..... | 315 |
| 8.4.1  | Généralités .....                                                            | 315 |
| 8.4.2  | Coexistence .....                                                            | 316 |
| 8.4.3  | Communication en intervalles de temps .....                                  | 316 |
| 8.4.4  | Superframe WIA-PA .....                                                      | 316 |
| 8.4.5  | Saut de fréquence .....                                                      | 318 |
| 8.4.6  | Transmission des données de cycle long .....                                 | 319 |
| 8.4.7  | Stratégie de nouvelle tentative .....                                        | 320 |
| 8.4.8  | Service de gestion .....                                                     | 321 |
| 8.4.9  | Mesure de la qualité de liaison radio et de la condition des canaux .....    | 321 |
| 8.4.10 | Sécurité .....                                                               | 321 |
| 8.4.11 | Code de pays .....                                                           | 321 |
| 8.4.12 | Diagramme d'états de DSL .....                                               | 322 |
| 8.5    | Services de données de la sous-couche liaison de données .....               | 329 |
| 8.5.1  | Généralités .....                                                            | 329 |
| 8.5.2  | DLDE-DATA.request .....                                                      | 329 |
| 8.5.3  | DLDE-DATA.confirm .....                                                      | 330 |
| 8.5.4  | DLDE-DATA.indication .....                                                   | 331 |
| 8.5.5  | Séquence temporelle de service de données DSL .....                          | 332 |
| 8.6    | Services de gestion de la sous-couche liaison de données .....               | 333 |
| 8.6.1  | Généralités .....                                                            | 333 |
| 8.6.2  | Services de découverte de réseau .....                                       | 334 |
| 8.6.3  | Services de rattachement d'appareil .....                                    | 336 |
| 8.6.4  | Services de départ d'appareil .....                                          | 339 |
| 8.6.5  | DLME-CHANNEL-CONDITION.indication .....                                      | 340 |
| 8.6.6  | DLME-NEIGHBOUR-INFO.indication .....                                         | 340 |
| 8.6.7  | DLME-COMM-STATUS.indication .....                                            | 341 |

|        |                                                                       |     |
|--------|-----------------------------------------------------------------------|-----|
| 8.6.8  | Services d'entretien .....                                            | 341 |
| 8.6.9  | Services de synchronisation du temps .....                            | 342 |
| 8.7    | Formats de trame DLSL .....                                           | 343 |
| 8.7.1  | Format général de trame .....                                         | 344 |
| 8.7.2  | Format de trame de données .....                                      | 345 |
| 8.7.3  | Format de trame de commande .....                                     | 345 |
| 9      | Couche Réseau .....                                                   | 347 |
| 9.1    | Généralités .....                                                     | 347 |
| 9.2    | Pile de protocole .....                                               | 347 |
| 9.3    | Description de fonction .....                                         | 348 |
| 9.3.1  | Généralités .....                                                     | 348 |
| 9.3.2  | Adressage .....                                                       | 349 |
| 9.3.3  | Routage .....                                                         | 349 |
| 9.3.4  | Gestion du cycle de vie des paquets .....                             | 350 |
| 9.3.5  | Rattachement à un réseau et départ d'un réseau pour un appareil ..... | 350 |
| 9.3.6  | Surveillance bout en bout des performances du réseau .....            | 350 |
| 9.3.7  | Fragmentation et réassemblage .....                                   | 350 |
| 9.3.8  | Diagramme d'états de la couche réseau .....                           | 350 |
| 9.4    | Services de données de la couche réseau .....                         | 357 |
| 9.4.1  | Généralités .....                                                     | 357 |
| 9.4.2  | NLDE-DATA.request .....                                               | 357 |
| 9.4.3  | NLDE-DATA.confirm .....                                               | 357 |
| 9.4.4  | NLDE-DATA.indication .....                                            | 358 |
| 9.4.5  | Séquence temporelle des services de données de la NL .....            | 358 |
| 9.5    | Services de gestion de la NL .....                                    | 359 |
| 9.5.1  | Généralités .....                                                     | 359 |
| 9.5.2  | Services de rapport sur l'état de communication du réseau .....       | 359 |
| 9.5.3  | Services de rattachement au réseau .....                              | 362 |
| 9.5.4  | Services de départ de réseau .....                                    | 368 |
| 9.5.5  | Services de rapport sur l'élément de groupe .....                     | 373 |
| 9.5.6  | Services de rapport sur les informations de voisins .....             | 376 |
| 9.5.7  | Services d'allocation d'itinéraire .....                              | 378 |
| 9.5.8  | Services d'allocation de ressources de communication .....            | 384 |
| 9.5.9  | Services d'agrégation et désagrégation .....                          | 403 |
| 9.5.10 | Services de rapport sur l'état des appareils .....                    | 405 |
| 9.5.11 | Rapport sur la condition des canaux .....                             | 407 |
| 9.5.12 | Services de rapport sur les chemins défaillants .....                 | 410 |
| 9.5.13 | Services d'obtention des attributs de réseau .....                    | 412 |
| 9.5.14 | Services d'établissement des attributs de réseau .....                | 415 |
| 9.6    | Formats de paquets de couche réseau .....                             | 418 |
| 9.6.1  | Format commun des paquets .....                                       | 418 |
| 9.6.2  | Format des paquets de données .....                                   | 420 |
| 9.6.3  | Format de paquet agrégé .....                                         | 420 |
| 9.6.4  | Format de paquet de commande .....                                    | 421 |
| 10     | Application layer, couche d'application .....                         | 441 |
| 10.1   | Vue d'ensemble .....                                                  | 441 |
| 10.1.1 | Généralités .....                                                     | 441 |
| 10.1.2 | Structure de la couche AL .....                                       | 441 |
| 10.1.3 | Fonctions de l'UAP .....                                              | 442 |

|                        |                                                                                                      |     |
|------------------------|------------------------------------------------------------------------------------------------------|-----|
| 10.1.4                 | Fonctions de la sous-couche application (ASL)                                                        | 442 |
| 10.2                   | UAP                                                                                                  | 443 |
| 10.2.1                 | Généralités                                                                                          | 443 |
| 10.2.2                 | UAO                                                                                                  | 443 |
| 10.2.3                 | Définition des méthodes                                                                              | 444 |
| 10.3                   | Sous-couche application                                                                              | 448 |
| 10.3.1                 | Généralités                                                                                          | 448 |
| 10.3.2                 | Entité de données de la sous-couche application (ASLDE)                                              | 448 |
| 10.4                   | Formats des paquets de la sous-couche application (ASL)                                              | 454 |
| 10.4.1                 | Généralités                                                                                          | 454 |
| 10.4.2                 | Format de paquet général ASL                                                                         | 454 |
| 10.4.3                 | Formats de paquet                                                                                    | 456 |
| 11                     | Sécurité                                                                                             | 458 |
| 11.1                   | Généralités                                                                                          | 458 |
| 11.2                   | Cadre de travail de gestion de la sécurité                                                           | 459 |
| 11.3                   | Pile de protocole de communications sécurisées                                                       | 460 |
| 11.3.1                 | Généralités                                                                                          | 460 |
| 11.3.2                 | Sécurité de la sous-couche liaison de données                                                        | 461 |
| 11.3.3                 | Sécurité de la sous-couche application (ASL)                                                         | 463 |
| 11.4                   | Gestion de clés                                                                                      | 464 |
| 11.4.1                 | Type de clé                                                                                          | 464 |
| 11.4.2                 | Distribution de clés                                                                                 | 465 |
| 11.4.3                 | Mise à jour de clé                                                                                   | 465 |
| 11.4.4                 | Etat de clé                                                                                          | 466 |
| 11.5                   | Processus de rattachement sécurisé                                                                   | 466 |
| 11.5.1                 | Processus de rattachement sécurisé d'un nouvel appareil WIA-PA                                       | 466 |
| 11.5.2                 | Services d'obtention des renseignements de sécurité de l'appareil                                    | 468 |
| 11.6                   | Transport sécurisé                                                                                   | 475 |
| 11.6.1                 | Processus de transport sécurisé entre un appareil de terrain et l'ordinateur de configuration d'hôte | 475 |
| 11.6.2                 | Processus de transport sécurisé entre l'ordinateur de configuration d'hôte et un appareil de terrain | 476 |
| Annexe A (informative) | Stratégie de sécurité pour le réseau WIA-PA                                                          | 477 |
| A.1                    | Analyse du risque pour le réseau WIA-PA                                                              | 477 |
| A.2                    | Principes de sécurité pour le réseau WIA-PA                                                          | 477 |
| A.3                    | Objectifs de sécurité pour le réseau WIA-PA                                                          | 477 |
| A.4                    | Système de sécurité gradué et stratifié                                                              | 477 |
| Annexe B (informative) | Description de format                                                                                | 479 |
| B.1                    | Diagramme de séquence temporelle                                                                     | 479 |
| B.2                    | Format de paquet ou de trame                                                                         | 479 |
| Annexe C (informative) | Exemple d'objet d'application utilisateur (UAO)                                                      | 481 |
| C.1                    | Généralités                                                                                          | 481 |
| C.2                    | Objet d'entrée analogique                                                                            | 481 |
| C.2.1                  | Vue d'ensemble                                                                                       | 481 |
| C.2.2                  | Attribut de classe de l'AIO                                                                          | 481 |
| C.2.3                  | Attribut d'instance de l'AIO                                                                         | 481 |
| Annexe D (informative) | Configurations spécifiques à un pays et spécifiques à une région                                     | 483 |
| Annexe E (informative) | Modifications régionales pour conformité aux normes ETSI                                             | 484 |

|     |                                          |     |
|-----|------------------------------------------|-----|
| E.1 | Généralités .....                        | 484 |
| E.2 | Conformité à l'EN 300 440-2 V1.4.1 ..... | 484 |
| E.3 | Conformité à l'EN 300 328 V1.8.1 .....   | 484 |
|     | Bibliographie.....                       | 486 |

|           |                                                                                                                      |     |
|-----------|----------------------------------------------------------------------------------------------------------------------|-----|
| Figure 1  | Exemple de topologie physique WIA-PA (combinaison de la configuration en étoile et de la configuration maillée)..... | 247 |
| Figure 2  | Exemple de topologie physique WIA-PA (en étoile uniquement) .....                                                    | 248 |
| Figure 3  | Modèle de référence OSI de base mappé au réseau WIA-PA .....                                                         | 251 |
| Figure 4  | Architecture de passerelle WIA-PA.....                                                                               | 251 |
| Figure 5  | Processus DMAP dans la gestion du système .....                                                                      | 253 |
| Figure 6  | Plan de gestion de système hybride centralisée et répartie .....                                                     | 255 |
| Figure 7  | Processus de rattachement d'un appareil de routage par l'intermédiaire de l'appareil de passerelle .....             | 257 |
| Figure 8  | Processus de rattachement d'un appareil de routage par l'intermédiaire d'un appareil de routage en ligne .....       | 258 |
| Figure 9  | Processus de rattachement d'un appareil de terrain par l'intermédiaire d'un appareil de passerelle.....              | 259 |
| Figure 10 | Processus de rattachement d'un appareil de terrain par l'intermédiaire d'un appareil de routage .....                | 260 |
| Figure 11 | Structure d'adresse longue d'un appareil.....                                                                        | 261 |
| Figure 12 | Structure d'adresse courte d'un appareil de routage.....                                                             | 261 |
| Figure 13 | Structure d'adresse courte d'un appareil de terrain.....                                                             | 262 |
| Figure 14 | Exemple d'affectation de ressources .....                                                                            | 265 |
| Figure 15 | Processus d'affectation de ressources de communication d'un appareil de routage .....                                | 268 |
| Figure 16 | Processus d'affectation de ressources de communication d'un appareil de terrain.....                                 | 271 |
| Figure 17 | Exemple d'agrégation et de désagrégation .....                                                                       | 276 |
| Figure 18 | Processus de rapport sur la défaillance des chemins .....                                                            | 279 |
| Figure 19 | Processus de rapport sur l'état des appareils pour l'appareil de terrain .....                                       | 279 |
| Figure 20 | Processus de rapport sur l'état des appareils pour l'appareil de routage .....                                       | 280 |
| Figure 21 | Processus de rapport sur la condition des canaux.....                                                                | 280 |
| Figure 22 | Processus de départ actif d'un appareil de routage .....                                                             | 281 |
| Figure 23 | Processus de départ passif d'un appareil de routage.....                                                             | 282 |
| Figure 24 | Processus de départ actif d'un appareil de terrain (quittant l'appareil de passerelle).....                          | 283 |
| Figure 25 | Processus de départ actif d'un appareil de terrain (quittant l'appareil de routage).....                             | 284 |
| Figure 26 | Processus de départ passif d'un appareil de terrain (quittant l'appareil de passerelle).....                         | 285 |
| Figure 27 | Processus de départ passif d'un appareil de terrain (quittant l'appareil de routage).....                            | 285 |
| Figure 28 | Pile de protocole de la couche DLL du réseau WIA-PA .....                                                            | 309 |
| Figure 29 | Modèle de référence de la DLSL du réseau WIA-PA.....                                                                 | 315 |
| Figure 30 | Supertrame WIA-PA.....                                                                                               | 317 |
| Figure 31 | Structures des supertrames R1, R2 et R3 .....                                                                        | 319 |

|                                                                                                             |     |
|-------------------------------------------------------------------------------------------------------------|-----|
| Figure 32 – Exemple de transmission de données de cycle long .....                                          | 320 |
| Figure 33 – Diagramme d'états de la sous-couche DLSL pour le rattachement d'appareil .....                  | 323 |
| Figure 34 – Diagramme d'états de la sous-couche DLSL pour l'exécution dans le réseau .....                  | 325 |
| Figure 35 – Séquence temporelle de service de données.....                                                  | 333 |
| Figure 36 – Séquence temporelle de découverte de réseau .....                                               | 336 |
| Figure 37 – Format général de trame .....                                                                   | 344 |
| Figure 38 – Pile de protocole de la couche réseau WIA-PA.....                                               | 348 |
| Figure 39 – Modèle de référence de couche réseau WIA-PA.....                                                | 348 |
| Figure 40 – Diagramme d'états de la couche réseau .....                                                     | 351 |
| Figure 41 – Séquence temporelle des services de données de la NL .....                                      | 359 |
| Figure 42 – Séquence temporelle pour le rattachement d'appareil de terrain via un appareil de routage ..... | 365 |
| Figure 43 – Processus de rattachement en un saut d'un appareil de routage .....                             | 366 |
| Figure 44 – Processus de rattachement multisaut de l'appareil de routage .....                              | 367 |
| Figure 45 – Processus de départ actif d'un appareil de terrain (appareil de routage partant).....           | 370 |
| Figure 46 – Départ passif d'un appareil de terrain .....                                                    | 371 |
| Figure 47 – Processus de départ actif d'un appareil de routage .....                                        | 372 |
| Figure 48 – Processus de départ passif d'un appareil de routage.....                                        | 373 |
| Figure 49 – Processus de production de rapport sur l'élément de groupe.....                                 | 376 |
| Figure 50 – Processus de production de rapport sur les informations de voisins .....                        | 378 |
| Figure 51 – Séquence temporelle pour l'ajout d'itinéraire .....                                             | 380 |
| Figure 52 – Séquence temporelle pour la mise à jour d'itinéraire .....                                      | 382 |
| Figure 53 – Séquence temporelle pour la suppression d'itinéraire .....                                      | 384 |
| Figure 54 – Ajout d'une liaison allant d'un appareil de passerelle à un appareil de routage .....           | 387 |
| Figure 55 – Ajout d'une liaison allant d'un appareil de routage à un appareil de terrain.....               | 388 |
| Figure 56 – Mise à jour d'une liaison allant d'un appareil de passerelle à un appareil de routage .....     | 390 |
| Figure 57 – Mise à jour d'une liaison allant d'un appareil de routage à un appareil de terrain .....        | 391 |
| Figure 58 – Libération d'une liaison allant d'un appareil de passerelle à un appareil de routage.....       | 393 |
| Figure 59 – Libération d'une liaison allant d'un appareil de routage à un appareil de terrain.....          | 394 |
| Figure 60 – Ajout d'une supertrame allant d'un appareil de passerelle à un appareil de routage .....        | 396 |
| Figure 61 – Ajout d'une supertrame allant d'un appareil de routage à un appareil de terrain .....           | 397 |
| Figure 62 – Mise à jour d'une supertrame allant d'un appareil de passerelle à un appareil de routage.....   | 399 |
| Figure 63 – Mise à jour d'une supertrame allant d'un appareil de routage à un appareil de terrain .....     | 400 |
| Figure 64 – Libération d'une supertrame allant d'un appareil de passerelle à un appareil de routage.....    | 402 |

|                                                                                                                                       |     |
|---------------------------------------------------------------------------------------------------------------------------------------|-----|
| Figure 65 – Libération d'une supertrame allant d'un appareil de routage à un appareil de terrain .....                                | 403 |
| Figure 66 – Processus de production de rapport sur l'état des appareils d'un appareil de terrain à un appareil de routage .....       | 406 |
| Figure 67 – Processus de production de rapport sur l'état des appareils d'un appareil de routage à un appareil de passerelle .....    | 407 |
| Figure 68 – Processus de production de rapport sur la condition des canaux d'un appareil de terrain à un appareil de routage .....    | 409 |
| Figure 69 – Processus de production de rapport sur la condition des canaux d'un appareil de routage à un appareil de passerelle ..... | 409 |
| Figure 70 – Processus de production de rapport sur les chemins défaillants .....                                                      | 411 |
| Figure 71 – Structure de la couche application (AL) .....                                                                             | 442 |
| Figure 72 – Processus d'application utilisateur (UAP) .....                                                                           | 443 |
| Figure 73 – Processus de communication C/S .....                                                                                      | 452 |
| Figure 74 – Processus de communication P/S (fonction d'agrégation désactivée) .....                                                   | 453 |
| Figure 75 – Processus de communication P/S (fonction d'agrégation activée) .....                                                      | 453 |
| Figure 76 – Processus de communication R/S .....                                                                                      | 454 |
| Figure 77 – Cadre de travail de la gestion de la sécurité pour le réseau WIA-PA .....                                                 | 459 |
| Figure 78 – Pile de protocole de communication en sécurité .....                                                                      | 461 |
| Figure 79 – Cycle de vie des clés .....                                                                                               | 465 |
| Figure 80 – Processus de rattachement sécurisé d'un nouvel appareil WIA-PA .....                                                      | 467 |
| Figure 81 – Séquence temporelle pour le rattachement d'un appareil de terrain (appareil de terrain vers appareil de routage) .....    | 471 |
| Figure 82 – Séquence temporelle pour le rattachement d'un appareil de terrain (appareil de routage vers appareil de passerelle) ..... | 472 |
| Figure 83 – Processus de rattachement en un saut d'un appareil de routage .....                                                       | 473 |
| Figure 84 – Processus de rattachement multisaut d'un appareil de routage (nouvel appareil de routage vers appareil de routage) .....  | 474 |
| Figure 85 – Processus de rattachement multisaut d'un appareil de routage (appareil de routage vers appareil de passerelle) .....      | 475 |
| Figure B.1 – Diagramme de séquence temporelle .....                                                                                   | 479 |
| Tableau 1 – Définition des types de données .....                                                                                     | 245 |
| Tableau 2 – Prise en charge du protocole pour la VCR .....                                                                            | 263 |
| Tableau 3 – Relations entre la VCR et la fonction d'agrégation .....                                                                  | 272 |
| Tableau 4 – Format des données agrégées suivies par l'objet DAGO de l'appareil de terrain .....                                       | 273 |
| Tableau 5 – Format du paquet agrégé suivi par l'objet PAGO de l'appareil de routage .....                                             | 273 |
| Tableau 6 – Attributs de la classe DAGO .....                                                                                         | 277 |
| Tableau 7 – Attributs de l'instance DAGO .....                                                                                        | 277 |
| Tableau 8 – Structure MEM_STRUCT .....                                                                                                | 277 |
| Tableau 9 – Attributs de la classe PAGO .....                                                                                         | 277 |
| Tableau 10 – Attributs de l'instance PAGO .....                                                                                       | 278 |
| Tableau 11 – Attributs de la classe DGO .....                                                                                         | 278 |
| Tableau 12 – Attributs de l'instance DGO .....                                                                                        | 278 |
| Tableau 13 – Attributs non structurés (1 de 5) .....                                                                                  | 287 |



|                                                                                                        |     |
|--------------------------------------------------------------------------------------------------------|-----|
| Tableau 14 – Attributs structurés .....                                                                | 292 |
| Tableau 15 – Structure NLRoute_Struct .....                                                            | 293 |
| Tableau 16 – Structure Superframe_Struct .....                                                         | 293 |
| Tableau 17 – Structure Link_Struct .....                                                               | 294 |
| Tableau 18 – Structure Neighbour_Struct .....                                                          | 295 |
| Tableau 19 – Structure ChanCon_Struct .....                                                            | 295 |
| Tableau 20 – Structure Device_struct (1 de 3) .....                                                    | 296 |
| Tableau 21 – Structure VCR_Struct .....                                                                | 299 |
| Tableau 22 – Structure DevConRep_Struct .....                                                          | 300 |
| Tableau 23 – Structure Key_Struct .....                                                                | 300 |
| Tableau 24 – Structure ObjList_Struct .....                                                            | 301 |
| Tableau 25 – Paramètres de DMAP-MIB-GET.request .....                                                  | 302 |
| Tableau 26 – Paramètres de DMAP-MIB-GET.confirm .....                                                  | 302 |
| Tableau 27 – Paramètres de DMAP-MIB-SET.request .....                                                  | 303 |
| Tableau 28 – Paramètres de DMAP-MIB-SET.confirm .....                                                  | 304 |
| Tableau 29 – Sélection de protocoles PHY (1 de 2) .....                                                | 305 |
| Tableau 30 – Bande de fréquence et débit de données .....                                              | 306 |
| Tableau 31 – Affectations de fréquence .....                                                           | 307 |
| Tableau 32 – Attributs de PHY PIB .....                                                                | 308 |
| Tableau 33 – Sélection de protocoles MAC (1 of 3) .....                                                | 311 |
| Tableau 34 – Attributs PIB de la couche MAC .....                                                      | 313 |
| Tableau 35 – Attributs PIB étendus de la couche MAC .....                                              | 314 |
| Tableau 36 – Charge utile de balise .....                                                              | 314 |
| Tableau 37 – Format du champ Capability Information (informations de capacité) .....                   | 315 |
| Tableau 38 – Mécanismes de saut .....                                                                  | 318 |
| Tableau 39 – Transitions d'états de la sous-couche DLSL pour le rattachement d'appareil .....          | 324 |
| Tableau 40 – Transitions d'états de la sous-couche DLSL pour l'exécution dans le réseau (1 de 3) ..... | 326 |
| Tableau 41 – Paramètres de DLDE-DATA.request .....                                                     | 330 |
| Tableau 42 – Paramètres de DLDE-DATA.confirm .....                                                     | 331 |
| Tableau 43 – Tableau pour Status (état) .....                                                          | 331 |
| Tableau 44 – Paramètres de DLDE-DATA.indication .....                                                  | 332 |
| Tableau 45 – Paramètres de DLME-DISCOVERY.request .....                                                | 334 |
| Tableau 46 – Paramètres de DLME- DISCOVERY.confirm .....                                               | 335 |
| Tableau 47 – Network descriptor list (liste de descripteurs de réseau) .....                           | 335 |
| Tableau 48 – Paramètres de DLME-JOIN.request .....                                                     | 337 |
| Tableau 49 – Paramètres de DLME-JOIN.indication .....                                                  | 337 |
| Tableau 50 – Paramètres de DLME-JOIN.response .....                                                    | 338 |
| Tableau 51 – Paramètres de DLME-JOIN.confirm .....                                                     | 338 |
| Tableau 52 – Paramètres de DLME-LEAVE.request .....                                                    | 339 |
| Tableau 53 – Paramètres de DLME-LEAVE.indication .....                                                 | 339 |
| Tableau 54 – Paramètres de DLME-LEAVE.confirm .....                                                    | 340 |
| Tableau 55 – Paramètres de DLME-CHANNEL-CONDITION.indication .....                                     | 340 |



|                                                                               |     |
|-------------------------------------------------------------------------------|-----|
| Tableau 56 – Paramètres de DLME-NEIGHBOUR-INFO.indication .....               | 341 |
| Tableau 57 – Paramètres de DLME-COMM-STATUS.indication .....                  | 341 |
| Tableau 58 – Paramètres de DLME -KEEP-LIVE.confirm .....                      | 342 |
| Tableau 59 – Paramètres de DLME -KEEP-LIVE.indication.....                    | 342 |
| Tableau 60 – Paramètres de DLME-TIME-SYN.request .....                        | 343 |
| Tableau 61 – Paramètres de DLME -TIME-SYN.confirm .....                       | 343 |
| Tableau 62 – Paramètres de DLME-TIME-SYN.indication .....                     | 343 |
| Tableau 63 – Champ DLSL frame control (contrôle de trame DLSL).....           | 344 |
| Tableau 64 – Format de trame de données .....                                 | 345 |
| Tableau 65 – Format général d'une trame de commande .....                     | 345 |
| Tableau 66 – Trame de commande DLSL .....                                     | 346 |
| Tableau 67 – Format de la trame de commande d'entretien .....                 | 346 |
| Tableau 68 – Format de la trame de commande de synchronisation du temps ..... | 347 |
| Tableau 69 – Exemple de table de routage .....                                | 350 |
| Tableau 70 – Transitions d'états de la NL (1 de 4) .....                      | 352 |
| Tableau 71 – Paramètres de NLDE-DATA.request .....                            | 357 |
| Tableau 72 – Paramètres de NLDE-DATA.confirm .....                            | 358 |
| Tableau 73 – Paramètres de NLDE-DATA.indication .....                         | 358 |
| Tableau 74 – Paramètres de NLLME-COMM-STATUS.indication .....                 | 360 |
| Tableau 75 – Paramètres de NLME-COMM-STATUS.indication .....                  | 361 |
| Tableau 76 – Paramètres de NLME-COMM-STATUS.confirm.....                      | 361 |
| Tableau 77 – Paramètres de NLME-JOIN.request .....                            | 362 |
| Tableau 78 – Paramètres de NLME-JOIN.indication.....                          | 363 |
| Tableau 79 – Paramètres de NLME-JOIN.response .....                           | 363 |
| Tableau 80 – Paramètres de NLME-JOIN.confirm .....                            | 364 |
| Tableau 81 – Paramètres de NLME-LEAVE.request.....                            | 368 |
| Tableau 82 – Paramètres de NLME-LEAVE.indication .....                        | 368 |
| Tableau 83 – Paramètres de NLME-LEAVE.response .....                          | 369 |
| Tableau 84 – Paramètres de NLME-LEAVE.confirm .....                           | 369 |
| Tableau 85 – Paramètres de NLME-RPT-CLRMEM.request .....                      | 374 |
| Tableau 86 – Paramètres de NLME-RPT-CLRMEM.confirm .....                      | 374 |
| Tableau 87 – Paramètres de NLME-RPT-CLRMEM.response .....                     | 375 |
| Tableau 88 – Paramètres de NLME-NEIGHBOUR-INFO.request.....                   | 377 |
| Tableau 89 – Paramètres de NLME-NEIGHBOUR-INFO.confirm .....                  | 377 |
| Tableau 90 – Paramètres de NLME-ADD_ROUTE.request.....                        | 378 |
| Tableau 91 – Paramètres de NLME-ADD_ROUTE.confirm .....                       | 379 |
| Tableau 92 – Paramètres de NLME-UPDATE_ROUTE.request .....                    | 380 |
| Tableau 93 – Paramètres de NLME-UPDATE-ROUTE.confirm .....                    | 381 |
| Tableau 94 – Paramètres de NLME-UPDATE_ROUTE.request .....                    | 382 |
| Tableau 95 – Paramètres de NLME-DELETE-ROUTE.confirm.....                     | 383 |
| Tableau 96 – Paramètres de NLME-ADD-LINK.request.....                         | 385 |
| Tableau 97 – Paramètres de NLME-ADD-LINK.confirm .....                        | 386 |
| Tableau 98 – Paramètres de NLME-UPDATE-LINK.request .....                     | 389 |

|                                                                                         |     |
|-----------------------------------------------------------------------------------------|-----|
| Tableau 99 – Paramètres de NLME-UPDATE-LINK.confirm .....                               | 389 |
| Tableau 100 – Paramètres de NLME-RELEASE-LINK.request .....                             | 392 |
| Tableau 101 – Paramètres de NLME-RELEASE-LINK.confirm .....                             | 392 |
| Tableau 102 – Paramètres de NLME-ADD-SFR.request.....                                   | 395 |
| Tableau 103 – Paramètres de NLME-ADD-SFR.confirm.....                                   | 395 |
| Tableau 104 – Paramètres de NLME-UPDATA-SFR.request .....                               | 398 |
| Tableau 105 – Paramètres de NLME-UPDATE-SFR.confirm .....                               | 398 |
| Tableau 106 – Paramètres de NLME-RELEASE-SFR.request .....                              | 401 |
| Tableau 107 – Paramètres de NLME-RELEASE-SFR.confirm .....                              | 401 |
| Tableau 108 – Paramètres de NLME-AGG.indication .....                                   | 404 |
| Tableau 109 – Paramètres de NLME-AGO-SEND.request.....                                  | 404 |
| Tableau 110 – Paramètres de NLME-DAG.indication .....                                   | 405 |
| Tableau 111 – Paramètres de NLME-DEVICE-STATUS.request .....                            | 405 |
| Tableau 112 – Paramètres de NLME-DEVICE-STATUS.indication .....                         | 405 |
| Tableau 113 – Paramètres de NLME-DEVICE-STATUS.confirm.....                             | 406 |
| Tableau 114 – Paramètres de NLME-CHANNEL-CONDITION.request .....                        | 407 |
| Tableau 115 – Paramètres de NLME-CHANNEL-CONDITION.indication .....                     | 408 |
| Tableau 116 – Paramètres de NLME-CHANNEL-CONDITION.confirm .....                        | 408 |
| Tableau 117 – Paramètres de NLME-PATH_FAILURE.request .....                             | 410 |
| Tableau 118 – Paramètres de NLME-PATH_FAILURE.indication .....                          | 410 |
| Tableau 119 – Paramètres de NLME-PATH_FAILURE.confirm.....                              | 411 |
| Tableau 120 – Paramètres de NLME-INFO_GET.request.....                                  | 412 |
| Tableau 121 – Paramètres de NLME-INFO_GET.indication .....                              | 413 |
| Tableau 122 – Paramètres de NLME-INFO_GET.response .....                                | 414 |
| Tableau 123 – Paramètres de NLME-INFO_GET.confirm.....                                  | 415 |
| Tableau 124 – Paramètres de NLME-INFO_SET.request .....                                 | 416 |
| Tableau 125 – Paramètres de NLME-INFO_SET.indication.....                               | 416 |
| Tableau 126 – Paramètres de NLME-SET.response .....                                     | 417 |
| Tableau 127 – Paramètres de NLME-SET.confirm .....                                      | 418 |
| Tableau 128 – Format commun des paquets de couche réseau .....                          | 418 |
| Tableau 129 – Format du champ Control (contrôle).....                                   | 419 |
| Tableau 130 – Format commun des paquets de données de couche réseau .....               | 420 |
| Tableau 131 – Format de paquet agrégé.....                                              | 421 |
| Tableau 132 – Format commun de paquet de commande NL .....                              | 422 |
| Tableau 133 – Paquet de commande de couche réseau .....                                 | 422 |
| Tableau 134 – Résultats d'exécution des commandes .....                                 | 423 |
| Tableau 135 – Format du paquet de demande de rattachement .....                         | 424 |
| Tableau 136 – Format du paquet de réponse de rattachement.....                          | 424 |
| Tableau 137 – Format du paquet de demande de rapport sur l'état des communications .... | 425 |
| Tableau 138 – Format du paquet de demande de départ .....                               | 425 |
| Tableau 139 – Valeur du champ Leaving reason (raison du départ) .....                   | 426 |
| Tableau 140 – Format du paquet de réponse de départ .....                               | 426 |
| Tableau 141 – Format du paquet de demande de rapport sur l'élément de groupe .....      | 426 |

|                                                                                             |     |
|---------------------------------------------------------------------------------------------|-----|
| Tableau 142 – Format du paquet de réponse de rapport sur l'élément de groupe .....          | 427 |
| Tableau 143 – Format du paquet de demande de rapport sur les informations de voisins .....  | 427 |
| Tableau 144 – Format du paquet de demande d'ajout d'itinéraire .....                        | 428 |
| Tableau 145 – Format du paquet de réponse d'ajout d'itinéraire .....                        | 428 |
| Tableau 146 – Format du paquet de demande de mise à jour d'itinéraire .....                 | 429 |
| Tableau 147 – Format du paquet de réponse de mise à jour d'itinéraire .....                 | 429 |
| Tableau 148 – Format du paquet de demande de suppression d'itinéraire .....                 | 429 |
| Tableau 149 – Format du paquet de réponse de suppression d'itinéraire .....                 | 430 |
| Tableau 150 – Format du paquet de demande d'ajout de liaison .....                          | 430 |
| Tableau 151 – Format du paquet de réponse d'ajout de liaison .....                          | 431 |
| Tableau 152 – Format du paquet de demande de mise à jour de liaison .....                   | 431 |
| Tableau 153 – Format du paquet de réponse de mise à jour de liaison .....                   | 432 |
| Tableau 154 – Format du paquet de demande de libération de liaison .....                    | 432 |
| Tableau 155 – Format du paquet de réponse de libération de liaison .....                    | 433 |
| Tableau 156 – Format du paquet de demande d'ajout de supertrame .....                       | 433 |
| Tableau 157 – Format du paquet de réponse d'ajout de supertrame .....                       | 434 |
| Tableau 158 – Format du paquet de demande de mise à jour de supertrame .....                | 434 |
| Tableau 159 – Format du paquet de réponse de mise à jour de supertrame .....                | 434 |
| Tableau 160 – Format du paquet de demande de libération de supertrame .....                 | 435 |
| Tableau 161 – Format du paquet de réponse de libération de supertrame .....                 | 435 |
| Tableau 162 – Format du paquet de demande de rapport sur la condition des appareils .....   | 436 |
| Tableau 163 – Format du champ d'informations sur la condition des appareils .....           | 436 |
| Tableau 164 – Format du paquet de demande de rapport sur la condition des canaux .....      | 437 |
| Tableau 165 – Format du champ d'informations sur la qualité des canaux .....                | 438 |
| Tableau 166 – Format du paquet de demande de rapport sur la défaillance des chemins .....   | 438 |
| Tableau 167 – Format du paquet de demande d'obtention d'attribut .....                      | 439 |
| Tableau 168 – Format du paquet de réponse d'obtention d'attribut .....                      | 439 |
| Tableau 169 – Format du paquet de demande d'établissement d'attribut .....                  | 440 |
| Tableau 170 – Format du paquet de réponse d'établissement d'attribut .....                  | 441 |
| Tableau 171 – Définition des méthodes pour les objets d'application utilisateur (UAO) ..... | 445 |
| Tableau 172 – Format de demande de la méthode READ .....                                    | 445 |
| Tableau 173 – Format de réponse de la méthode READ .....                                    | 445 |
| Tableau 174 – Format de demande de la méthode WRITE .....                                   | 446 |
| Tableau 175 – Format de réponse de la méthode WRITE .....                                   | 446 |
| Tableau 176 – Format de la méthode PUBLISH .....                                            | 447 |
| Tableau 177 – Format de la méthode REPORT .....                                             | 447 |
| Tableau 178 – Format de la méthode REPORT ACK .....                                         | 448 |
| Tableau 179 – Paramètres de ASLDE-DATA.request .....                                        | 449 |
| Tableau 180 – Paramètres de ASLDE-DATA.confirm .....                                        | 450 |
| Tableau 181 – Paramètres de ASLDE-DATA.indication .....                                     | 450 |
| Tableau 182 – Paramètres de ASLDE-AGG.request .....                                         | 451 |
| Tableau 183 – Paramètres de ASLDE-DAG.indication .....                                      | 451 |

|                                                                                                                                            |     |
|--------------------------------------------------------------------------------------------------------------------------------------------|-----|
| Tableau 184 – Format de paquet général de la sous-couche application (ASL) .....                                                           | 455 |
| Tableau 185 – Format du champ contrôle de paquet .....                                                                                     | 455 |
| Tableau 186 – Valeur du sous-champ Packet type (type de paquet) .....                                                                      | 456 |
| Tableau 187 – Format du paquet de données ASL .....                                                                                        | 457 |
| Tableau 188 – Format du paquet d'acquittement ASL .....                                                                                    | 458 |
| Tableau 189 – Format d'une DLPDU de sécurité .....                                                                                         | 462 |
| Tableau 190 – Format de l'en-tête de sécurité DLSL .....                                                                                   | 462 |
| Tableau 191 – Structure du champ Security control (contrôle de sécurité) dans l'en-tête de sécurité DLSL .....                             | 462 |
| Tableau 192 – Structure du champ Security material control (contrôle des renseignements de sécurité) dans l'en-tête de sécurité DLSL ..... | 463 |
| Tableau 193 – Structure d'une APDU de sécurité .....                                                                                       | 463 |
| Tableau 194 – Structure du champ ASL security header (en-tête de sécurité ASL) .....                                                       | 463 |
| Tableau 195 – Paramètres de DLME-SEC.request .....                                                                                         | 468 |
| Tableau 196 – Paramètres de DLME-SEC.indication .....                                                                                      | 469 |
| Tableau 197 – Paramètres de DLME-SEC.response .....                                                                                        | 469 |
| Tableau 198 – Paramètres de DLME-SEC.confirm .....                                                                                         | 470 |
| Tableau A.1 – Mesures de sécurité graduées et stratifiées pour réseau WIA-PA .....                                                         | 478 |
| Tableau A.2 – Niveaux de sécurité des paquets de données .....                                                                             | 478 |
| Tableau B.1 – Format de paquet ou de trame en octet(s) .....                                                                               | 480 |
| Tableau B.2 – Format des sous-champs en bit(s) .....                                                                                       | 480 |
| Tableau C.1 – Attribut de classe de l'AIO .....                                                                                            | 481 |
| Tableau C.2 – Attributs d'instance de l'AIO .....                                                                                          | 482 |
| Tableau E.1 – Liste des exigences applicables de l'EN 300 440-2 .....                                                                      | 484 |
| Tableau E.2 – Liste des exigences applicables de l'EN 300 328 .....                                                                        | 485 |
| Tableau E.3 – Définitions et calculs de la temporisation des intervalles de temps .....                                                    | 485 |

## COMMISSION ÉLECTROTECHNIQUE INTERNATIONALE

### **RÉSEAUX INDUSTRIELS – RÉSEAU DE COMMUNICATIONS SANS FIL ET PROFILS DE COMMUNICATION – WIA-PA**

#### AVANT-PROPOS

- 1) La Commission Electrotechnique Internationale (IEC) est une organisation mondiale de normalisation composée de l'ensemble des comités électrotechniques nationaux (Comités nationaux de l'IEC). L'IEC a pour objet de favoriser la coopération internationale pour toutes les questions de normalisation dans les domaines de l'électricité et de l'électronique. A cet effet, l'IEC – entre autres activités – publie des Normes internationales, des Spécifications techniques, des Rapports techniques, des Spécifications accessibles au public (PAS) et des Guides (ci-après dénommés "Publication(s) de l'IEC"). Leur élaboration est confiée à des comités d'études, aux travaux desquels tout Comité national intéressé par le sujet traité peut participer. Les organisations internationales, gouvernementales et non gouvernementales, en liaison avec l'IEC, participent également aux travaux. L'IEC collabore étroitement avec l'Organisation Internationale de Normalisation (ISO), selon des conditions fixées par accord entre les deux organisations.
- 2) Les décisions ou accords officiels de l'IEC concernant les questions techniques représentent, dans la mesure du possible, un accord international sur les sujets étudiés, étant donné que les Comités nationaux de l'IEC intéressés sont représentés dans chaque comité d'études.
- 3) Les Publications de l'IEC se présentent sous la forme de recommandations internationales et sont agréées comme telles par les Comités nationaux de l'IEC. Tous les efforts raisonnables sont entrepris afin que l'IEC s'assure de l'exactitude du contenu technique de ses publications; l'IEC ne peut pas être tenue responsable de l'éventuelle mauvaise utilisation ou interprétation qui en est faite par un quelconque utilisateur final.
- 4) Dans le but d'encourager l'uniformité internationale, les Comités nationaux de l'IEC s'engagent, dans toute la mesure possible, à appliquer de façon transparente les Publications de l'IEC dans leurs publications nationales et régionales. Toutes divergences entre toutes Publications de l'IEC et toutes publications nationales ou régionales correspondantes doivent être indiquées en termes clairs dans ces dernières.
- 5) L'IEC elle-même ne fournit aucune attestation de conformité. Des organismes de certification indépendants fournissent des services d'évaluation de conformité et, dans certains secteurs, accèdent aux marques de conformité de l'IEC. L'IEC n'est responsable d'aucun des services effectués par les organismes de certification indépendants.
- 6) Tous les utilisateurs doivent s'assurer qu'ils sont en possession de la dernière édition de cette publication.
- 7) Aucune responsabilité ne doit être imputée à l'IEC, à ses administrateurs, employés, auxiliaires ou mandataires, y compris ses experts particuliers et les membres de ses comités d'études et des Comités nationaux de l'IEC, pour tout préjudice causé en cas de dommages corporels et matériels, ou de tout autre dommage de quelque nature que ce soit, directe ou indirecte, ou pour supporter les coûts (y compris les frais de justice) et les dépenses découlant de la publication ou de l'utilisation de cette Publication de l'IEC ou de toute autre Publication de l'IEC, ou au crédit qui lui est accordé.
- 8) L'attention est attirée sur les références normatives citées dans cette publication. L'utilisation de publications référencées est obligatoire pour une application correcte de la présente publication.
- 9) L'attention est attirée sur le fait que certains des éléments de la présente Publication de l'IEC peuvent faire l'objet de droits de brevet. L'IEC ne saurait être tenue pour responsable de ne pas avoir identifié de tels droits de brevets et de ne pas avoir signalé leur existence.

La Norme internationale IEC 62601 a été établie par le sous-comité 65C: Réseaux industriels, du comité d'études 65 de l'IEC: Mesure, commande et automation dans les processus industriels.

Cette deuxième édition annule et remplace la première édition parue en 2011. Cette édition constitue une révision technique.

Cette édition inclut les modifications techniques majeures suivantes par rapport à l'édition précédente:

- remplacement de l'IEEE 802.15.4-2006 par l'IEEE 802.15.4-2011 et ajout de modification commune pour les profils MAC et PHY de l'IEEE 802.15.4-2011 et les références relatives à l'IEEE 802.15.4-2011;
- ajout de modifications communes pour l'adoption régionale et ajout de l'Annexe D et de l'Annexe E;
- suppression des services de gestion MAC étendus et ajout de deux services de gestion DLSL;
- ajout de diagramme d'états spécifiques aux couches DLSL et NL;
- unification de la représentation du format de trame et du format de paquet;
- modification du format de définition des types de données;
- ajout d'une description détaillée des technologies pour une meilleure compréhension;
- fourniture d'un support pour les modes CCA 1, 2 et 3.

L'attention du lecteur est attirée sur le fait que l'Annexe E énumère tous les articles traitant des différences à caractère moins permanent inhérentes à certains pays, concernant le sujet de la présente norme.

Le texte de cette norme est issu des documents suivants:

| FDIS         | Rapport de vote |
|--------------|-----------------|
| 65C/821/FDIS | 65C/833/RVD     |

Le rapport de vote indiqué dans le tableau ci-dessus donne toute information sur le vote ayant abouti à l'approbation de cette norme.

Cette publication a été rédigée selon les Directives ISO/IEC, Partie 2.

Le comité a décidé que le contenu de cette publication ne sera pas modifié avant la date de stabilité indiquée sur le site web de l'IEC sous "<http://webstore.iec.ch>" dans les données relatives à la publication recherchée. A cette date, la publication sera

- reconduite,
- supprimée,
- remplacée par une édition révisée, ou
- amendée.

**IMPORTANT – Le logo "colour inside" qui se trouve sur la page de couverture de cette publication indique qu'elle contient des couleurs qui sont considérées comme utiles à une bonne compréhension de son contenu. Les utilisateurs devraient, par conséquent, imprimer cette publication en utilisant une imprimante couleur.**

# RÉSEAUX INDUSTRIELS – RÉSEAU DE COMMUNICATIONS SANS FIL ET PROFILS DE COMMUNICATION – WIA-PA

## 1 Domaine d'application

La présente Norme internationale spécifie l'architecture système et le protocole de communication de réseaux sans fil pour automation industrielle – automation dans les processus (WIA-PA, *Wireless network for Industrial Automation – Process Automation*) exploitant la norme IEEE STD 802.15.4-2011.

## 2 Références normatives

Les documents suivants sont cités en référence de manière normative, en intégralité ou en partie, dans le présent document et sont indispensables pour son application. Pour les références datées, seule l'édition citée s'applique. Pour les références non datées, la dernière édition du document de référence s'applique (y compris les éventuels amendements).

ISO/IEC 9899, *Information technology – Programming languages – C* (disponible en anglais seulement)

ISO 3166-1, *Codes pour la représentation des noms de pays et de leurs subdivisions – Partie 1: Codes de pays*

IEEE 802.15.4-2011, *IEEE Standard for Local and metropolitan area networks – Part 15.4: Low-Rate Wireless Personal Area Networks (LR-WPANs)* (disponible en anglais seulement)

## 3 Termes, définitions et abréviations

### 3.1 Termes et définitions

#### 3.1.1

##### **nombre absolu d'intervalles de temps**

nombre d'intervalles de temps depuis le démarrage du réseau, c'est-à-dire l'intervalle de temps courant en général

#### 3.1.2

##### **départ actif**

processus par lequel un appareil de terrain en ligne peut quitter le réseau en souscrivant à son appareil de routage ou par lequel un appareil de routage en ligne peut quitter le réseau en souscrivant à un appareil de passerelle

#### 3.1.3

##### **saut de fréquence adaptatif**

changement de canaux de communication en fonction de la condition réelle des canaux dans chaque intervalle de temps au cours de la période intragroupe de supertrame WIA-PA

#### 3.1.4

##### **commutation de fréquence adaptative**

changement de canaux de communication en fonction de la condition réelle des canaux au cours de la trame balise et de la période active dans un cycle de supertrame et en utilisant des canaux différents dans des cycles de supertrames différents



**3.1.5****agrégation**

fusion de données de multiples objets d'application utilisateur ou de plusieurs paquets d'éléments de groupe en un seul paquet

**3.1.6****sous-couche application**

sous-couche de protocole qui fournit des données et des services de gestion pour la couche application

**3.1.7****balise**

trame spéciale diffusée par les appareils de routage ou l'appareil de passerelle dans le réseau WIA-PA

**3.1.8****diffusion**

envoi simultané d'un paquet à tous les appareils WIA-PA

**3.1.9****canal**

support à fréquences radioélectriques utilisé pour acheminer un paquet d'un expéditeur vers un destinataire

**3.1.10****groupe**

groupe logique d'appareils qui est constitué d'un appareil de routage et d'appareils de terrain

**3.1.11****tête de groupe**

gestionnaire dans un groupe, joué par l'appareil de routage

**3.1.12****élément de groupe**

source de données dans un groupe, jouée par un appareil de terrain

**3.1.13****coexistence**

aptitude d'un réseau à accomplir sa tâche dans un environnement partagé donné sans perturber les autres réseaux ni être perturbé par d'autres réseaux

Note 1 à l'article: Ces réseaux peuvent ou peuvent ne pas avoir le même ensemble de règles.

**3.1.14****ressource de communication**

ensemble des canaux et des intervalles de temps utilisés pour transporter une trame

**3.1.15****logiciel de configuration WIA-PA**

outil logiciel pour configurer le réseau et les appareils WIA-PA

**3.1.16****sous-couche liaison de données**

couche supérieure de la couche MAC de l'IEEE 802.15.4-2011, utilisée pour gérer les aspects relatifs à la topologie de réseau et aux ressources de communication dans le réseau WIA-PA



### **3.1.17**

#### **désagrégation**

division du paquet fusionné en données d'objets d'application utilisateur

### **3.1.18**

#### **appareil de terrain**

appareil utilisable sur le terrain, qui est relié au processus ou commande celui-ci

### **3.1.19**

#### **trame**

format de bits agrégés à partir de l'entité de contrôle d'accès au support (MAC) qui sont émis ensemble simultanément

[SOURCE: IEEE 802.15.4-2011]

### **3.1.20**

#### **saut de fréquence**

changement de fréquence d'émission/réception pour combattre les interférences et l'évanouissement

### **3.1.21**

#### **appareil de passerelle**

appareil reliant le réseau WIA-PA à des réseaux d'autres installations

### **3.1.22**

#### **appareil tenu à la main**

appareil portatif utilisé pour le dimensionnement, la mise à jour de firmware et la surveillance des états des appareils

### **3.1.23**

#### **saut**

mouvement d'un paquet directement entre deux appareils voisins dans une transaction de réseau sans la participation d'aucun autre appareil du réseau WIA-PA

Note 1 à l'article: Plusieurs sauts sont utilisés pour allonger la distance d'émission, contourner les sources d'interférences ou éviter les obstacles.

### **3.1.24**

#### **ordinateur de configuration d'hôte**

appareil par lequel les utilisateurs et le personnel d'entretien/de gestion accomplissent des transactions sur le réseau WIA-PA et les réseaux de gestion

### **3.1.25**

#### **interconnectable**

utilisant les mêmes protocoles de communication, interface de communication et accès aux données

### **3.1.26**

#### **interopérables**

capables de fonctionner ensemble pour accomplir un rôle spécifique dans un ou plusieurs programmes d'application distribués

Note 1 à l'article: Dans ce cas, les paramètres et leurs fonctionnalités applicatives s'ajustent à la fois de manière syntaxique et sémantique. L'interopérabilité est accomplie lorsque les appareils prennent en charge des ensembles complémentaires de paramètres et fonctions appartenant au même profil.

**3.1.27****interopérabilité**

aptitude de deux ou plusieurs systèmes de réseau pour échanger des informations et faire une utilisation mutuelle des informations qui ont été échangées

[Cette source n'existe que dans la langue anglaise]

**3.1.28****rattachement**

processus par lequel un appareil WIA-PA est authentifié et autorisé à participer au réseau WIA-PA

**3.1.29****liaison**

ensemble de paramètres de communication nécessaires pour transporter une trame entre des appareils voisins dans le réseau

Note 1 à l'article: Elle inclut l'adresse de la source/destination, l'intervalle de temps, le canal, la direction et le type de liaison.

**3.1.30****maille**

topologie formée par des appareils de routage et l'appareil de passerelle dans le réseau WIA-PA

Note 1 à l'article: Un même appareil de routage peut se relier à l'appareil de passerelle et à plus d'un appareil de routage.

**3.1.31****multidiffusion**

envoi simultané d'un paquet à un groupe d'appareils WIA-PA

**3.1.32****adresse réseau****adresse courte**

nombre entier non signé de 16 bits identifiant de façon univoque l'appareil dans le réseau WIA-PA

Note 1 à l'article: Les 8 bits de poids fort de l'adresse réseau, assignée par le gestionnaire de réseau, identifient les différents groupes

**3.1.33****gestionnaire de réseau**

rôle logique pour configurer le réseau, attribuer les ressources de communication, gérer les tables de routage, et surveiller et rapporter la santé du réseau

**3.1.34****paquet**

bits agrégés et formatés qui sont émis ensemble simultanément à travers le support physique

[SOURCE: IEEE 802.15.4-2011, 3.31]

**3.1.35****cycle de vie de paquet**

durée maximale de survie d'un paquet depuis sa création jusqu'à son abandon

### **3.1.36**

#### **départ passif**

processus par lequel un appareil de terrain en ligne est enjoint de quitter le réseau par son appareil de routage ou par lequel un appareil de routage en ligne est enjoint de quitter le réseau par l'appareil de passerelle

### **3.1.37**

#### **adresse physique**

#### **adresse longue**

bits de format EUI-64 identifiant de façon univoque l'appareil dans le réseau WIA-PA

Note 1 à l'article: Une adresse physique est assignée par un fabricant.

### **3.1.38**

#### **appareil de routage**

appareil transmettant des paquets d'un appareil WIA-PA à un autre dans le réseau WIA-PA

### **3.1.39**

#### **gestionnaire de sécurité**

rôle logique pour configurer les stratégies de sécurité du réseau tout entier, gérer les clés et authentifier les appareils

### **3.1.40**

#### **superframe**

collection d'intervalles de temps se répétant au fil du temps

Note 1 à l'article: Elle spécifie le temps d'émission ou de réception de la communication périodique.

### **3.1.41**

#### **intervalle de temps**

unité temporelle de base pour l'échange de données

Note 1 à l'article: Sa durée est configurable dans le réseau WIA-PA.

### **3.1.42**

#### **saut d'intervalle de temps**

changement régulier de la fréquence d'émission/réception par intervalle de temps pour éviter les interférences et l'évanouissement

### **3.1.43**

#### **monodiffusion**

envoi d'un paquet vers un seul appareil dans le réseau WIA-PA

### **3.1.44**

#### **relation de communication virtuelle**

chemins de communication et ressources de communication entre deux objets d'application utilisateur

### **3.1.45**

#### **appareil WIA-PA**

appareil dans le réseau WIA-PA

EXEMPLE: Ordinateur de configuration d'hôte, appareil de passerelle, appareil de routage, appareil de terrain ou appareil tenu à la main.

### 3.2 Abréviations

|           |                                                                                                                             |
|-----------|-----------------------------------------------------------------------------------------------------------------------------|
| ACK       | Acknowledge (acquitter)                                                                                                     |
| AFH       | Adaptive Frequency Hopping (saut de fréquence adaptatif)                                                                    |
| AFS       | Adaptive Frequency Switch (commutation de fréquence adaptative)                                                             |
| AIO       | Analog Input Object (objet d'entrée analogique)                                                                             |
| AL        | Application Layer (couche application)                                                                                      |
| AOO       | Analog Output Object (objet de sortie analogique)                                                                           |
| ASDU      | Application Service Data Unit (unité de données de service application)                                                     |
| ASL       | Application Sub-Layer (sous-couche application)                                                                             |
| ASLDE     | Application Sub-Layer Data Entity (entité de données de sous-couche application)                                            |
| ASLDE-SAP | ASLDE Service Access Point (point d'accès au service ASLDE)                                                                 |
| ASLME     | Application Sub-Layer Management Entity (entité de gestion de sous-couche application)                                      |
| ASLME-SAP | ASLME Service Access Point (point d'accès au service ASLME)                                                                 |
| ASLPDU    | Application Sub-Layer Protocol Data Unit (unité de données de protocole de sous-couche application)                         |
| ASN       | Absolute timeSlot Number (nombre absolu d'intervalles de temps)                                                             |
| CAP       | Contention Access Period (période d'accès avec conflit)                                                                     |
| CFP       | Contention Free Period (période sans conflit)                                                                               |
| C/S       | Client/Server (client/serveur)                                                                                              |
| CSMA      | Carrier Sense Multiple Access (accès multiple par détection de porteuse)                                                    |
| CSMA-CA   | Carrier Sense Multiple Access with Collision Avoidance (accès multiple par détection de porteuse et évitement de collision) |
| DAGO      | Data AggreGation Object (objet d'agrégation de données)                                                                     |
| DGO       | DisaGgregation Object (objet de désagrégation)                                                                              |
| DIO       | Digital Input Object (objet d'entrée numérique)                                                                             |
| DLDE      | Data Link Sub-Layer Data Entity (entité de données de sous-couche liaison de données)                                       |
| DLDE-SAP  | DLDE Service Access Point (point d'accès au service DLDE)                                                                   |
| DLL       | Data Link Layer (couche liaison de données)                                                                                 |
| DLME      | Data Link Sub-Layer Management Entity (entité de gestion de sous-couche liaison de données)                                 |
| DLME-SAP  | DLME Service Access Point (point d'accès au service DLME)                                                                   |
| DLPDU     | Data Link Sub-Layer Protocol Data Unit (unité de données de protocole de sous-couche liaison de données)                    |
| DLSL      | Data Link Sub-Layer (sous-couche liaison de données)                                                                        |
| DMAP      | Device Management Application Process (processus d'application de gestion de l'appareil)                                    |
| DOO       | Digital Output Object (objet de sortie numérique)                                                                           |
| EIRP      | Equivalent Isotropic Radiated Power (puissance isotrope rayonnée équivalente )                                              |
| ENC       | ENCryption (chiffrement)                                                                                                    |
| EUI-64    | Extended Unique Identifier-64 bits (identificateur unique étendu de 64 bits)                                                |
| FCS       | Frame Check Sequence (séquence de contrôle de trame)                                                                        |

|          |                                                                                                       |
|----------|-------------------------------------------------------------------------------------------------------|
| AMRF     | FDMA, Frequency Division Multiple Access (accès multiple par répartition en fréquence)                |
| FFD      | Full-Function Device (appareil pleinement fonctionnel)                                                |
| SF       | FH, Frequency Hopping (saut de fréquence)                                                             |
| GTS      | Guaranteed Time Slot (intervalle de temps garanti)                                                    |
| GW       | GateWay device (appareil de passerelle)                                                               |
| ID       | IDentifier (IDentificateur)                                                                           |
| IDS      | Intrusion Detection System (système de détection des intrusions)                                      |
| KED      | Data Encryption Key (clé de chiffrement de données)                                                   |
| KEK      | Key Encryption Key (clé de chiffrement de clé)                                                        |
| KJ       | Join Key (clé de rattachement)                                                                        |
| KS       | Share Key (clé de partage)                                                                            |
| LME-SAP  | Layer Management Entity Service Access Point (point d'accès au service d'entité de gestion de couche) |
| LSB      | Least Significant Bit (bit de poids faible)                                                           |
| LQI      | Link Quality Indication (indication de qualité de liaison)                                            |
| MAC      | Medium Access Control sub-layer (sous-couche contrôle d'accès au support)                             |
| MCPS     | MAC Common Part Sub-layer (sous-couche partie commune de la couche MAC)                               |
| MHR      | Medium Access Control Header (en-tête de contrôle d'accès au support)                                 |
| MIB      | Management Information Base (base d'informations de gestion)                                          |
| MIC      | Message Integrity Code (code d'intégrité de message)                                                  |
| MLDE     | MAC sub-Layer Data Entity (entité de données de sous-couche MAC)                                      |
| MLDE-SAP | MLDE Service Access Point (point d'accès au service MLDE)                                             |
| MLME     | MAC sub-Layer Management Entity (entité de gestion de sous-couche MAC)                                |
| MLME-SAP | MLME Service Access Point (point d'accès au service MLME)                                             |
| MPDU     | MAC Protocol Data Unit (unité de données de protocole MAC)                                            |
| MSB      | Most Significant Bit (bit de poids fort)                                                              |
| NL       | Network Layer (couche réseau)                                                                         |
| NLDE     | Network Layer Data Entity (entité de données de couche réseau)                                        |
| NLDE-SAP | NLDE Service Access Point (point d'accès au service NLDE)                                             |
| NLME     | Network Layer Management Entity (entité de gestion de couche réseau)                                  |
| NLME-SAP | NLME Service Access Point (point d'accès au service NLME)                                             |
| NM       | Network Manager (gestionnaire de réseau)                                                              |
| NPDU     | Network Protocol Data Unit (unité de données de protocole réseau)                                     |
| NSDU     | Network Service Data Unit (unité de données de services réseau)                                       |
| PAGO     | Packet AGgregation Object (objet d'agrégation de paquets)                                             |
| PAN      | Personal Area Network (réseau local personnel)                                                        |
| PHY      | PHYsical layer (couche physique)                                                                      |
| PIB      | PAN Information Base (base d'informations de PAN)                                                     |
| P/S      | Publisher/Subscriber (éditeur/abonné)                                                                 |
| RFD      | Reduced-Function Device (appareil à fonctions limitées)                                               |
| R/S      | Report source/Sink (source/puits de rapports)                                                         |
| SAP      | Service Access Point (point d'accès au service)                                                       |
| SM       | Security Manager (gestionnaire de sécurité)                                                           |

|           |                                                                                                                                                |
|-----------|------------------------------------------------------------------------------------------------------------------------------------------------|
| AMRT      | TDMA, Time Division Multiple Access (accès multiple par répartition dans le temps)                                                             |
| TH        | Timeslot Hopping (saut d'intervalle de temps)                                                                                                  |
| UAO       | User Application Object (objet d'application utilisateur)                                                                                      |
| UAP       | User Application Process (processus d'application utilisateur)                                                                                 |
| UAPME-SAP | UAP Management Entity SAP (point d'accès au service d'entité de gestion UAP)                                                                   |
| TUC       | UTC, Universal Time Coordinated (temps universel coordonné)                                                                                    |
| VCR       | Virtual Communication Relationship (relation de communication virtuelle)                                                                       |
| VCR_ID    | Virtual Communication Relationship IDentifier (IDentificateur de relation de communication virtuelle)                                          |
| WIA-PA    | Wireless network for Industrial Automation – Process Automation (réseau sans fil pour automation industrielle – automation dans les processus) |

#### 4 Définition des types de données

Le Tableau 1 présente la définition WIA-PA des types de données.

**Tableau 1 – Définition des types de données**

| Définition des types de données (voir ISO/IEC 9899) |             |                          |          |
|-----------------------------------------------------|-------------|--------------------------|----------|
| Type de données                                     |             | Plage de valeurs         | Length   |
| Booléen                                             | Boolean     | Non 0: TRUE;<br>0: FALSE | 1 octet  |
| Entier non signé                                    | Unsigned8   | $0 \leq i \leq 2^8-1$    | 1 octet  |
|                                                     | Unsigned16  | $0 \leq i \leq 2^{16}-1$ | 2 octets |
|                                                     | Unsigned24  | $0 \leq i \leq 2^{24}-1$ | 3 octets |
|                                                     | Unsigned32  | $0 \leq i \leq 2^{32}-1$ | 4 octets |
|                                                     | Unsigned40  | $0 \leq i \leq 2^{40}-1$ | 5 octets |
|                                                     | Unsigned48  | $0 \leq i \leq 2^{48}-1$ | 6 octets |
|                                                     | Unsigned64  | $0 \leq i \leq 2^{64}-1$ | 8 octets |
| Chaîne d'octets                                     | Octetstring | Chaîne de 8 bits         | 1 octet  |
| Nombre réel simple                                  | Float       | Voir l'IEC 60559         | 4 octets |

#### 5 Aperçu de WIA-PA

##### 5.1 Types d'appareils

Le document spécifie cinq types d'appareils WIA-PA:

- ordinateur de configuration d'hôte;
- appareil de passerelle (GW);
- appareil de routage;
- appareil de terrain;
- appareil tenu à la main.


Pour améliorer la fiabilité, le réseau WIA-PA peut comporter des appareils de passerelle et des appareils de routage redondants. Un appareil principal connecte son appareil redondant à l'aide d'un câble. La connexion câblée n'est pas définie dans le présent document. L'adresse courte (voir 6.3.4) d'un appareil redondant est la même que celle de l'appareil principal. Le temps de démarrage d'un appareil redondant n'est pas plus long que celui de l'appareil principal. Lorsque l'appareil principal fonctionne, les appareils redondants ne démarrent pas leurs modules radio. Lorsque les informations relatives aux appareils principaux sont modifiées, il convient que ces derniers sauvegardent rapidement les informations modifiées sur leurs appareils redondants via une connexion câblée. La connexion câblée n'est pas spécifiée dans le présent document. Si SecEnableFlag est activée, les appareils redondants sont authentifiés (voir 11.2).

## 5.2 Topologie de réseau

Le réseau WIA-PA prend en charge deux types différents de topologies de réseau:

- a) une topologie de réseau hiérarchique qui est la combinaison de la configuration en étoile et de la configuration maillée;
- b) une topologie de réseau en étoile uniquement.

La topologie de réseau hiérarchique qui est la combinaison de la configuration en étoile et de la configuration maillée est représentée à la Figure 1. Le premier niveau du réseau est en topologie maillée, dans laquelle des appareils de routage et des appareils de passerelle sont déployés. Le second niveau du réseau est en topologie en étoile, dans laquelle des appareils de routage, des appareils de terrain et des appareils tenus à la main (le cas échéant) sont déployés.

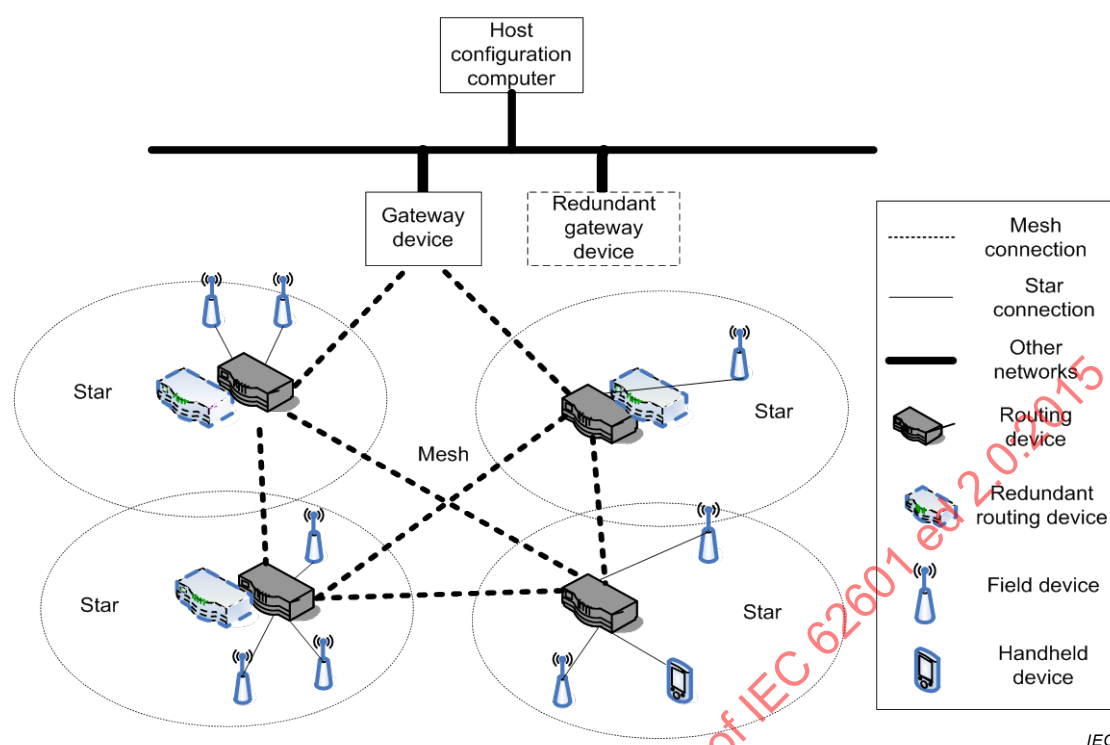


| Anglais                     | Français                           |
|-----------------------------|------------------------------------|
| Host configuration computer | Ordinateur de configuration d'hôte |
| Gateway device              | Appareil passerelle                |
| Redundant gateway device    | Appareil passerelle redondant      |
| Star                        | Etoile                             |
| Mesh                        | Maille                             |
| Mesh connection             | Connexion maillée (polygonale)     |
| Star connection             | Connexion en étoile                |
| Other networks              | Autres réseaux                     |
| Routing device              | Appareil de routage                |
| Redundant routing device    | Appareil de routage redondant      |
| Field device                | Appareil de terrain                |
| Handheld device             | Appareil tenu à la main            |

**Figure 1 – Exemple de topologie physique WIA-PA (combinaison de la configuration en étoile et de la configuration maillée)**

Le réseau en étoile uniquement est composé d'un appareil de passerelle, d'appareils de terrain et d'appareils tenus à la main (le cas échéant). La topologie de réseau en étoile est représentée à la Figure 2.



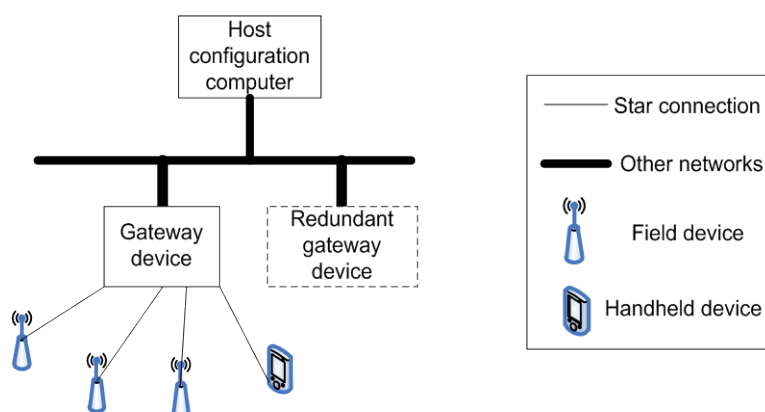

IEC

| Anglais                     | Français                           |
|-----------------------------|------------------------------------|
| Host configuration computer | Ordinateur de configuration d'hôte |
| Gateway device              | Appareil passerelle                |
| Redundant gateway device    | Appareil passerelle redondant      |
| Star connection             | Connexion en étoile                |
| Other networks              | Autres réseaux                     |
| Field device                | Appareil de terrain                |
| Handheld device             | Appareil tenu à la main            |

**Figure 2 – Exemple de topologie physique WIA-PA (en étoile uniquement)**

Le réseau en étoile uniquement représente un cas particulier du réseau hiérarchique. Dans le présent document, la spécification du réseau hiérarchique couvre le réseau en étoile uniquement. Par conséquent, aucune spécification explicite fournie pour le réseau en étoile uniquement n'est disponible.

Afin de faciliter la gestion, le présent document spécifie cinq rôles logiques.

a) Passerelle

La passerelle gère la conversion de protocole et le mapping des données entre le réseau WIA-PA et les autres réseaux.

b) Gestionnaire de réseau

Le gestionnaire de réseau (NM) gère et surveille la totalité du réseau (voir 6.2). Dans un réseau WIA-PA, il convient qu'il n'y ait qu'un seul gestionnaire de réseau.

c) Gestionnaire de sécurité

Le gestionnaire de sécurité (SM) traite de la gestion des clés de sécurité et de l'authentification de la sécurité des appareils de passerelle, de routage, de terrain et tenus à la main (le cas échéant).

d) Tête de groupe

La tête de groupe gère et surveille les appareils de terrain et tenus à la main (le cas échéant). De plus, elle fusionne et transmet en toute sécurité des paquets provenant d'éléments de groupe locaux et d'autres têtes de groupe.

e) Élément de groupe

L'élément de groupe recueille des données de terrain et les envoie à sa tête de groupe.

Il convient que le gestionnaire de réseau (NM) et le gestionnaire de sécurité (SM) qui sont utilisés pour la gestion du système résident dans un appareil de passerelle.

Un même appareil physique peut accomplir les fonctions de plusieurs rôles logiques. Dans le réseau hiérarchique qui est la combinaison de la configuration en étoile et de la configuration maillée, un appareil de passerelle peut endosser les rôles logiques de passerelle, NM, SM et tête de groupe. Il convient qu'un appareil de routage doit agir comme tête de groupe. Il convient qu'un appareil de terrain/tenu à la main agisse uniquement comme élément de groupe.

L'appareil principal et l'appareil redondant sont marqués par le paramètre RedundantDevFlag dans le Tableau 20.

### 5.3 Architecture de protocole

L'architecture de protocole WIA-PA, représentée à la Figure 3, est issue de la norme ISO/IEC 7498-1. Elle définit la sous-couche Liaison de données (DLSL), la couche Réseau (NL) et la couche Application (AL), alors que sa couche PHYsique (PHY) et sa sous-couche Contrôle d'accès au support (MAC) sont basées sur la norme IEEE STD 802.15.4-2011.

IECNORM.COM : Click to view the full PDF of IEC 62601 ed 2015

| OSI layer    | Function                                                                     | WIA-PA                                                           |
|--------------|------------------------------------------------------------------------------|------------------------------------------------------------------|
| Application  | Provides the user with network capable application                           | AL<br>(Provides the user with network capable application)       |
| Presentation | Converts application data between network and local machine formats          | ↑                                                                |
| Session      | Connection management services for applications                              |                                                                  |
| Transport    | Provides network independent, transparent message transfer                   | ↑ or ↓                                                           |
| Network      | End- to- end routing of packets. resolving network addresses                 | NL<br>(Power-optimized redundant path, star and mesh networking) |
| Data link    | Establishes data packet structure, framing, error detection, bus arbitration | DLSL<br>(Hybrid CSMA and TDMA, AFS, AFH, TH)                     |
|              |                                                                              | IEEE STD 802.15.4-2011 MAC                                       |
| Physical     | Mechanical / electrical connection. Transmits raw bit stream                 | PHY<br>(IEEE STD 802.15.4-2011-based radios)                     |

IEC


| Anglais                                                                      | Français                                                                                                                  |
|------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------|
| OSI layer                                                                    | Couche OSI                                                                                                                |
| Function                                                                     | Fonction                                                                                                                  |
| WIA-PA                                                                       | WIA-PA                                                                                                                    |
| Application                                                                  | Application                                                                                                               |
| Provides the user with network capable application                           | Fournit à l'utilisateur une application avec capacité réseau                                                              |
| or                                                                           | ou                                                                                                                        |
| AL (Provides the user with network capable application)                      | AL (Fournit à l'utilisateur une application avec capacité réseau)                                                         |
| Presentation                                                                 | Présentation                                                                                                              |
| Converts application data between network and local machine formats          | Convertit les données d'application entre les formats réseau et machine locale                                            |
| Session                                                                      | Session                                                                                                                   |
| Connection management services for applications                              | Services de gestion de connexion pour applications                                                                        |
| Transport                                                                    | Transport                                                                                                                 |
| Provides network independent, transparent message transfer                   | Fournit un transfert de messages transparent, indépendant du réseau                                                       |
| Network                                                                      | Réseau                                                                                                                    |
| End-to-end routing of packets, resolving network addresses                   | Routage de bout en bout de paquets, résolution des adresses réseau                                                        |
| NL (Power-optimized redundant path, star and mesh networking)                | NL (chemin redondant optimisé en puissance, connexion réseau en étoile et maillée)                                        |
| Data link                                                                    | Liaison de données                                                                                                        |
| Establishes data packet structure, framing, error detection, bus arbitration | Etablit une structure de données en paquet, le verrouillage de trame, la détection d'erreur et le contrôle d'accès au bus |
| DLSL (Hybrid CSMA and TDMA, AFS, AFH, TH)                                    | DLSL (hybride CSMA et AMRT, AFS, AFH, TH)                                                                                 |
| IEEE STD 802.15.4-2011 MAC                                                   | MAC selon l'IEEE 802.15.4-2011                                                                                            |
| Physical                                                                     | Physique                                                                                                                  |
| Mechanical/electrical connection. Transmits raw bit stream                   | Connexion mécanique/électrique. Emission d'un flux binaire brut                                                           |

| Anglais                                   | Français                                                          |
|-------------------------------------------|-------------------------------------------------------------------|
| PHY (IEEE STD 802.15.4-2011-based radios) | PHY (équipements radioélectriques basés sur l'IEEE 802.15.4-2011) |

**Figure 3 – Modèle de référence OSI de base mappé au réseau WIA-PA**

#### 5.4 Interconnexions

Le réseau WIA-PA interconnecte avec les autres réseaux par l'intermédiaire de la passerelle WIA-PA. Outre la communication avec le NM et le SM du réseau WIA-PA, la passerelle WIA-PA peut communiquer avec d'autres appareils du réseau WIA-PA afin d'échanger des informations entre les appareils. Par ailleurs, la passerelle WIA-PA peut connecter d'autres réseaux, tels que les bus de terrain câblés. L'architecture de la passerelle WIA-PA est indiquée à la Figure 4.

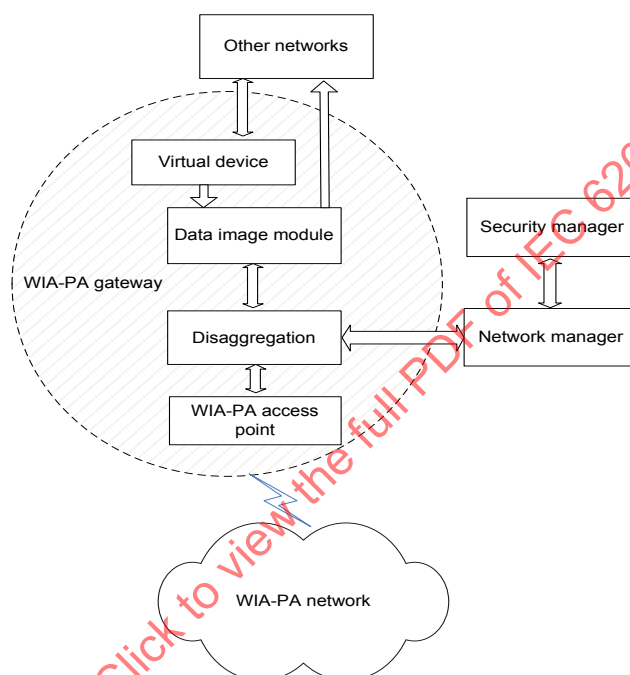

IEC

| Anglais             | Français                      |
|---------------------|-------------------------------|
| Other networks      | Autres réseaux                |
| Virtual device      | Appareil virtuel              |
| Data image module   | Module d'image de données     |
| WIA-PA gateway      | Passerelle WIA-PA             |
| Security manager    | Gestionnaire de sécurité (SM) |
| Disaggregation      | Désagrégation                 |
| Network manager     | Gestionnaire de réseau (NM)   |
| WIA-PA access point | Point d'accès WIA-PA          |
| WIA-PA network      | Réseau WIA-PA                 |

**Figure 4 – Architecture de passerelle WIA-PA**

La passerelle WIA-PA comporte les composants suivants.

a) Point d'accès WIA-PA

Le point d'accès WIA-PA réalise les connexions physiques du réseau WIA-PA et la transmission des informations et données de gestion.

b) Appareil virtuel

L'appareil virtuel définit une interface de communication avec d'autres réseaux. L'interface est utilisée pour mapper une source de données d'autres réseaux à un appareil WIA-PA afin d'établir la communication entre le réseau WIA-PA et d'autres réseaux.

c) **Objet désagrégation**

Cet objet est utilisé pour désagréger les paquets, qui sont agrégés dans des appareils de routage et des appareils de terrain.

d) **Module d'image de données**

Le module d'image de données sauvegarde les données des appareils dans le réseau WIA-PA et fournit une interface d'accès pour d'autres réseaux.

L'appareil virtuel et le module d'image de données sont facultatifs et spécifiques à la mise en œuvre et ne sont pas définis dans le présent document.

## **6 Gestion de système**

### **6.1 Généralités**

La gestion de système dans le réseau WIA-PA comprend à la fois la gestion de réseau et la gestion de la sécurité. Les fonctions de la gestion du système sont mises en œuvre par le processus d'application de gestion d'appareil (DMAP) dans chaque appareil. Le processus DMAP, en tant qu'entité de gestion de système, comprend le module de gestion de réseau, le module de gestion de la sécurité et le module de base d'informations de gestion (MIB). Le processus DMAP est représenté par la zone grise dans la Figure 5. Les blocs blancs dans la zone grise sont les composants fonctions dans le processus DMAP.

IECNORM.COM : Click to view the full PDF of IEC 62601 ed 2.0:2015

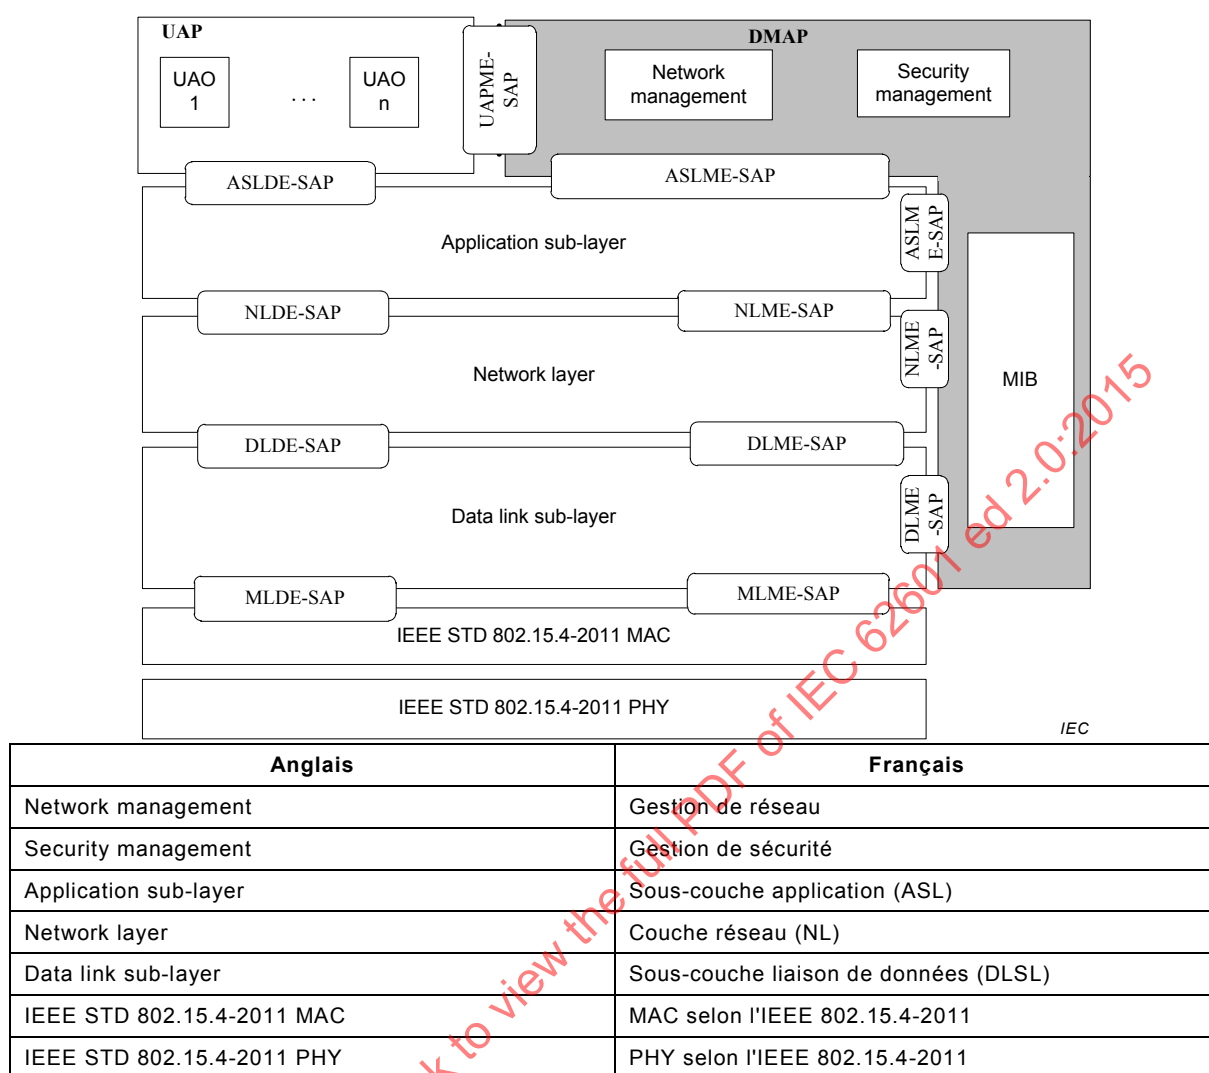


**Figure 5 – Processus DMAP dans la gestion du système**

La gestion de réseau spécifie la gestion d'attributs d'appareils et d'attributs qui sont relatifs à la communication et à la configuration du réseau. Les fonctions de gestion de réseau sont accomplies par les processus DMAP du NM, des têtes de groupe et des éléments de groupe. Les fonctions de gestion de réseau comprennent les actions suivantes.

a) Rattachement au réseau et départ du réseau

Il convient qu'un appareil de routage soit rattaché au réseau ou le quitte par le biais de l'appareil de passerelle ou d'un appareil de routage en ligne. Il convient qu'un appareil de terrain soit rattaché au réseau ou le quitte par l'intermédiaire d'un appareil de routage en ligne ou de l'appareil de passerelle. Il convient que le nouvel appareil de rattachement soit authentifié par le SM.

b) Attribution d'adresse réseau

Chaque appareil dans le réseau WIA-PA possède une adresse avec identificateur unique étendu de 64 bits (EUI-64) et une adresse réseau de 16 bits. L'adresse EUI-64 est également appelée adresse longue. L'adresse longue de chaque appareil est assignée par les fournisseurs conformément à l'adresse EUI-64 de l'IEEE. L'adresse réseau de 16 bits est également appelée adresse courte. L'adresse courte de chaque appareil de réseau est assignée par le NM.

c) Configuration de routage

Le routage statique est mis en œuvre dans le réseau WIA-PA. La table de routage dans chaque appareil de routage est configurée par le NM.

d) Configuration des ressources de communication

Les ressources de communication du réseau WIA-PA sont organisées comme supertrames (voir 8.4.4). Lorsqu'un appareil de routage a réussi à se rattacher au réseau, il convient que des ressources de communication lui soient affectées par le NM. Une fois qu'un appareil de terrain a réussi à se rattacher à un groupe, il convient que la tête de groupe lui affecte des ressources de communication.

e) Configuration de la source temporelle et services de temps système

Le réseau WIA-PA établit une seule source de temps de base, qui est accomplie par l'appareil de passerelle. Afin de reconnaître l'ordre des événements qui surviennent, les appareils WIA-PA se synchronisent relativement à l'appareil de passerelle.

f) Surveillance de performance

La surveillance de performance permet de recueillir la performance du réseau WIA-PA, qui inclut l'état des appareils, la défaillance de chemin et la condition des canaux.

g) Maintenance de la MIB

Il convient que le module MIB configure la MIB (base d'informations de gestion) de la pile de protocole du réseau WIA-PA.

h) Interfaces pour le personnel d'exploitation et de maintenance

Il convient que le NM fournisse une interface pour permettre au personnel d'exploitation et de maintenance de surveiller et contrôler la performance et les activités du réseau et des appareils. La définition de cette interface ne relève pas du domaine d'application de la présente norme WIA-PA.

i) Mise à niveau du firmware

Il convient que la mise à niveau du firmware mette à jour la pile de protocole des appareils WIA-PA. Sachant que la mise à niveau en ligne du firmware est une opération énergivore, le réseau WIA-PA ne recommande pas ce mode et ne le spécifie pas dans le présent document. Le réseau WIA-PA recommande la mise à niveau hors ligne du firmware par l'intermédiaire d'appareils tenus à la main. Les appareils tenus à la main connectent les appareils devant être mis à niveau par connexion câblée ou sans fil. Les connexions câblées peuvent utiliser les méthodes de communication série. Les connexions sans fil ne sont pas spécifiées dans le présent document.


Il convient que la gestion de la sécurité gère les attributs associés à la sécurité réseau. La gestion de la sécurité est accomplie par le SM et les modules de gestion de la sécurité dans les têtes de groupe et éléments de groupe. Le SM gère l'authentification centralisée du réseau tout entier et nécessite une coordination avec le NM. Voir 11.1 pour les fonctions relatives à la gestion de la sécurité.

Le module MIB stocke tous les attributs utilisés dans le réseau WIA-PA, y compris les attributs structurés comme les attributs non structurés (voir 6.9).

## 6.2 Cadre de travail de la gestion système

Le réseau WIA-PA prend en charge le plan de gestion hybride centralisée et répartie.

Le cadre de travail pour la gestion hybride centralisée et répartie est représenté à la Figure 6. La gestion de système est mise en œuvre par le NM, le SM et les têtes de groupe. Les têtes de groupe sont directement gérées par le NM et le SM. En outre, le privilège de gérer les éléments de groupe leur est octroyé.

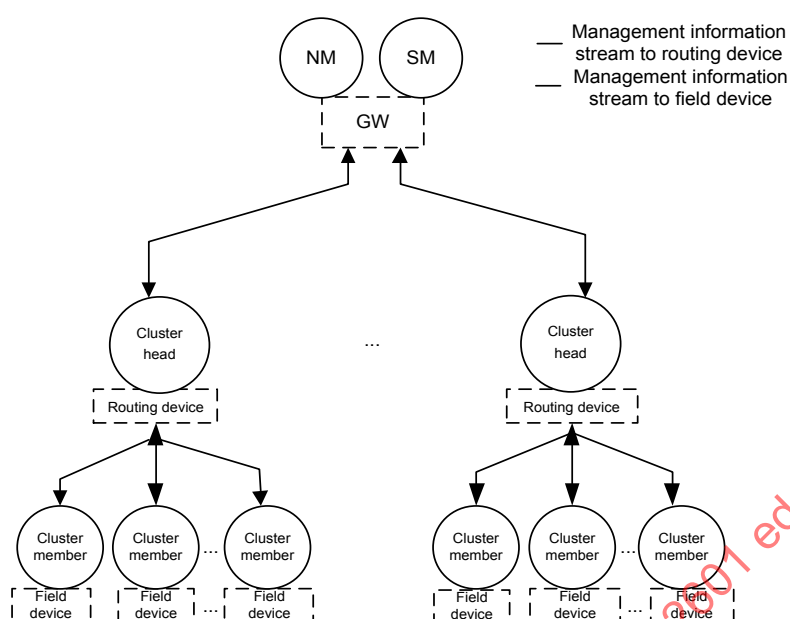

| Anglais                                         | Français                                                              |
|-------------------------------------------------|-----------------------------------------------------------------------|
| Management information stream to routing device | Flux d'informations de gestion à destination de l'appareil de routage |
| Management information stream to field device   | Flux d'informations de gestion à destination de l'appareil de terrain |
| NM                                              | Gestionnaire de réseau (NM)                                           |
| SM                                              | Gestionnaire de sécurité (SM)                                         |
| GW                                              | Passerelle (GW)                                                       |
| Cluster head                                    | Tête de groupe                                                        |
| Routing device                                  | Appareil de routage                                                   |
| Cluster member                                  | Élément de groupe                                                     |
| Field device                                    | Appareil de terrain                                                   |

**Figure 6 – Plan de gestion de système hybride centralisée et répartie**

Il convient que le NM accomplisse les tâches suivantes:

- construire et maintenir la topologie maillée constituée de têtes de groupe et la topologie en étoile constituée de têtes de groupe et d'éléments de groupe;
- affecter des ressources de communication aux têtes de groupe dans la topologie maillée et affecter des ressources de communication pour les éléments de groupe aux têtes de groupe dans la topologie en étoile;
- surveiller la performance du réseau WIA-PA, notamment l'état des appareils, la défaillance de chemin et la condition des canaux.

Il convient que le SM accomplisse les tâches suivantes:

- admettre les têtes de groupe et éléments de groupe qui tentent de se rattacher au réseau WIA-PA;
- gérer les clés dans la totalité du réseau, y compris la création de clés, la distribution de clés, la récupération de clés et la révocation de clés;
- permettre la relation de communication de bout en bout.

Il convient que la tête de groupe accomplisse les tâches suivantes:



- a) construire et maintenir la topologie en étoile; affecter des ressources de communication qui sont affectées à la topologie en étoile par le NM aux éléments de groupe dans le groupe; fournir au NM les résultats de la surveillance de la topologie en étoile;
- b) sauvegarder et transmettre les clés utilisées dans la topologie en étoile; permettre la relation de communication entre têtes de groupe; permettre la relation de communication entre une tête de groupe et des éléments de groupe.

### **6.3 Processus de rattachement**

#### **6.3.1 Processus de mise en service**

Lorsqu'un appareil WIA-PA tente de se rattacher au réseau, il convient qu'il soit mis en service par un appareil tenu à la main via une connexion câblée.

Il convient qu'un nouvel appareil soit doté d'une adresse longue de 64 bits avant de se rattacher au réseau WIA-PA. D'abord, la valeur CountryCode (voir 6.9.1.2.1 et 8.4.11) d'un nouvel appareil doit être configurée, car elle reflète les contraintes de réglementation propres à la zone géographique dans laquelle il pourrait être déployé. Ensuite, la valeur NetworkTopology (voir 6.9.1.2.1) doit être définie, puisqu'elle indique le type de topologie de réseau. Puis la valeur SecEnableflag (voir 6.9.1.2.1) doit être déterminée, parce qu'elle indique si l'authentification est activée sur le réseau. Si l'authentification est activée, la valeur KJ doit également être définie (voir 11.2).

Pour se rattacher au réseau WIA-PA, il convient qu'un nouvel appareil de routage ou appareil de terrain écoute d'abord les balises.


#### **6.3.2 Processus de rattachement d'un appareil de routage**

Lorsqu'un appareil de routage tente de se rattacher au réseau, il convient qu'une clé de rattachement soit mise en service par un appareil tenu à la main. Voir l'Article 11 pour le processus détaillé de mise en service.

Le processus de rattachement d'un appareil de routage inclut les opérations suivantes.

- a) Un appareil de routage balaye les canaux disponibles pour obtenir des balises de la part des appareils de routage en ligne ou de l'appareil de passerelle.
- b) L'appareil de routage choisit un appareil de routage en ligne ou l'appareil de passerelle comme parent temporel et se synchronise au réseau conformément à la balise reçue.
- c) L'appareil de routage envoie une demande de rattachement à son parent temporel qui transmettra ensuite la demande au NM.
- d) Lorsqu'il reçoit une demande de rattachement, il convient que le NM communique avec le SM pour parachever le processus d'authentification. Puis, le NM retourne une réponse de rattachement.
- e) L'appareil de routage reçoit la réponse de rattachement relayée par son parent temporel. Si la réponse est négative, il convient que l'appareil de routage recommence ce processus de rattachement; sinon, il convient que le processus de rattachement soit terminé.


Le processus de rattachement d'un appareil de routage par l'intermédiaire de l'appareil de passerelle est indiqué à la Figure 7.

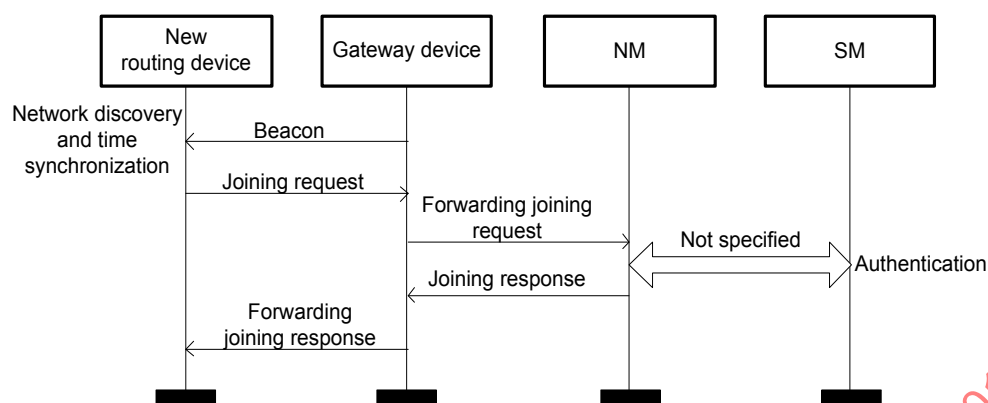

| Anglais                                    | Français                                           |
|--------------------------------------------|----------------------------------------------------|
| New routing device                         | Nouvel appareil de routage                         |
| Gateway device                             | Appareil passerelle                                |
| NM                                         | Gestionnaire de réseau (NM)                        |
| SM                                         | Gestionnaire de sécurité (SM)                      |
| Network discovery and time synchronization | Découverte de réseau et synchronisation de l'heure |
| Beacon                                     | Balise                                             |
| Joining request                            | Demande de rattachement                            |
| Forwarding joining response                | Transmission de la réponse de rattachement         |
| Forwarding joining request                 | Transmission de la demande de rattachement         |
| Joining response                           | Réponse de rattachement                            |
| Not specified                              | Non spécifié                                       |
| Authentication                             | Authentification                                   |

**Figure 7 – Processus de rattachement d'un appareil de routage par l'intermédiaire de l'appareil de passerelle**

Le processus de rattachement d'un appareil de routage par l'intermédiaire d'un appareil de routage en ligne est indiqué à la Figure 8.

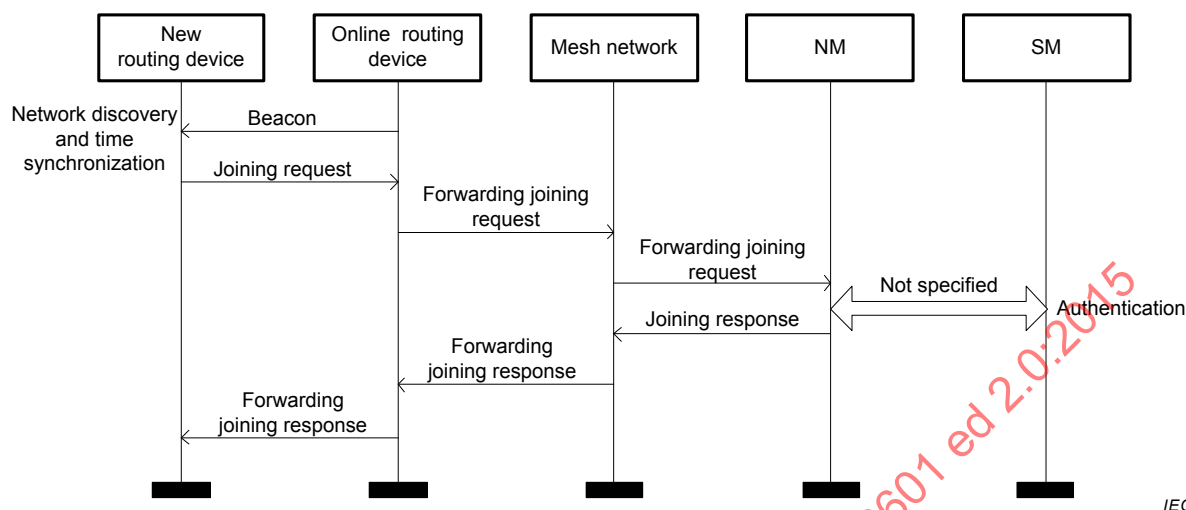

| Anglais                                    | Français                                           |
|--------------------------------------------|----------------------------------------------------|
| New routing device                         | Nouvel appareil de routage                         |
| Online routing device                      | Appareil de routage en ligne                       |
| Mesh network                               | Réseau maillé                                      |
| NM                                         | Gestionnaire de réseau (NM)                        |
| SM                                         | Gestionnaire de sécurité (SM)                      |
| Network discovery and time synchronization | Découverte de réseau et synchronisation de l'heure |
| Beacon                                     | Balise                                             |
| Joining request                            | Demande de rattachement                            |
| Forwarding joining response                | Transmission de la réponse de rattachement         |
| Forwarding joining request                 | Transmission de la demande de rattachement         |
| Joining response                           | Réponse de rattachement                            |
| Not specified                              | Non spécifié                                       |
| Authentication                             | Authentification                                   |

**Figure 8 – Processus de rattachement d'un appareil de routage par l'intermédiaire d'un appareil de routage en ligne**

Voir 9.5.8 pour l'affectation de ressources de communication.

### 6.3.3 Processus de rattachement d'un appareil de terrain


Le processus de rattachement d'un appareil de terrain inclut les opérations suivantes.

- Un appareil de terrain balaye les canaux disponibles pour obtenir des balises de la part des appareils de routage en ligne ou de l'appareil de passerelle.
- L'appareil de terrain choisit un appareil de routage en ligne ou l'appareil de passerelle comme tête de groupe et se synchronise au réseau conformément à la balise reçue.
- L'appareil de terrain envoie à la tête de groupe la demande de rattachement.
- Lorsqu'elle reçoit la demande de rattachement, la tête de groupe la transmet au NM.
- Après avoir reçu la réponse de rattachement du NM, la tête de groupe retourne la réponse de rattachement à l'appareil de terrain en fonction du type de topologie de réseau et des ressources de communication disponibles de la tête de groupe. Si la topologie de réseau ne correspond pas, l'état de la réponse est défini sur FAILURE\_TOP\_DISMATCH; s'il

existe d'autres types de défaillances, l'état de la réponse est défini sur FAILURE\_ELSE; si le rattachement a fonctionné, l'état de la réponse est défini sur SUCCESS. Voir 8.6.3.4 pour la définition de l'état.

- f) L'appareil de terrain reçoit la réponse de rattachement de la tête de groupe. Si l'état de la réponse est FAILURE\_TOP\_DISMATCH, l'appareil de terrain sélectionnera un autre appareil de routage comme tête de groupe et redémarrera le processus de rattachement décrit ci-dessus; si l'état de la réponse est FAILURE\_ELSE, l'appareil de terrain redémarrera ce processus de rattachement; si l'état de la réponse est SUCCESS, l'appareil de terrain est rattaché au réseau.

Les processus de rattachement d'un appareil de terrain par l'intermédiaire de l'appareil de passerelle et d'un appareil de routage sont respectivement indiqués à la Figure 9 et à la Figure 10. Voir 9.5.8 pour l'affectation de ressources de communication.

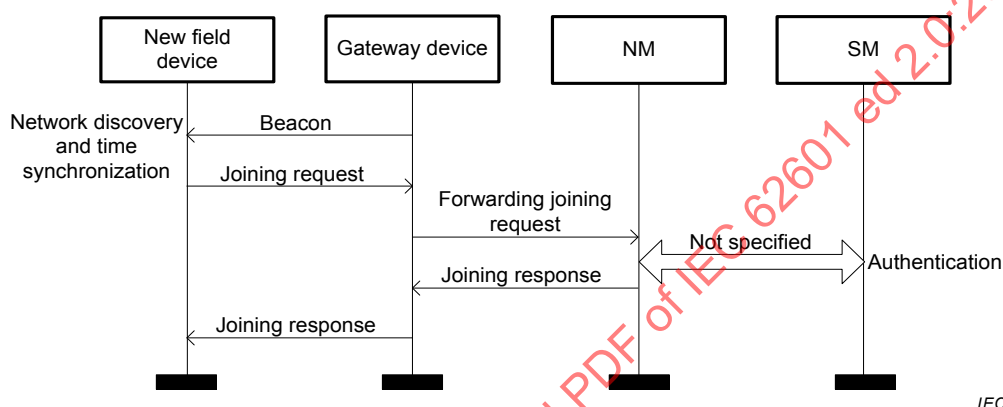

| Anglais                                    | Français                                           |
|--------------------------------------------|----------------------------------------------------|
| New field device                           | Nouvel appareil de terrain                         |
| Gateway device                             | Appareil passerelle                                |
| NM                                         | Gestionnaire de réseau (NM)                        |
| SM                                         | Gestionnaire de sécurité (SM)                      |
| Network discovery and time synchronization | Découverte de réseau et synchronisation de l'heure |
| Beacon                                     | Balise                                             |
| Joining request                            | Demande de rattachement                            |
| Joining response                           | Réponse de rattachement                            |
| Forwarding joining request                 | Transmission de la demande de rattachement         |
| Not specified                              | Non spécifié                                       |
| Authentication                             | Authentification                                   |

**Figure 9 – Processus de rattachement d'un appareil de terrain par l'intermédiaire d'un appareil de passerelle**

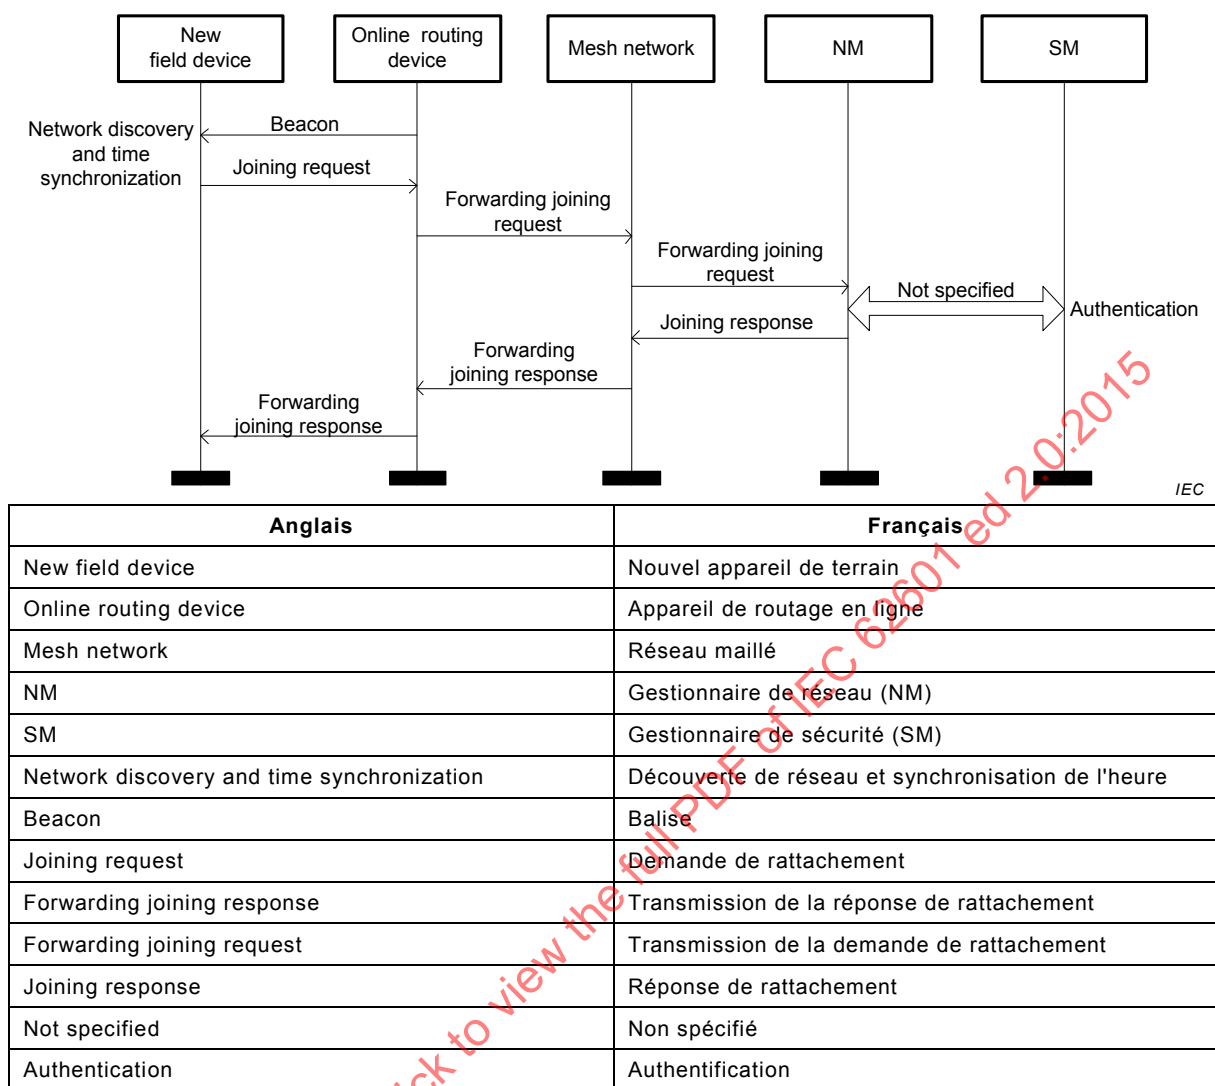


**Figure 10 – Processus de rattachement d'un appareil de terrain par l'intermédiaire d'un appareil de routage**

Un appareil tenu à la main WIA-PA se connecte au réseau WIA-PA via l'appareil de passerelle ou un appareil de routage. Le processus de rattachement de l'appareil tenu à la main est le même que celui des autres appareils WIA-PA. Après s'être rattaché au réseau, l'appareil tenu à la main WIA-PA configure les appareils WIA-PA et rassemble les informations relatives à la santé/à la performance du réseau au cours de la période d'accès avec conflit (CAP) de la supertrame WIA-PA.

Voir l'Article 11 pour plus d'informations au sujet de la sécurité.

#### 6.3.4 Adressage et attribution d'adresses

Dans le réseau WIA-PA, chaque appareil WIA-PA (appareil de passerelle, appareil de routage ou appareil de terrain) possède une adresse longue globale unique de 64 bits et une adresse courte de 16 bits. L'adresse longue, telle qu'indiquée à la Figure 11, est fixée par les fabricants conformément à l'adresse EUI-64 de l'IEEE.

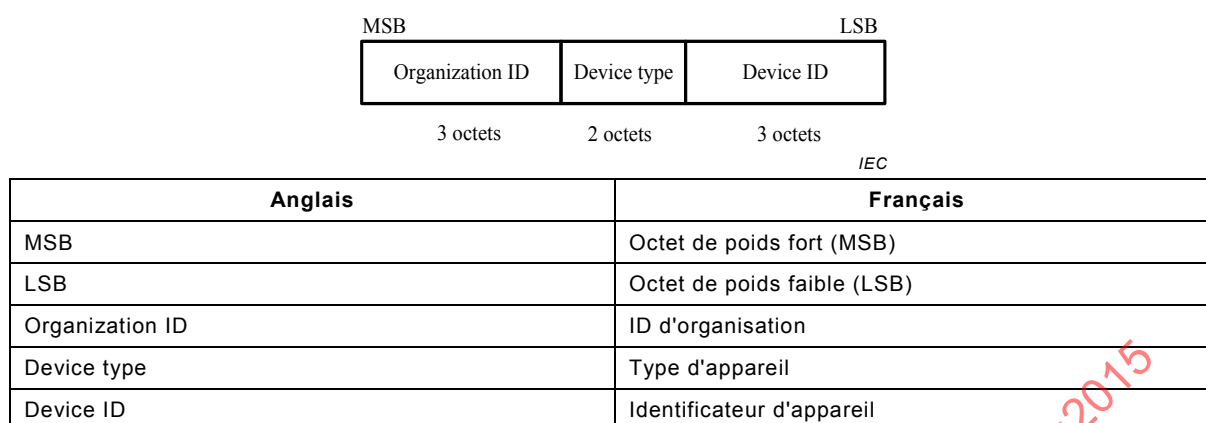


**Figure 11 – Structure d'adresse longue d'un appareil**

L'adresse courte a une longueur de 16 bits. Les huit bits de poids fort de l'adresse courte qui sont assignés par le NM sont utilisés pour identifier les différents groupes. Si la valeur du paramètre NetworkTopology (voir 6.9.1.2.1) est définie sur 1, correspondant à la topologie de réseau en étoile uniquement, l'adresse de l'appareil de passerelle est également l'adresse de la tête de groupe.

L'adresse courte de l'appareil de passerelle est affectée par le NM. Le NM réside dans un appareil de passerelle (voir 5.2). Le processus d'affectation d'adresse de l'appareil de passerelle est une opération interne qui n'est pas spécifiée dans la présente spécification.

L'adresse courte d'un appareil de routage est indiquée à la Figure 12. Pour l'adresse courte d'un appareil de routage, les 8 bits de poids faible sont définis sur 0.


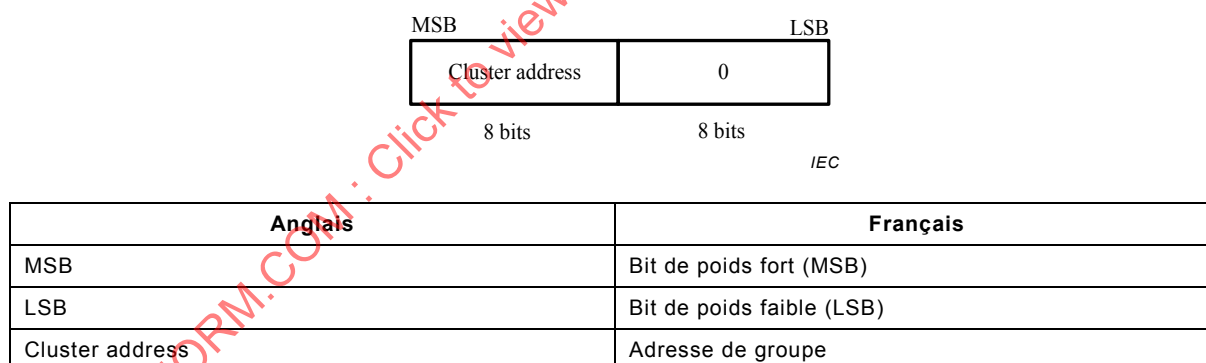


**Figure 12 – Structure d'adresse courte d'un appareil de routage**

L'adresse courte d'un appareil de terrain est indiquée à la Figure 13. La partie des 8 bits de poids faible dans l'adresse courte de l'appareil de terrain est l'adresse intragroupe (dans le groupe).

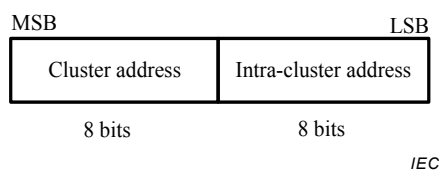

| Anglais               | Français                             |
|-----------------------|--------------------------------------|
| MSB                   | Bit de poids fort (MSB)              |
| LSB                   | Bit de poids faible (LSB)            |
| Cluster address       | Adresse de groupe                    |
| Intra-cluster address | Adresse intragroupe (dans le groupe) |

**Figure 13 – Structure d'adresse courte d'un appareil de terrain**

## 6.4 Relation de communication virtuelle (VCR, Virtual Communication Relationship)

### 6.4.1 Définition

L'accès aux objets d'application utilisateur (UAO) est défini par les VCR et les points d'extrémité d'un VCR sont deux objets UAO. Les VCR distinguent les ressources de routage et de communication parmi différents objets UAO. Chaque relation VCR est identifiée par un identificateur de VCR (VCR\_ID). Les attributs d'une VCR comprennent l'identificateur d'objet UAO du côté source, l'identificateur d'objet UAO du côté destination, les adresses de l'appareil source/de destination, le type de VCR, le domaine d'application valide, etc. (voir Tableau 2).

Les VCR sont classées en trois types selon les modes d'application:

- a) VCR Editeur/Abonné (P/S), utilisée pour publier des données périodiques;
- b) VCR Source/Puits de rapports (R/S), utilisée pour prendre en charge les rapports non périodiques sur les événements et les tendances;
- c) VCR Client/Serveur (C/S), utilisée pour transférer les messages de monodiffusion par paires dynamiques et non périodiques.

Les VCR sont classées en trois types selon leurs fonctions d'agrégation:

- a) VCR de non-agrégation

Si l'agrégation n'est pas prise en charge par un élément de groupe, la VCR de non-agrégation est utilisée par l'élément de groupe pour envoyer des paquets de non-agrégation vers sa tête de groupe. Si la tête de groupe ne prend pas en charge la fonction d'agrégation, elle transmettra les paquets de non-agrégation à la passerelle par le truchement de la VCR de non-agrégation.

- b) VCR d'agrégation de données

Si l'agrégation est prise en charge par un élément de groupe, la VCR d'agrégation de données est utilisée par l'élément de groupe pour envoyer les données agrégées à partir des objets UAO vers sa tête de groupe. Si la tête de groupe ne prend pas en charge la fonction d'agrégation, elle transmettra les données agrégées à la passerelle par l'intermédiaire de la VCR d'agrégation de données. L'intervalle effectif de la VCR d'agrégation de données va de l'objet d'agrégation de données (DAGO) de la tête de groupe à l'objet de désagrégation (DGO) de la passerelle.

- c) VCR d'agrégation de paquets

Si l'agrégation est prise en charge par une tête de groupe, la VCR d'agrégation de paquets est utilisée par la tête de groupe pour envoyer des paquets agrégés vers la passerelle. L'intervalle effectif de la VCR d'agrégation de paquets va de l'objet

d'agrégation de paquet (PAGO) de la tête de groupe à l'objet de désagrégation (DGO) de la passerelle.

Les PAGO, DGO et DAGO (voir 6.6.1) sont trois types spéciaux d'objets UAO.

#### 6.4.2 Prise en charge du protocole pour la VCR

Les prises en charge du protocole pour les VCR sont énumérées au Tableau 2.

**Tableau 2 – Prise en charge du protocole pour la VCR**

| Prise en charge de la couche de protocole |                                                               |              | Types de VCR                                                                                            |                                                      |                                                                      |
|-------------------------------------------|---------------------------------------------------------------|--------------|---------------------------------------------------------------------------------------------------------|------------------------------------------------------|----------------------------------------------------------------------|
|                                           |                                                               |              | VCR P/S                                                                                                 | VCR R/S                                              | VCR C/S                                                              |
| <b>AL</b>                                 | Applications utilisateur                                      |              | Emission de données périodique d'objet UAO                                                              | Rapport apériodique, par exemple alarme ou événement | Opération d'obtention et d'établissement d'attribut dans l'objet UAO |
|                                           | Modes de communications dans la sous-couche application (ASL) |              | P/S                                                                                                     | R/S                                                  | C/S                                                                  |
|                                           | Bidirectionnelle                                              |              | Non                                                                                                     | Non                                                  | Oui                                                                  |
|                                           | Retransmission de bout en bout                                |              | Non                                                                                                     | Facultatif                                           | Oui                                                                  |
|                                           | Prise en charge de l'agrégation de paquets                    |              | Oui                                                                                                     | Non                                                  | Non                                                                  |
| <b>NL</b>                                 | Prise en charge de chemins redondants                         | Intragroupe  | Non                                                                                                     | Non                                                  | Non                                                                  |
|                                           |                                                               | Inter groupe | Oui                                                                                                     | Oui                                                  | Oui                                                                  |
|                                           | Monodiffusion/Diffusion                                       |              | Diffusion/ Monodiffusion                                                                                | Diffusion/ Monodiffusion                             | Monodiffusion                                                        |
| <b>DLSL</b>                               | Périodique                                                    |              | Oui                                                                                                     | Non                                                  | Non                                                                  |
|                                           | Temps réel                                                    |              | Oui                                                                                                     | Facultatif                                           | Non                                                                  |
|                                           | Ressource de communication                                    | Intragroupe  | Période sans conflit (CFP), intervalles de temps exclusifs dans la période de communication intragroupe | CAP                                                  | CAP                                                                  |
|                                           |                                                               | Inter groupe | Intervalles de temps exclusifs dans la période de communication intergroupe                             | Intervalles de temps partagés                        | Intervalles de temps partagés                                        |

#### 6.4.3 Etablissement de VCR

Les processus d'établissement de VCR R/S et C/S sont les suivants.

- Le NM obtient les objets UAO des appareils de terrain lorsqu'ils sont rattachés au réseau WIA-PA. Les objets UAO sont obtenus par les primitives NLME-INFO\_GET au cours de la période d'accès avec conflit (CAP) (voir 9.5.13 et 9.6.4);
- Une fois que le NM obtient les objets UAO, il affecte les VCR R/S et C/S réservées à chaque objet UAO aux appareils de terrain.

S'il est nécessaire, le processus d'établissement de VCR P/S se déroule comme suit.

- Le NM établit une VCR P/S pour chaque objet UAO en utilisant les primitives NLME-INFO\_SET (voir 9.5.14 et 9.6.4). Si un appareil de terrain ne prend pas en charge l'agrégation de données, chaque objet UAO a une VCR P/S de non-agrégation et



des VCR différentes peuvent utiliser les mêmes chemins de routage. Autrement, chaque appareil de terrain a une VCR d'agrégation de données. Si l'appareil de routage prend en charge l'agrégation de paquets, une VCR d'agrégation de paquets est établie pour l'appareil de routage.

Voir Tableau 21 pour plus d'informations au sujet des VCR.

#### **6.4.4 Libération de VCR**

Les VCR sont libérées lorsque les appareils de routage et les appareils de terrain quittent le réseau (voir 6.8).

### **6.5 Configuration du routage et allocation de ressources de communication**

#### **6.5.1 Configuration de routage**

Les appareils de routage utilisent un routage statique qui est configuré par le NM. Les algorithmes de routage concrets ne sont pas spécifiés dans la présente norme. Les détails sur les chemins de routage sont indiqués au Tableau 15. Les chemins redondants sont pris en charge et utilisent le même RoutelD. La configuration du routage est réalisée par les services d'affectation d'itinéraire (voir 9.5.7).


#### **6.5.2 Cadre de travail de l'allocation de ressources de communication**

Les ressources de communication sont constituées d'intervalles de temps et de canaux. Il convient que l'affectation de ressources de communication soit considérée selon deux dimensions, à savoir le temps et le canal.

Le processus d'allocation de ressource de communication se déroule comme suit.

- a) dans le réseau maillé, les ressources de communication des têtes de groupe sont affectées par le gestionnaire de réseau (NM). Les ressources de communication sont constituées de celles utilisées par les têtes de groupe dans le réseau maillé et de celles affectées par les têtes de groupe aux éléments de groupe;
- b) dans le réseau en étoile, les ressources de communication sont affectées par les têtes de groupe aux éléments de groupe. Cela signifie que les ressources de communication sont liées aux éléments de groupe.

Un exemple de l'affectation de ressources dans la topologie de réseau hiérarchique qui est la combinaison de la configuration en étoile et de la configuration maillée est présentée à la Figure 14. En premier lieu, le NM résidant dans l'appareil de passerelle (GW) affecte des ressources de communication aux appareils de routage R1, R2 et R3. Ces ressources de communication sont utilisées pour la communication parmi R1, R2 et R3, pour la communication entre les appareils de routage et l'appareil de passerelle et pour la communication entre les appareils de terrain et appareils de routage intragroupe. Ensuite, après avoir reçu les ressources de communication du NM, les appareils de routage affectent certaines ressources de communication à leurs appareils de terrain intragroupe, qui sont utilisés pour les communications intragroupes parmi les appareils de terrain et leurs appareils de routage correspondants. Comme indiqué à la Figure 14, après que le NM a affecté des ressources de communication à R1, R2 et R3, R1 affecte des ressources de communication à F1 et F2, R2 affecte des ressources de communication à F5, et R3 affecte des ressources de communication à F3 et F4.

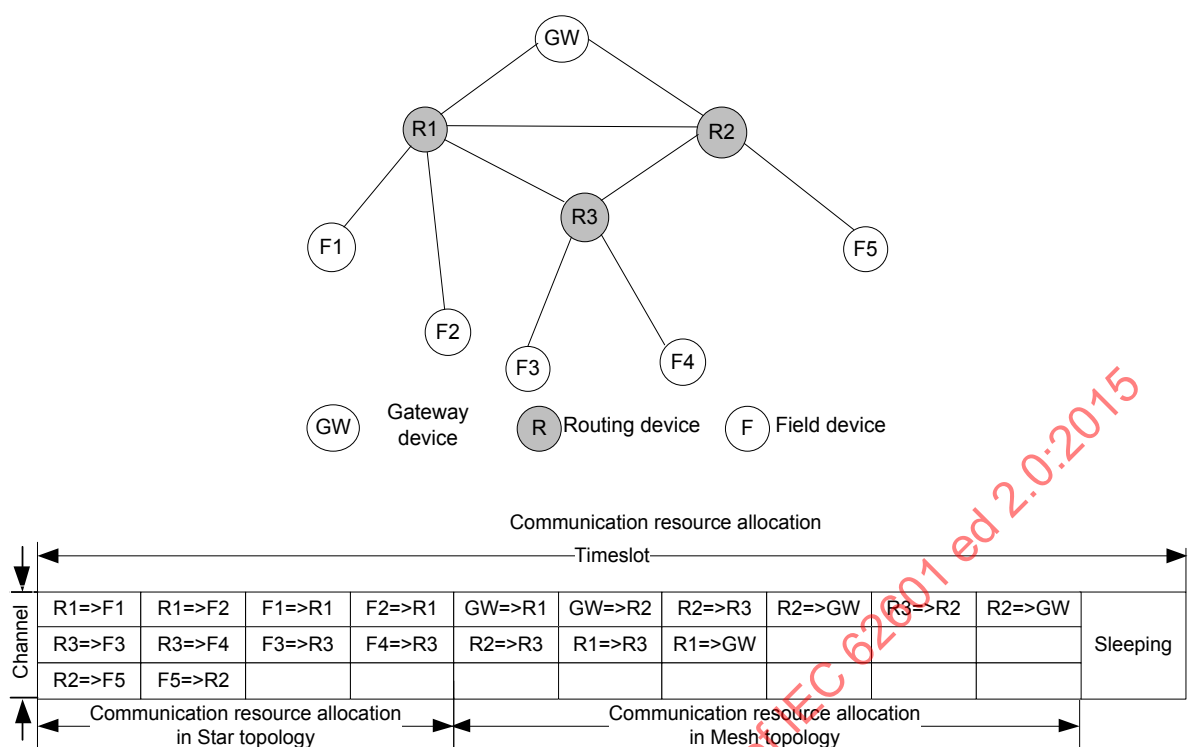

IEC

| Anglais                                            | Français                                                              |
|----------------------------------------------------|-----------------------------------------------------------------------|
| Gateway device                                     | Appareil de passerelle                                                |
| Routing device                                     | Appareil de routage                                                   |
| Field device                                       | Appareil de terrain                                                   |
| Communication resource allocation                  | Allocation de ressources de communication                             |
| Timeslot                                           | Intervalle de temps                                                   |
| Channel                                            | Canal                                                                 |
| Sleeping                                           | Sommeil                                                               |
| Communication resource allocation in Star topology | Allocation de ressources de communication dans la topologie en étoile |
| Communication resource allocation in Mesh topology | Allocation de ressources de communication dans la topologie maillée   |

Figure 14 – Exemple d'affectation de ressources

### 6.5.3 Règles de priorité des unités DLPDU et de programmation

Quatre niveaux de priorité sont définis pour les unités DLPDU.

a) Command (priorité la plus haute)

Il convient de classer tout paquet contenant une charge utile avec des informations relatives au diagnostic, à la configuration, à la commande, liées au réseau ou des alarmes urgentes avec une priorité Command.

b) Process data (priorité secondaire)

Il convient de classer tout paquet contenant des données de processus avec le niveau de priorité secondaire Process Data.

c) Normal (troisième priorité)

Il convient de classer les unités DLPDU qui ne satisfont pas aux critères de Command, Process data ou Alarm avec la priorité Normal.

d) Alarm (priorité la plus basse)

Il convient que les paquets contenant uniquement une alarme non urgente et une charge utile d'événement prennent une priorité Alarm. Il convient que les appareils ne mettent pas en tampon plus d'une unité DLPDU ayant la priorité Alarm.


Les règles de programmation suivantes sont recommandées dans cet ordre pour l'affectation des ressources de communication:

- a) affecter des canaux à la trame balise et à la période active;
- b) affecter des intervalles de temps aux appareils ayant la vitesse de mise à jour la plus rapide;
- c) affecter des ressources au paquet ayant le temps de création le plus précoce dans des situations de sauts multiples;
- d) affecter des ressources au paquet ayant la priorité la plus haute avant les autres paquets.

#### **6.5.4 Affectation de ressources de communication à l'appareil de routage**

Le réseau WIA-PA applique la stratégie de gestion intégrée de plans centralisée et répartie. Après que l'appareil de routage a été rattaché au réseau, il convient qu'il balaie ses appareils voisins sur chaque canal et transmette au NM les informations relatives à ces derniers. Après avoir reçu les informations relatives aux voisins, il convient que le NM affecte les chemins, une supertrame et un bloc de liaisons à l'appareil de routage à l'aide des services d'affectation de ressources de communication (voir 9.5.8). Les informations de chaque supertrame d'appareil de routage sont diffusées à ses appareils de terrain dans la trame balise. Le processus d'affectation de ressources de communication de l'appareil de routage est représenté à la Figure 15.

IECNORM.COM : Click to view the full PDF of IEC 62601:2015

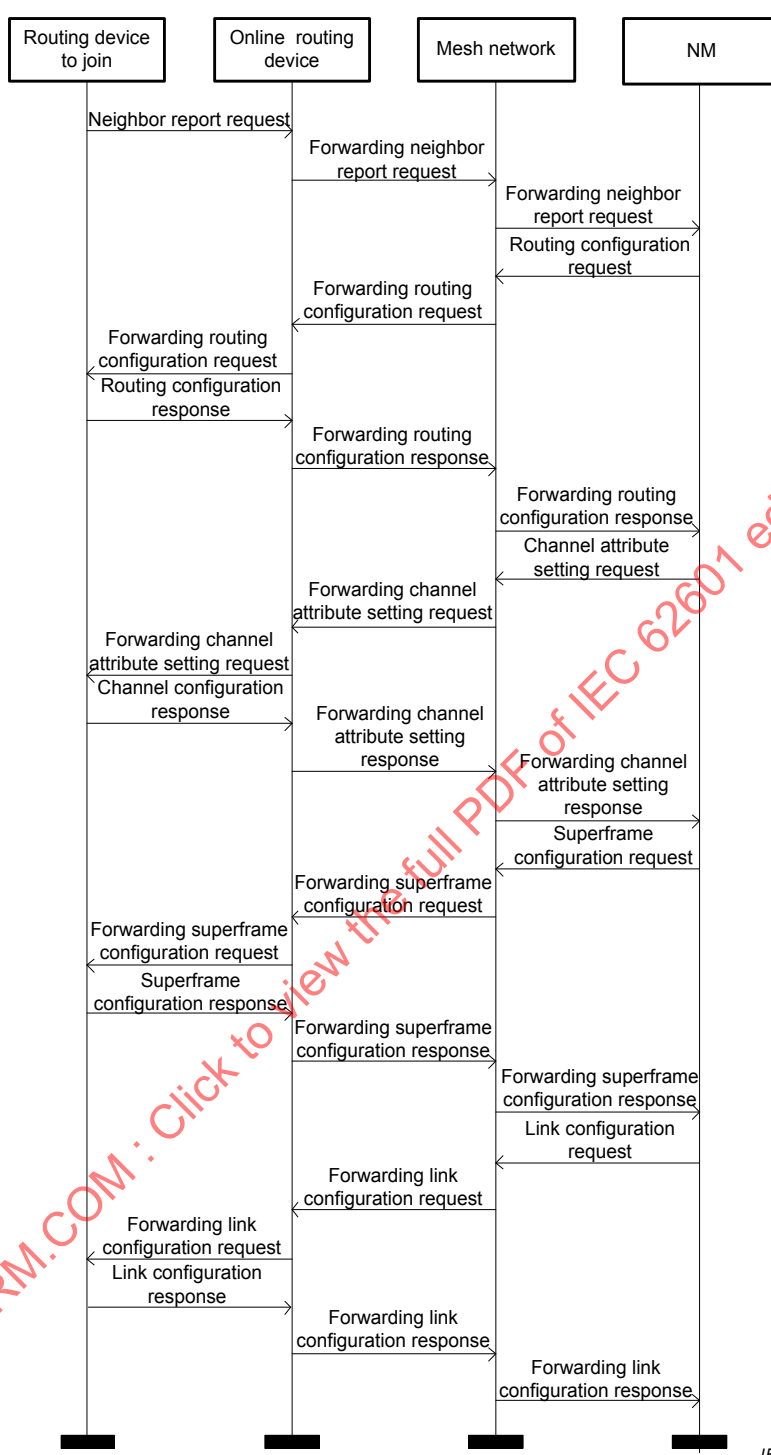

| Anglais                                  | Français                                               |
|------------------------------------------|--------------------------------------------------------|
| Routing device to join                   | Appareil de routage à rattacher                        |
| Online routing device                    | Appareil de routage en ligne                           |
| Mesh network                             | Réseau maillé                                          |
| NM                                       | Gestionnaire de réseau (NM)                            |
| Neighbour report request                 | Demande de rapport de voisin                           |
| Forwarding neighbor report request       | Transmission de la demande de rapport de voisin        |
| Routing configuration request            | Demande de configuration de routage                    |
| Forwarding routing configuration request | Transmission de la demande de configuration de routage |


| Anglais                                       | Français                                                        |
|-----------------------------------------------|-----------------------------------------------------------------|
| Routing configuration response                | Réponse de configuration de routage                             |
| Forwarding routing configuration response     | Transmission de la réponse de configuration de routage          |
| Channel attribute setting request             | Demande d'établissement d'attributs de canal                    |
| Forwarding channel attribute setting request  | Transmission de la demande d'établissement d'attributs de canal |
| Channel configuration response                | Réponse de configuration de canal                               |
| Forwarding channel attribute setting response | Transmission de la réponse d'établissement d'attributs de canal |
| Superframe configuration request              | Demande de configuration de supertrame                          |
| Forwarding superframe configuration request   | Transmission de la demande de configuration de supertrame       |
| Superframe configuration response             | Réponse de configuration de supertrame                          |
| Forwarding superframe configuration response  | Transmission de la réponse de configuration de supertrame       |
| Link configuration request                    | Réponse de configuration de liaison                             |
| Forwarding link configuration request         | Transmission de la demande de configuration de liaison          |
| Link configuration response                   | Réponse de configuration de liaison                             |
| Forward link configuration response           | Transmission de la réponse de configuration de liaison          |

**Figure 15 – Processus d'affectation de ressources de communication d'un appareil de routage**

#### 6.5.5 Affectation de ressources de communication à l'appareil de terrain

Après que des relations VCR d'un appareil de terrain ont été établies avec succès, l'appareil de routage ou l'appareil de passerelle affecte des intervalles de temps à ses appareils de terrain en utilisant les services d'allocation de ressources de communication (voir 9.5.8), qui sont utilisés pour la communication entre l'appareil de routage et les appareils de terrain ou entre l'appareil de passerelle et les appareils de terrain. Si les supertrames de l'appareil de routage et de l'appareil de passerelle sont affectées par les appareils de terrain rattachés, il convient que l'appareil de routage et l'appareil de passerelle mettent à jour leurs attributs RouteTable, Superframe et Link (voir 6.9.1.2.2 et 9.5.8).

Lorsqu'un appareil de terrain se rattache au réseau par l'intermédiaire d'un appareil de routage en ligne, le processus d'affectation de ressources de communication de l'appareil de terrain est représenté à la Figure 16.

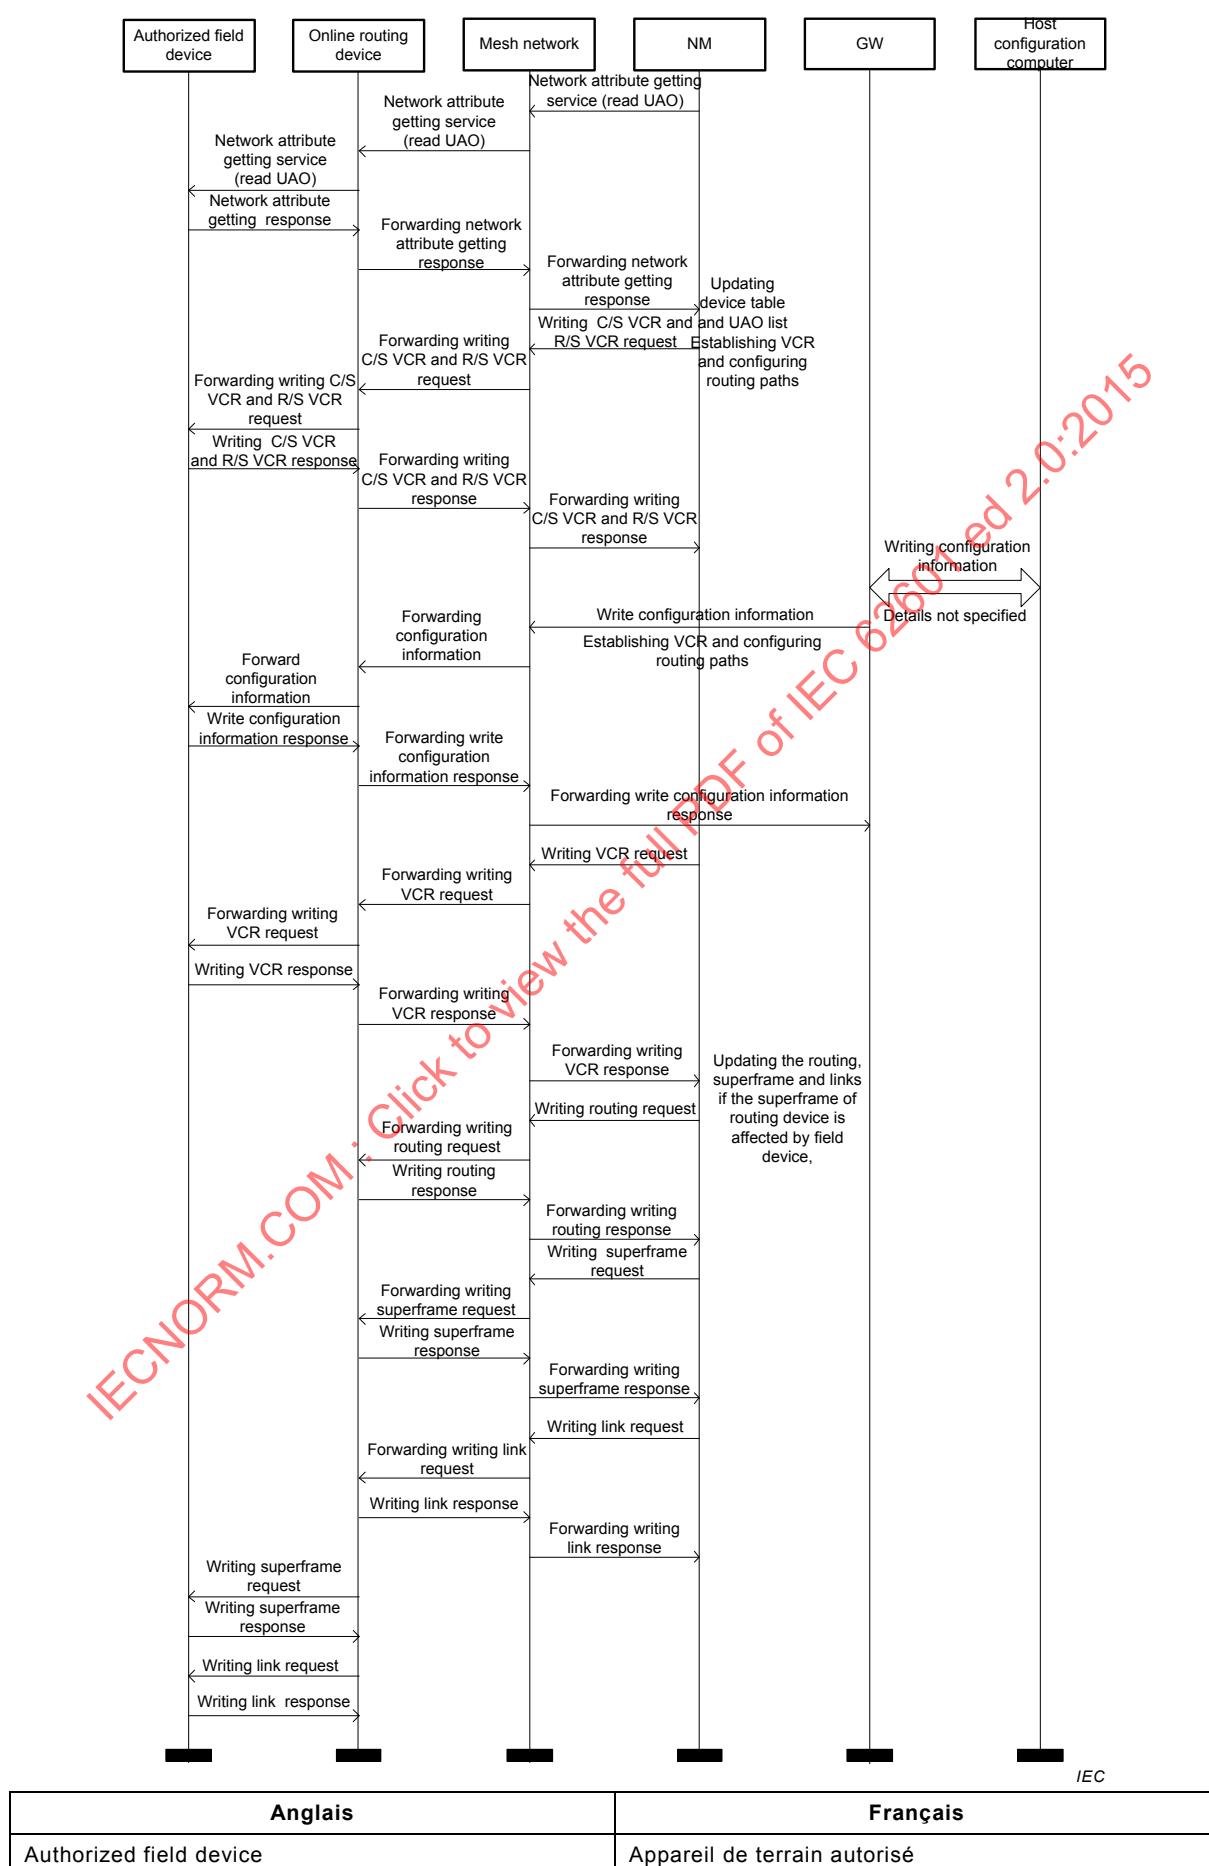

| Anglais                                                                                                    | Français                                                                                                                                  |
|------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------|
| Online routing device                                                                                      | Appareil de routage en ligne                                                                                                              |
| Mesh network                                                                                               | Réseau maillé                                                                                                                             |
| NM                                                                                                         | Gestionnaire de réseau (NM)                                                                                                               |
| GW                                                                                                         | Passerelle (GW)                                                                                                                           |
| Host configuration computer                                                                                | Ordinateur de configuration d'hôte                                                                                                        |
| Network attribute getting service (read UAO)                                                               | Service d'obtention d'attributs réseau (lire l'objet UAO)                                                                                 |
| Network attribute getting response                                                                         | Réponse d'obtention d'attributs réseau                                                                                                    |
| Forwarding network attribute getting response                                                              | Transmission de la réponse d'obtention d'attributs réseau                                                                                 |
| Updating device table and UAO list                                                                         | Mise à jour de la table des appareils et de la liste des objets UAO                                                                       |
| Establishing VCR and configuring routing paths                                                             | Etablissement de la VCR et configuration des chemins de routage                                                                           |
| Writing C/S VCR and R/S VCR request                                                                        | Demande d'écriture de la VCR C/S et de la VCR R/S                                                                                         |
| Forwarding writing C/S VCR and R/S VCR request                                                             | Transmission de la demande d'écriture de la VCR C/S et de la VCR R/S                                                                      |
| Writing C/S VCR and R/S VCR response                                                                       | Réponse d'écriture de la VCR C/S et de la VCR R/S                                                                                         |
| Write configuration information response                                                                   | Ecriture de la réponse d'informations de configuration                                                                                    |
| Forwarding write configuration information response                                                        | Transmission de la réponse d'écriture des informations de configuration                                                                   |
| Writing VCR request                                                                                        | Demande d'écriture de la VCR                                                                                                              |
| Forwarding writing VCR request                                                                             | Transmission de la demande d'écriture de la VCR                                                                                           |
| Writing VCR response                                                                                       | Réponse d'écriture de la VCR                                                                                                              |
| Forwarding writing VCR response                                                                            | Transmission de la réponse d'écriture de la VCR                                                                                           |
| Network attribute getting service to read UAO                                                              | Service d'obtention d'attributs réseau pour lire l'objet UAO                                                                              |
| Forwarding writing C/S VCR and R/S VCR request                                                             | Transmission de la demande d'écriture de la VCR C/S et de la VCR R/S                                                                      |
| Network attribute getting service to read UAO                                                              | Service d'obtention d'attributs réseau pour lire l'objet UAO                                                                              |
| Forwarding writing C/S VCR and R/S VCR response                                                            | Transmission de la réponse d'écriture de la VCR C/S et de la VCR R/S                                                                      |
| Write configuration information                                                                            | Ecriture des informations de configuration                                                                                                |
| Details not specified                                                                                      | Détails non spécifiés                                                                                                                     |
| Establishing VCR and configuring routing paths                                                             | Etablissement de la VCR et configuration de chemins de routage                                                                            |
| Forwarding configuration information                                                                       | Transmission des informations de configuration                                                                                            |
| Updating the routing, superframe and links if the superframe of routing device is affected by field device | Mise à jour du routage, de la supertrame et des liaisons si la supertrame de l'appareil de routage est affectée par l'appareil de terrain |
| Writing routing request                                                                                    | Demande d'écriture de routage                                                                                                             |
| Forwarding writing routing response                                                                        | Transmission de la réponse d'écriture de routage                                                                                          |
| Writing routing response                                                                                   | Réponse d'écriture de routage                                                                                                             |
| Forwarding writing routing response                                                                        | Transmission de la réponse d'écriture de routage                                                                                          |
| Forwarding writing superframe request                                                                      | Transmission de la demande d'écriture de liaison                                                                                          |
| Forwarding writing superframe response                                                                     | Transmission de la réponse d'écriture de supertrame                                                                                       |
| Writing link response                                                                                      | Réponse d'écriture de liaison                                                                                                             |
| Forwarding writing link response                                                                           | Transmission de la réponse d'écriture de liaison                                                                                          |
| Writing superframe request                                                                                 | Demande d'écriture de supertrame                                                                                                          |

| Anglais                     | Français                         |
|-----------------------------|----------------------------------|
| Writing superframe response | Réponse d'écriture de supertrame |
| Writing link request        | Demande d'écriture de liaison    |

**Figure 16 – Processus d'affectation de ressources de communication d'un appareil de terrain**

## 6.6 Agrégation et désagrégation

### 6.6.1 Agrégation

La fonction d'agrégation est facultative pour les appareils de terrain et les appareils de routage. Elle est signalée par le fanion de prise en charge d'agrégation et de désagrégation AGGSupportFlag (voir Tableau 20). Si les appareils de terrain ou les appareils de routage prennent en charge le mécanisme d'agrégation, le NM configure le fanion d'activation d'agrégation et de désagrégation AGGEnableFlag sur la valeur 1 (voir Tableau 20).

Le réseau WIA-PA prend en charge un mécanisme d'agrégation à deux niveaux afin de réduire le nombre de transmissions de paquets.

- a) Agrégation de données. Si un appareil de terrain a plus d'un objet d'application utilisateur (UAO), il convient qu'il décide d'invoquer ou non le mécanisme d'agrégation de données en fonction du fanion AGGEnableFlag. Il convient que ce mécanisme réduise la fréquence de communication de données et renforce le rendement du réseau.
- b) Agrégation de paquets. Si un appareil de routage reçoit des paquets provenant de plus d'un appareil de terrain, il convient qu'il décide d'invoquer ou non le mécanisme d'agrégation de paquets en fonction du fanion AGGEnableFlag. Il convient que ce mécanisme réduise le nombre de paquets délivrés par l'appareil de routage à l'appareil de passerelle et renforce le rendement du réseau.

La fonction d'agrégation est mise en œuvre par les objets DAGO dans les appareils de terrain et par les objets PAGO dans les appareils de routage. Les paramètres de fonctionnement des DAGO et des PAGO sont configurés par le NM.

La fonction d'agrégation prise en charge par le réseau WIA-PA inclut les quatre situations suivantes:

- 1) Un appareil de terrain prend en charge la fonction d'agrégation alors que son appareil de routage ne le fait pas.
- 2) Un appareil de routage prend en charge la fonction d'agrégation alors que son appareil de terrain ne le fait pas.
- 3) Un appareil de terrain et son appareil de routage prennent tous deux en charge la fonction d'agrégation.
- 4) Ni l'appareil de terrain ni son appareil de routage ne prennent en charge la fonction d'agrégation.

Les relations entre les VCR et les fonctions d'agrégation prises en charge par l'appareil de terrain, l'appareil de routage et l'appareil de passerelle sont indiquées dans le Tableau 3.



**Tableau 3 – Relations entre la VCR et la fonction d'agrégation**

|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Appareil de terrain<br>DAGO<br>(Fonction d'agrégation) |                |                | Appareil de routage<br>PAGO<br>(Fonction d'agrégation) |                |                | Appareil de passerelle<br>DGO<br>(Fonction de désagrégation) |        |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------|----------------|----------------|--------------------------------------------------------|----------------|----------------|--------------------------------------------------------------|--------|
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Prise en charge                                        | Désactivé      | Activé         | Prise en charge                                        | Désactivé      | Activé         | Désactivé                                                    | Activé |
| <b>VCR de non-agrégation</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | NON                                                    | X              |                | NON                                                    | X              |                | —                                                            | —      |
| <b>VCR d'agrégation de données</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | OUI                                                    |                | X              | NON                                                    | X <sup>a</sup> |                |                                                              | X      |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | OUI                                                    |                | X              | NON                                                    |                | X <sup>b</sup> |                                                              | X      |
| <b>VCR d'agrégation de paquets</b>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | NON                                                    | — <sup>c</sup> | — <sup>c</sup> | OUI                                                    |                | X              |                                                              | X      |
| <p>X Indique si la fonction d'agrégation/de désagrégation est activée ou désactivée dans l'appareil correspondant.</p> <p>— Indique que la VCR est indépendante de la fonction d'agrégation/de désagrégation.</p> <p><sup>a</sup> La VCR d'agrégation de données commence avec l'objet DAGO d'un appareil de terrain et se termine avec l'objet DGO de l'appareil de passerelle.</p> <p><sup>b</sup> La VCR d'agrégation de données commence avec l'objet DAGO d'un appareil de terrain et se termine avec l'objet PAGO d'un appareil de routage.</p> <p><sup>c</sup> Les appareils de terrain ne sont pas dotés de fonction d'agrégation de paquet.</p> |                                                        |                |                |                                                        |                |                |                                                              |        |

Le processus de configuration d'agrégation se déroule comme suit.

- i) Il convient que le NM lise le fanion AGGSupportFlag pour vérifier si les appareils prennent en charge la fonction d'agrégation.
- ii) Si les appareils de routage prennent en charge la fonction d'agrégation, il convient que le NM définisse la valeur de l'attribut AGGEnableFlag à 1 dans la MIB. Il convient que le NM affecte les VCR d'agrégation de paquets aux appareils de routage. Il convient d'indiquer la durée d'agrégation d'un appareil de routage par l'attribut AggPeriod (voir 6.9.1.2.1) et de régler l'attribut DataUpdateRate à la valeur minimale (voir Tableau 21) de ses appareils de terrain dans le groupe. Lorsque la durée d'agrégation expire, l'appareil de routage agrège tous ses paquets et les envoie.
- iii) Si les appareils de terrain prennent en charge la fonction d'agrégation, il convient que le NM définisse la valeur de l'attribut AGGEnableFlag à 1 dans la MIB. Il convient que le NM affecte les VCR d'agrégation de données aux appareils de terrain. Il convient d'indiquer la durée d'agrégation d'un appareil de terrain par l'attribut AggPeriod (voir 6.9.1.2.1) et de régler l'attribut DataUpdateRate à la valeur minimale (voir Tableau 21) de ses objets UAO. Lorsque la durée d'agrégation expire, l'appareil de terrain agrège tous ses paquets et les envoie à l'appareil de routage.

Selon que l'agrégation est imbriquée ou non, un appareil de terrain ou un appareil de routage fonctionne de la manière suivante.

- a) si l'attribut du fanion d'agrégation AGGEnableFlag d'un appareil de terrain est défini sur 0, cet appareil de terrain ne prend pas en charge la fonction d'agrégation. Les appareils de terrain qui ne sont pas dotés de la fonction d'agrégation envoient leurs données à l'appareil de routage par l'intermédiaire de la VCR de non-agrégation et du RouteID relatif (voir Tableau 20) Si l'attribut du fanion d'agrégation AGGEnableFlag de l'appareil de routage est également défini sur 0, il convient que l'appareil de routage transmette ce paquet agrégé au DGO de l'appareil de passerelle par l'intermédiaire du RouteID d'origine.
- b) Si un appareil de terrain dispose de plus d'un UAO et que son attribut AGGEnableFlag est égal à 1, le DAGO de l'appareil de terrain calcule la longueur des données P/S à partir des UAO puis agrège ces données. Le format des données agrégées est décrit au

Tableau 4. Les données agrégées sont envoyées à la sous-couche application (ASL) par le DAGO et sont encapsulées avec l'en-tête ASL. Le champ de type de paquet dans l'en-tête ASL est défini sur 0b11, qui est utilisé pour indiquer le paquet agrégé (voir 10.4.2). Le paquet d'agrégation dans la sous-couche application (ASL) est envoyé à l'appareil de routage par l'intermédiaire de la VCR d'agrégation de données et du RouteID relatif; si la valeur de l'attribut AGGEnableFlag de l'appareil de routage est 0, il convient que l'appareil de routage transmette ce paquet agrégé au DGO de l'appareil de passerelle par l'intermédiaire du RouteID d'origine.

- c) Si la fonction d'agrégation imbriquée dans un appareil de routage est activée (AGGEnableFlag = 1) et reçoit les paquets des appareils de terrain, l'appareil lit les en-têtes de paquet de couche réseau (NL). Il convient que l'appareil de routage agrège le paquet conformément aux fanions P/S et au fanion Fragment dans les en-têtes de paquet de NL (voir 9.6.3). Les règles d'agrégation sont les suivantes:
- si le paquet reçu est de type P/S et que le fanion Fragment est égal à 0, il convient d'agrèger le paquet;
  - il convient de ne pas agrèger les autres types.

Si le paquet peut être agrégé, son adresse source et la charge utile de la couche réseau (NL) sont envoyées au PAGO du processus DMAP. Le PAGO utilise l'heure d'arrivée du premier paquet (devant être agrégé) comme instant de départ d'un cycle d'agrégation PagoPeriod (voir Tableau 10). Une fois que PagoPeriod expire, le PAGO agrège les paquets conformément au format indiqué au Tableau 5 et cherche les paquets relatifs à la VCR d'agrégation de paquets. Le paquet agrégé, la VCR d'agrégation de paquets et les paquets relatifs sont ensuite envoyés à la NL; il convient que la NL envoie ce paquet agrégé à l'appareil de passerelle par l'intermédiaire des paquets relatifs. Le format du paquet agrégé dans la NL est présenté en 9.6.3. Si la longueur du paquet agrégé est plus grande que la longueur maximale permise par la couche réseau (NL), il convient que celle-ci fragmente le paquet et l'envoie à l'appareil de passerelle en utilisant la VCR d'agrégation de paquets ainsi que les paquets relatifs.

**Tableau 4 – Format des données agrégées suivies par l'objet DAGO de l'appareil de terrain**

| Format des données agrégées suivies par l'objet DAGO de l'appareil de terrain |                                                        |                                    |                   |     |                                    |                   |
|-------------------------------------------------------------------------------|--------------------------------------------------------|------------------------------------|-------------------|-----|------------------------------------|-------------------|
| Longueur en octet(s)                                                          | 1                                                      | 1                                  | Longueur variable | ... | 1                                  | Longueur variable |
| Nom de champ                                                                  | Number of aggregated data (nombre de données agrégées) | Data length (longueur des données) | Data (données)    | ... | Data length (longueur des données) | Data (données)    |

**Tableau 5 – Format du paquet agrégé suivi par l'objet PAGO de l'appareil de routage**

| Format du paquet agrégé suivi par l'objet PAGO de l'appareil de routage |                                                         |                                 |                                    |                   |     |                                 |                                    |                   |
|-------------------------------------------------------------------------|---------------------------------------------------------|---------------------------------|------------------------------------|-------------------|-----|---------------------------------|------------------------------------|-------------------|
| Longueur en octet(s)                                                    | 1                                                       | 2                               | 1                                  | Longueur variable | ... | 2                               | 1                                  | Longueur variable |
| Nom de champ                                                            | Number of aggregated packet (nombre de paquets agrégés) | Source address (adresse source) | Data length (longueur des données) | Data (données)    | ... | Source address (adresse source) | Data length (longueur des données) | Data (données)    |

## 6.6.2 Désagrégation

La fonction de désagrégation est facultative pour l'appareil de passerelle. Elle est signalée par le fanion de prise en charge d'agrégation et de désagrégation AGGSupportFlag (voir Tableau 20). Si l'appareil de passerelle prend en charge le mécanisme de désagrégation,

le NM configure le fanion d'activation d'agrégation et de désagrégation AGGEnableFlag sur la valeur 1 (voir Tableau 20).

La fonction de désagrégation est mise en œuvre par le DGO dans l'appareil de passerelle. L'appareil de passerelle décide de désagréger ou non le paquet reçu en fonction de l'en-tête de NL et de l'en-tête ASL. Si la valeur du type de paquet dans l'en-tête de NL est égale à 1, l'appareil de passerelle désagrège le paquet agrégé de NL; si la valeur du type de paquet dans l'en-tête ASL est égale à 0b11, l'appareil de passerelle continue de désagréger le paquet agrégé ASL.

Les paramètres de fonctionnement du DGO sont configurés par le NM.


Le processus de désagrégation se déroule comme suit.

- a) Après que l'appareil de passerelle a reçu les paquets agrégés issus des appareils de terrain et des appareils de routage, il notifie le DGO dans son DMAP (processus d'application de gestion d'appareil) de désagréger les paquets.
- b) Le DMAP envoie les paquets désagrégés aux objets UAO.

### 6.6.3 Exemple du processus d'agrégation à deux niveaux

L'exemple ci-après illustre les processus d'agrégation et de désagrégation. L'exemple est basé sur un réseau constitué de deux appareils de terrain, d'un appareil de routage, de l'appareil de passerelle (GW) et de l'ordinateur de configuration d'hôte. Comme l'illustre la Figure 17, l'appareil de routage R agit comme tête de groupe de l'appareil de terrain A et de l'appareil de terrain B; on remarque la présence de deux UAO appelés a1 et a2 résidant dans l'appareil de terrain A et de deux UAO appelés b1 et b2 résidant dans l'appareil de terrain B.

Cet exemple suppose que l'appareil de terrain A ne prend pas en charge la fonction d'agrégation, contrairement à l'appareil de terrain B et à l'appareil de routage R. La vitesse de mise à jour des données de a1 et a2 est configurée à 1 s, et celle de b1 et b2 à 4 s. Le DAGO de l'appareil de terrain B est responsable de l'agrégation des paquets de b1 et b2 et génère le paquet p\_b. L'appareil de routage R dispose d'un PAGO et la durée d'agrégation est la vitesse minimale de mise à jour des données de a1, a2, b1 et b2, dont la valeur est égale à 1 s. L'appareil de routage R dispose d'un PAGO qui agrège les paquets de a1, a2 et le paquet p\_b. L'appareil de passerelle est doté d'un DGO qui désagrège les paquets des appareils de terrain A et B.

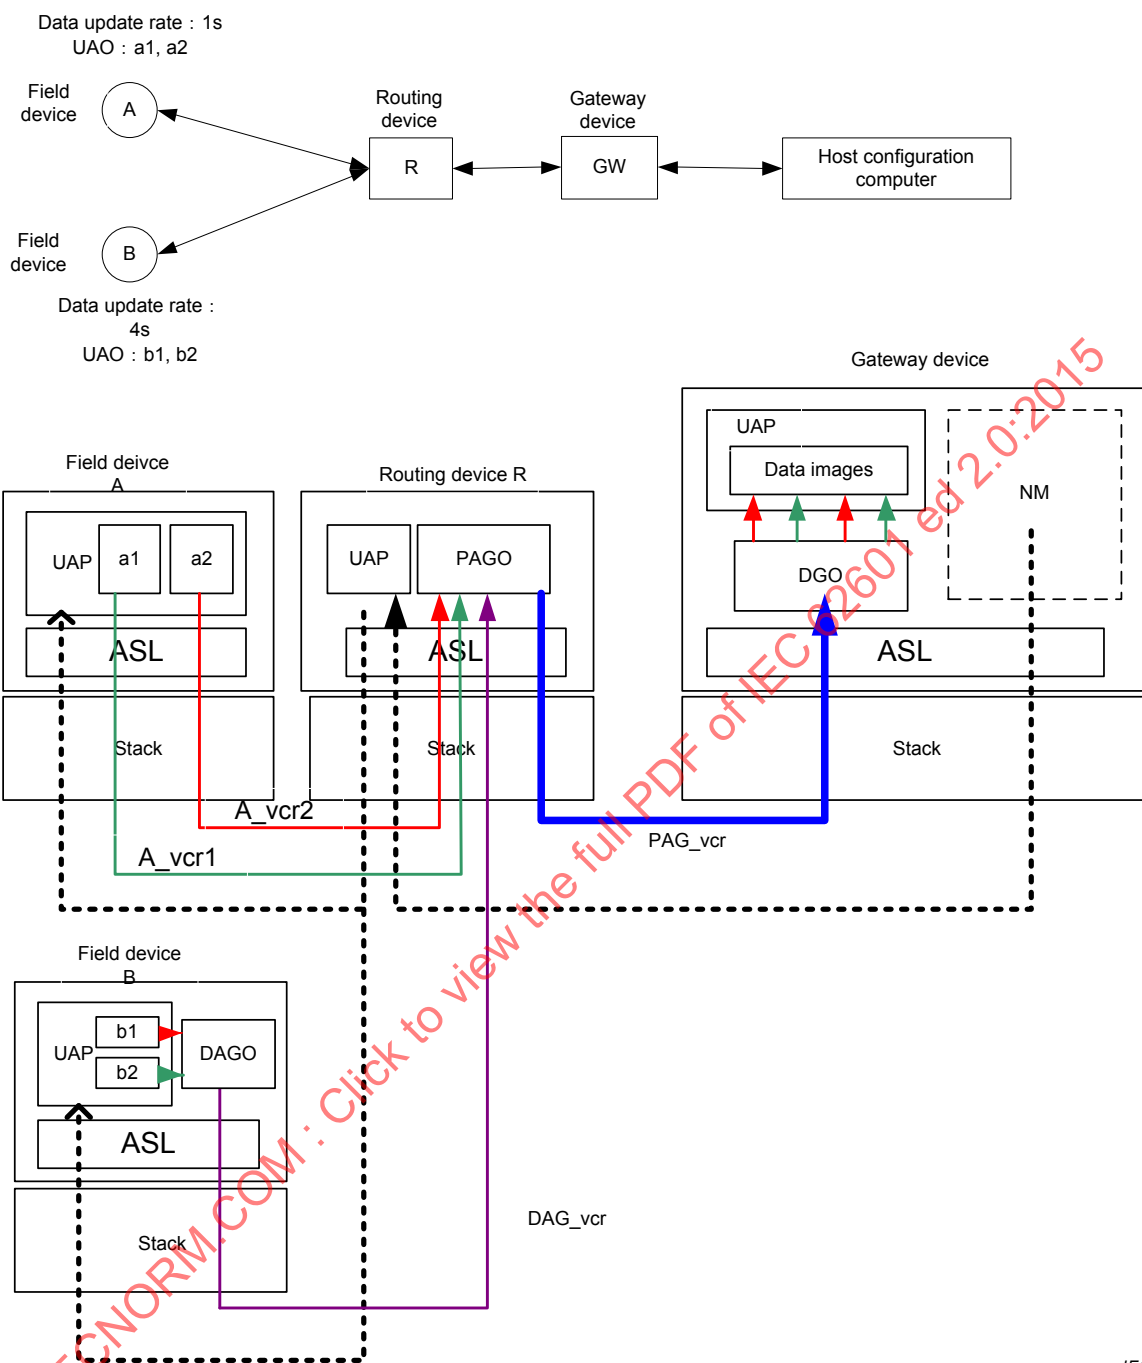

IEC

| Anglais                     | Français                           |
|-----------------------------|------------------------------------|
| Data update rate            | Vitesse de mise à jour des données |
| Field device                | Appareil de terrain                |
| Routing device              | Appareil de routage                |
| Gateway device              | Appareil passerelle                |
| Host configuration computer | Ordinateur de configuration d'hôte |
| Data images                 | Images de données                  |
| NM                          | NM                                 |
| UAP                         | UAP                                |
| DGO                         | DGO                                |
| NMA                         | NMA                                |

| Anglais | Français |
|---------|----------|
| PAGO    | PAGO     |
| ASL     | ASL      |
| Stack   | Pile     |
| DABO    | DABO     |

**Figure 17 – Exemple d'agrégation et de désagrégation**

Le processus d'agrégation et de désagrégation est énuméré ci-dessous.

- a) Après l'établissement du réseau, le NM affecte les VCR de non-agrégation à a1, a2, b1 et b2 pour la transmission des paquets de non-agrégation. Les VCR de non-agrégation de a1 et a2 dans l'appareil de terrain A sont indiqués par A\_vcr1 et A\_vcr2. Les points d'extrémité de A\_vcr1 sont a1 et le processus d'application utilisateur (UAP) dans l'appareil de passerelle; et les points d'extrémité de A\_vcr2 sont a2 et l'UAP dans l'appareil de passerelle. Dans la mesure où la transmission des données de l'appareil de terrain B n'utilise pas de VCR de non-agrégation, les VCR de non-agrégation de b1 et b2 dans l'appareil de terrain B ne sont pas indiqués dans cet exemple.
- b) Suite à la création des VCR de non-agrégation, le NM configure la durée d'agrégation et la VCR d'agrégation de données pour l'appareil de terrain B ainsi que la durée d'agrégation et la VCR d'agrégation de paquets pour l'appareil de routage R. Les durées d'agrégation correspondent à la vitesse minimale de mise à jour des données parmi tous les UAO dans un appareil de terrain ou à la vitesse minimale de mise à jour des données parmi tous les appareils de terrain pour un appareil de routage. Dans la mesure où la vitesse de mise à jour des données de b1 et b2 est de 4 s, la durée d'agrégation du DAGO dans l'appareil de terrain B est de quatre secondes; la VCR d'agrégation de données de l'appareil de terrain B est indiquée par DAG\_vcr et ses points d'extrémité sont le DAGO dans l'appareil de terrain B et le DGO dans l'appareil de passerelle. La durée d'agrégation de l'appareil de routage R est réglée à la vitesse minimale de mise à jour des données dans un groupe. Du fait que la vitesse minimale de mise à jour des données parmi a1, a2, b1 et b2 correspond à une seconde, la durée d'agrégation de l'appareil de routage R est définie sur 1 s. La VCR d'agrégation de paquets de l'appareil de routage R est indiquée par PAG\_vcr et ses points d'extrémité sont le PAGO dans l'appareil de routage R et le DGO dans l'appareil de passerelle.
- c) Après l'établissement de A\_vcr1, A\_vcr2, DAG\_vcr et PAG\_vcr, le DAGO, le PAGO et le DGO commencent à fonctionner. Le DAGO dans l'appareil de terrain B utilise l'heure d'arrivée du premier paquet (devant être agrégé) comme instant de départ et agrège les paquets puis les envoie à l'appareil de routage R via DAG\_vcr à l'intervalle de temps d'agrégation configuré. Le PAGO dans l'appareil de routage R utilise l'heure d'arrivée du premier paquet (devant être agrégé) comme instant de départ et agrège les paquets dans le processus DMAP puis les envoie au DGO via PAG\_vcr dans l'appareil de passerelle à l'intervalle de temps d'agrégation configuré.
- d) Après que le DGO de l'appareil de passerelle a reçu les paquets agrégés, il désagrège les paquets et trouve les UAO correspondants conformément à l'adresse source du paquet et aux identificateurs des objets UAO.
- e) Le processus DMAP dans l'appareil de passerelle envoie les paquets désagrégés aux objets UAO correspondants.

#### **6.6.4 Gestion des objets d'agrégation et de désagrégation**

Les attributs de la classe DAGO sont indiqués au Tableau 6.

**Tableau 6 – Attributs de la classe DAGO**

| ID d'attribut | Nom          | Type de données | Valeur par défaut | Utilisation | Description                 | Méthode de prise en charge |
|---------------|--------------|-----------------|-------------------|-------------|-----------------------------|----------------------------|
| 0             | DagoID       | Unsigned8       | 0                 | Obligatoire | Identificateur du DAGO      | READ                       |
| 1             | DagoRevision | Unsigned8       | 0                 | Facultatif  | Version définie par le DAGO | READ                       |

Les attributs de l'instance DAGO sont indiqués au Tableau 7.

**Tableau 7 – Attributs de l'instance DAGO**

| ID d'attribut | Nom              | Type de données                       | Valeur par défaut | Utilisation | Description                                           | Méthode de prise en charge |
|---------------|------------------|---------------------------------------|-------------------|-------------|-------------------------------------------------------|----------------------------|
| 0             | DagoInsID        | Unsigned8                             | 0                 | Obligatoire | Identificateur de l'instance DAGO                     | READ                       |
| 1             | DagoPeriod       | Unsigned8                             | 1                 | Obligatoire | Cycle d'agrégation (en secondes)                      | READ/WRITE                 |
| 2             | DagoMemNum       | Unsigned8                             | 1                 | Obligatoire | Nombre des objets UAO agrégés                         | READ/WRITE                 |
| 3             | DagoMemLst       | Structure MEM_STRUCT (voir Tableau 8) |                   | Facultatif  | Liste des objets UAO agrégés                          | READ/WRITE                 |
| 4             | DagoMemData Size | Unsigned8                             | 0                 | Facultatif  | Longueur des données agrégées DagoMemData (en octets) | READ/WRITE                 |
| 5             | DagoMemData      | Octetstring                           |                   | Obligatoire | Données des objets UAO agrégés                        | READ/WRITE                 |

Les méthodes prises en charge par les objets DAGO sont indiquées au Tableau 171.

La définition de la structure MEM\_STRUCT est indiquée au Tableau 8.

**Tableau 8 – Structure MEM\_STRUCT**

| ID d'attribut | Nom          | Type de données | Description                                 |
|---------------|--------------|-----------------|---------------------------------------------|
| 0             | AppObjID     | Unsigned8       | Identificateur de l'objet UAO               |
| 1             | AppObjInsID  | Unsigned8       | Identificateur de l'instance UAO            |
| 2             | AppObjAttrID | Unsigned8       | Identificateur d'attribut de l'instance UAO |

Les attributs de la classe PAGO sont indiqués au Tableau 9.

**Tableau 9 – Attributs de la classe PAGO**

| ID d'attribut | Nom          | Type de données | Valeur par défaut | Utilisation | Description                    | Méthode de prise en charge |
|---------------|--------------|-----------------|-------------------|-------------|--------------------------------|----------------------------|
| 0             | PagoID       | Unsigned8       | 1                 | Obligatoire | Identificateur de l'objet PAGO | READ                       |
| 1             | PagoRevision | Unsigned8       | 0                 | Facultatif  | Version définie par le PAGO    | READ                       |

Les attributs de l'instance PAGO sont indiqués au Tableau 10.

**Tableau 10 – Attributs de l'instance PAGO**

| ID d'attribut | Nom          | Type de données | Valeur par défaut | Utilisation | Description                                       | Méthode de prise en charge |
|---------------|--------------|-----------------|-------------------|-------------|---------------------------------------------------|----------------------------|
| 0             | PagoInsID    | Unsigned8       | 0                 | Obligatoire | Identificateur de l'instance d'agrégation d'objet | READ                       |
| 1             | PagoPeriod   | Unsigned8       | 1                 | Obligatoire | Cycle d'agrégation (en secondes)                  | READ/WRITE                 |
| 2             | PagoMemNum   | Unsigned8       | 1                 | Obligatoire | Nombre des éléments de groupe agrégés             | READ/WRITE                 |
| 3             | PagoMemLst   | Octetstring     |                   | Facultatif  | Liste des éléments de groupe agrégés              | READ/WRITE                 |
| 4             | PagoDataSize | Unsigned8       | 0                 | Facultatif  | Longueur du paquet agrégé (en octets)             | READ/WRITE                 |
| 5             | PagoMemData  | Octetstring     |                   | Obligatoire | Données des éléments de groupe agrégés            | READ/WRITE                 |

Les méthodes prises en charge par les objets PAGO sont indiquées au Tableau 171.

Les attributs de la classe DGO sont indiqués au Tableau 11.

**Tableau 11 – Attributs de la classe DGO**

| ID d'attribut | Nom         | Type de données | Valeur par défaut | Utilisation | Description                   | Méthode de prise en charge |
|---------------|-------------|-----------------|-------------------|-------------|-------------------------------|----------------------------|
| 0             | DgoID       | Unsigned8       | 2                 | Obligatoire | Identificateur de l'objet DGO | READ                       |
| 1             | DgoRevision | Unsigned8       | 0                 | Facultatif  | Révision définie par le DGO   | READ                       |

Les attributs de l'instance DGO sont indiqués au Tableau 12.

**Tableau 12 – Attributs de l'instance DGO**

| ID d'attribut | Nom      | Type de données | Valeur par défaut | Utilisation | Description                      | Méthode de prise en charge |
|---------------|----------|-----------------|-------------------|-------------|----------------------------------|----------------------------|
| 0             | DgoInsID | Unsigned8       | 0                 | Obligatoire | Identificateur de l'instance DGO | READ                       |

Les méthodes prises en charge par les objets DGO sont indiquées au Tableau 171.

## 6.7 Surveillance de performance

### 6.7.1 Rapport sur la défaillance des chemins

Le rapport sur la défaillance des chemins est utilisé par les appareils de routage pour signaler des événements défaillance de chemin au NM par le biais des chemins redondants. Le processus de rapport sur la défaillance des chemins est indiqué à la Figure 18 (voir 9.5.12).

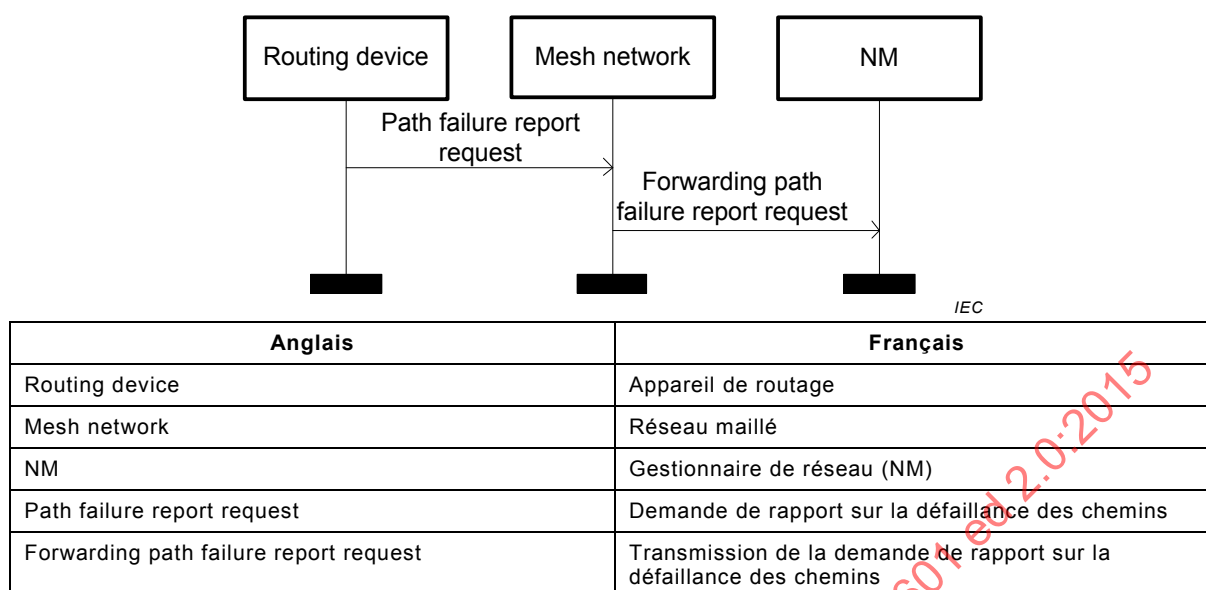


**Figure 18 – Processus de rapport sur la défaillance des chemins**

### 6.7.2 Rapport sur l'état des appareils

Après avoir reçu des appareils de terrain intragroupe les rapports sur l'état des appareils, un appareil de routage adresse périodiquement au NM un rapport sur sa propre santé et celle de ses appareils de terrain. Le NM évalue et diagnostique la performance du réseau en fonction des informations de santé puis répond dans les délais au changement d'environnement du réseau. Il convient que le NM détecte des conditions anormales dans l'appareil WIA-PA, tel qu'un faible niveau de puissance de la batterie ou la déconnexion d'appareils voisins. Cela est réalisé en fixant des niveaux d'alarme aux appareils WIA-PA. Les processus de rapport sur l'état des appareils pour l'appareil de terrain et l'appareil de routage sont indiqués à la Figure 19 et à la Figure 20 (voir 9.5.10).

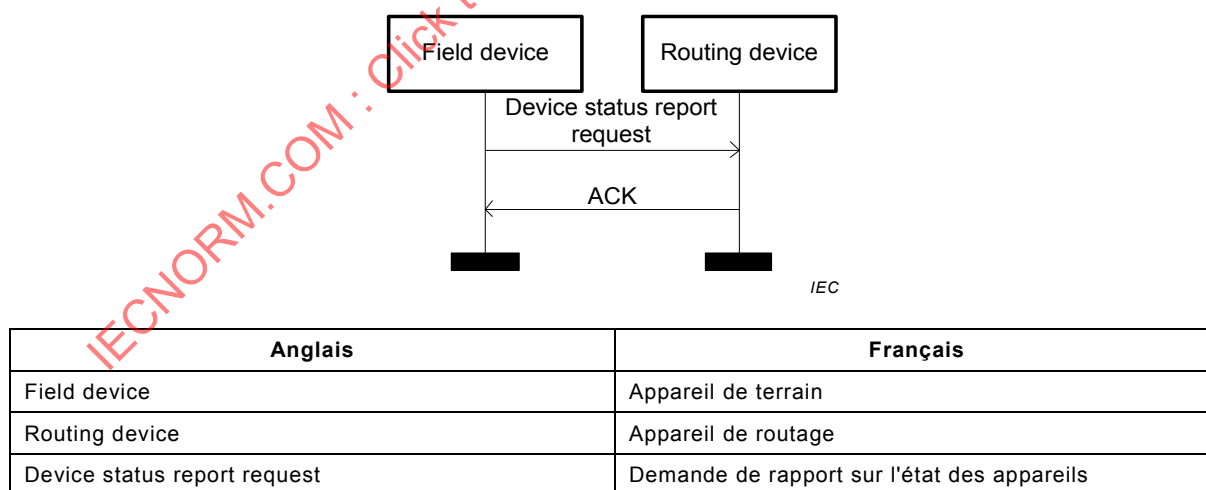


**Figure 19 – Processus de rapport sur l'état des appareils pour l'appareil de terrain**



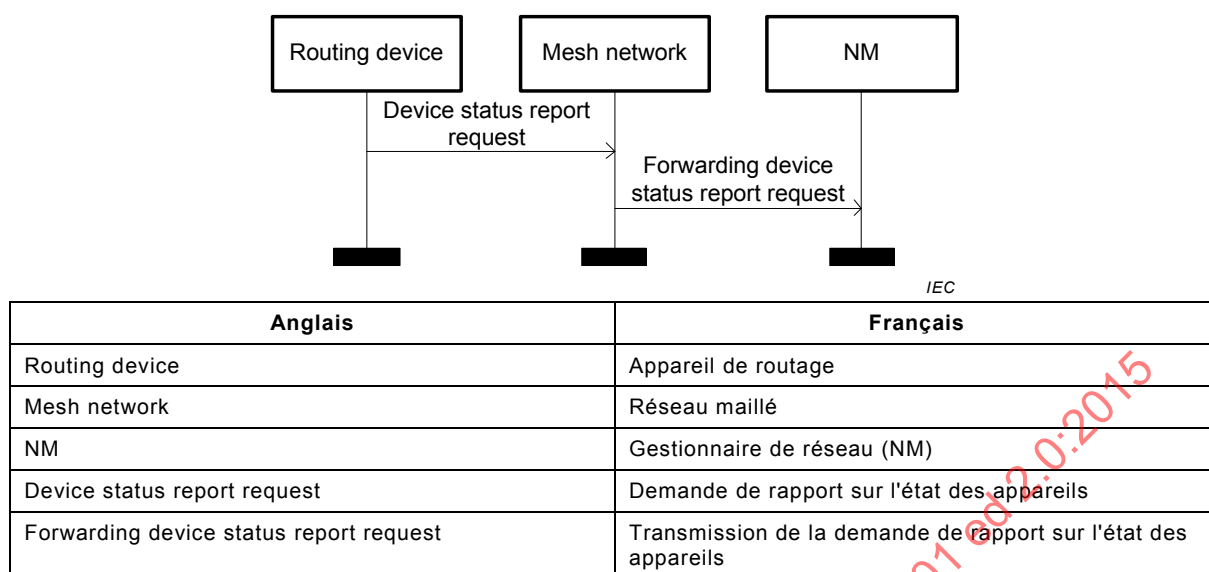


**Figure 20 – Processus de rapport sur l'état des appareils pour l'appareil de routage**

### 6.7.3 Rapport sur la condition des canaux

Le rapport sur la condition des canaux est utilisé pour que les appareils de terrain WIA-PA ou les appareils de routage rapportent à distance au NM la condition des canaux. Le processus de rapport sur la condition des canaux est indiqué à la Figure 21 (voir 9.5.11).

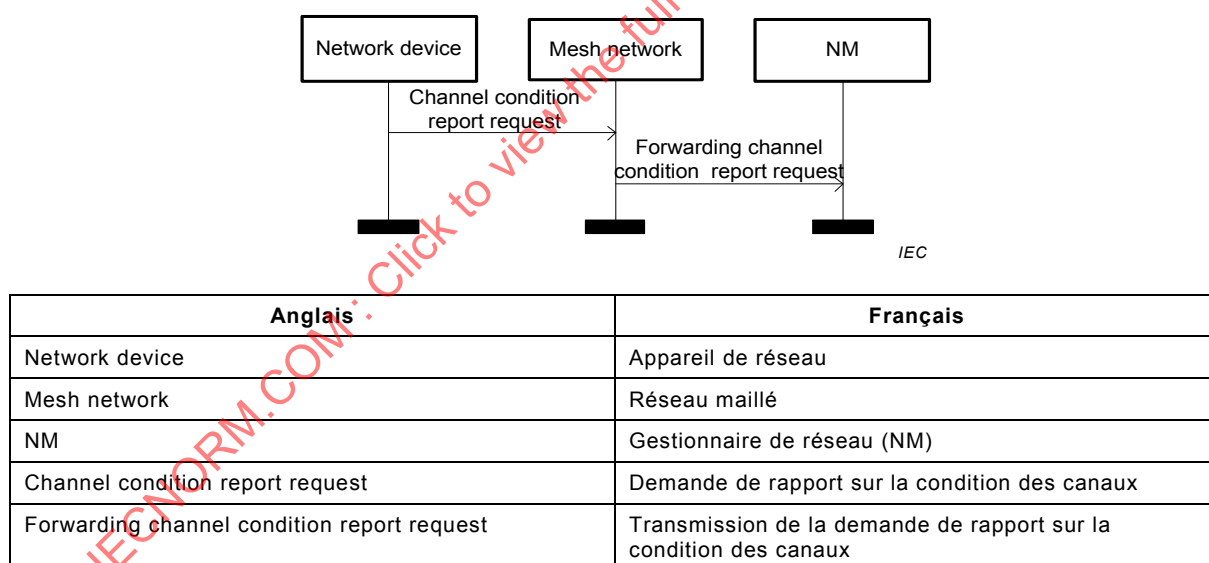


**Figure 21 – Processus de rapport sur la condition des canaux**

## 6.8 Processus de départ


### 6.8.1 Généralités

Le processus de départ des appareils WIA-PA inclut le processus de départ anormal, le processus de départ actif et le processus de départ passif. Le processus de départ anormal est causé par la défaillance d'un appareil, l'invalidation d'un appareil et l'épuisement de l'énergie, qu'il convient de juger par la trame de commande d'entretien de la DLSP. Le départ actif est une fonction facultative qui est activée par la configuration de ActiveLeavingEnable sur la valeur 1 (voir 6.9.1.2.1). Le départ actif est demandé par les appareils de terrain à partir de leurs appareils de routage ou par les appareils de routage à partir de l'appareil de passerelle. Le départ passif est demandé par l'appareil de passerelle à partir des appareils de routage ou par les appareils de routage à partir de leurs appareils de terrain.

### 6.8.2 Processus de départ d'un appareil de routage

Le réseau WIA-PA spécifie deux processus de départ pour les appareils de routage: le départ actif et le départ passif. Le processus de départ actif d'un appareil de routage se déroule comme suit (voir Figure 22).

- Un appareil de routage envoie la demande de départ au NM.
- Le NM fournit une réponse relative au départ à l'appareil de routage.
- Après avoir reçu une réponse positive, l'appareil de routage notifie ses appareils de terrain du départ. Après le départ passif des appareils de terrain, l'appareil de routage quitte le réseau.
- Le NM libère l'adresse réseau, la VCR et les ressources de communication de l'appareil de routage parti et met à jour la topologie de réseau.
- Le NM notifie aux appareils de routage qui ont une relation de communication avec l'appareil de routage parti de libérer les ressources de communication associées.

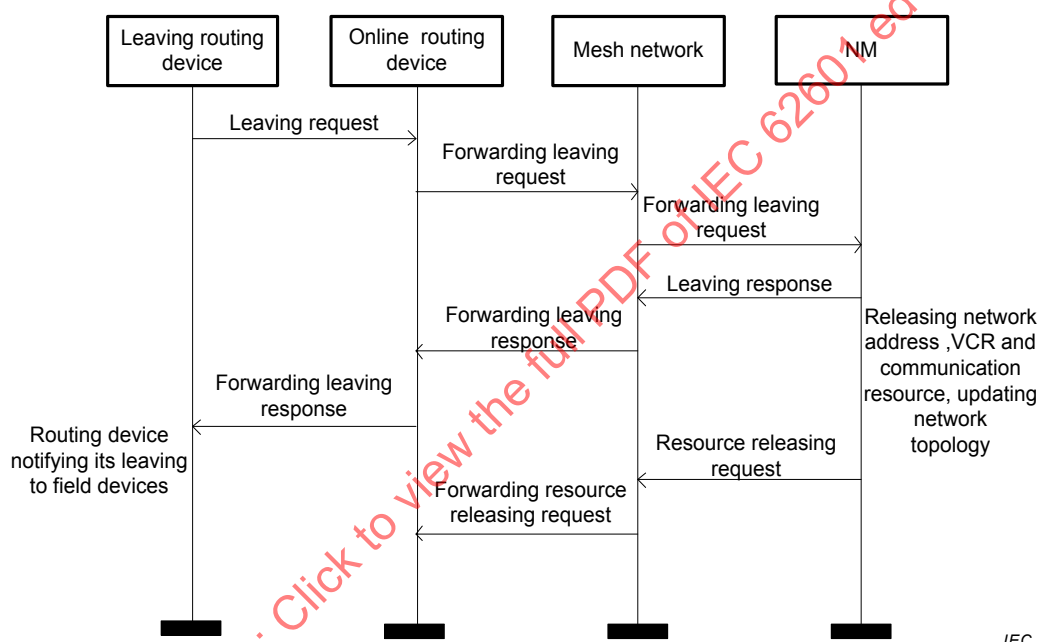


| Anglais                                                                              | Français                                                                                                          |
|--------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------|
| Leaving routing device                                                               | Appareil de routage partant                                                                                       |
| Online routing device                                                                | Appareil de routage en ligne                                                                                      |
| Mesh network                                                                         | Réseau maillé                                                                                                     |
| NM                                                                                   | Gestionnaire de réseau (NM)                                                                                       |
| Leaving request                                                                      | Demande de départ                                                                                                 |
| Forwarding leaving request                                                           | Transmission de la demande de départ                                                                              |
| Releasing network address, VCR and communication resource, updating network topology | Libération de l'adresse réseau, de la VCR et de la ressource de communication, mise à jour de la topologie réseau |
| Leaving response                                                                     | Réponse de départ                                                                                                 |
| Forwarding leaving response                                                          | Transmission de la réponse de départ                                                                              |
| Routing device notifying its leaving to field devices                                | Appareil de routage notifiant son départ aux appareils de terrain                                                 |
| Resource releasing request                                                           | Demande de libération de ressource                                                                                |
| Forwarding resource releasing request                                                | Transmission de la demande de libération de ressource                                                             |

Figure 22 – Processus de départ actif d'un appareil de routage

Le processus de départ passif d'un appareil de routage se déroule comme suit (voir Figure 23).

- Le NM envoie la demande de départ à un appareil de routage.
- L'appareil de routage notifie son départ aux appareils de terrain.
- Après le départ passif des appareils de terrain, l'appareil de routage envoie au NM une réponse de départ.
- Le NM libère l'adresse réseau, la VCR et les ressources de communication et met à jour la topologie de réseau après avoir reçu la réponse de départ issue de l'appareil de routage.
- Le NM notifie aux appareils de routage qui ont une relation de communication avec l'appareil de routage parti de libérer les ressources de communication associées.

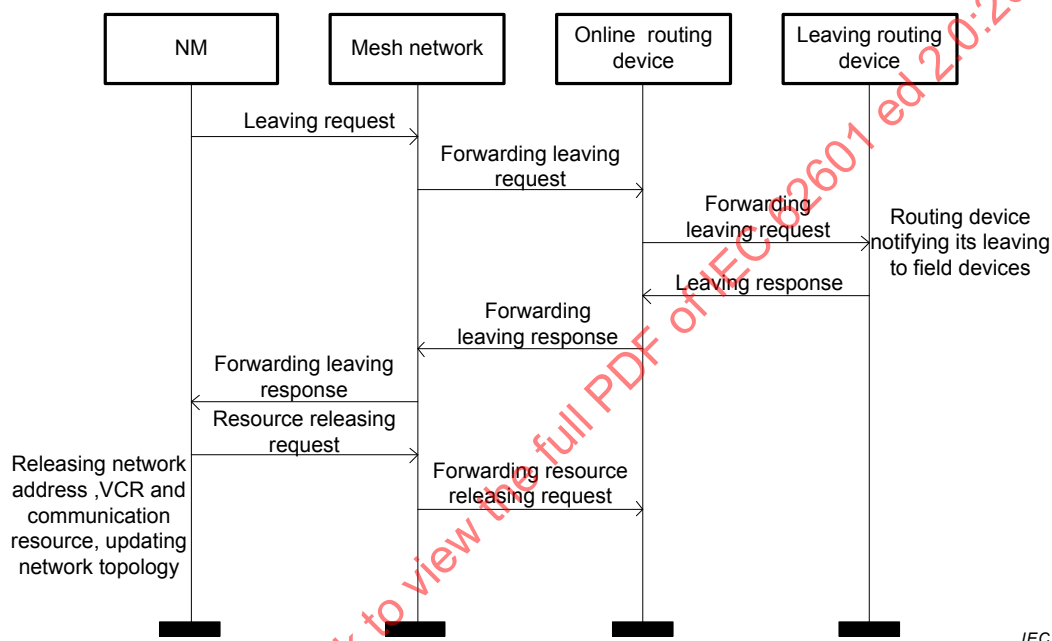

| Anglais                                                                              | Français                                                                                                 |
|--------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| NM                                                                                   | Gestionnaire de réseau (NM)                                                                              |
| Mesh network                                                                         | Réseau maillé                                                                                            |
| Online routing device                                                                | Appareil de routage en ligne                                                                             |
| Leaving routing device                                                               | Appareil de routage partant                                                                              |
| Leaving request                                                                      | Demande de départ                                                                                        |
| Forwarding leaving request                                                           | Transmission de la demande de départ                                                                     |
| Routing device notifying its leaving to field devices                                | Appareil de routage notifiant son départ aux appareils de terrain                                        |
| Leaving response                                                                     | Réponse de départ                                                                                        |
| Forwarding leaving response                                                          | Transmission de la réponse de départ                                                                     |
| Releasing network address, VCR and communication resource, updating network topology | Libération d'adresse réseau, de la VCR et de ressource de communication, mise à jour de topologie réseau |
| Resource releasing request                                                           | Demande de libération de ressource                                                                       |
| Forwarding resource releasing request                                                | Transmission de la demande de libération de ressource                                                    |


**Figure 23 – Processus de départ passif d'un appareil de routage**

### 6.8.3 Processus de départ d'un appareil de terrain

Le réseau WIA-PA spécifie deux processus de départ pour les appareils de terrain: le départ actif et le départ passif.

Le processus de départ actif d'un appareil de terrain se déroule comme suit (voir Figure 24 et Figure 25).

- Un appareil de terrain envoie la demande de départ à l'appareil de routage ou à l'appareil de passerelle dans un groupe.
- L'appareil de routage ou l'appareil de passerelle renvoie une réponse de départ à l'appareil de terrain sur le départ.
- L'appareil de routage ou l'appareil de passerelle libère l'adresse réseau intragroupe, la VCR et les ressources de communication puis met à jour la liste des éléments de groupe et la liste des objets UAO de l'appareil de terrain qui a quitté le réseau.
- Après avoir reçu la réponse, l'appareil de terrain quitte le réseau.
- Si l'appareil de terrain quitte l'appareil de routage, l'appareil de routage envoie au NM la liste des éléments de groupe et la liste des UAO mises à jour.

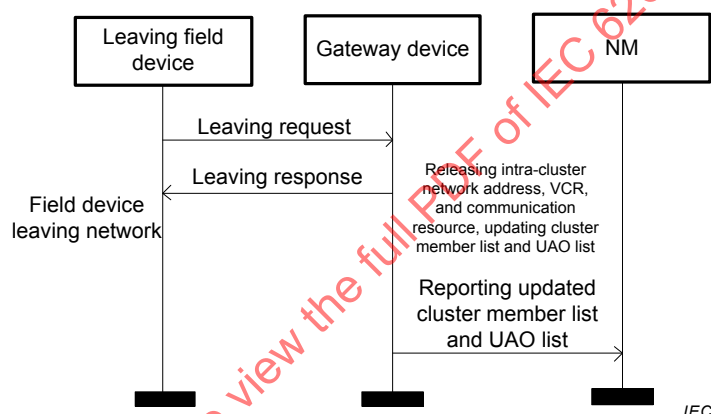

| Anglais                                                                                                             | Français                                                                                                                                                             |
|---------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Leaving field device                                                                                                | Appareil de terrain partant                                                                                                                                          |
| Gateway device                                                                                                      | Appareil de passerelle                                                                                                                                               |
| NM                                                                                                                  | Gestionnaire de réseau (NM)                                                                                                                                          |
| Leaving request                                                                                                     | Demande de départ                                                                                                                                                    |
| Releasing intra-cluster network address, VCR, and communication resource, updating cluster member list and UAO list | Libération d'adresse réseau intragroupe, de la VCR et de la ressource de communication, mise à jour de la liste des éléments du groupe et de la liste des objets UAO |
| Leaving response                                                                                                    | Réponse de départ                                                                                                                                                    |
| Field device leaving network                                                                                        | Appareil de terrain quittant le réseau                                                                                                                               |
| Reporting updated cluster member list and UAO list                                                                  | Production d'un rapport sur la liste mise à jour des éléments de groupe et la liste mise à jour des objets UAO                                                       |

**Figure 24 – Processus de départ actif d'un appareil de terrain (quittant l'appareil de passerelle)**

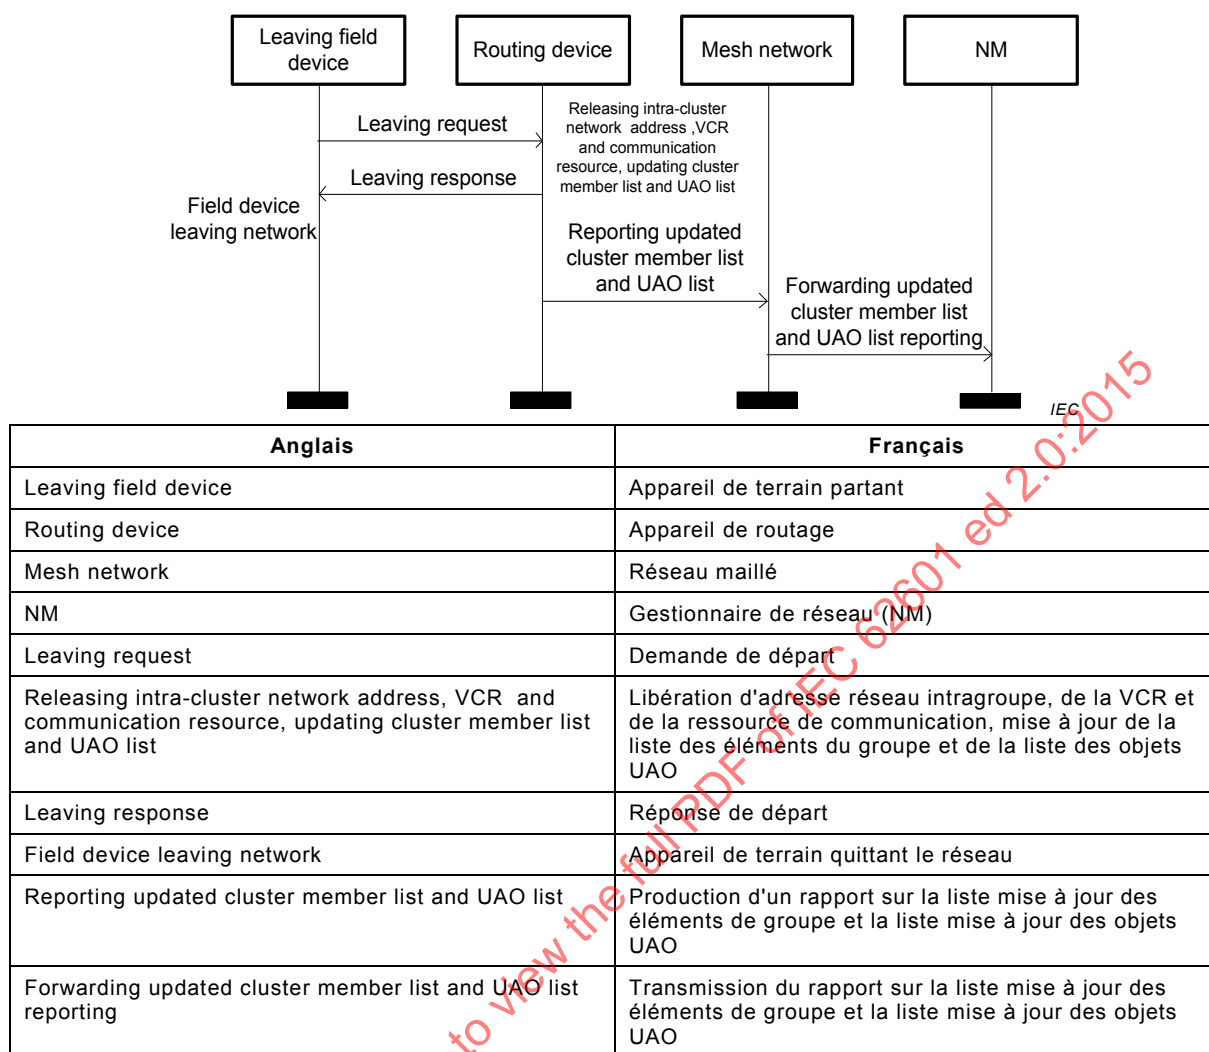


**Figure 25 – Processus de départ actif d'un appareil de terrain (quittant l'appareil de routage)**

Le processus de départ passif d'un appareil de terrain se déroule comme suit (voir Figure 26 et Figure 27).

- L'appareil de routage ou l'appareil de passerelle envoie la demande de départ à l'appareil de terrain.
- L'appareil de terrain renvoie la réponse de départ à l'appareil de routage ou à l'appareil de passerelle.
- L'appareil de terrain quitte le groupe.
- L'appareil de routage ou l'appareil de passerelle libère l'adresse réseau intragroupe, la VCR et les ressources de communication de l'appareil de terrain sur le départ puis met à jour la liste des éléments de groupe et la liste des objets UAO.
- Si l'appareil de terrain quitte l'appareil de routage, l'appareil de routage notifie au NM l'élément de groupe et sa liste des UAO.

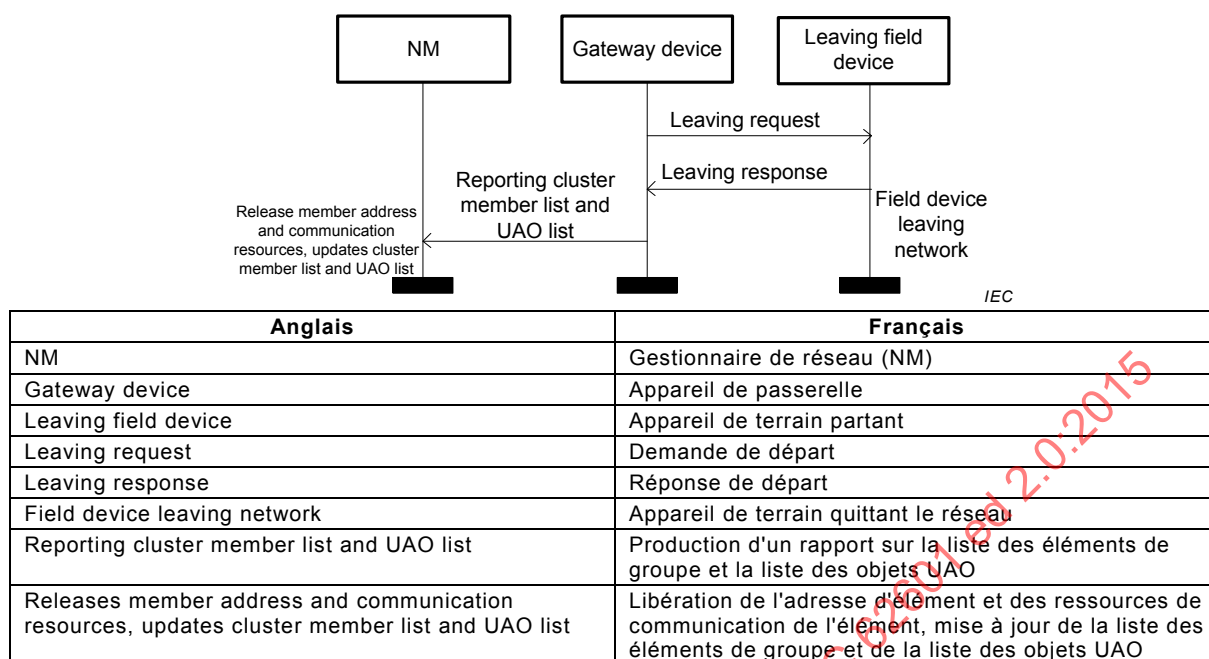


**Figure 26 – Processus de départ passif d'un appareil de terrain (quittant l'appareil de passerelle)**

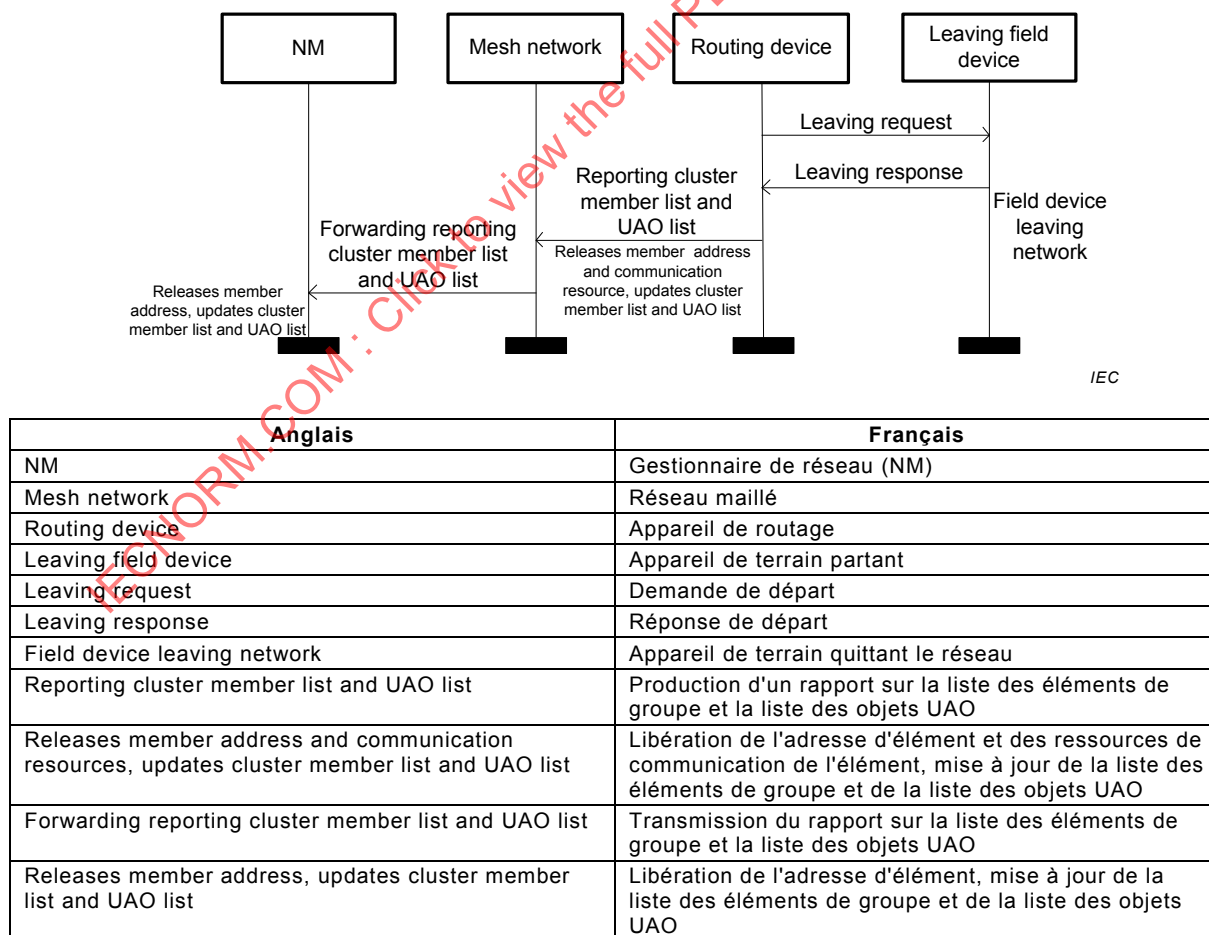


**Figure 27 – Processus de départ passif d'un appareil de terrain (quittant l'appareil de routage)**

## **6.9 Services et base d'informations de gestion**

### **6.9.1 Base d'informations de gestion**

#### **6.9.1.1 Généralités**

Les éléments stockés dans la base d'informations de gestion (MIB) sont appelés attributs et sont utilisés pour la surveillance et la configuration des paramètres du réseau WIA-PA. Le NM peut accéder à ces attributs et les mettre à jour.

En fonction des types de stockage, les attributs de la MIB sont classés en trois catégories:

- a) attribut constant,
- b) attribut statique, et
- c) attribut dynamique.

Un attribut constant, tel que le numéro de série d'un appareil sans fil, est interchangeable au fil du temps. L'attribut constant est réglé lorsque les fabricants transmettent les appareils. Il convient de ne pas le modifier.

Un attribut statique, tel qu'une limite d'alarme, change de valeur peu fréquemment. Il convient de préserver la valeur de l'attribut statique après un redémarrage à chaud, une réinitialisation ou une panne d'alimentation électrique.

Un attribut dynamique change fréquemment de valeur sans la moindre commande extérieure. La valeur de l'attribut dynamique sera perdue après un redémarrage à chaud, une réinitialisation ou une panne d'alimentation électrique. Le redémarrage à chaud est une séquence d'opérations réalisée pour réinitialiser un appareil préalablement exploité qui a subi un arrêt inopiné. Lorsqu'un appareil est réinitialisé, il entre dans l'état Idle (repos). Une panne d'alimentation électrique indique que l'alimentation électrique disponible utilisée par les appareils est devenue dangereusement faible.

En fonction des types de données d'attribut, les attributs de la MIB sont divisés en attributs non structurés et structurés.

En fonction des exigences de mise en œuvre, les attributs de la MIB sont divisés en attributs obligatoires et facultatifs.

Il existe deux types de droits d'accès aux attributs de la MIB.

- a) R (Read), qui signifie que les valeurs de l'attribut peuvent être lues par d'autres appareils dans le réseau WIA-PA; et
- b) W (Write), qui signifie que les valeurs de l'attribut peuvent être configurées par d'autres appareils dans le réseau WIA-PA.

#### **6.9.1.2 Attributs MIB**

##### **6.9.1.2.1 Attributs non structurés**

Les attributs non structurés sont énumérés dans le Tableau 13. Les valeurs des attributs comprises entre 0 et 28 sont identiques dans tout le réseau et les valeurs des attributs comprises entre 29 et 33 sont spécifiques à l'appareil.

**Tableau 13 – Attributs non structurés (1 de 5)**

| ID | Nom                              | Type de données | Plage valide             | Type d'accès | Type de stockage | Valeur par défaut | Description                                                                                                                                                                                                                                                                                                                             |
|----|----------------------------------|-----------------|--------------------------|--------------|------------------|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0  | ProtocolVersion <sup>de</sup>    | Unsigned16      | 0 à 65 535               | R            | Statique         | 2013              | Version de protocole de la pile de protocole du réseau WIA-PA actuelle, indiquée en années.                                                                                                                                                                                                                                             |
| 1  | NetworkID <sup>e#</sup>          | Unsigned8       | 0 à 255                  | R/W          | Statique         | 0                 | Identificateur de réseau, utilisé lorsque plusieurs réseaux coexistent                                                                                                                                                                                                                                                                  |
| 2  | StatisticsDuration <sup>e*</sup> | Unsigned16      | 0 à 65 535               | R/W          | Statique         | 0                 | Configuration du cycle de recueil statistique (en secondes). Au bout de cette durée, les appareils WIA-PA mettent à jour les données statistiques dans les tables des voisins. La valeur 0 indique que l'appareil ne recueille aucune donnée statistique.                                                                               |
| 3  | MaxNSDUSize <sup>e*</sup>        | Unsigned8       | 0 à 255                  | R            | Statique         | 71                | Taille maximale de l'unité de données de service prise en charge par la couche réseau (NL), en octets.<br><br>MaxNSDUSize = aMaxPHYPacketSize – longueur maximale de l'en-tête MAC – longueur maximale de l'en-tête DLSL – longueur maximale de l'en-tête de NL.<br><br>Voir Tableau 70 de l'IEEE 802.15.4-2011 pour aMaxPHYPacketSize. |
| 4  | BitMapa <sup>e*</sup>            | Unsigned32      | 32 bits                  | R/W          | Dynamique        | 0x FFFF           | Chaque bit indique si un canal peut être utilisé:<br><br>0 = Non utilisé<br>1 = Utilisé<br><br>La valeur du bit i indique l'état d'utilisation du canal i. La valeur du bit i indique s'il est utilisé ou non, conformément au numéro de canal de l'IEEE 802.15.4-2011.                                                                 |
| 5  | KeepAliveDuration <sup>e*</sup>  | Unsigned24      | 0 à (2 <sup>24</sup> -1) | R/W          | Statique         | 1 000             | Durée entre deux trames d'entretien (en millisecondes).<br><br>La valeur 0 n'est pas valide.                                                                                                                                                                                                                                            |
| 6  | TimeSynDuration <sup>e*</sup>    | Unsigned24      | 0 à (2 <sup>24</sup> -1) | R/W          | Statique         | 25 000            | Durée entre deux trames de synchronisation du temps (en millisecondes).<br><br>La valeur par défaut est calculée d'après l'hypothèse supposant que la dérive de l'oscillateur à quartz est de 20 parties par million<br><br>et que l'erreur de synchronisation correspond à 1 ms.<br><br>La valeur 0 n'est pas valide.                  |



**Tableau 13 (2 de 5)**

| ID | Nom                               | Type de données | Plage valide                 | Type d'accès | Type de stockage | Valeur par défaut      | Description                                                                                                                                                                                                                                                                                                    |
|----|-----------------------------------|-----------------|------------------------------|--------------|------------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 7  | ChannelThreshold <sup>e*</sup>    | Unsigned8       | 0 à (macMaxFrameRetries – 2) | R/W          | Statique         | 1                      | Seuil de commutation de canal dans le saut de fréquence adaptatif, indiqué comme comptage des nouvelles tentatives; voir Tableau 52 de l'IEEE 802.15.4-2011 pour macMaxFrameRetries.                                                                                                                           |
| 8  | SecEnableFlag <sup>e*</sup>       | Booléen         | 0, 1                         | R/W          | Statique         | 0                      | Fanion Security enable (activation de la sécurité):<br>0 = l'ensemble du réseau a besoin d'une authentification<br>1 = l'ensemble du réseau n'a pas besoin d'une authentification                                                                                                                              |
| 9  | KeyupdateDur <sup>be*</sup>       | Unsigned32      | 0 à (2 <sup>32</sup> -1)     | R/W          | Dynamique        | 0                      | Cycle de mise à jour de clé (en millisecondes). La valeur 0 indique que les clés ne sont pas mises à jour.                                                                                                                                                                                                     |
| 10 | MaxAttackedCnt <sup>be*</sup>     | Unsigned16      | 0 à 65 535                   | R/W          | Statique         | 5                      | Nombre maximal d'attaques. La valeur 0 indique que cet attribut n'est pas valide.                                                                                                                                                                                                                              |
| 11 | MaxKeyAttacked-Cnt <sup>be*</sup> | Unsigned16      | 0 à 65 535                   | R/W          | Statique         | 1                      | Nombre maximal de clés attaquées.                                                                                                                                                                                                                                                                              |
| 12 | MICFailerTimeUnit <sup>be*</sup>  | Unsigned16      | 0 à 65 535                   | R/W          | Statique         | 60                     | Intervalle de temps en secondes utilisé pour compter MaxAttackedCnt.                                                                                                                                                                                                                                           |
| 13 | Alert <sup>be*</sup>              | Unsigned16      | 0 à 65 535                   | R/W          | Statique         | 0                      | Les bits de 0 à 6 représentent l'alerte de sécurité, la valeur 1 représente une alerte:<br>Bit0 = AttackedCount atteint MaxAttackedCnt<br>Bit1 = KS est attaquée<br>Bit2 = KJ est attaquée<br>Bit3 = DLKEK est attaquée<br>Bit4 = ALKEK est attaquée<br>Bit5 = DLKED est attaquée<br>Bit6 = ALKED est attaquée |
| 14 | EtoEACKTimeOut <sup>e*</sup>      | Unsigned24      | 0 à (2 <sup>24</sup> -1)     | R/W          | Statique         | 100*macMaxFrameRetries | Limite supérieure du temps d'attente pour l'acquittement de bout en bout (en millisecondes). Voir Tableau 52 de l'IEEE 802.15.4-2011 pour macMaxFrameRetries.                                                                                                                                                  |
| 15 | TimeSlotDuration <sup>e*</sup>    | Unsigned16      | 0 à 65 535                   | R/W          | Statique         | N/A                    | Indiquant la durée de l'intervalle de temps. La durée d'intervalle de temps est calculée par:<br>(aBaseSlotDuration×2TimeSlotDuration). Voir Tableau 51 de l'IEEE 802.15.4-2011 pour aBaseSlotDuration.                                                                                                        |

Tableau 13 (3 de 5)

| ID | Nom                             | Type de données | Plage valide             | Type d'accès | Type de stockage | Valeur par défaut                                            | Description                                                                                                                                                                                             |
|----|---------------------------------|-----------------|--------------------------|--------------|------------------|--------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 16 | PLRThreshold <sup>e*</sup>      | Unsigned8       | 0 à 100                  | R/W          | Statique         | 50                                                           | Seuil de taux de perte de paquets, qui correspond à PLRThreshold divisé par 100 et qui est utilisé pour la commutation de fréquence adaptative. Voir 8.4.5 pour la commutation de fréquence adaptative. |
| 17 | CmemRptCycle <sup>ce*</sup>     | Unsigned16      | 0 à 65 535               | R/W          | Statique         | Cycle maximal de super-trame de l'ensemble du réseau WI A-PA | Configuration du cycle de production de rapports sur les informations d'élément de groupe (en secondes)<br>La valeur 0 n'est pas valide.                                                                |
| 18 | ChaStaRptCycle <sup>e*</sup>    | Unsigned16      | 0 à 65 535               | R/W          | Statique         | Cycle maximal de super-trame de l'ensemble du réseau WI A-PA | Configuration du cycle de production de rapports sur les informations concernant la trame de condition des canaux (en secondes)<br>La valeur 0 n'est pas valide.                                        |
| 19 | DevStaRptCycle <sup>e*</sup>    | Unsigned16      | 0 à 65 535               | R/W          | Statique         | Cycle maximal de super-trame de l'ensemble du réseau WI A-PA | Configuration du cycle de production de rapports sur les informations concernant l'état des appareils (en secondes)<br>La valeur 0 n'est pas valide.                                                    |
| 20 | PathFailRptCycle <sup>ce*</sup> | Unsigned16      | 0 à 65 535               | R/W          | Statique         | Cycle maximal de super-trame de l'ensemble du réseau WI A-PA | Configuration du cycle de production de rapports sur les informations sur les chemins défectueux (en secondes)<br>La valeur 0 n'est pas valide.                                                         |
| 21 | MaxEtoERetry <sup>e*</sup>      | Unsigned8       | 0 à 255                  | R/W          | Statique         | 1                                                            | Le nombre maximal des tentatives de bout en bout                                                                                                                                                        |
| 22 | NetworkTopology <sup>e*</sup>   | Booléen         | 0, 1                     | R/W          | Statique         | 1                                                            | Indique la topologie de réseau:<br>0 = réseau hiérarchique qui est la combinaison de la configuration en étoile et de la configuration maillée<br>1 = topologie de réseau en étoile uniquement          |
| 23 | UTCTime <sup>e</sup>            | Unsigned32      | 0 à (2 <sup>32</sup> -1) | R/W          | Dynamique        | 0                                                            | Temps universel coordonné (TUC)                                                                                                                                                                         |

**Tableau 13 (4 de 5)**

| ID | Nom                               | Type de données | Plage valide | Type d'accès | Type de stockage | Valeur par défaut | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
|----|-----------------------------------|-----------------|--------------|--------------|------------------|-------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 24 | ActiveLeaving-Enable <sup>e</sup> | Booléen         | 0, 1         | R/W          | Statique         | 0                 | Fanion qui indique si la fonction de départ actif est activée:<br><br>0 = Désactivée<br>1 = Activée                                                                                                                                                                                                                                                                                                                                                                 |
| 25 | SecMode <sup>be*</sup>            | Unsigned8       | 0 à 3        | R/W          | Statique         | 0                 | Le bit 0 indique si la DLSL utilise ou non un service de sécurité:<br><br>0 = Non utilisé<br>1 = Utilisé<br><br>Le bit 1 indique si la couche Application (AL) utilise ou non un service de sécurité:<br><br>0 = Non utilisé<br>1 = Utilisé                                                                                                                                                                                                                         |
| 26 | SecLevel <sup>b*</sup>            | Unsigned8       | 0 à 63       | R/W          | Statique         | 0                 | Les bits 0, 1 et 2 représentent les niveaux de sécurité des trames DLSL.<br><br>000 = Aucun<br>001 = MIC-32<br>010 = MIC-64<br>011 = MIC-128<br>100 = Chiffrement<br>101 = Chiffrement-MIC-32<br>110 = Chiffrement-MIC-64<br>111 = Chiffrement-MIC-128<br><br>Les bits 3, 4 et 5 représentent les niveaux de sécurité des paquets AL.<br><br>000 = Aucun<br>001 = Chiffrement<br>010 = MIC-32<br>011 = Chiffrement-MIC-32<br><br>Les autres valeurs sont réservées. |
| 27 | CountryCode <sup>e*</sup>         | Unsigned16      | 0 à 65 535   | R/W          | Dynamique        | 0x3C00            | Code de pays qui fournit les lignes directrices relatives au lieu et aux contraintes de réglementation. Voir 8.4.11 pour plus de détails                                                                                                                                                                                                                                                                                                                            |
| 28 | EtoEACKEnable <sup>e*</sup>       | Bool            | 0, 1         | R/W          | Dynamique        | 0                 | Fanion indiquant si le réseau WIA-PA prend en charge l'acquittement (ACK) de bout en bout:<br><br>0 = Non-prise en charge<br>1 = Prise en charge                                                                                                                                                                                                                                                                                                                    |

**Tableau 13 (5 de 5)**

| ID                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Nom                             | Type de données | Plage valide             | Type d'accès | Type de stockage | Valeur par défaut | Description                                                                                                                            |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------|-----------------|--------------------------|--------------|------------------|-------------------|----------------------------------------------------------------------------------------------------------------------------------------|
| 29                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | AuthenState <sup>be</sup>       | Booléen         | 0, 1                     | R/W          | Dynamique        | 0                 | Fanion qui indique si un appareil WIA-PA a été authentifié comme étant un appareil légitime:<br>0 = Non authentifié<br>1 = Authentifié |
| 30                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | AuthenTime <sup>be</sup>        | Unsigned32      | 0 à (2 <sup>32</sup> -1) | R/W          | Dynamique        | 0                 | Heure à laquelle un appareil est authentifié (en TUC)                                                                                  |
| 31                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | AggPeriod <sup>be*</sup>        | Unsigned8       | 0 à 255                  | R/W          | Statique         | N/A               | Durée d'agrégation (en millisecondes).<br>Cette valeur n'est valide que si aggsupport=1 et enable=1.                                   |
| 32                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | ObjectNumber <sup>e*</sup>      | Unsigned8       | 0 à 255                  | R/W          | Statique         | N/A               | Nombre d'objets UAO.                                                                                                                   |
| 33                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | AbsoluteSlotNumber <sup>e</sup> | Unsigned48      | 0 à (2 <sup>48</sup> -1) | R/W          | Dynamique        | 0                 | Nombre d'intervalles de temps depuis le démarrage du réseau, c'est-à-dire l'intervalle de temps courant, augmentant de la valeur 1.    |
| <p><sup>a</sup> Attributs facultatifs pour l'appareil de terrain/l'appareil tenu à la main.</p> <p><sup>b</sup> Attributs facultatifs pour l'ensemble des appareils dans les réseaux WIA-PA.</p> <p><sup>c</sup> Attributs non sélectionnés par l'appareil de terrain/l'appareil tenu à la main.</p> <p><sup>d</sup> ProtocolVersion est configuré par les fabricants.</p> <p><sup>e</sup> Les attributs numérotés de 0 à 33 sont stockés par tous les types d'appareils WIA-PA. Si la valeur par défaut d'un attribut est N/A, les utilisateurs peuvent la configurer; en revanche, si la valeur par défaut d'un attribut est spécifiée, il convient que les utilisateurs la configurent conformément aux scénarios d'application actuels.</p> <p># Attributs configurés par l'appareil tenu à la main.</p> <p>* Attributs configurés par l'appareil de passerelle (GW).</p> |                                 |                 |                          |              |                  |                   |                                                                                                                                        |

**6.9.1.2.2 Attributs structurés**

Les attributs structurés sont énumérés dans le Tableau 14.

**Tableau 14 – Attributs structurés**

| ID  | Nom                    | Type de données                               | Type d'accès | Type de stockage            | Valeur par défaut | Description                                                                                                                                                                                                                                                |
|-----|------------------------|-----------------------------------------------|--------------|-----------------------------|-------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 100 | RouteTable             | Structure NLRoute_Struct (voir Tableau 15)    | R/W          | Dynamique                   |                   | Inclut l'ID d'itinéraire, l'adresse de destination, l'adresse du prochain saut et le compteur de nouvelles tentatives.<br><br>Chaque élément de la liste est identifié par l'indice de stockage.                                                           |
| 101 | Superframe             | Structure Superframe_Struct (voir Tableau 16) | R/W          | Dynamique                   |                   | Décrivant les informations relatives à la superframe.<br><br>Chaque élément de la liste est identifié par l'indice de stockage.                                                                                                                            |
| 102 | Link                   | Structure Link_Struct (voir Tableau 17)       | R/W          | Dynamique                   |                   | Décrivant les informations relatives à la liaison.<br><br>Chaque élément de la liste est identifié par l'indice de stockage.                                                                                                                               |
| 103 | Neighbour <sup>a</sup> | Structure Neighbour_Struct (voir Tableau 18)  | R/W          | Dynamique                   |                   | Décrivant les informations relatives aux appareils des voisins.<br><br>Chaque élément de la liste est identifié par l'indice de stockage.                                                                                                                  |
| 104 | ChannelCondition       | Structure ChanCon_Struct (voir Tableau 19)    | R/W          | Dynamique                   |                   | Enregistrant les informations statistiques relatives à la condition des canaux.<br><br>Chaque élément de la liste est identifié par l'indice de stockage.                                                                                                  |
| 105 | DeviceStruct           | Structure Device_struct (voir Tableau 20)     | R/W          | Dynamique/constant/statique |                   | Décrivant les informations relatives aux appareils WIA-PA.<br><br>Chaque élément de la liste est identifié par l'indice de stockage.                                                                                                                       |
| 106 | VCRList                | Structure VCR_Struct (voir Tableau 21)        | R/W          | Dynamique                   |                   | Enregistrant les informations relatives aux VCR.<br><br>Chaque élément de la liste est identifié par l'indice de stockage.                                                                                                                                 |
| 107 | DevConRep              | Structure DevConRep_Struct (voir Tableau 22)  | R/W          | Dynamique                   |                   | Enregistrant les informations relatives à la condition des appareils.<br><br>Chaque élément de la liste est identifié par l'indice de stockage.<br><br>Cet attribut est enregistré par les appareils de routage et l'appareil de passerelle.               |
| 108 | KeyTable <sup>b</sup>  | Structure Key_Struct (voir Tableau 23)        | R/W          | Dynamique                   |                   | Incluant le type de la clé, la longueur de la clé, l'heure de mise à jour de la clé, l'heure d'utilisation de la clé, la valeur de la clé et le nombre d'attaques contre la clé.<br><br>Chaque élément de la liste est identifié par l'indice de stockage. |
| 109 | ObjList                | Structure ObjList_Struct (voir Tableau 24)    | R/W          | Statique                    |                   | Liste des identificateurs des objets UAO.<br><br>Chaque élément de la liste est identifié par l'indice de stockage.                                                                                                                                        |

NOTE Les tailles de toutes les listes spécifiées dans le Tableau 14 dépendent de la mise en œuvre.

<sup>a</sup> Attributs non sélectionnés par l'appareil de terrain/l'appareil tenu à la main.

<sup>b</sup> Attributs facultatifs pour l'ensemble des appareils dans les réseaux WIA-PA.

Le type de données des attributs de routage RouteTable est indiqué au Tableau 15.

**Tableau 15 – Structure NLRoute\_Struct**

| Identificateur d'élément d'attribut | Nom                | Type de données | Plage valide | Description                                              |
|-------------------------------------|--------------------|-----------------|--------------|----------------------------------------------------------|
| 0                                   | RouteID            | Unsigned16      | 0 à 65 535   | Identificateur de routage unique                         |
| 1                                   | SourceAddress      | Unsigned16      | 0 à 65 535   | Adresse courte de l'appareil source                      |
| 2                                   | DestinationAddress | Unsigned16      | 0 à 65 535   | Adresse courte de l'appareil de destination              |
| 3                                   | NextHop            | Unsigned16      | 0 à 65 535   | Adresse courte de l'appareil de prochain saut            |
| 4                                   | RetryCounter       | Unsigned8       | 0 à 255      | Compteur pour enregistrer les tentatives de bout en bout |

Le type de données des attributs de supertrame Superframe est indiqué au Tableau 16.

**Tableau 16 – Structure Superframe\_Struct**

| Identificateur d'élément d'attribut | Nom                | Type de données | Plage valide             | Description                                                                                                                                                                                                                                                                              |
|-------------------------------------|--------------------|-----------------|--------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0                                   | SuperframeID       | Unsigned16      | 0 à 65 535               | Identificateur unique de la supertrame, fourni par le NM                                                                                                                                                                                                                                 |
| 1                                   | SuperframeMultiple | Unsigned8       | 0 à 255                  | SuperframeMultiple = vitesse maximale de mise à jour des données/vitesse minimale de mise à jour des données. Il est utilisé pour limiter la longueur de la supertrame WIA-PA ainsi que pour le traitement de la transmission des données de cycle long. Voir 8.4.6 pour plus de détails |
| 2                                   | NumberSlots        | Unsigned16      | 0 à 65 535               | Taille de supertrame (nombres d'intervalles de temps)                                                                                                                                                                                                                                    |
| 3                                   | ActiveFlag         | Booléen         | 0, 1                     | Fanion de supertrame active:<br>0 = Inactive<br>1 = Active                                                                                                                                                                                                                               |
| 4                                   | ActiveSlot         | Unsigned48      | 0 à (2 <sup>48</sup> -1) | Nombre absolu d'intervalles de temps(ASN) lorsqu'une supertrame commence active.                                                                                                                                                                                                         |

Le type de données des attributs de liaison Link est indiqué au Tableau 17.

**Tableau 17 – Structure Link\_Struct**

| Identificateur d'élément d'attribut | Nom                | Type de données | Plage valide | Description                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------|--------------------|-----------------|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0                                   | LinkID             | Unsigned16      | 0 à 65 535   | Identificateur unique de la liaison                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 1                                   | NeighbourAddr      | Unsigned16      | 0 à 65 535   | Référence à une entrée de la table de voisins, qui est vide lorsque le NM alloue des liaisons à un appareil de routage pour une communication intragroupe.                                                                                                                                                                                                                                                                                                                                     |
| 2                                   | LinkType           | Unsigned8       | 0 à 31       | Le bit 0 indique le type de liaison:<br>0 = Monodiffusion<br>1 = Diffusion<br>Le bit 1 et le bit 2 indiquent le caractère d'une liaison:<br>00 = Transmission<br>01 = Transmission-partagée<br>10 = Réception<br>Le bit 3 indique le type d'un intervalle de temps:<br>0 = Intervalle de temps de données<br>1 = Intervalle de temps de gestion<br>Le bit 4 indique le caractère d'agrégation:<br>0 = Intervalle de temps pour paquet non agrégé<br>1 = Intervalle de temps pour paquet agrégé |
| 3                                   | RelativeSlotNumber | Unsigned16      | 0 à 65 535   | Nombre d'intervalles de temps relatifs                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| 4                                   | LinkSuperframeNum  | Unsigned8       | 0 à 255      | LinkSuperframeNum = vitesse de mise à jour des données pour cet appareil et vitesse minimale de mise à jour des données. Il sert à traiter l'émission des données de cycle long.                                                                                                                                                                                                                                                                                                               |
| 5                                   | ActiveFlag         | Booléen         | 0, 1         | Indique si une liaison est en cours d'utilisation:<br>0 = Non utilisé<br>1 = En cours d'utilisation                                                                                                                                                                                                                                                                                                                                                                                            |
| 6                                   | ChannelIndex       | Unsigned8       | 0 à 31       | Numéros séquentiels des canaux pour cette liaison, à savoir, les numéros séquentiels des canaux principaux.                                                                                                                                                                                                                                                                                                                                                                                    |
| 7                                   | SuperframeID       | Unsigned16      | 0 à 65 535   | Référence à une supertrame dans la table des supertrames                                                                                                                                                                                                                                                                                                                                                                                                                                       |

Le type de donnée des attributs des voisins Neighbour est indiqué au Tableau 18.

**Tableau 18 – Structure Neighbour\_Struct**

| Identificateur d'élément d'attribut | Nom                  | Type de données | Plage valide             | Description                                                                                                                                                                            |
|-------------------------------------|----------------------|-----------------|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0                                   | NeighbourAddr        | Unsigned16      | 0 à 65 535               | Adresse courte de l'appareil voisin                                                                                                                                                    |
| 1                                   | NeighbourStatus      | Unsigned8       | 0 à 3                    | Le bit 0 indique si l'appareil voisin est une source temporelle principale ou non:<br>0 = Non<br>1 = Oui<br>Le bit 1 indique l'état de l'appareil voisin:<br>0 = Normal<br>1 = Anormal |
| 2                                   | BackoffCounter       | Unsigned8       | 0 à 31                   | Compteur de backoff (Compteur de réductions de puissance)                                                                                                                              |
| 3                                   | BackoffExponent      | Unsigned8       | 0 à 15                   | Exposant de backoff                                                                                                                                                                    |
| 4                                   | LastTimeCommunicated | Unsigned48      | 0 à (2 <sup>48</sup> -1) | Heure de la dernière communication avec l'appareil voisin (en ASN)                                                                                                                     |
| 5                                   | AveRSL               | Unsigned8       | 0 à 255                  | Niveau moyen des signaux reçus en provenance de l'appareil voisin dans la durée StatisticsDuration                                                                                     |
| 6                                   | PacketsTransmitted   | Unsigned16      | 0 à 65 535               | Nombre de trames non diffusées envoyées à l'appareil voisin dans la durée StatisticsDuration                                                                                           |
| 7                                   | AckPackets           | Unsigned16      | 0 à 65 535               | Nombre de paquets ACK/NACK attendus reçus dans la durée StatisticsDuration                                                                                                             |
| 8                                   | PacketsReceived      | Unsigned16      | 0 à 65 535               | Nombre de bons paquets reçus en provenance de l'appareil voisin dans la durée StatisticsDuration                                                                                       |
| 9                                   | BroadcastPackets     | Unsigned16      | 0 à 65 535               | Nombre de bons paquets de diffusion reçus en provenance de l'appareil voisin dans la durée StatisticsDuration                                                                          |

Le type de données des attributs de condition des canaux ChannelCondition est indiqué au Tableau 19.

**Tableau 19 – Structure ChanCon\_Struct**

| Identificateur d'élément d'attribut | Nom                | Type de données | Plage valide        | Description                                                                                                                                         |
|-------------------------------------|--------------------|-----------------|---------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| 0                                   | DeviceShortAddress | Unsigned16      | 0 à 65 535          | Adresse 16 bits de l'appareil                                                                                                                       |
| 1                                   | ChannelID          | Unsigned8       | 0 à 255             | Le numéro séquentiel du canal                                                                                                                       |
| 2                                   | NeighbourAddr      | Unsigned16      | 0 à 65 535          | Adresse 16 bits de l'appareil voisin                                                                                                                |
| 3                                   | LinkQuality        | Unsigned8       | 0 à 255             | Valeur d'indication de qualité de liaison (LQI, Link Quality Indication) de chaque canal                                                            |
| 4                                   | PacketLossRate     | Unsigned16      | 0 à 65 535          | Taux de perte de paquet dans chaque canal, qui est un pourcentage calculé entre les acquittements (ACK) reçus et le nombre total de paquets envoyés |
| 5                                   | RetryNum           | Unsigned8       | 0 à MaxFrameRetries | Le nombre de retransmissions de chaque canal                                                                                                        |



Le type de données des attributs d'appareil DeviceStruct est indiqué au Tableau 20.

**Tableau 20 – Structure Device\_struct (1 de 3)**

| Identifica-<br>teur<br>d'élément<br>d'attribut | Nom                       | Type de<br>données | Plage<br>valide          | Type de<br>stockage | Type<br>d'accès | Valeur<br>par<br>défaut | Description                                                                                                                                                                                                                                                                            |
|------------------------------------------------|---------------------------|--------------------|--------------------------|---------------------|-----------------|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0                                              | LongAddress               | Unsigned64         | 0 à (2 <sup>64</sup> -1) | C                   | R               | N/A                     | Adresse unique globale de 64 bits<br>Idem que pour le champ<br>DeviceType tel que défini en 6.3.4:<br>0 = Appareil de passerelle<br>1 = Appareil de routage<br>2 = Appareil de terrain<br>3 = Appareil tenu à la main<br>Les autres valeurs sont réservées.                            |
| 1                                              | Redundant-<br>DevFlag     | Booléen            | 0, 1                     | S                   | R/W             | 0                       | Fanion indiquant si un appareil est<br>redondant ou non:<br>0 = Appareil non redondant<br>1 = Appareil redondant                                                                                                                                                                       |
| 2                                              | Redundant-<br>DevLongAddr | Unsigned64         | 0 à (2 <sup>64</sup> -1) | C                   | R               | N/A                     | Adresse unique globale de 64 bits<br>d'un appareil redondant<br>Idem que pour le champ<br>DeviceType tel que défini en 6.3.4:<br>0 = Appareil de passerelle<br>1 = Appareil de routage<br>2 = Appareil de terrain<br>3 = Appareil tenu à la main<br>Les autres valeurs sont réservées. |
| 3                                              | NetAddress-<br>Assign     | Booléen            | 0, 1                     | S                   | R/W             | N/A                     | Fanion indiquant si l'adresse<br>réseau (voir 6.3.4) a été assignée<br>ou non:<br>0 = Non<br>1 = Oui                                                                                                                                                                                   |
| 4                                              | DeviceShort-<br>Address   | Unsigned16         | 0 à 65 535               | S                   | R/W             | N/A                     | Adresse courte de l'appareil WIA-<br>PA<br>Les 8 bits de poids fort sont<br>l'adresse de groupe et les 8 bits de<br>poids faible sont l'adresse<br>intragroupe.                                                                                                                        |
| 5                                              | ManufacturerID            | Unsigned24         | 0 à (2 <sup>24</sup> -1) | C                   | R               | N/A                     | Identificateur du fabricant                                                                                                                                                                                                                                                            |
| 6                                              | DeviceSerial-<br>Num      | Unsigned64         | 0 à (2 <sup>64</sup> -1) | C                   | R               | N/A                     | Numéro de série de l'appareil                                                                                                                                                                                                                                                          |
| 7                                              | DeviceVersion             | Unsigned8          | 0 à 255                  | C                   | R               | N/A                     | Numéro de version de l'appareil                                                                                                                                                                                                                                                        |
| 8                                              | PowerSupply-<br>Status    | Unsigned8          | 0 à 10                   | S                   | R/W             | N/A                     | Condition de l'alimentation<br>électrique:<br>0 = Alimentation électrique fixe<br>1 = Alimentation la plus puissante<br>2 = Deuxième alimentation la plus<br>puissante<br>10 = Alimentation la plus faible                                                                             |
| 9                                              | RouterCapable             | Booléen            | 0, 1                     | S                   | R/W             | 0                       | Fanion pour indiquer si l'appareil<br>dispose d'une fonction de routage:<br>0 = Non<br>1 = Oui                                                                                                                                                                                         |

Tableau 20 (2 de 3)

| Identifica-<br>teur<br>d'élément<br>d'attribut | Nom                           | Type de<br>données | Plage<br>valide  | Type de<br>stockage | Type<br>d'accès | Valeur<br>par<br>défaut | Description                                                                                                                                                                                                                                                                                                                |
|------------------------------------------------|-------------------------------|--------------------|------------------|---------------------|-----------------|-------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 10                                             | DeviceState                   | Unsigned8          | 0 à 16           | S                   | R/W             |                         | Les bits 0 et 1 représentent l'état de rattachement de l'appareil:<br>00 = Pas rattaché<br>01 = Rattachement<br>10 = Authentification de sécurité<br>11 = Rattaché<br>Les bits 2 et 3 représentent l'état de marche de l'appareil:<br>00 = Inactive<br>01 = Actif<br>10 = Défaillant<br>Les autres valeurs sont réservées. |
| 11                                             | DeviceMemory-<br>total        | Unsigned32         | 0 à $(2^{32}-1)$ | C                   | R               | N/A                     | Mémoire totale d'un appareil (en octets), notamment RAM, ROM, Flash...                                                                                                                                                                                                                                                     |
| 12                                             | DeviceUsed-<br>Memory         | Unsigned32         | 0 à $(2^{32}-1)$ | D                   | R/W             | N/A                     | Mémoire utilisée par l'appareil (en octets)                                                                                                                                                                                                                                                                                |
| 13                                             | ClockMaster-<br>Role          | Booléen            | 0, 1             | S                   | R/W             | N/A                     | L'appareil est une source temporelle ou non (voir 8.3.3.1):<br>0 = Non<br>1 = Oui                                                                                                                                                                                                                                          |
| 14                                             | ClockUpdate                   | Unsigned32         | 0 à $(2^{32}-1)$ | D                   | R/W             | 0                       | Dernier réajustement d'horloge (en secondes)                                                                                                                                                                                                                                                                               |
| 15                                             | PacketsMACTo-<br>DLSSL        | Unsigned32         | 0 à $(2^{32}-1)$ | D                   | R/W             | 0                       | Nombre de paquets issus de la sous-couche MAC vers la DLSSL                                                                                                                                                                                                                                                                |
| 16                                             | PacketsFrom-<br>DLSSLRejected | Unsigned32         | 0 à $(2^{32}-1)$ | D                   | R/W             | 0                       | Nombre de paquets provenant de la DLSSL qui sont rejetés par la NL                                                                                                                                                                                                                                                         |
| 17                                             | PacketsFrom-<br>DLSSLAccepted | Unsigned32         | 0 à $(2^{32}-1)$ | D                   | R/W             | 0                       | Nombre de paquets provenant de la DLSSL qui sont acceptés par la NL                                                                                                                                                                                                                                                        |
| 18                                             | PacketsFrom-<br>ASL           | Unsigned32         | 0 à $(2^{32}-1)$ | D                   | R/W             | 0                       | Nombre de paquets issus de la sous-couche application (ASL)                                                                                                                                                                                                                                                                |
| 19                                             | PacketsFrom-<br>ASLRejected   | Unsigned32         | 0 à $(2^{32}-1)$ | D                   | R/W             | 0                       | Nombre de paquets provenant de la sous-couche application (ASL) qui sont abandonnés par la NL                                                                                                                                                                                                                              |
| 20                                             | PacketsOutTo-<br>DLSSL        | Unsigned32         | 0 à $(2^{32}-1)$ | D                   | R/W             | 0                       | Nombre de paquets provenant de la sous-couche application (ASL) qui sont transmis à la DLSSL par la NL.                                                                                                                                                                                                                    |
| 21                                             | AGGSupport-<br>Flag           | Booléen            | 0, 1             | S                   | R/W             | N/A                     | Fanion de prise en charge d'agrégation et de désagrégation (indique si un appareil de routage prend en charge le mécanisme d'agrégation ou non):<br>0 = Non-prise en charge<br>1 = Prise en charge                                                                                                                         |

**Tableau 20 (3 de 3)**

| Identifica-<br>teur<br>d'élément<br>d'attribut                                           | Nom                  | Type de<br>données | Plage<br>valide | Type de<br>stockage | Type<br>d'accès | Valeur<br>par<br>défaut | Description                                                                                                                                                                                                                          |
|------------------------------------------------------------------------------------------|----------------------|--------------------|-----------------|---------------------|-----------------|-------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 22                                                                                       | AGGEnable-<br>Flag   | Booléen            | 0, 1            | S                   | R/W             | 0                       | Fanion d'activation d'agrégation et de désagrégation (indique si un appareil de routage active le mécanisme d'agrégation ou non):<br>0 = Désactivation<br>1 = Activation                                                             |
| 23                                                                                       | IntraChannel-<br>Num | Unsigned8          | 0 à 31          | S                   | R/W             | 0                       | Nombre de canaux utilisables pour la communication intragroupe                                                                                                                                                                       |
| 24                                                                                       | IntraChanel          | Unsigned8          | 0 à 31          | S                   | R/W             | 0                       | Liste pour stocker tous les canaux de communication, pré-affectée par l'appareil de passerelle (GW) aux appareils de routage et aux appareils de terrain. La taille de la liste est IntraChannelNum. Voir 8.4.5 pour plus de détails |
| 25                                                                                       | SuperframeID         | Unsigned16         | 0 à 65 535      | S                   | R/W             | 0                       | Identificateur unique de la supertrame, fourni par le NM                                                                                                                                                                             |
| Dans ce tableau, les types de stockage sont C = constant, D = dynamique et S = statique. |                      |                    |                 |                     |                 |                         |                                                                                                                                                                                                                                      |

IECNORM.COM : Click to view the full PDF of IEC 62601:2015

Le type de données des attributs de la VCR VCR\_Struct est indiqué au Tableau 21.

**Tableau 21 – Structure VCR\_Struct**

| Identifica-<br>teur<br>d'élément<br>d'attribut | Nom                | Type de<br>données | Plage<br>valide  | Description                                                                                                                                                                                                                                                                                  |
|------------------------------------------------|--------------------|--------------------|------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 0                                              | VcrID              | Unsigned16         | 0 à 65 535       | Identificateur de VCR<br>La relation VCR n'est pas valide si son identificateur est 0xFFFF.                                                                                                                                                                                                  |
| 1                                              | VcrType            | Unsigned8          | 0 à 16           | Les bits 0-1 indiquent le type de VCR:<br>00 = VCR P/S<br>01 = VCR R/S<br>10 = VCR C/S<br>Les bits 2 et 3 indiquent une VCR d'agrégation ou non:<br>00 = VCR de non-agrégation<br>01 = VCR d'agrégation de données<br>10 = VCR d'agrégation de paquets<br>Les autres valeurs sont réservées. |
| 2                                              | SrcObjID           | Unsigned8          | 0 à 255          | ID de l'objet source                                                                                                                                                                                                                                                                         |
| 3                                              | SrcObjInstID       | Unsigned8          | 0 à 255          | ID de l'instance d'objet source                                                                                                                                                                                                                                                              |
| 4                                              | DesObjID           | Unsigned8          | 0 à 255          | ID de l'objet de destination                                                                                                                                                                                                                                                                 |
| 5                                              | DesObjInstID       | Unsigned8          | 0 à 255          | ID de l'instance d'objet de destination                                                                                                                                                                                                                                                      |
| 6                                              | DataUpdateRate     | Unsigned32         | 0 à $(2^{32}-1)$ | Vitesse de mise à jour des données (en millisecondes)<br>Les données n'ont pas de cycle si cette valeur est 0xFFFFFFFF.                                                                                                                                                                      |
| 7                                              | VcrStatus          | Booléen            | 0, 1             | Etat de la VCR:<br>0 = Inactive<br>1 = Active                                                                                                                                                                                                                                                |
| 8                                              | VcrActivationTime  | Unsigned32         | 0 à $(2^{32}-1)$ | Temps d'activation de la VCR (en millisecondes)                                                                                                                                                                                                                                              |
| 9                                              | ServiceTime        | Unsigned32         | 0 à $(2^{32}-1)$ | Durée de service valide de la VCR (en millisecondes)                                                                                                                                                                                                                                         |
| 10                                             | SourceChAddress    | Unsigned16         | 0 à 65 535       | Adresse de la tête de groupe pour l'appareil source                                                                                                                                                                                                                                          |
| 11                                             | SourceAddress      | Unsigned16         | 0 à 65 535       | Adresse réseau pour l'appareil source                                                                                                                                                                                                                                                        |
| 12                                             | DestinationAddress | Unsigned16         | 0 à 65 535       | Adresse réseau pour l'appareil de destination                                                                                                                                                                                                                                                |
| 13                                             | SecurityPolicy     | Unsigned8          | 0 à 255          | Niveau de sécurité des paquets (voir Annexe A)                                                                                                                                                                                                                                               |
| 14                                             | RouteID            | Unsigned16         | 0 à 65 535       | Identificateur d'itinéraire                                                                                                                                                                                                                                                                  |

L'unité de temps utilisée dans ce tableau est l'intervalle de temps utilisé par la supertrame.

Le type de données des attributs de condition des appareils DevConRep est indiqué au Tableau 22.

**Tableau 22 – Structure DevConRep\_Struct**

| Identificateur d'élément d'attribut | Nom                              | Type de données | Plage valide             | Description                                                                                |
|-------------------------------------|----------------------------------|-----------------|--------------------------|--------------------------------------------------------------------------------------------|
| 0                                   | DevShortAddr                     | Unsigned16      | 0 à 65 535               | Adresse courte 16 bits de l'appareil                                                       |
| 1                                   | NumPktSent                       | Unsigned16      | 0 à 65 535               | Nombre total de paquets envoyés après le dernier rapport                                   |
| 2                                   | NumPktRcvd                       | Unsigned16      | 0 à 65 535               | Nombre total de paquets terminés dans l'appareil après le dernier rapport                  |
| 3                                   | NumMacMicFailure                 | Unsigned16      | 0 à 65 535               | Nombre total de défaillances de code d'intégrité de message (MIC) après le dernier rapport |
| 4                                   | BatLevel                         | Unsigned8       | 1 à 10                   | Niveau de puissance résiduel                                                               |
| 5                                   | RestartCount                     | Unsigned8       | 0 à 255                  | Nombre de démarrages de l'appareil                                                         |
| 6                                   | Uptime (durée de fonctionnement) | Unsigned32      | 0 à (2 <sup>32</sup> -1) | Temps depuis le dernier redémarrage (en secondes)                                          |

Le type de données des attributs clé KeyTable est indiqué au Tableau 23.

**Tableau 23 – Structure Key\_Struct**

| Identificateur d'élément d'attribut | Nom           | Type de données | Plage valide             | Description                                                                                                                                |
|-------------------------------------|---------------|-----------------|--------------------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| 0                                   | KeyID         | Unsigned16      | 0 à 65 535               | Identificateur de clé                                                                                                                      |
| 1                                   | KeyType       | Unsigned8       | 0 à 3                    | Type de clé:<br>0 = Clé de rattachement<br>1 = Clé de chiffrement de clé<br>2 = Clé de chiffrement de DLSSL<br>3 = Clé de chiffrement d'AL |
| 2                                   | KeyLength     | Unsigned8       | 0 à 255                  | (KeyLength+1) est la longueur valide de la clé (en bits)                                                                                   |
| 3                                   | KeyActiveTime | Unsigned48      | 0 à (2 <sup>48</sup> -1) | Nombre absolu d'intervalles de temps (ASN) lorsqu'une clé commence à être active                                                           |
| 4                                   | KeyData       | Octetstring     |                          | Valeur de la clé                                                                                                                           |
| 5                                   | KeyAttackCnt  | Unsigned8       | 0 à 255                  | Nombre total d'attaques contre la clé                                                                                                      |
| 6                                   | KeyState      | Unsigned8       | 0 à 7                    | Etat d'utilisation d'une clé:<br>0 = Sauvegarde<br>1 = En cours d'utilisation<br>2 = Invalide<br>Les autres valeurs sont réservées.        |

Le type de données des attributs de liste d'objets ObjList est indiqué au Tableau 24.

**Tableau 24 – Structure ObjList\_Struct**

| Identificateur d'élément d'attribut                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Nom             | Type de données | Plage valide | Description                                  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|-----------------|--------------|----------------------------------------------|
| 0                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | ObjectID        | Unsigned8       | 0 à 255      | Identificateur unique de l'objet UAO         |
| 1                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | InstanceID      | Unsigned8       | 0 à 255      | Identificateur unique d'une instance d'objet |
| 2                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | ProfileID       | Unsigned16      | 0 à 65 535   | ID de profil de l'objet UAO                  |
| 3                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | ParameterNumber | Unsigned8       | 0 à 255      | Nombre de paramètres de l'UAO                |
| NOTE ObjectID et InstanceID dans ObjList_Struct sont identiques à l'identificateur d'objet et l'ID d'instance (voir Annexe C). Les DAGO, PAGO et DGO sont trois types spéciaux d'objets UAO. Par conséquent, les attributs de DAGO, PAGO, ou DGO sont inclus dans ObjList_Struct si un tel objet est mis en œuvre dans l'appareil. En outre, DagolD et DagolnsID de DAGO, PagolD et PagolnsID de PAGO ainsi que DgolD et DgolnsID de DGO correspondent respectivement à ObjectID et InstanceID dans ObjList_Struct. |                 |                 |              |                                              |

## 6.9.2 Services MIB

### 6.9.2.1 Services MIB à distance

Les attributs dans la base d'informations de gestion (MIB) peuvent être lus et écrits à distance par l'intermédiaire des services d'obtention d'attribut et d'établissement d'attribut fournis par la couche réseau (NL).

### 6.9.2.2 Services de MIB locaux

#### 6.9.2.2.1 Généralités

Les attributs dans la MIB peuvent être lus et écrits localement par l'intermédiaire des services d'obtention d'attribut et d'établissement d'attribut fournis par le processus DMAP local.

#### 6.9.2.2.2 Services DMAP d'obtention d'attribut

DMAP-MIB-GET.request est utilisée par les couches de protocoles pour demander des attributs dans la base MIB.

La sémantique de DMAP-MIB-GET.request est décrite comme suit:

```
DMAP-MIB-GET.request (
 AttributeID,
 AttributeMemID,
 FirstValueStorIndex,
 Count
)
```

Le Tableau 25 spécifie les paramètres pour DMAP-MIB-GET.request.

**Tableau 25 – Paramètres de DMAP-MIB-GET.request**

| Nom                 | Type de données | Plage valide | Description                                                                                                                                                                                                          |
|---------------------|-----------------|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| AttributeID         | Unsigned8       | 0 à 255      | ID d'attribut dans la MIB                                                                                                                                                                                            |
| AttributeMemID      | Unsigned8       | 0 à 255      | Identificateur d'élément d'attribut, qui est utilisé pour obtenir les attributs MIB structurés<br>La valeur 255 signifie qu'il convient de lire tous les attributs.                                                  |
| FirstValueStorIndex | Unsigned16      | 0 à 65 535   | Premier indice de stockage des multiples valeurs d'attribut, qui est utilisé pour obtenir les attributs MIB structurés                                                                                               |
| Count               | Unsigned8       | 0 à 255      | Nombre de valeurs d'attribut ou de valeurs d'élément d'attribut, qui est utilisé pour obtenir les attributs MIB structurés; obtention de toutes les valeurs d'attributs à partir de FirstValueStorIndex si Count= 0. |

DMAP-MIB-GET.confirm est utilisé pour retourner le résultat de DMAP-MIB-GET.request.

La sémantique de DMAP-MIB-GET.confirm est décrite comme suit:

DMAP-MIB-GET.confirm (

Status,  
AttributeID,  
AttributeMemID,  
FirstValueStorIndex,  
Count,  
AttributeValue  
)

Le Tableau 26 spécifie les paramètres pour DMAP-MIB-GET.confirm.

**Tableau 26 – Paramètres de DMAP-MIB-GET.confirm**

| Nom                 | Type de données | Plage valide | Description                                                                                                                                                  |
|---------------------|-----------------|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Statut              | Unsigned8       | 0 à 255      | Résultats de l'obtention d'attribut<br>0 = SUCCESS (succès)<br>1 = UNSUPPORTED_ATTRIBUTE (attribut non pris en charge)<br>Les autres valeurs sont réservées. |
| AttributeID         | Unsigned8       | 0 à 255      | ID d'attribut demandé                                                                                                                                        |
| AttributeMemID      | Unsigned8       | 0 à 255      | Identificateur de l'élément d'attribut<br>La valeur 255 signifie qu'il convient de lire tous les attributs.                                                  |
| FirstValueStorIndex | Unsigned16      | 0 à 65 535   | Premier indice de stockage des multiples valeurs d'attribut lues                                                                                             |
| Count               | Unsigned8       | 0 à 255      | Nombre de valeurs d'attribut ou de valeurs d'élément d'attribut                                                                                              |
| AttributeValue      | Octetstring     |              | Valeur de l'attribut                                                                                                                                         |

Si l'opération d'obtention d'attribut a réussi, il convient que le paramètre Status soit SUCCESS et, dans ce cas, AttributeValue est valide; sinon, si la base MIB n'a pas les attributs demandés, il convient que Status renvoie UNSUPPORTED\_ATTRIBUTE et, dans ce cas, le paramètre AttributeValue n'est pas valide.

### 6.9.2.2.3 Services DMAP d'établissement d'attribut

Il convient que DMAP-MIB-SET.request soit utilisée par les couches de protocoles pour écrire des attributs dans la base MIB.

La sémantique de DMAP-MIB-SET.request est décrite comme suit:

DMAP-MIB-SET.request (

- AttributeID,
- AttributeMemID,
- FirstValueStorIndex,
- Count,
- AttributeValue

)

Le Tableau 27 spécifie les paramètres pour DMAP-MIB-SET.request.

**Tableau 27 – Paramètres de DMAP-MIB-SET.request**

| Nom                 | Type de données | Plage valide | Description                                                                                                            |
|---------------------|-----------------|--------------|------------------------------------------------------------------------------------------------------------------------|
| AttributeID         | Unsigned8       | 0 à 255      | ID d'attribut dans la MIB                                                                                              |
| AttributeMemID      | Unsigned8       | 0 à 255      | Identificateur de l'élément d'attribut<br>La valeur 255 signifie qu'il convient de lire tous les attributs.            |
| FirstValueStorIndex | Unsigned16      | 0 à 65 535   | Premier indice de stockage des multiples valeurs d'attribut, qui est utilisé pour obtenir les attributs MIB structurés |
| Count               | Unsigned8       | 0 à 255      | Number of attributes (nombre d'attributs)                                                                              |
| AttributeValue      | Octetstring     |              | Valeur de l'attribut                                                                                                   |

DMAP-MIB-SET.confirm est utilisée pour retourner le résultat de DMAP-MIB-SET.request.

La sémantique de DMAP-MIB-SET.confirm est décrite comme suit:

DMAP-MIB-SET.confirm (

- Status,
- AttributeID,
- AttributeMemID,
- FirstValueStorIndex

)



Le Tableau 28 spécifie les paramètres pour DMAP-MIB-SET.confirm.

**Tableau 28 – Paramètres de DMAP-MIB-SET.confirm**

| Nom                 | Type de données | Plage valide | Description                                                                                                                                                                               |
|---------------------|-----------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Statut              | Unsigned8       | 0 à 255      | Résultat de l'établissement d'attribut:<br>0 = SUCCESS (succès)<br>1 = UNSUPPORTED_ATTRIBUTE (attribut non pris en charge)<br>2 = INVALID_PARAMETER<br>Les autres valeurs sont réservées. |
| AttributeID         | Unsigned8       | 0 à 255      | ID d'attribut dans la MIB                                                                                                                                                                 |
| AttributeMemID      | Unsigned8       | 0 à 255      | Identificateur de l'élément d'attribut<br>La valeur 255 signifie qu'il convient de lire tous les attributs.                                                                               |
| FirstValueStorIndex | Unsigned16      | 0 à 65 535   | Premier indice de stockage des multiples valeurs d'attribut écrites                                                                                                                       |

Si l'opération d'établissement d'attribut a réussi, il convient que le paramètre Status soit SUCCESS; si la base MIB n'a pas les attributs demandés, il convient que Status soit UNSUPPORTED\_ATTRIBUTE; sinon, si les attributs définis ne sont pas conformes aux attributs spécifiés, il convient que Status soit INVALID\_PARAMETER.

## 7 Couche physique

### 7.1 Généralités

Le réseau WIA-PA utilise les radiofréquences (RF) comme moyen de communication entre ses appareils. La distance de communication entre deux appareils dépend de la puissance d'émetteur, du type d'antenne et de l'obstruction entre deux appareils. Les appareils WIA-PA peuvent être alimentés soit principalement par un réseau d'alimentation, batterie, appareils de récupération d'énergie (par exemple appareils solaires, à vibrations, etc.) ou par une combinaison de ces méthodes d'alimentation.

La spécification relative à la couche physique (PHY) du réseau WIA-PA s'appuie sur les ondes radio de 2,4 GHz conformes à l'IEEE 802.15.4-2011.

La PHY du réseau WIA-PA définit la méthode de signalisation, la puissance du signal, la sensibilité du récepteur et l'environnement d'envoi des bits sur le support réseau. La couche PHY est chargée de l'activation et de la désactivation de l'émetteur-récepteur radio, de la détection d'énergie, de l'indicateur de qualité de liaison, de la sélection de canaux, de l'évaluation de canal libre, des paquets d'émission et de réception à travers le support physique.

La spécification relative à la PHY du réseau WIA-PA inclut les éléments suivants:

- exigences relatives à la PHY, dont la plupart sont adoptées directement à partir de l'IEEE 802.15.4-2011, notamment les exigences spécifiques sur les canaux, la puissance d'émission et la sensibilité du récepteur;
- exigences relatives à la PHY garantissant l'interconnexion entre les appareils WIA-PA.

## 7.2 Exigences générales basées sur l'IEEE 802.15.4-2011

La couche physique WIA-PA doit être basée sur DSSS dans la bande de 2,4 GHz conformément à l'IEEE 802.15.4-2011 avec des exigences et des exceptions supplémentaires telles que spécifiées dans le présent document.

L'un des paramètres de mise en service de l'appareil, CountryCode (voir 8.4.11), fournit les lignes directrices relatives au lieu et aux contraintes de réglementation nécessaires pour obtenir la conformité aux réglementations applicables. Voir Annexe D.

Les fournisseurs d'appareils sont responsables de la conformité de ces appareils à la présente norme et à toutes les éventuelles réglementations spécifiques à un pays ou à une région.

Le Tableau 29 spécifie la sélection de la couche PHY pour un appareil WIA-PA conformément à l'IEEE 802.15.4-2011.

**Tableau 29 – Sélection de protocoles PHY (1 de 2)**

| Article de l'IEEE 802.15.4-2011 | Header                                                                                                                                            | Présence  | Contraintes                                                                    |
|---------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|-----------|--------------------------------------------------------------------------------|
| 6                               | Exigences générales relatives à la PHY                                                                                                            |           |                                                                                |
| 6.1                             | Exigences générales et définitions                                                                                                                | Partielle | Seulement PHY de DSSS de 2 450 MHz utilisant la modulation O-QPSK              |
| 6.1.1                           | Plage de fréquence d'exploitation                                                                                                                 | Partielle | Seule la bande de DSSS de 2 450 MHz est incluse (voir Tableau 30)              |
| 6.1.2                           | Affectations de canaux                                                                                                                            | Partielle | Seuls les canaux 11-25 de la page de canaux 0 sont inclus (voir Tableau 32)    |
| 6.1.3                           | Périodes LIFS et SIFS minimales                                                                                                                   | Partielle | Uniquement les LIFS et SIFS minimales pour la bande de 2 450 MHz sont incluses |
| 6.1.4                           | Mesure de puissance RF                                                                                                                            | OUI       |                                                                                |
| 6.1.5                           | Puissance d'émission                                                                                                                              | OUI       |                                                                                |
| 6.1.6                           | Emission parasite hors bande                                                                                                                      | OUI       |                                                                                |
| 6.1.7                           | Définitions de la sensibilité du récepteur                                                                                                        | OUI       |                                                                                |
| 6.2                             | Spécifications relatives au service PHY                                                                                                           | OUI       |                                                                                |
| 6.3                             | Format PPDU                                                                                                                                       | OUI       |                                                                                |
| 6.4                             | Constantes PHY et attributs PIB                                                                                                                   |           |                                                                                |
| 6.4.1                           | Constantes PHY                                                                                                                                    | OUI       |                                                                                |
| 6.4.2                           | Attributs PIB de la PHY                                                                                                                           | Partielle | Voir 7.3.9                                                                     |
| 6.5                             | Spécifications relatives à la PHY de 2 450 MHz                                                                                                    | OUI       | Voir 7.3.8 pour des explications supplémentaires                               |
| 6.6                             | Spécifications relatives à la PHY de modulation par déphasage binaire (BPSK, Binary phase-shift keying) sur la bande 868/915 MHz                  | NON       | Seule la bande de 2 450 MHz est incluse                                        |
| 6.7                             | Spécifications relatives à la PHY de modulation par déplacement d'amplitude (ASK, Amplitude shift keying) (facultatives) sur la bande 868/915 MHz | NON       | Seule la bande de 2 450 MHz est incluse                                        |

**Tableau 29 (2 de 2)**

| Article de l'IEEE 802.15.4-2011 | Header                                                                             | Présence | Contraintes                                      |
|---------------------------------|------------------------------------------------------------------------------------|----------|--------------------------------------------------|
| 6.8                             | Spécifications relatives à la PHY d'O-QPSK (facultatives) sur la bande 868/915 MHz | NON      | Seule la bande de 2 450 MHz est incluse          |
| 6.9                             | Spécifications générales relatives aux ondes radio                                 |          |                                                  |
| 6.9.1                           | Temps de retournement TX-à-RX                                                      | OUI      |                                                  |
| 6.9.2                           | Temps de retournement RX-à-TX                                                      | OUI      |                                                  |
| 6.9.3                           | Définition de la magnitude de vecteur d'erreur (EVM, Error-vector magnitude)       | OUI      |                                                  |
| 6.9.4                           | Tolérance de fréquence du centre d'émission                                        | OUI      |                                                  |
| 6.9.5                           | Puissance d'émission                                                               | NON      | Voir 7.3.6 pour le remplacement de ce paragraphe |
| 6.9.6                           | Niveau d'entrée maximal du signal souhaité au niveau du récepteur                  | OUI      |                                                  |
| 6.9.7                           | Détection d'énergie (ED, Energy Detection) du récepteur                            | OUI      |                                                  |
| 6.9.8                           | Indicateur de qualité de liaison (LQI, Link Quality Indicator)                     | OUI      |                                                  |
| 6.9.9                           | Evaluation de canal libre (CLA, Clear Channel Assessment)                          | OUI      |                                                  |

### 7.3 Exigences supplémentaires

#### 7.3.1 Généralités

Bien que la couche physique de l'IEEE 802.15.4-2011 prenne en charge plusieurs bandes de fréquence et classes de modulation, un appareil conforme à la présente norme doit fonctionner dans la bande de 2 400 MHz à 2 483,5 MHz sans licence utilisant la modulation DSSS et le codage à 250 kbit/s, qui est spécifiée dans l'IEEE 802.15.4-2011, Tableau 51, comme étant la PHY de DSSS de 2 450. La présente norme ne prend en charge aucune des autres bandes de fréquences, aucun des autres débits de données et aucune des autres techniques de modulation et de codage spécifié(e)s dans l'IEEE 802.15.4-2011.

#### 7.3.2 Affectations de fréquence

L'émetteur-récepteur doit utiliser le DSSS et fonctionner dans la bande ISM sans licence, tel que représenté au Tableau 30.

**Tableau 30 – Bande de fréquence et débit de données**

| Fréquence MHz   | Débit de communication kchip/s | Modulation | Débit binaire kbit/s | Débit de symboles ksymbol/s | Symboles           |
|-----------------|--------------------------------|------------|----------------------|-----------------------------|--------------------|
| 2 400 à 2 483,5 | 2 000                          | O-QPSK     | 250                  | 62,5                        | 16-aire orthogonal |

#### 7.3.3 Numéros de canal et affectations de fréquence

La bande de 2 450 MHz prend en charge les affectations de canal de 11-26, tel que spécifié dans l'IEEE 802.15.4-2011. Le canal 26 n'étant pas conforme à la réglementation de certaines régions du monde, il n'est pas inclus dans le présent document.

L'affectation de fréquence pour les canaux 11-25 est indiquée au Tableau 31.

**Tableau 31 – Affectations de fréquence**

| Numéro de canal | Fréquence MHz |  | Numéro canal | Fréquence MHz |  | Numéro de canal | Fréquence MHz |
|-----------------|---------------|--|--------------|---------------|--|-----------------|---------------|
| 11              | 2 405         |  | 16           | 2 430         |  | 21              | 2 455         |
| 12              | 2 410         |  | 17           | 2 435         |  | 22              | 2 460         |
| 13              | 2 415         |  | 18           | 2 440         |  | 23              | 2 465         |
| 14              | 2 420         |  | 19           | 2 445         |  | 24              | 2 470         |
| 15              | 2 425         |  | 20           | 2 450         |  | 25              | 2 475         |

### 7.3.4 Émetteurs-récepteurs radio

Les émetteurs-récepteurs radio des appareils WIA-PA sont conformes à l'IEEE 802.15.4-2011 ainsi qu'aux réglementations d'Europe, du Canada, du Japon, de Chine et des États-Unis, entre autres. Voir Annexe D.

### 7.3.5 Performance radio exigée améliorée ou non spécifiée

Le présent document inclut les éléments suivants, qui ne sont pas spécifiés dans l'IEEE 802.15.4-2011.

- Il convient que le temps recommandé pour commuter entre les canaux corresponde à 12 périodes symboles.
- Le temps maximal recommandé d'allumage de la radio pour un démarrage à froid est de 4 ms. Il comprend le verrouillage de fréquence et le temps d'établissement.

### 7.3.6 Puissance d'émission

La puissance d'émission doit être la puissance isotrope rayonnée équivalente, à savoir la PIRE (EIRP, Equivalent Isotropic Radiated Power) de l'appareil. Les appareils WIA-PA doivent fournir une p.i.r.e. nominale de +10 dBm (10 mW)  $\pm 3$  dB. Le niveau de puissance rayonnée maximal ne doit pas dépasser les exigences réglementaires applicables dans le lieu de déploiement de l'appareil, tel que contraint par CountryCode (voir 8.4.11).

Dans les deux cas, la puissance d'émission assignée doit être représentative de l'appareil de production du fabricant avec une source d'alimentation (batteries, solaire, ou autre) comprise entre 95 % et 100 % de sa capacité assignée. Il convient de fournir tous les appareils avec une antenne omnidirectionnelle. Les données relatives à la puissance d'émission assignée comprenant la puissance de sortie maximale et les diagrammes de rayonnement pour toutes les antennes prises en charge par le produit doivent être disponibles dans le manuel d'instructions du produit ou sur demande.

### 7.3.7 Contrôle de la puissance de sortie

Le niveau de puissance de l'appareil doit être programmable à des niveaux discrets et monotones de PIRE allant de  $-10$  dBm à  $+10$  dBm (avec  $\pm 4$  dBm d'erreur par rapport au niveau de puissance réel). La puissance de sortie peut être contrôlée en configurant l'attribut PIB phyTransmitPower de la couche physique PHY.

### 7.3.8 Sensibilité du récepteur

La sensibilité du récepteur du réseau WIA-PA est conforme à l'IEEE 802.15.4-2011 et doit pouvoir atteindre une sensibilité minimale de  $-85$  dBm.

### 7.3.9 Attributs PIB de la PHY

La présente norme inclut les attributs spécifiés en 6.4.2 de l'IEEE 802.15.4-2011 et des attributs supplémentaires qui s'appliquent uniquement au présent document. Une valeur constante est affectée à certains de ces attributs, tel que représenté au Tableau 32.

**Tableau 32 – Attributs de PHY PIB**

| Attribut                       | Commentaire                                                          |
|--------------------------------|----------------------------------------------------------------------|
| phyCurrentChannel              | Configuré sur demande Ph-Enable                                      |
| phyChannelsSupported           | Seuls les canaux 11 – 25 sont pris en charge                         |
| phyTXPowerTolerance            | 1 dB, 3 dB, 6 dB                                                     |
| phyTXPower                     | Les valeurs comprises entre –10 dBm et +10 dBm sont prises en charge |
| phyCCAMode                     | Seule la valeur 2 (détection de porteuse) est incluse                |
| phyCurrentPage                 | Seule la valeur "0" est incluse                                      |
| phyMaxFrameDuration            | Seule la valeur 266 est incluse                                      |
| phySHRDuration                 | Seule la valeur 10 est incluse                                       |
| phySymbolsPerOctet             | Seule la valeur 2 est incluse                                        |
| phyPreambleSymbolLength        | Seule la valeur 0 est incluse                                        |
| phyUWBDataRatesSupported       | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyCSSLowDataRateSupported     | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWBCoUSupported             | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWB CSSSupported            | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWBCurrentPulseShape        | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWB CoUpulse                | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWB CSpulse                 | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWB LCPWeight1              | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWB LCPWeight2              | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWB LCPWeight3              | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWB LCPWeight4              | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWB LCPDelay2               | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWB LCPDelay3               | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWB LCPDelay4               | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyRanging                     | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyRangingCrystalOffset        | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyRangingDPS                  | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyCurrentCode                 | Seule la valeur 0 est incluse                                        |
| phyNativePRF                   | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWBScanBinsPerChannel       | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyUWBInsertedPreambleInterval | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyTXRMARKER Offset            | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyRXRMARKER Offset            | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyRFRAMEProcessingTime        | Cet attribut n'est pas valide dans le réseau WIA-PA                  |
| phyCCADuration                 | Cet attribut n'est pas valide dans le réseau WIA-PA                  |


## 8 Couche liaison de données

### 8.1 Généralités

La couche liaison de données (DLL) du réseau WIA-PA est conçue pour garantir la communication en temps réel parmi des appareils WIA-PA en toute fiabilité et sécurité. La couche DLL du réseau WIA-PA étend la structure de supertrame de l'IEEE 802.15.4-2011. La couche WIA-PA DLL prend en charge certaines fonctions clés, y compris le saut de fréquence, la retransmission, et les mécanismes d'accès hybride aux canaux d'Accès multiple par répartition dans le temps (AMRT) et d'Accès multiple à détection de porteuse (CSMA). Ces mécanismes sont utilisés pour garantir la fiabilité et la transmission en temps réel pendant la communication. La couche DLL du réseau WIA-PA est conçue pour utiliser le mécanisme MIC et la technologie de chiffrement afin de garantir l'intégrité et la confidentialité du processus de communication.

### 8.2 Pile de protocole

La couche DLL du réseau WIA-PA est conçue pour optimiser l'IEEE 802.15.4-2011 afin de satisfaire aux exigences relatives à l'automation dans les processus. La pile de protocole de la couche DLL est indiquée à la Figure 28.

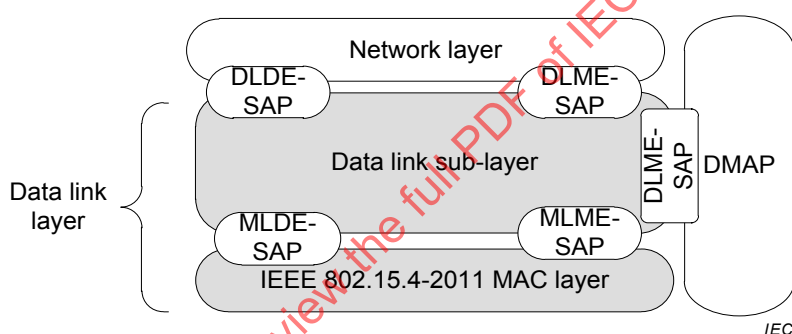

| Anglais             | Français                        |
|---------------------|---------------------------------|
| Network layer       | Couche réseau (NL)              |
| Data link layer     | Couche liaison de données (DLL) |
| Data link sub-layer | Sous-couche liaison de données  |

**Figure 28 – Pile de protocole de la couche DLL du réseau WIA-PA**

La couche DLL du réseau WIA-PA comprend les parties suivantes:

- la couche MAC de l'IEEE 802.15.4-2011, qui gère les mécanismes d'envoi et de réception de trames de données individuelles;
- la sous-couche liaison de données (DLSL), qui gère les aspects de ressource de communication.

### 8.3 Vue d'ensemble de la couche MAC et extension de fonction

#### 8.3.1 Vue d'ensemble de la couche MAC

La section suivante spécifie la couche MAC selon la norme WIA-PA et le contenu de la couche MAC selon l'IEEE 802.15.4-2011 n'est pas énoncé dans le présent document. Le présent document est basé sur la couche de contrôle d'accès au support (MAC) à balise de l'IEEE 802.15.4-2011. Cette couche MAC gère tous les accès au canal radio physique et elle est chargée des tâches suivantes:

- générer des balises réseau si l'appareil est un appareil de passerelle ou un appareil de routage;

- b) se synchroniser à des balises réseau;
- c) prendre en charge l'association et la dissociation point par point du réseau;
- d) prendre en charge la sécurité point par point;
- e) utiliser le mécanisme d'accès multiple par détection de porteuse et évitement de collision (CSMA-CA) en intervalles de temps pour le rattachement d'appareil;
- f) gérer et maintenir le mécanisme d'intervalle de temps garanti (GTS);
- g) fournir une liaison fiable entre deux entités MAC homologues.

Les appareils de terrain et les appareils tenus à la main correspondent à des appareils à fonctions limitées (RFD) tandis que les appareils de routage et les appareils de passerelle correspondent à des appareils pleinement fonctionnels (FFD). Aucune fonction facultative des appareils RFD et FFD dans l'IEEE 802.15.4-2011 n'est exigée dans la présente norme.

### **8.3.2 Exigences générales basées sur l'IEEE 802.15.4-2011**

La couche MAC du réseau WIA-PA doit être basée sur la couche MAC de l'IEEE 802.15.4-2011 avec des exigences et des exceptions supplémentaires telles que spécifiées dans le présent document.

L'appareil de passerelle joue le rôle de coordinateur PAN dans l'IEEE 802.15.4-2011 et les appareils de routage agissent en tant que coordinateurs dans l'IEEE 802.15.4-2011.

Le Tableau 33 spécifie la sélection de la couche MAC pour un appareil WIA-PA conformément à l'IEEE 802.15.4-2011.

**Tableau 33 – Sélection de protocoles MAC (1 of 3)**

| Article de l'IEEE 802.15.4-2011 | Header                                       | Présence  | Contraintes                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |
|---------------------------------|----------------------------------------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 5                               | Protocole MAC                                |           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.1                             | Description fonctionnelle de la couche MAC   |           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.1.1                           | Accès au canal                               | OUI       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.1.2                           | Démarrage et maintien des PAN                | Partielle | Seul le balayage actif est utilisé dans le réseau WIA-PA.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| 5.1.3                           | Association et dissociation                  | OUI       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.1.4                           | Synchronisation                              | OUI       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.1.5                           | Gestion des transactions                     | NON       | Les transactions peuvent être réalisées à partir des appareils eux-mêmes.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| 5.1.6                           | Transmission, réception et acquittement      | OUI       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.1.7                           | Affectation et gestion du mécanisme GTS      | NON       | Cette fonction n'est pas utilisée dans le réseau WIA-PA.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 5.1.8                           | Plage de valeurs                             | NON       | Cette fonction n'est pas utilisée dans le réseau WIA-PA.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
| 5.2                             | Formats de trame MAC                         |           |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.2.1                           | Format général d'une trame MAC               | OUI       | Pour le format de trame MAC du réseau WIA-PA, la valeur du sous-champ Security enabled (sécurité activée) de l'en-tête de contrôle d'accès au support (MHR) doit être configurée à 0 et la longueur du sous-champ Auxiliary Security Header (en-tête auxiliaire de sécurité) est de 0 octet.<br>La compression de l'ID PAN est configurée à 1.<br>La longueur du champ Source PAN identifier (identificateur PAN source) est de 0 et le champ Destination PAN Identifier (identificateur PAN de destination) est configuré sur NetworkID (voir 6.9.1.2.1) du réseau WIA-PA. |
| 5.2.2                           | Format de types de trame individuelle        | OUI       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.2.3                           | Compatibilité de trames                      | OUI       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.3                             | Trames de commande MAC                       | Partielle | Voir les points 5.3.1 à 5.3.9. suivants                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
| 5.3.1                           | Commande de demande d'association            | OUI       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.3.2                           | Commande de réponse d'association            | OUI       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.3.3                           | Commande de notification de dissociation     | OUI       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.3.4                           | Commande de demande de données               | OUI       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.3.5                           | Commande de notification de conflit d'ID PAN | NON       | La commande de notification de conflit d'ID PAN n'est pas utilisée dans le réseau WIA-PA.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
| 5.3.6                           | Commande de notification orpheline           | NON       | La commande de notification orpheline n'est pas utilisée dans le réseau WIA-PA.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 5.3.7                           | Commande de demande de balise                | NON       | La commande de demande de balise n'est pas utilisée dans le réseau WIA-PA.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |



**Tableau 33 (2 de 3)**

| Article de l'IEEE 802.15.4-2011 | Header                                                                | Présence  | Contraintes                                                                                                            |
|---------------------------------|-----------------------------------------------------------------------|-----------|------------------------------------------------------------------------------------------------------------------------|
| 5.3.8                           | Commande de réalignement du coordinateur                              | NON       | La commande de réalignement du coordinateur n'est pas utilisée dans le réseau WIA-PA.                                  |
| 5.3.9                           | Commande de demande de GTS                                            | NON       | La commande de demande de GTS n'est pas utilisée dans le réseau WIA-PA.                                                |
| 6                               | Service MAC                                                           |           |                                                                                                                        |
| 6.1                             | Vue d'ensemble                                                        |           |                                                                                                                        |
| 6.2                             | Service de gestion de la couche MAC                                   | Partielle | Voir les points 6.2.1 à 6.2.17 suivants                                                                                |
| 6.2.1                           | Exigences communes pour les primitives MLME                           | OUI       |                                                                                                                        |
| 6.2.2                           | Primitives d'association                                              | OUI       |                                                                                                                        |
| 6.2.3                           | Primitives de dissociation                                            | OUI       |                                                                                                                        |
| 6.2.4                           | Primitives de notification de communications                          | OUI       |                                                                                                                        |
| 6.2.5                           | Primitives de lecture des attributs PIB                               | OUI       |                                                                                                                        |
| 6.2.6                           | Primitives de gestion du GTS                                          | NON       | Les primitives de gestion du GTS ne sont pas utilisées dans le réseau WIA-PA.                                          |
| 6.2.7                           | Primitives de notification orpheline                                  | NON       | Les primitives de notification orpheline ne sont pas utilisées dans le réseau WIA-PA.                                  |
| 6.2.8                           | Primitives de reconfiguration de la sous-couche MAC                   | NON       | Après le départ d'un nœud du réseau WIA-PA, sa sous-couche MAC est reconfigurée à la valeur par défaut.                |
| 6.2.9                           | Primitives de spécification du temps d'activation du récepteur        | OUI       |                                                                                                                        |
| 6.2.10                          | Primitives de balayage des canaux                                     | OUI       |                                                                                                                        |
| 6.2.11                          | Primitives d'écriture des attributs PIB                               | OUI       |                                                                                                                        |
| 6.2.12                          | Primitives de mise à jour de la configuration de la supertrame        | NON       | Les primitives de mise à jour de la configuration de la supertrame ne sont pas utilisées dans le réseau WIA-PA.        |
| 6.2.13                          | Primitives de synchronisation avec un coordinateur                    | NON       | Les primitives de synchronisation avec un coordinateur ne sont pas utilisées dans le réseau WIA-PA.                    |
| 6.2.14                          | Primitives de demande de données d'un coordinateur                    | NON       | Les primitives de demande de données d'un coordinateur ne sont pas utilisées dans le réseau WIA-PA.                    |
| 6.2.15                          | Primitives de spécification de préambule dynamique                    | NON       | Les primitives de spécification de préambule dynamique ne sont pas utilisées dans le réseau WIA-PA.                    |
| 6.2.16                          | Primitives de sondage des canaux                                      | NON       | Les primitives de sondage des canaux ne sont pas utilisées dans le réseau WIA-PA.                                      |
| 6.2.17                          | Primitives de classement de l'étalonnage (pour les couches PHY d'UWB) | NON       | Les primitives de classement de l'étalonnage (pour les couches PHY d'UWB) ne sont pas utilisées dans le réseau WIA-PA. |

**Tableau 33 (3 de 3)**

| Article de l'IEEE 802.15.4-2011 | Header                                                               | Présence  | Contraintes                                                               |
|---------------------------------|----------------------------------------------------------------------|-----------|---------------------------------------------------------------------------|
| 6.3                             | Service de données MAC                                               | Partielle | Les points 6.3.1 à 6.3.3 suivants sont utilisés dans le réseau WIA-PA.    |
| 6.3.1                           | MCPS-DATA.request                                                    | OUI       |                                                                           |
| 6.3.2                           | MCPS-DATA.confirm                                                    | OUI       |                                                                           |
| 6.3.3                           | MCPS-DATA. Indication                                                | OUI       |                                                                           |
| 6.3.4                           | MCPS-PURGE.request                                                   | NON       | La primitive MCPS-PURGE.request n'est pas utilisée dans le réseau WIA-PA. |
| 6.3.5                           | MCPS-PURGE. confirm                                                  | NON       | La primitive MCPS-PURGE.confirm n'est pas utilisée dans le réseau WIA-PA. |
| 6.4                             | Constantes MAC et attributs PIB                                      |           |                                                                           |
| 6.4.1                           | Constantes MAC                                                       | OUI       |                                                                           |
| 6.4.2                           | Attributs PIB de la couche MAC                                       | Partielle | Voir Tableau 34 pour plus de détails.                                     |
| 6.4.3                           | Calcul des valeurs PIB de la couche MAC dépendantes de la couche PHY | OUI       |                                                                           |

Le présent document inclut les attributs spécifiés en 6.4.2 de l'IEEE 802.15.4-2011 et des attributs supplémentaires qui s'appliquent uniquement au présent document. Une valeur constante est affectée à certains de ces attributs, tel que représenté au Tableau 34.

**Tableau 34 – Attributs PIB de la couche MAC**

| Attribut (Attribut)        | Commentaire                                                              |
|----------------------------|--------------------------------------------------------------------------|
| macAckWaitDuration         | Seule la valeur 54 symboles est incluse dans la PHY de 2,4 GHz           |
| macAssociatedPANCoord      | Seule la valeur FALSE (faux) est incluse                                 |
| macAssociationPermit       | Seule la valeur TRUE (vrai) est incluse                                  |
| macAutoRequest             | Seule la valeur FALSE (faux) est incluse                                 |
| macBattLifeExt             | Seule la valeur FALSE (faux) est incluse                                 |
| macBattLifeExtPeriods      | Cet attribut n'est pas valide dans le réseau WIA-PA                      |
| macBeaconPayload           | Le contenu de la charge utile de balise est étendu dans le réseau WIA-PA |
| macBeaconPayloadLength     | Seule la valeur 10 est incluse                                           |
| macBeaconTxTime            | Seule la valeur 0x000000 est incluse                                     |
| macCoordExtendedAddress    | Cet attribut n'est pas valide dans le réseau WIA-PA                      |
| macCoordShortAddress       | Cet attribut n'est pas valide dans le réseau WIA-PA                      |
| macGTSPermit               | Seule la valeur FALSE (faux) est incluse                                 |
| macMaxFrameTotalWaitTime   | Uniquement lorsque phyMaxFrameDuration est égale à 266                   |
| macMinLIFSPeriod           | Seule la valeur 40 est incluse (PHY de 2,4 GHz)                          |
| macMinSIFSPeriod           | Seule la valeur 12 est incluse (PHY de 2,4 GHz)                          |
| macPromiscuousMode         | Seule la valeur TRUE (vrai) est incluse                                  |
| macRangingSupported        | Seule la valeur FALSE (faux) est incluse                                 |
| macSecurityEnable          | Seule la valeur FALSE (faux) est incluse                                 |
| macSyncSymbolOffset        | 0x000-0x100 pour la PHY de 2,4 GHz                                       |
| macTxControlActiveDuration | Cet attribut n'est pas valide dans le réseau WIA-PA                      |
| macTxControlPauseDuration  | Cet attribut n'est pas valide dans le réseau WIA-PA                      |

### 8.3.3 Extension de fonction MAC

#### 8.3.3.1 Généralités

Le présent document étend un attribut PIB de la couche MAC. L'attribut PIB étendu est présenté au Tableau 35.

**Tableau 35 – Attributs PIB étendus de la couche MAC**

| Attribut     | Type    | Plage | Description                                                 | Défaut |
|--------------|---------|-------|-------------------------------------------------------------|--------|
| macBeaconNum | Integer | 1-15  | Nombre de transmissions de balise en un intervalle de temps | 1      |

L'attribut macBeaconNum est utilisé pour indiquer le nombre de transmissions de balise en un intervalle de temps.

#### 8.3.3.2 Charge utile de balise

Le réseau WIA-PA utilise la charge utile de balise MAC de l'IEEE 802.15.4-2011 pour distribuer les informations de superframes. L'Article 5.2.2.1 de l'IEEE 802.15.4-2011 traite du format de trame de la balise MAC.

La charge utile de balise est indiquée au Tableau 36.

**Tableau 36 – Charge utile de balise**

|                      | Charge utile de balise |     |           |                |
|----------------------|------------------------|-----|-----------|----------------|
| Longueur en octet(s) | 1                      | 6   | 2         | 1              |
| Nom de champ         | ClusterID              | ASN | TimeValue | NextBcnChannel |

Les sous-champs du Tableau 36 sont définis comme suit:

- ClusterID indique l'identificateur du groupe;
- ASN indique le nombre absolu d'intervalles de temps. Sa valeur doit augmenter de la valeur 1 (elle ne diminue pas). Sa valeur courante est toujours le numéro séquentiel de l'intervalle de temps courant. La valeur maximale doit être de  $(2^{48}-1)$ . Après avoir atteint la valeur maximale, le compte doit repartir de zéro;
- voir Tableau 60 pour Timevalue;
- NextBcnChannel indique le canal utilisé pour émettre la prochaine balise.

#### 8.3.3.3 Trame de commande de demande d'association

L'appareil de réseau WIA-PA utilise la trame de commande de demande d'association MAC de l'IEEE 802.15.4-2011 pour se rattacher au réseau WIA-PA. Voir 5.3.1 de l'IEEE 802.15.4-2011 pour le format de trame de la trame de commande de demande d'association MAC.

Les types d'appareils de réseau WIA-PA sont indiqués par le bit 1 dans le champ Capability Information (informations de capacité) de la trame de commande de demande d'association MAC (voir Figure 50 de l'IEEE 802.15.4-2011).

Le format du champ Capability Information (informations de capacité) de la trame de commande de demande d'association MAC est indiqué au Tableau 37.

**Tableau 37 – Format du champ Capability Information (informations de capacité)**

| Format du champ Capability Information (informations de capacité) |         |                               |                                      |                                                                       |         |                                            |                                      |
|-------------------------------------------------------------------|---------|-------------------------------|--------------------------------------|-----------------------------------------------------------------------|---------|--------------------------------------------|--------------------------------------|
| Longueur en bit(s)                                                | 1       | 1                             | 1                                    | 1                                                                     | 2       | 1                                          | 1                                    |
| Nom de sous-champ                                                 | Réservé | Device type (type d'appareil) | Power source (source d'alimentation) | Receiver on when idle (récepteur allumé lorsqu'il est à l'état repos) | Réservé | Security capability (capacité de sécurité) | Allocated address (adresse affectée) |

Les sous-champs du Tableau 37 sont définis comme suit:


- le sous-champ Device type (type d'appareil) est étendu pour indiquer le type d'appareil du réseau WIA-PA; 0 indique l'appareil de routage et 1 correspond à l'appareil de terrain ou à l'appareil tenu à la main;
- voir 5.3.1.2 de l'IEEE 802.15.4-2011 pour les sous-champs Power source (source d'alimentation), Receiver on when idle (récepteur allumé lorsqu'il est à l'état repos), Security capability (capacité de sécurité) et Allocated address (adresse affectée).

## 8.4 Description de la fonction de la sous-couche liaison de données (DLSL)

### 8.4.1 Généralités

La DLSL fournit une interface de service entre la couche réseau (NL) et la couche MAC. La DLSL contient conceptuellement une entité de donnée de sous-couche liaison de données (DLDE) et une entité de gestion de sous-couche liaison de données (DLME). L'entité DLDE fournit les interfaces de services de données. L'entité DLME fournit les services de gestion de couche tels que la configuration des paramètres de la DLSL et la surveillance de l'état de fonctionnement de la DLSL.

La Figure 29 représente les composants et les interfaces de la sous-couche DLSL.

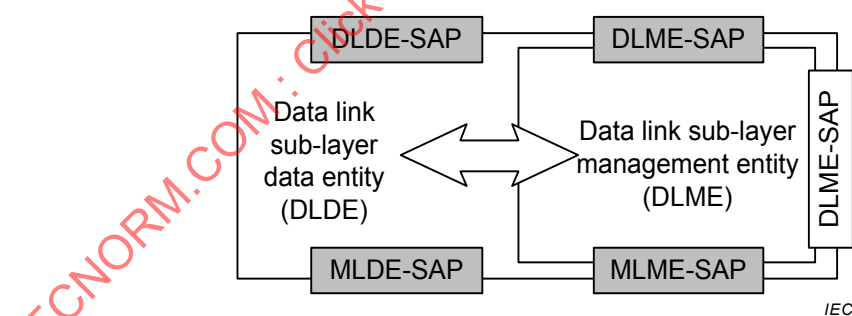

| Anglais                                      | Français                                     |
|----------------------------------------------|----------------------------------------------|
| Data link sub-layer data entity (DLDE)       | Entité de données de la couche réseau (DLDE) |
| Data link sub-layer management entity (DLME) | Entité de gestion de la couche réseau (DLME) |

**Figure 29 – Modèle de référence de la DLSL du réseau WIA-PA**

La DLSL fournit deux services, auxquels on accède par l'intermédiaire des deux points d'accès au service (SAP) suivants:

- a) le service de données DLSL, auquel on accède par le point d'accès au service DLDE (DLDE-SAP);
- b) le service de gestion de DLSL, auquel on accède par le point d'accès au service DLME (DLME-SAP).

Dans le présent document, la fonction principale de la sous-couche DLSL est d'affecter des ressources de communication parmi des utilisateurs concurrents afin d'éviter les collisions, d'améliorer le rendement et d'accroître l'utilisation de la largeur de bande. Les principaux concepts de la DLSL comprennent l'intervalle de temps, la supertrame et la liaison, qui sont définis de la manière suivante.

- a) L'intervalle de temps est l'unité de temps de base dans l'échange de paquets. La durée de l'intervalle de temps WIA-PA est configurable.
- b) La supertrame est une collection d'intervalles de temps se répétant sur un programme cyclique. Le nombre d'intervalles de temps dans une supertrame donnée détermine le cycle de communication pour les appareils WIA-PA qui utilisent les intervalles de temps.
- c) La liaison comprend le temps et la fréquence. Une attribution de liaison spécifie comment l'appareil utilise un jeu d'intervalles de temps d'une supertrame. Les types de liaison comprennent l'émission, la réception et l'émission en partage. La liaison de partage permet à plus d'un seul appareil de rivaliser pour cette liaison en vue de l'échange de paquet au même moment. Il convient que la liaison d'émission et la liaison de réception ne permettent qu'aux appareils désignés d'échanger des paquets.

#### **8.4.2 Coexistence**

Il convient que le réseau WIA-PA considère les stratégies de coexistence suivantes:

- a) le réseau WIA-PA étend la structure de supertrame de l'IEEE 802.15.4-2011;
- b) la sous-couche DLSL du réseau WIA-PA associée avec le NM réalise la coexistence avec d'autres réseaux sans fil. La sous-couche WIA-PA DLSL incorpore plusieurs stratégies pour optimiser la coexistence:
  - communication en intervalles de temps;
  - faible facteur d'utilisation;
  - multicanal;
  - saut de fréquence (SF);
  - évitement de collision.

#### **8.4.3 Communication en intervalles de temps**

L'exigence clé de la communication en intervalles de temps est de garantir que toutes les transactions se produisent dans un intervalle de temps conformément aux exigences de synchronisation spécifiques. Cela veut dire qu'il convient d'échanger tous les paquets dans un intervalle de temps prescriptif et qu'ils ne soient pas différés. La longueur d'intervalle de temps de la sous-couche WIA-PA DLSL est totalement compatible avec la longueur d'intervalle de temps de la norme IEEE STD 802.15.4-2011.

La durée de l'intervalle de temps est configurée par le NM après que les appareils se sont rattachés au réseau.

#### **8.4.4 Supertrame WIA-PA**

Afin de garantir une communication fiable et en temps réel, le présent document prend uniquement en compte la structure de supertrame à balise de l'IEEE 802.15.4-2011.

La structure de supertrame WIA-PA est indiquée à la Figure 30.

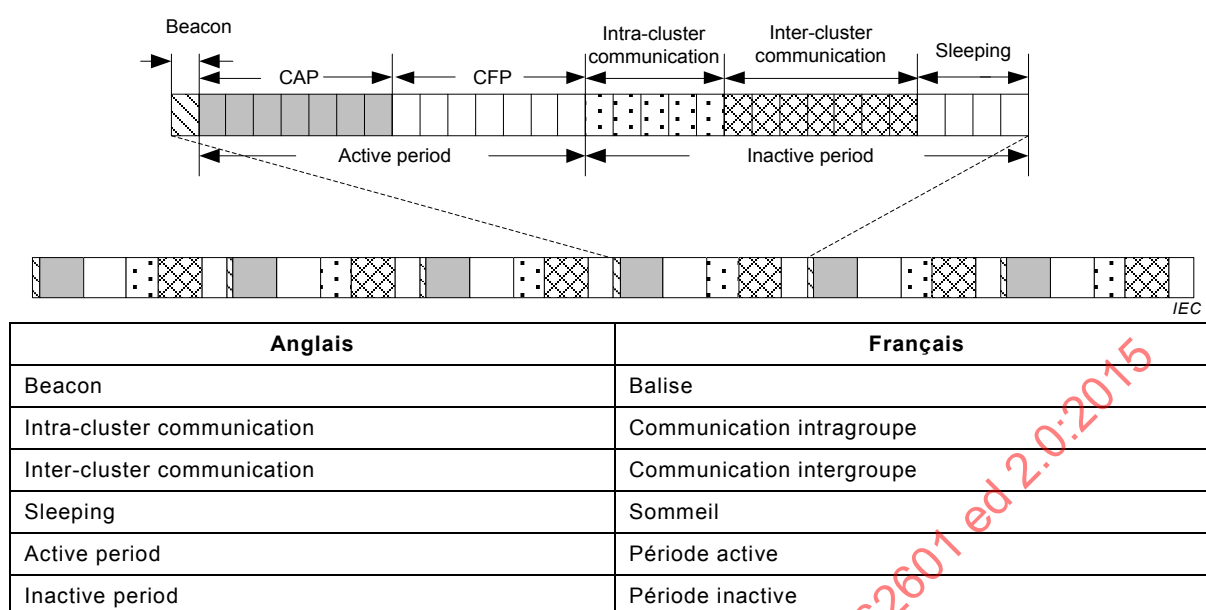


Figure 30 – Superframe WIA-PA

Les périodes de la superframe WIA-PA sont définies de la manière suivante:

- la période d'accès avec conflit (CAP) définie dans la superframe de l'IEEE 802.15.4-2011 est utilisée pour le rattachement d'appareil, la gestion intragroupe et les nouvelles tentatives dans la superframe WIA-PA;
- la période sans conflit (CFP) définie dans la superframe de l'IEEE 802.15.4-2011 est utilisée pour la communication entre des appareils tenus à la main et leur tête de groupe dans la superframe WIA-PA;
- la période inactive définie dans la superframe de l'IEEE 802.15.4-2011 est utilisée pour la communication intragroupe, la communication intergroupe et le sommeil dans la superframe WIA-PA.

Il convient que le NM génère les superframes WIA-PA. Les longueurs de superframe des appareils de routage sont différentes et sont fixées comme étant la vitesse minimale de mise à jour des données de tous les éléments dans un groupe. Les types d'intervalles de temps de superframe WIA-PA incluent les intervalles de temps partagés et les intervalles de temps dédiés. Les intervalles de temps partagés sont utilisés pour la transmission de données non périodiques et les intervalles de temps dédiés sont utilisés pour la transmission intragroupe et intergroupe de données périodiques.

La période inactive définie dans la superframe de l'IEEE 802.15.4-2011 étant utilisée pour la communication intragroupe, la communication intergroupe et le sommeil dans la superframe WIA-PA, la durée de superframe de base WIA-PA est définie à la valeur de trente-deux intervalles de temps. La durée de superframe WIA-PA est définie comme étant égale à  $2^N$  (N est un nombre entier naturel) fois la durée de superframe de base WIA-PA.

Chaque appareil de routage dispose d'une seule superframe et la communication parmi les appareils de routage se produit au cours des intervalles de temps intergroupe qui se chevauchent. Chaque appareil de terrain dispose d'une seule superframe; la communication entre les appareils de terrain et les appareils de routage a lieu au cours des intervalles de temps intragroupe.

#### 8.4.5 Saut de fréquence

Le réseau WIA-PA prend en charge le saut de fréquence, et la séquence de saut est désignée par le NM. Le saut de fréquence dans le réseau WIA-PA inclut trois mécanismes: AFS, AFH, et TH.

Commutation de fréquence adaptative (AFS): dans la supertrame WIA, la balise, la période CAP et la période CFP utilisent le même canal dans le même cycle de supertrame et changent de canal en fonction des conditions des canaux dans les cycles de supertrame différents. Autrement dit, un mauvais état de canaux, qui signifie que le taux d'abandons de paquets est supérieur à PLRThreshold, déclenche l'opération de changement de canaux. Voir 6.9.1.2.1 pour PLRThreshold.

Saut de fréquence adaptatif (AFH): changements irréguliers de canaux de communication par intervalle de temps de la supertrame WIA en fonction de la condition réelle des canaux. Les conditions de canaux sont mesurées avec le nombre de nouvelles tentatives. Si le canal est en mauvaise condition et le nombre de nouvelles tentatives de l'expéditeur atteint la valeur de ChannelThreshold, l'expéditeur choisit séquentiellement le canal suivant dans IntraChanel[] et notifie le destinataire au cours du prochain intervalle de nouvelle tentative en utilisant le canal principal (voir Tableau 17). Si le destinataire ne reçoit pas la notification, il compte en continu ses nombres de tentatives. Lorsque le nombre de nouvelles tentatives du destinataire atteint la valeur de ChannelThreshold, le destinataire choisit le prochain canal dans IntraChanel[] au cours du (ChannelThreshold+2)ème intervalle de temps. Si le destinataire reçoit la notification de commutation d'un canal, il change de canal de communication et renvoie un acquittement ACK; sinon, il ne change pas de canal de communication et effectue une nouvelle tentative avec les données en utilisant le canal principal. Si le nombre de nouvelles tentatives de l'expéditeur atteint macMaxFrameRetries, l'expéditeur rejette le paquet courant et émet le paquet suivant en utilisant le canal principal. Si la communication entre l'expéditeur et le destinataire a réussi avant que le nombre de nouvelles tentatives de l'expéditeur n'atteigne macMaxFrameRetries, l'expéditeur émet le paquet suivant en utilisant le canal de réserve. La période intragroupe adopte le mécanisme AFH. Voir 6.9.1.2.1 pour plus de détails sur ChannelThreshold et IntraChanel[]; voir Tableau 52 de l'IEEE 802.15.4-2011 pour plus d'informations sur macMaxFrameRetries.

Le canal en cours dans IntraChanel[] utilisé par l'expéditeur et le destinataire est marqué comme canal principal alors que les autres canaux dans IntraChanel[] sont marqués comme canaux de réserve.


Saut d'intervalle de temps (TH): changement régulier de canaux de communication par intervalle de temps de la supertrame WIA pour combattre les interférences et l'évanouissement. La période intergroupe adopte le mécanisme TH. La structure de saut est: <intervalle de temps 1, canal 1><intervalle de temps 2, canal 2>... <intervalle de temps i, canal i>.

Les mécanismes spécifiques de saut de DLSL dans le réseau WIA-PA sont indiqués au Tableau 38.

**Tableau 38 – Mécanismes de saut**

| IEEE 802.15.4-2011 | WIA-PA              | Mécanisme MAC de base |                                                            | Mécanisme de saut DLSL |
|--------------------|---------------------|-----------------------|------------------------------------------------------------|------------------------|
| Balise             | Balise              | AMRT                  | Accès multiple par répartition en fréquence (AMRF) et AMRT | AFS                    |
| CAP                | CAP                 | CSMA                  |                                                            |                        |
| CFP                | CFP                 | AMRT                  |                                                            |                        |
| Inactive           | Période intragroupe | AMRT                  |                                                            | AFH                    |
|                    | Période intergroupe | AMRT                  |                                                            | TH                     |
|                    | Sommeil             |                       |                                                            |                        |

Des appareils de routage différents utilisent des canaux différents dans la période active. Si le nombre de canaux n'est pas suffisant, le réseau WIA-PA utilise le mécanisme AMRT pour renforcer la capacité système. L'instant de début d'une supertrame est configuré par le NM. Par exemple, il y a trois appareils de routage R1, R2, et R3 dans le réseau WIA-PA. Les longueurs de supertrame de R1, R2 et R3 sont respectivement une, deux et quatre durée(s) de supertrame de base WIA-PA, telles qu'indiquées à la Figure 31. Conformément à la définition de la supertrame, la période active de R1 ne peut pas être multiplexée avec les périodes actives de R2 et R3. Toutefois, les périodes actives de R2 et R3 peuvent être multiplexées entre elles. Les périodes actives de R2 et R3 peuvent utiliser le même canal alors qu'il convient que la période active de R1 utilise un autre canal.

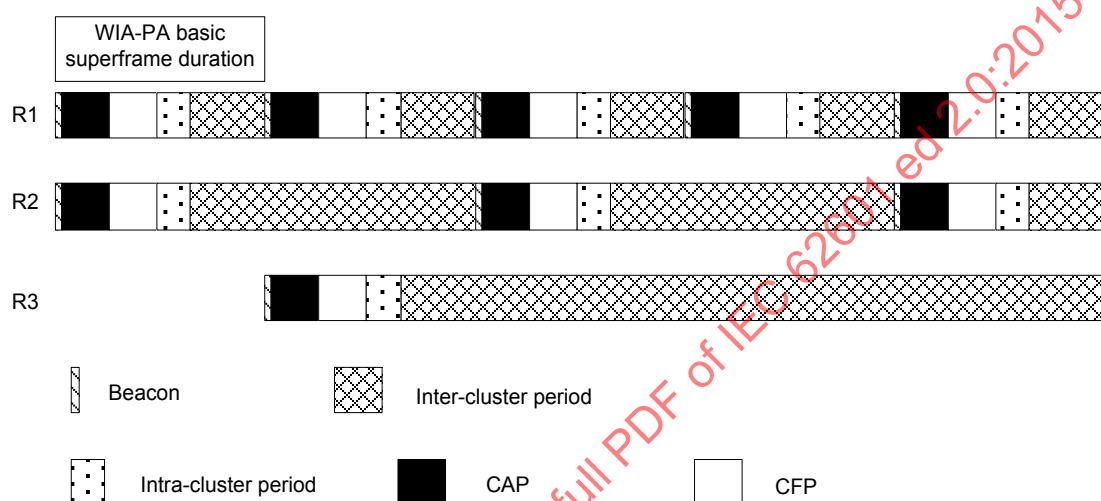

IEC

| Anglais                          | Français                           |
|----------------------------------|------------------------------------|
| WIA-PA basic superframe duration | Durée de supertrame de base WIA-PA |
| Beacon                           | Balise                             |
| Intra-cluster period             | Période intragroupe                |
| Inter-cluster period             | Période intergroupe                |
| CAP                              | CAP                                |
| CFP                              | CFP                                |

Figure 31 – Structures des supertrames R1, R2 et R3

#### 8.4.6 Transmission des données de cycle long

Les données de cycle long sont caractérisées par leur vitesse de mise jour dans un appareil supérieure à la longueur maximale de supertrame de l'IEEE 802.15.4-2011 ou à la vitesse de mise à jour des données de l'appareil de routage dans un groupe.

Pour indiquer la transmission de données de cycle long, le présent document définit un paramètre appelé TransmitFlag. TransmitFlag est défini comme suit:

$$\text{TransmitFlag} = \lceil (\text{AbsoluteSlotNumber} - \text{ActiveSlot} + 1) / \text{NumberSlots} \rceil \% \text{SuperframeMultiple}$$

où

|                    |               |
|--------------------|---------------|
| AbsoluteSlotNumber | voir 6.9.1.2; |
| ActiveSlot         | voir 6.9.1.2; |
| NumberSlots        | voir 6.9.1.2; |



SuperframeMultiple voir 6.9.1.2.

Dans chaque cycle de supertrame, les appareils de terrain reçoivent les balises et décident d'envoyer ou non des données dans ce cycle de supertrame. Le processus de transmission de données de cycle long est décrit comme suit:

- si  $0 < \text{TransmitFlag} < \text{SuperframeMultiple}$  et  $\text{TransmitFlag} = \text{LinkSuperframeNum}$ , alors l'appareil de terrain transmet les données dans ce cycle de supertrame;
- si  $\text{TransmitFlag} = 0$  et  $\text{LinkSuperframeNum} = \text{SuperframeMultiple}$ , alors l'appareil de terrain transmet les données dans ce cycle de supertrame.

Voir Tableau 17 pour LinkSuperframeNum.

La Figure 32 est un exemple de transmission de données de cycle long.

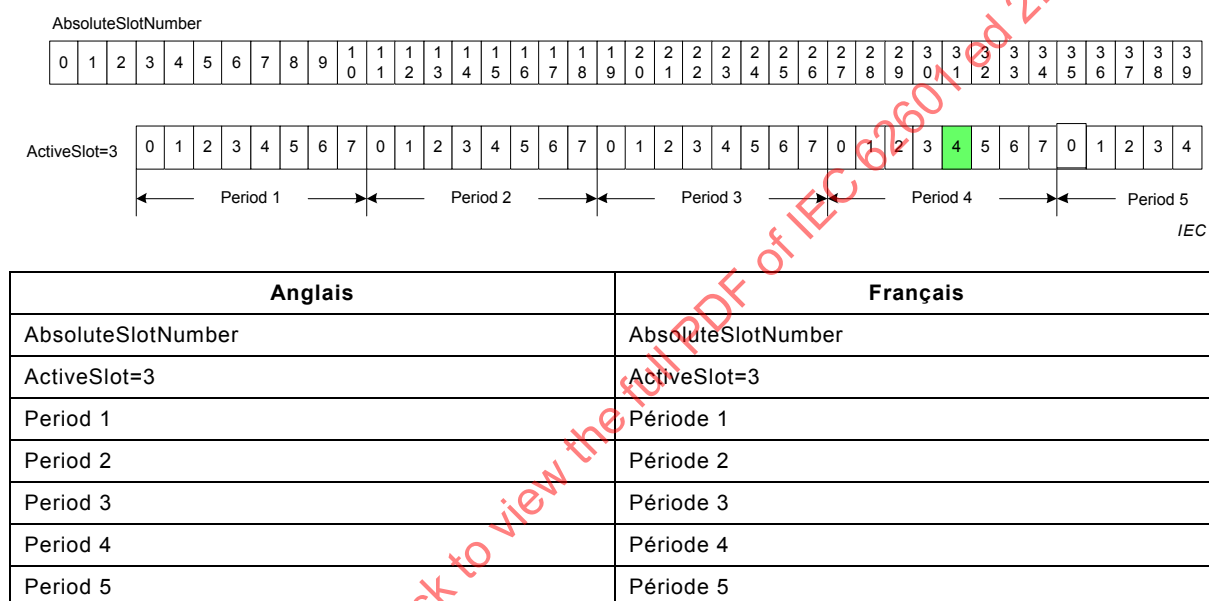


Figure 32 – Exemple de transmission de données de cycle long

A la Figure 32, ActiveSlot = 3, NumberSlots = 8, SuperframeMultiple = 4 et LinkSuperframeNum = 4.

Si l'intervalle de temps absolu courant d'une balise est 27 (AbsoluteSlotNumber = 27), TransmitFlag se calcule par:

$$\text{TransmitFlag} = \lceil (27 - 3 + 1) / 8 \rceil \% 4 = 0$$

D'après les résultats du calcul, on peut conclure que TransmitFlag = 0 et que SuperframeMultiple = LinkSuperframeNum, ce qui indique qu'il convient d'envoyer le paquet pendant le cycle de supertrame en cours.

#### 8.4.7 Stratégie de nouvelle tentative

Il convient que le NM dans le réseau maillé et les appareils de routage dans le réseau en étoile affectent un certain nombre d'intervalles de temps pour les nouvelles tentatives. La stratégie de nouvelle tentative prend en charge les mécanismes de saut de fréquence (voir 8.4.5).

Le nombre d'intervalles de temps de nouvelles tentatives dépend de la constante `macMaxFrameRetries` dans la base d'informations de réseau local personnel (PIB, PAN Information Base) de la couche MAC de l'IEEE 802.15.4-2011.

#### 8.4.8 Service de gestion

La sous-couche DLSL du réseau WIA-PA fournit des services de gestion à la couche supérieure et au processus DMAP avec le DLME-SAP (point d'accès au service d'entité de gestion de sous-couche liaison de données). Les services comprennent la découverte de réseau, le rattachement et le départ d'appareils, l'allocation de ressources et les opérations de gestion des attributs de base de données (voir Article 6).

#### 8.4.9 Mesure de la qualité de liaison radio et de la condition des canaux

La mesure de la qualité de liaison radio et de la condition des canaux comprend la mesure de la qualité de liaison par paire de voisins et la mesure de la condition par canal. Les informations recueillies peuvent être cumulées à la sous-couche DLSL et rapportées par le biais du processus DMAP. La qualité de liaison et la condition des canaux sont utilisées pour allouer dynamiquement des ressources de communication.

En général, la mesure de la qualité d'une liaison radio est accomplie en fonction des indices de performance suivants:

- a) niveau de signal moyen reçu en provenance d'appareils voisins dans la durée statistique;
- b) paquets de non-diffusion envoyés aux appareils voisins dans la durée statistique;
- c) nombre d'acquittements (ACK) qui n'ont pas été reçus dans la durée statistique;
- d) nombre de paquets de non-diffusion reçus en provenance des appareils voisins dans la durée statistique.

La mesure de la condition des canaux est accomplie en fonction des données de performance suivantes:

- a) LQI par liaison;
- b) taux de perte de paquets par liaison, déterminé par le nombre d'acquittements (ACK) reçus et de paquets envoyés;
- c) nombre moyen de nouvelles tentatives par liaison.

#### 8.4.10 Sécurité

La sous-couche DLSL du réseau WIA-PA applique le mécanisme MIC et la technologie de chiffrement afin de garantir l'intégrité et la confidentialité de la communication. Voir l'Article 11 pour plus de détails.

#### 8.4.11 Code de pays

Les considérations de réglementations de la DMLE sont configurées via son attribut `CountryCode` (voir 6.9.1.2.1), qui est une valeur à 16 bits pour laquelle:

- a) les bits 0-9 fournissent un code de pays de 10 bits utilisant les codes de pays numériques à trois chiffres conformes à l'ISO 3166-1;
- b) le bit 10 indique si la réglementation européenne s'applique ou non (0 = non, 1 = oui). Une DLME doit fonctionner conformément à la réglementation européenne lorsque `Bit10 = 1`;
- c) le bit 11 indique si, oui ou non, les règles de la FCC s'appliquent (0 = non, 1 = oui). Il convient qu'une DLME opère en conformité avec les règles FCC lorsque `Bit11 = 1`;
- d) le bit 12 indique si, oui ou non, une limite de PIRE de 10 dBm s'applique (0 = non, 1 = oui). Il convient qu'une DLME limite ses émissions à une valeur de PIRE  $\leq 10$  dBm lorsque `Bit12 = 1`;

- e) le bit 13 indique si la DLME est considérée comme fonctionnant selon des règles adaptatives ou non adaptatives (0 = non adaptatives, 1 = adaptatives);
- f) le bit 14 indique si la DLME est considérée comme fonctionnant ou non selon des règles d'étalement de spectre à saut de fréquence (FHSS, Frequency-hopping spread-spectrum) (0 = règles non FHSS, 1 = règles FHSS);
- g) le bit 15 indique si, oui ou non, la valeur de cet attribut est fixe (0 = non, 1 = oui) pendant que la DLME est opérationnelle. Une fois que ce bit est défini, toute tentative ultérieure de modifier cet attribut doit être rejetée, sauf lorsqu'elle se produit pendant que la DLME est en cours de mise en service.

NOTE 1 Cette caractéristique prend en charge le fonctionnement d'appareils dans des régimes de réglementation qui interdisent l'aptitude à reconfigurer un appareil de telle manière qu'il violerait les contraintes de réglementation, tout en permettant toujours la réparation ou la remise à neuf d'appareils avec une revente ultérieure sur des marchés où d'autres réglementations s'appliquent.


Lorsqu'aucun pays spécifique d'utilisation prévue n'a été identifié, la valeur par défaut de CountryCode doit être 0x3C00, indiquant qu'il convient qu'un appareil dans l'état par défaut se conforme aux règles de l'ETSI, aux règles FCC, à la limite de PIRE de 10 dBm et soit classé comme appareil adaptatif non FHSS. Voir Annexe D.

NOTE 2 Cette valeur par défaut de CountryCode garantit que l'équipement, avant sa mise en service, satisfait aux exigences de réglementation de la plupart des régions dans lesquelles il pourrait être déployé. La valeur de CountryCode pourrait être modifiée au cours de la mise en service câblée afin de refléter le régime de réglementation visé applicable au site de déploiement de l'appareil.

#### 8.4.12 Diagramme d'états de DLSS

Le diagramme d'états de la sous-couche DLSS du réseau WIA-PA est divisé en deux diagrammes d'états: un premier pour le rattachement d'appareil et l'autre pour l'exécution dans le réseau.

Le diagramme d'états de la sous-couche DLSS du réseau WIA-PA pour le rattachement d'appareil est indiqué à la Figure 33.

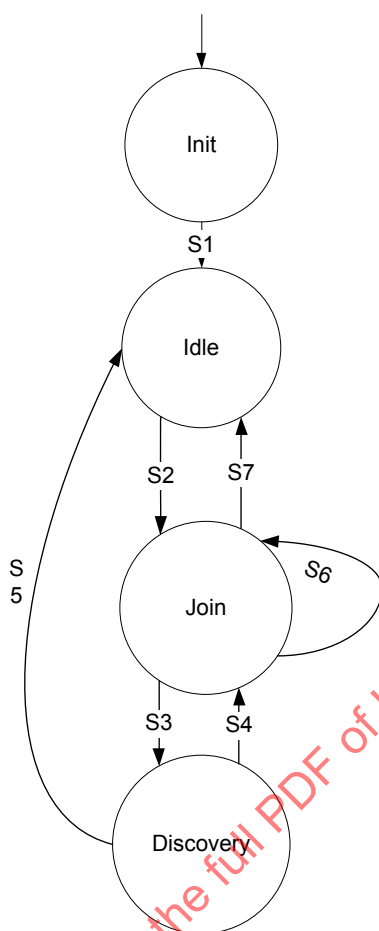

IEC

| Anglais   | Français       |
|-----------|----------------|
| Init      | Initialisation |
| Idle      | Repos          |
| Join      | Rattachement   |
| Discovery | Découverte     |

**Figure 33 – Diagramme d'états de la sous-couche DLSL pour le rattachement d'appareil**


Les transitions d'états de la sous-couche DLSL pour le rattachement d'appareil sont indiquées au Tableau 39.

**Tableau 39 – Transitions d'états de la sous-couche DLSL pour le rattachement d'appareil**

| Numéro séquentiel # | Etat courant | Événement ou condition                                                  | Actions                                                                                                                                                                                                                                                                                                                                      | Prochain état |
|---------------------|--------------|-------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| S1                  | Init         |                                                                         | Début                                                                                                                                                                                                                                                                                                                                        | Idle          |
| S2                  | Idle         | Devicestate = Pas rattaché                                              |                                                                                                                                                                                                                                                                                                                                              | Join          |
| S3                  | Join         | DLME-DISCOVERY.request()                                                | Analyse du message de demande de découverte et invocation de MLME-SCAN.request()                                                                                                                                                                                                                                                             | Discovery     |
| S4                  | Discovery    | MLME-SCAN.confirm (status = SUCCESS) et MLME-BEACON-NOTIFY.indication() | Analyse du message de confirmation de balayage et du message de notification de balise, invocation de DLME-DISCOVERY.confirm(SUCCESS)                                                                                                                                                                                                        | Join          |
| S5                  | Discovery    | MLME-SCAN.confirm (status != SUCCESS) ou pas de confirmation reçue      |                                                                                                                                                                                                                                                                                                                                              | Idle          |
| S6                  | Join         | DLME-JOIN.request()                                                     | Configuration de Devicestate = Rattachement; génération de message de demande d'association et invocation de MLME-ASSOCIATE.request()                                                                                                                                                                                                        | Join          |
| S7                  | Join         | MLME-ASSOCIATE.confirm() ou pas de confirmation reçue                   | Si MLME-ASSOCIATE.confirm() reçue, analyse du message de confirmation d'association:<br><br>si status = SUCCESS, invocation de DLME-JOIN.confirm(Status = SUCCESS) et configuration de Devicestate = Rattaché;<br><br>si status != SUCCESS, invocation de DLME-JOIN.confirm().<br><br>Si aucune confirmation reçue, pas d'action entreprise. | Idle          |

Après le rattachement au réseau WIA-PA d'un appareil, qui correspond à Devicestate = Rattaché, le DLSL exécute son diagramme d'états pour l'exécution dans le réseau.

Le diagramme d'états de la sous-couche DLSL du réseau WIA-PA pour l'exécution dans le réseau est indiqué à la Figure 34.

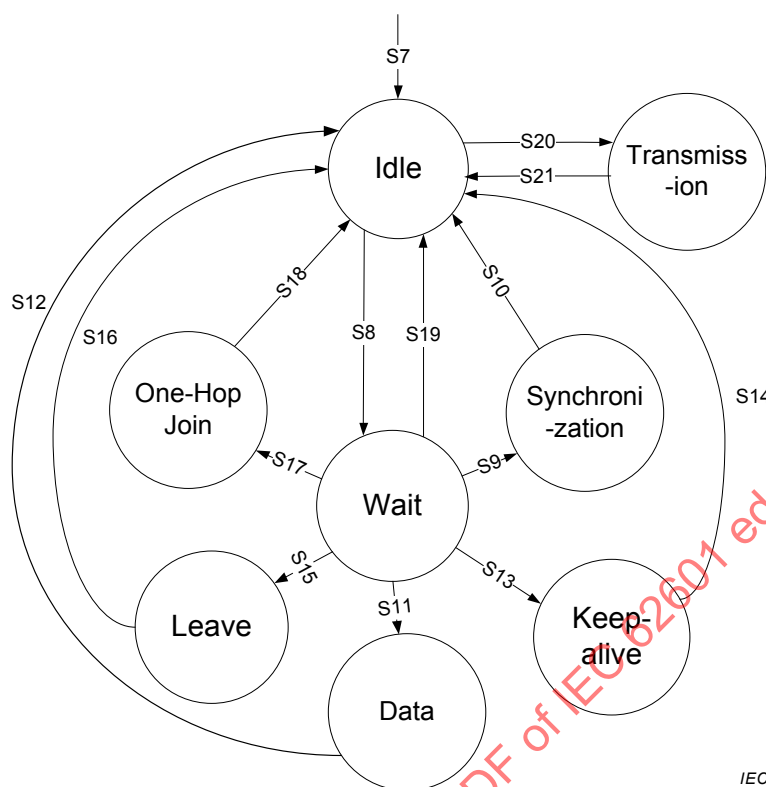

IEC

| Anglais         | Français                |
|-----------------|-------------------------|
| Idle            | Repos                   |
| Transmission    | Emission                |
| One-hop join    | Rattachement en un saut |
| Synchronization | Synchronisation         |
| Wait            | Attente                 |
| Leave           | Départ                  |
| Data            | Données                 |
| Keep-alive      | Entretien               |

Figure 34 – Diagramme d'états de la sous-couche DLSP pour l'exécution dans le réseau

Les transitions d'états de la sous-couche DLSL pour un appareil dans le réseau sont indiquées au Tableau 40.

**Tableau 40 – Transitions d'états de la sous-couche DLSL pour l'exécution dans le réseau (1 de 3)**

| Numéro séquentiel # | Etat courant    | Evénement ou condition                                                                                                                                   | Actions                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Prochain état   |
|---------------------|-----------------|----------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------|
| S8                  | Idle            | Temporisation d'intervalle de temps<br><br>LinkType = Réception ou<br>LinkType = Transmission partagée                                                   | Invocation de MLME-RX-ENABLE.request ()                                                                                                                                                                                                                                                                                                                                                                                                                                  | Wait            |
| S9                  | Wait            | A partir de la couche MAC:<br>MLME-COMM-STATUS.indication() ou<br>MCPS-DATA.indication();<br><br>A partir du processus DMAP:<br>DLME-TIME-SYN.request()  |                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Synchronisation |
| S10                 | Synchronisation |                                                                                                                                                          | A partir de la couche MAC:<br>analyse du message d'indication d'état de communication de la MLME et invocation de DLME-TIME-SYN.confirm() ou analyse de la DLPDU à partir de la trame de données MAC. Si Frametype = 1 et l'identificateur de trame de commande = 11 dans la DLPDU, invocation de DLME-TIME-SYN.indication();<br><br>A partir du processus DMAP:<br>génération de trame de commande de demande de temps de la DLSL et invocation de MCPS-DATA.request(). | Idle            |
| S11                 | Wait            | A partir de la couche MAC:<br>MCPS-DATA.confirm() ou<br>MCPS-DATA.indication();<br><br>A partir de la NL: DLDE-DATA.request()                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Data            |
| S12                 | Data            |                                                                                                                                                          | A partir de la couche MAC:<br>invocation de DLSL-DATA.confirm() ou analyse de la DLPDU. Si Frame type (type de trame) = 0 dans la DLPDU, évaluation de LinkQuality et PacketLossRate et invocation de DLDE-DATA.indication();<br><br>A partir de la NL: MCPS-DATA.request()                                                                                                                                                                                              | Idle            |
| S13                 | Wait            | A partir de la couche MAC:<br>MLME-COMM-STATUS.indication() ou<br>MCPS-DATA.indication();<br><br>A partir du processus DMAP:<br>DLME-KEEP-LIVE.request() |                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | Keep-alive      |

Tableau 40 (2 de 3)

| Numéro séquentiel # | Etat courant | Evénement ou condition                                                                                                                                                             | Actions                                                                                                                                                                                                                                                                                                                                                                                                                  | Prochain état |
|---------------------|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| S14                 | Keep-alive   |                                                                                                                                                                                    | <p>A partir de la couche MAC:<br/>analyse du message d'indication d'état de communication de la MLME et invocation de DLME - KEEP-LIVE.confirm() ou analyse de la DLPDU à partir de la trame de données MAC. Si Frametype = 1 et l'identificateur de trame de commande = 10 dans la DLPDU, invocation de DLME-KEEP-ALIVE.indication();</p> <p>A partir du processus DMAP:<br/>invocation de MLME-KEEP-LIVE.request()</p> | Idle          |
| S15                 | Wait         | <p>A partir de la couche MAC:<br/>MLME-DISASSOCIATE.indication() ou MLME-DISASSOCIATE.confirm();</p> <p>A partir du processus DMAP:<br/>DLME-LEAVE.request()</p>                   |                                                                                                                                                                                                                                                                                                                                                                                                                          | Leave         |
| S16                 | Leave        |                                                                                                                                                                                    | <p>A partir de la couche MAC:<br/>analyse du message d'indication de départ de la DLSL ou message de confirmation et invocation de DLME-LEAVE.indication() ou DLME-LEAVE.confirm();</p> <p>A partir du processus DMAP:<br/>analyse du message de demande de départ de la DLSL et invocation de MLME-DISASSOCIATE.request()</p>                                                                                           | Idle          |
| S17                 | Wait         | <p>A partir de la couche MAC:<br/>MLME-ASSOCIATE.indication() ou MLME-ASSOCIATE.confirm()</p> <p>A partir du processus DMAP:<br/>DLME-JOIN.request () ou DLME-JOIN.response ()</p> |                                                                                                                                                                                                                                                                                                                                                                                                                          | One-Hop Join  |
| S18                 | One-Hop Join |                                                                                                                                                                                    | <p>A partir de la couche MAC:<br/>analyse du message d'indication d'association de MAC ou message de confirmation et invocation de DLME-JOIN.indication() ou DLME-JOIN.confirm();</p> <p>A partir du processus DMAP:<br/>analyse de la demande de rattachement du DMPA ou message de réponse et invocation de MLME-ASSOCIATE.request() ou MLME-ASSOCIATE.response()</p>                                                  | Idle          |
| S19                 | Wait         | <p>A partir de la couche MAC:<br/>MLME-COMM-STATUS.indication() et pas de trame reçue ou échec de réception</p> <p>A partir du processus DMAP et de la NL: pas de message reçu</p> | A partir de la couche MAC:<br>invocation de DLME-COMM-STATUS.indication(FAILURE_ELSE)                                                                                                                                                                                                                                                                                                                                    | Idle          |



**Tableau 40 (3 de 3)**

| Numéro séquentiel # | Etat courant | Evénement ou condition                                                                                    | Actions                                                                                                                                          | Prochain état |
|---------------------|--------------|-----------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| S20                 | Idle         | Temporisation d'intervalle de temps<br><br>LinkType = Transmission ou<br>LinkType = Transmission partagée | Invocation de MCPS-DATA.request()                                                                                                                | Transmission  |
| S21                 | Transmission | MCPS-DATA.confirm()                                                                                       | Reprogrammation ou nouvelle tentative de trame si la transmission a échoué;<br><br>Libération du tampon de trame si MCPS-DATA.confirm (SUCCESS); | Idle          |

Voir 8.5 pour les primitives relatives à la DLSL; voir 0 pour les formats de trames relatifs à la DLSL; voir 9.4 et 9.5 pour les primitives relatives à la NL; voir 6.2 de l'IEEE 802.15.4-2011 pour les primitives relatives à la couche MAC; voir 6.9.1.2.1 pour Devicestate.

Les états dans le diagramme d'états de la DLSL sont spécifiés ci-après.

a) Etat Join (rattachement)

Cet état gère la procédure de rattachement d'un appareil. Après qu'un appareil s'est rattaché au réseau, le diagramme d'états de la sous-couche DLSL se met en marche, comme représenté à la Figure 34.

b) Etat Leave (départ)

Cet état gère la procédure de départ d'un appareil.

c) Etat Idle (repos)

Après qu'un appareil s'est rattaché au réseau, la sous-couche DLSL se met dans l'état Idle (repos). Les transitions suivantes peuvent survenir pendant que la sous-couche DLSL est dans l'état Idle (repos):

- Lorsqu'un intervalle de temps arrive, la DLSL se met dans l'état Transmission (émission) ou Receive (réception) en fonction des options de la liaison (émission, réception ou transmission partagée).

d) Etat Transmission (émission)

Lorsque l'intervalle de temps arrive et que l'option de liaison est la liaison d'émission, la sous-couche DLSL se met dans l'état Transmission (émission). Les événements suivants se produiront pendant que la DLSL est dans l'état Transmission (émission):

- La propagation réussie d'une trame avec une adresse de destination de diffusion/multidiffusion survient dès que la trame est émise. Après quoi, le tampon de trame est libéré.
- La propagation réussie d'une trame avec une adresse de destination de monodiffusion survient lorsqu'une confirmation validée et réussie est reçue de la couche MAC locale. Cela indique que la propagation du message s'est achevée avec succès et le tampon de trame est ensuite libéré.
- Si une confirmation de défaillance est reçue de la couche MAC locale, il convient que la trame fasse l'objet d'une nouvelle tentative.
- En cas de réception d'une réponse avec une erreur ou en cas d'absence de réponse, il convient de reprogrammer la trame ou que cette dernière fasse l'objet d'une nouvelle tentative.

**e) Etat Wait (attente)**

Les trames qu'un appareil peut recevoir comprennent les trames dont les adresses de destination finale sont les appareils et les trames dont les adresses de destination finale ne sont pas celles de l'appareil en question. Les fonctions de l'état Wait (attente) sont de recevoir, vérifier et traiter la trame. Les transitions suivantes peuvent survenir pendant que la sous-couche DLSL est dans l'état Wait (attente).

- Si aucune trame n'est reçue, la sous-couche DLSL évaluera la liaison et retournera à l'état Idle (repos).
- Si une trame balise ou une trame de commande de synchronisation du temps est reçue, c'est l'état Synchronization (synchronisation) qui est en vigueur.
- Si une trame de commande d'entretien est reçue, alors l'état Keep-alive (entretien) est en vigueur;
- Si une demande de départ du DMAP est reçue, alors l'état Leave (départ) est en vigueur.
- Si une commande de rattachement en provenance du DMAP est reçue, alors l'état One-Hop Join (rattachement en un saut) est en vigueur.
- A la réception d'une trame réussie, la sous-couche DLSL traitera la priorité de la trame (réception ou rejet), puis l'appareil retourne directement à l'état Idle (repos).

**f) Etat Data (données)**

Dans cet état, les données de la DLSL sont générées ou analysées. Après avoir reçu la trame de données de la DLSL, LinkQuality et PacketLossRate sont évaluées. Après avoir généré la trame de données de la DLSL, la DLSL se met dans l'état Wait (attente).

**g) Etat Synchronization (synchronisation)**

Dans cet état, la synchronisation du temps est exécutée après réception d'une trame balise ou d'une trame de commande de synchronisation du temps par un appareil, puis la sous-couche DLSL se met dans l'état Idle (repos).

**h) Etat Keep-alive (entretien)**

Dans cet état, un nœud voisin est marqué comme nœud d'entretien après réception d'une trame de commande d'entretien par un appareil, puis la sous-couche DLSL se met dans l'état Idle (repos).

**i) Etat One-Hop Join (rattachement en un saut)**

Dans cet état, le processus de rattachement en un saut est pris en charge par l'appareil de passerelle.

**8.5 Services de données de la sous-couche liaison de données****8.5.1 Généralités**

Le DLDE-SAP prend en charge la transmission point à point d'unités de données de protocole DLSL (DLPDU) entre les appareils. Les primitives prises en charge par les services de données de la sous-couche comprennent DLDE-DATA.request, DLDE-DATA.confirm et DLDE-DATA.indication.

**8.5.2 DLDE-DATA.request**

L'entité de données de sous-couche liaison de données (DLDE) reçoit la charge utile de la couche réseau (NL) par le biais de DLDE-DATA.request et l'ajoute à la file d'attente de messages de la sous-couche DLSL.

La sémantique de DLDE-DATA.request est décrite comme suit:

```
DLDE-DATA.request (
 NetworkID,
 SrcAddrMode,
 SrcAddr,
 DstAddrMode,
 DstAddr,
 Priority,
 Type,
 PayloadLength,
 Payload,
 PayloadHandle
)
```

Le Tableau 41 spécifie les paramètres pour DLDE-DATA.request.

**Tableau 41 – Paramètres de DLDE-DATA.request**

| Nom                    | Type de données | Plage valide                  | Description                                                                                                                                                                              |
|------------------------|-----------------|-------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NetworkID              | Unsigned8       | 0 à 255                       | Identificateur réseau                                                                                                                                                                    |
| SrcAddrMode            | Unsigned8       | 0 à 3                         | Mode d'adresse source:<br>0 = Aucune adresse<br>1 = Réserve<br>2 = Adresse courte 16 bits<br>3 = Adresse longue 64 bits                                                                  |
| SrcAddr                | Unsigned16/64   | 0 à 65 535 ou $(2^{64}-1)$    | Source address (adresse source)<br>L'adresse longue 64 bits est utilisée uniquement dans le processus de rattachement d'appareil alors que l'adresse courte 16 bits est d'usage général. |
| DstAddrMode            | Unsigned8       | 0 à 3                         | Mode d'adresse de destination:<br>0 = Aucune adresse<br>1 = Réserve<br>2 = Adresse courte 16 bits<br>3 = Adresse longue 64 bits                                                          |
| DstAddr                | Unsigned16/64   | 0 à 65 535 ou $(2^{64}-1)$    | Adresse de destination, 16 bits ou 64 bits                                                                                                                                               |
| Priorité               | Unsigned8       | 0 à 15                        | Priorité de la charge utile                                                                                                                                                              |
| Type de données        | Unsigned8       | 0 à 1                         | 0 = Emission intragroupe<br>1 = Emission intergroupe                                                                                                                                     |
| PayloadLength          | Unsigned8       | $\leq \text{MaxMACFrameSize}$ | Longueur de la charge utile                                                                                                                                                              |
| Payload (charge utile) | Octetstring     |                               | Payload (charge utile)                                                                                                                                                                   |
| PayloadHandle          | Unsigned8       | 0 à 255                       | Descripteur alloué lors de l'appel de DLDE-DATA.request                                                                                                                                  |

### 8.5.3 DLDE-DATA.confirm

La sémantique de DLDE-DATA.confirm est décrite comme suit:

```
DLDE-DATA.confirm (
 PayloadHandle,
 Status
)
```

Le Tableau 42 spécifie les paramètres pour DLDE-DATA.confirm.

**Tableau 42 – Paramètres de DLDE-DATA.confirm**

| Nom           | Type de données | Plage valide | Description                                                                                                                                                                                                                                                                                                                              |
|---------------|-----------------|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PayloadHandle | Unsigned8       | 0 à 255      | Descripteur alloué lors de l'appel de DLDE-DATA.confirm                                                                                                                                                                                                                                                                                  |
| Statut        | Unsigned8       | 0 à 255      | Résultat de la transmission de données de la DSL:<br>0 = SUCCESS (succès)<br>1 = TRANSACTION_OVERFLOW<br>2 = TRANSACTION_EXPIRED<br>3 = NO_ACK<br>4 = CHANNEL_ACCESS_FAILURE<br>5 = UNAVAILABLE_KEY<br>6 = FAILED_SECURITY_CHECK<br>7 = INVALID_PARAMETER<br>Les autres valeurs sont réservées.<br>Voir Tableau 43 pour plus de détails. |

**Tableau 43 – Tableau pour Status (état)**

| ID      | Valeur                 | Description                                                                                                              |
|---------|------------------------|--------------------------------------------------------------------------------------------------------------------------|
| 0       | SUCCESS                | L'opération demandée est parachevée avec succès. Pour une demande d'émission, cette valeur indique une émission réussie. |
| 1       | TRANSACTION_OVERFLOW   | Insuffisance d'espace pour stocker les transactions                                                                      |
| 2       | TRANSACTION_EXPIRED    | La transaction a expiré et ses informations ont été supprimées                                                           |
| 3       | NO_ACK                 | Aucun message d'acquittement n'a été reçu après macMaxFrameRetries                                                       |
| 4       | CHANNEL_ACCESS_FAILURE | Ne peut pas émettre en raison de la défaillance d'accès au canal.                                                        |
| 5       | UNAVAILABLE_KEY        | Aucune clé valide dans la liste de contrôle d'accès                                                                      |
| 6       | SECURITY_ERROR         | Echec du traitement cryptographique de la trame sécurisée reçue                                                          |
| 7       | INVALID_PARAMETER      | Un paramètre des primitives se situe en dehors de la plage de valeurs                                                    |
| 8       | NO-BEACON              | Une opération de balayage n'a pas pu trouver de balise réseau.                                                           |
| 9 à 255 | Réservé                |                                                                                                                          |

#### 8.5.4 DLDE-DATA.indication

La sémantique de DLDE-DATA.indication est décrite comme suit:

DLDE-DATA.indication (

NetworkID,  
ScrAddrMode,  
SrcAddr,  
Type,  
Priority,  
PayloadLength,  
Payload,  
PayloadLinkQuality,  
)

Le Tableau 44 spécifie les paramètres pour DLDE-DATA.indication.

**Tableau 44 – Paramètres de DLDE-DATA.indication**

| Nom                    | Type de données | Plage valide                  | Description                                                                                                                                                             |
|------------------------|-----------------|-------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| NetworkID              | Unsigned8       | 0 à 255                       | Identificateur réseau                                                                                                                                                   |
| SrcAddrMode            | Unsigned8       | 0 à 3                         | Mode d'adresse source. Quatre options sont disponibles:<br>0 = Aucune adresse<br>1 = Réserve<br>2 = Adresse courte 16 bits<br>3 = Adresse longue 64 bits                |
| SrcAddr                | Unsigned16/64   | 0 à 65 535 ou $(2^{64}-1)$    | Adresse source, utilisant l'adresse longue 64 bits uniquement dans le processus de rattachement d'appareil et utilisant l'adresse courte 16 bits d'une manière générale |
| Type                   | Unsigned8       | 0 à 1                         | 0 = Emission intragroupe<br>1 = Emission intergroupe                                                                                                                    |
| Priorité               | Unsigned8       | 0 à 15                        | Priorité de la charge utile                                                                                                                                             |
| PayloadLength          | Unsigned8       | $\leq \text{MaxMACFrameSize}$ | Longueur de la charge utile                                                                                                                                             |
| Payload (charge utile) | Octetstring     |                               | Payload (charge utile)                                                                                                                                                  |
| PayloadLinkQuality     | Unsigned8       | 0 à 255                       | Valeur de LQI mesurée pendant la réception de l'unité DLPDU<br><br>Les valeurs plus basses représentent une qualité de liaison inférieure.                              |

#### 8.5.5 Séquence temporelle de service de données DLSL

La Figure 35 montre la séquence des transactions de données pour transporter un paquet de données depuis un appareil source jusqu'à un appareil de destination.

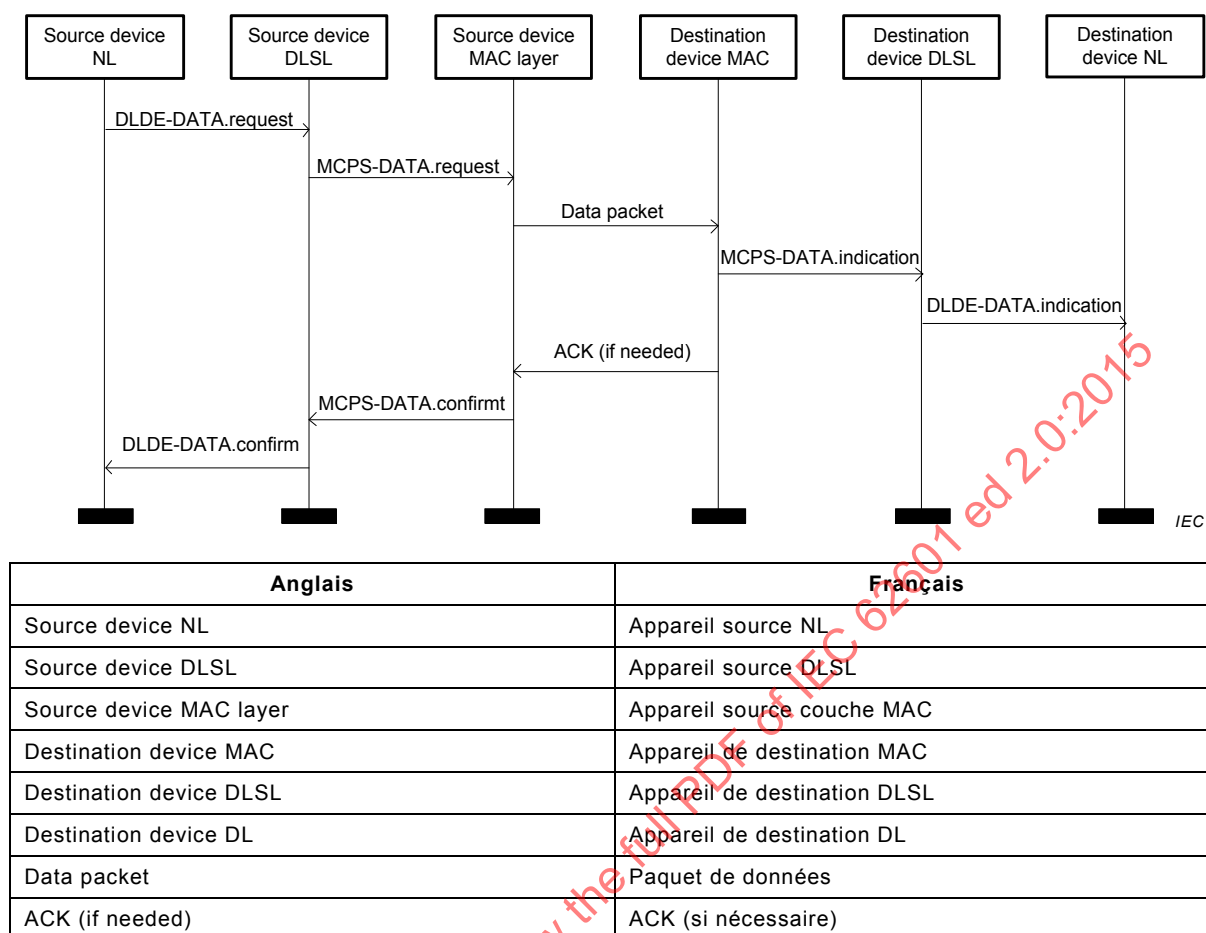


**Figure 35 – Séquence temporelle de service de données**

La primitive **DLDE-DATA.request** est générée par une entité de données de couche réseau (NLDE) locale lorsqu'une unité de données de protocole réseau (NPDU) doit être transférée à une entité NLDE homologue.

A la réception de **DLDE-DATA.request**, l'entité DLDE insère le message dans le tampon d'envoi et commence l'envoi de l'unité DLPDU fournie.

La primitive **DLDE-DATA.indication** est générée par l'entité DLDE d'un appareil de destination et envoyée à l'entité NLDE à la réception d'une trame de données au niveau de l'entité DLDE locale qui passe les opérations appropriées de filtrage de messages.

La primitive **DLDE-DATA.confirm** est générée par l'entité DLDE d'un appareil source en réponse à la primitive **DLDE-DATA.request**. La primitive **DLDE-DATA.confirm** renvoie un état indiquant le résultat de l'émission.

Voir la Figure 27 de l'IEEE 802.15.4-2011 pour le diagramme de séquence de message détaillé entre les entités MAC homologues.

## 8.6 Services de gestion de la sous-couche liaison de données

### 8.6.1 Généralités

La couche supérieure utilise le point d'accès **DLME-SAP** pour envoyer des commandes de gestion à la sous-couche **DLSL**. Les services de gestion **DLSL** comprennent la découverte de sous-réseau, le rattachement et le départ d'appareils, la collecte et le rapport sur les

conditions de canal et sur les informations relatives aux voisins ainsi que la synchronisation du temps.

## 8.6.2 Services de découverte de réseau

### 8.6.2.1 Généralités

Les services de découverte de réseau de la sous-couche DLSL sont utilisés pour balayer une liste donnée de canaux de communication. Un appareil peut utiliser les services de découverte de réseau pour rechercher des têtes de groupe envoyant des trames balise dans les limites de sa portée de communication. Les primitives prises en charge par les services de découverte de réseau DLSL comprennent DLME-DISCOVERY.request et DLME-DISCOVERY.confirm.

#### 8.6.2.2 DLME-DISCOVERY.request

DLME-DISCOVERY.request est utilisée pour demander à un appareil de balayer les canaux.

La sémantique de DLME-DISCOVERY.request est décrite comme suit:

DLME-DISCOVERY.request (

ScanChannels,  
ScanDuration

)

Le Tableau 45 spécifie les paramètres pour DLME-DISCOVERY.request.

**Tableau 45 – Paramètres de DLME-DISCOVERY.request**

| Nom                                                                                                                       | Type de données | Plage valide             | Description                                                                                                                                                                                                                                                                                                                                                           |
|---------------------------------------------------------------------------------------------------------------------------|-----------------|--------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ScanChannels                                                                                                              | Unsigned32      | Carte de bits de 32 bits | Les bits 11 à 26 indiquent les canaux de l'IEEE 802.15.4-2011 de la bande de fréquences de 2,4 GHz; les autres sont définis. Voir 6.2.10 de l'IEEE 802.15.4-2011 pour ScanChannels.                                                                                                                                                                                   |
| ScanDuration                                                                                                              | Unsigned8       | 0 à 14                   | Valeur utilisée pour calculer la durée à passer à balayer chaque canal pour les balayages de détection d'énergie (ED, energy detection), actifs et passifs<br><br>Ce paramètre est ignoré pour les balayages d'orphelin. La durée de balayage de chaque canal est:<br><br>$aBaseSuperframeDuration \times (2^n + 1)$ où $n$ est la valeur du paramètre ScanDuration.. |
| Voir le Tableau 51 de l'IEEE 802.15.4-2011 pour la définition et l'établissement de la valeur de aBaseSuperframeDuration. |                 |                          |                                                                                                                                                                                                                                                                                                                                                                       |

#### 8.6.2.3 DLME-DISCOVERY.confirm

La primitive DLME-DISCOVERY.confirm est utilisée pour répondre à la primitive DLME-DISCOVERY.request.

La sémantique de DLME-DISCOVERY.confirm est décrite comme suit:

```
DLME-DISCOVERY.confirm(
 Status,
 NetworkCount,
 NetworkDescriptor
)
```

Le Tableau 46 spécifie les paramètres pour DLME-DISCOVERY.confirm. Le Tableau 47 spécifie la liste des descripteurs de réseau.

**Tableau 46 – Paramètres de DLME- DISCOVERY.confirm**

| Nom               | Type de données                                           | Plage valide     | Description                                                                                                                                                            |
|-------------------|-----------------------------------------------------------|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Statut            | Unsigned8                                                 | 0 à 255          | Résultats du balayage<br>0 = SUCCESS (succès)<br>7 = INVALID_PARAMETER<br>8 = NO_BEACON<br>Les autres valeurs sont réservées.<br>Voir Tableau 43 pour plus de détails. |
| NetworkCount      | Unsigned8                                                 | 0 à 255          | Nombre de réseaux actifs trouvés au cours du balayage                                                                                                                  |
| NetworkDescriptor | Network descriptor list (liste de descripteurs de réseau) | 0 à NetworkCount | Liste de descripteurs de réseau pour chaque réseau trouvé, voir Tableau 47                                                                                             |

**Tableau 47 – Network descriptor list (liste de descripteurs de réseau)**

| Nom             | Type de données | Plage valide | Description                                                                                                                                                             |
|-----------------|-----------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LogicalChannel  | Unsigned8       | 0 à 31       | Canal logique pour le rattachement, choisi parmi les canaux valides pris en charge par la couche PHY                                                                    |
| BeaconOrder     | Unsigned8       | 0 à 15       | Fréquence envoyant la trame balise                                                                                                                                      |
| SuperframeOrder | Unsigned8       | 0 à 15       | Longueur de période active de la supertrame                                                                                                                             |
| PermitJoining   | Booléen         | 0, 1         | Savoir si l'appareil de routage autorise l'appareil de terrain à se rattacher:<br><br>0 = Aucune permission<br>1 = Il est permis à au moins un appareil de se rattacher |

Si le balayage a réussi, DLME-DISCOVERY.confirm retourne SUCCESS; cependant, si aucune balise n'est trouvée, DLME-DISCOVERY.confirm retourne NO\_BEACON; S'il y a des erreurs ou des paramètres non valides dans la primitive DLME-DISCOVERY.request, DLME-DISCOVERY.confirm retourne INVALID\_PARAMETER.



### 8.6.2.4 Séquence temporelle de découverte de sous-réseau

La séquence temporelle pour la découverte de sous-réseau est indiquée à la Figure 36. Voir l'IEEE 802.15.4-2011 pour les primitives MLME-SCAN.request et MLME-SCAN.confirm.

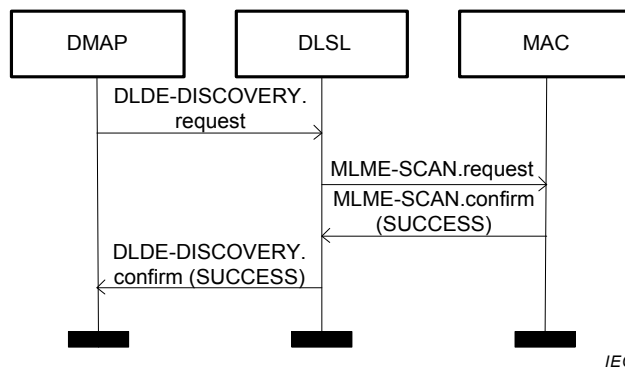


**Figure 36 – Séquence temporelle de découverte de réseau**

Voir la Figure 12 et la Figure 13 de l'IEEE STD 802.15.4-2011 pour le diagramme de séquence de message détaillé entre les entités MAC homologues.

### 8.6.3 Services de rattachement d'appareil

#### 8.6.3.1 Généralités

Il existe deux instances exigeant les services de rattachement d'appareil:

- un nouvel appareil de terrain se rattache au réseau en étoile;
- un nouvel appareil de routage se rattache au réseau maillé. Les primitives prises en charge par les services de rattachement d'appareils de la DLSL comprennent DLME-JOIN.request, DLME-JOIN.indication, DLME-JOIN.response, et DLME-JOIN.confirm.

#### 8.6.3.2 DLME-JOIN.request

La primitive DLME-JOIN.request est utilisée pour un appareil se rattachant au réseau (en étoile ou maillé).

La sémantique de DLME-JOIN.request est décrite comme suit:

```

DLME-JOIN.request (
 LogicalChannel,
 JoinAddr,
 PhyAddr,
 DeviceType
)

```

Le Tableau 48 spécifie les paramètres pour DLME-JOIN.request.

**Tableau 48 – Paramètres de DLME-JOIN.request**

| Nom            | Type de données | Plage valide       | Description                                                                                                                                                                                                 |
|----------------|-----------------|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| LogicalChannel | Unsigned8       | 0 à 31             | Canal logique pour le rattachement, choisi parmi les canaux valides pris en charge par la couche PHY                                                                                                        |
| JoinAddr       | Unsigned16      | 0 à 65 535         | Adresse courte de l'appareil de routage ou de l'appareil de passerelle qui accepte la demande de rattachement                                                                                               |
| PhyAddr        | Unsigned64      | 0 à ( $2^{64}-1$ ) | Adresse physique du nouvel appareil attendant de se rattacher                                                                                                                                               |
| DeviceType     | Unsigned8       | 0 à 255            | Type du nouvel appareil attendant de se rattacher:<br>0 = Appareil de passerelle<br>1 = Appareil de routage<br>2 = Appareil de terrain<br>3 = Appareil tenu à la main<br>Les autres valeurs sont réservées. |

### 8.6.3.3 DLME-JOIN.indication

La primitive DLME-JOIN.indication est utilisée pour informer l'entité NLME d'un appareil de routage ou pour informer l'appareil de passerelle que la demande de rattachement d'un appareil a été reçue avec succès.

La sémantique de DLME- JOIN.indication est décrite comme suit:

DLME-JOIN.indication (

PhyAddr,  
DeviceType

)

Le Tableau 49 spécifie les paramètres pour DLME-JOIN.indication.

**Tableau 49 – Paramètres de DLME-JOIN.indication**

| Nom        | Type de données | Plage valide       | Description                                                                                                                                                                                                 |
|------------|-----------------|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| PhyAddr    | Unsigned64      | 0 à ( $2^{64}-1$ ) | Adresse du nouvel appareil attendant de se rattacher                                                                                                                                                        |
| DeviceType | Unsigned8       | 0 à 255            | Type du nouvel appareil attendant de se rattacher:<br>0 = Appareil de passerelle<br>1 = Appareil de routage<br>2 = Appareil de terrain<br>3 = Appareil tenu à la main<br>Les autres valeurs sont réservées. |

### 8.6.3.4 DLME-JOIN.response

La primitive DLME-JOIN.response est la réponse de la primitive DLME-JOIN.indication.

La sémantique de DLME-JOIN.response est décrite comme suit:

DLME-JOIN.response (

PhyAddr,  
ShortAddr,  
TimeSource,  
Status

)

Le Tableau 50 spécifie les paramètres pour DLME-JOIN.response.

**Tableau 50 – Paramètres de DLME-JOIN.response**

| Nom        | Type de données | Plage valide     | Description                                                                                                                                           |
|------------|-----------------|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| PhyAddr    | Unsigned64      | 0 à $(2^{64}-1)$ | Adresse de l'appareil attendant de se rattacher                                                                                                       |
| ShortAddr  | Unsigned16      | 0 à 65 535       | Adresse courte allouée par le NM à l'appareil attendant de se rattacher                                                                               |
| TimeSource | Unsigned8       | 0 à 1            | Savoir si cet appareil est réglé comme source temporelle:<br>0 = Pas une source temporelle<br>1 = Source temporelle                                   |
| Statut     | Unsigned8       | 0 à 255          | Résultat de la demande de rattachement:<br>0 = SUCCESS (succès)<br>1 = FAILURE_TOP_DISMATCH<br>2 = FAILURE_ELSE<br>Les autres valeurs sont réservées. |

### 8.6.3.5 DLME-JOIN.confirm

La primitive DLME-JOIN.confirm rapporte le résultat du rattachement au DMAP.

La sémantique de DLME-JOIN.confirm est décrite comme suit:

DLME-JOIN.confirm (

ShortAddr,  
Status

)

Le Tableau 51 spécifie les paramètres pour DLME-JOIN.confirm.

**Tableau 51 – Paramètres de DLME-JOIN.confirm**

| Nom       | Type de données | Plage valide | Description                                                                                                                                           |
|-----------|-----------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| ShortAddr | Unsigned16      | 0 à 65 535   | Adresse courte allouée par NM pour l'appareil attendant de se rattacher                                                                               |
| Statut    | Unsigned8       | 0 à 255      | Résultat de la demande de rattachement:<br>0 = SUCCESS (succès)<br>1 = FAILURE_TOP_DISMATCH<br>2 = FAILURE_ELSE<br>Les autres valeurs sont réservées. |

### 8.6.3.6 Séquence temporelle pour l'appareil se rattachant au réseau

Voir 9.5.3 pour le processus détaillé de rattachement.

### 8.6.4 Services de départ d'appareil

#### 8.6.4.1 Généralités

Il existe deux instances exigeant les services de départ d'appareil: (1) un appareil de terrain quitte le réseau en étoile ou (2) un appareil de routage quitte le réseau maillé. Les primitives prises en charge par les services de départ d'appareil DSL comprennent DLME-LEAVE.request, DLME-LEAVE.indication et DLME-LEAVE.confirm.

#### 8.6.4.2 DLME-LEAVE.request

La sémantique de DLME-LEAVE.request est décrite comme suit:

DLME-LEAVE.request (   
 ShortAddr   
 )

Le Tableau 52 spécifie les paramètres pour DLME-LEAVE.request.

**Tableau 52 – Paramètres de DLME-LEAVE.request**

| Nom       | Type de données | Plage valide | Description                                      |
|-----------|-----------------|--------------|--------------------------------------------------|
| ShortAddr | Unsigned16      | 0 à 65 535   | Adresse courte de l'appareil demandant de partir |

#### 8.6.4.3 DLME-LEAVE.indication

La primitive DLME-LEAVE.indication est utilisée pour indiquer à la couche supérieure qu'une demande de départ d'appareil a été reçue.

La sémantique de DLME-LEAVE indication est décrite comme suit:

DLME-LEAVE.indication (   
 ShortAddr   
 )

Le Tableau 53 spécifie les paramètres pour DLME-LEAVE.indication.

**Tableau 53 – Paramètres de DLME-LEAVE.indication**

| Nom       | Type de données | Plage valide | Description                                      |
|-----------|-----------------|--------------|--------------------------------------------------|
| ShortAddr | Unsigned16      | 0 à 65 535   | Adresse courte de l'appareil demandant de partir |

#### 8.6.4.4 DLME-LEAVE.confirm

La primitive DLME-LEAVE.confirm est utilisée pour rapporter le résultat de DLME-LEAVE.request.

La sémantique de DLME-LEAVE.confirm est décrite comme suit:

DLME-LEAVE.confirm (   
 Statut   
 )

Le Tableau 54 spécifie les paramètres pour DLME-LEAVE.confirm.

**Tableau 54 – Paramètres de DLME-LEAVE.confirm**

| Nom    | Type de données | Plage valide | Description                                                                                                            |
|--------|-----------------|--------------|------------------------------------------------------------------------------------------------------------------------|
| Status | Unsigned8       | 0 à 255      | Résultat de la demande de départ:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

#### 8.6.4.5 Séquence temporelle pour le départ d'appareil

Voir l'IEEE 802.15.4-2011 pour les primitives suivantes: MLME-DISASSOCIATE.request, MLME-DISASSOCIATE.confirm et MLME-DISASSOCIATE.indication.

Les séquences temporelles pour les appareils quittant le réseau sont définies comme suit.

##### a) Séquence temporelle pour les appareils de routage quittant le réseau

Les appareils de routage se connectent tant au réseau maillé qu'au réseau en étoile. Par conséquent, le processus des appareils de routage quittant le réseau comprend les appareils de routage quittant le réseau maillé et ceux quittant le réseau en étoile. En fonction du demandeur du départ, le processus des appareils de routage quittant le réseau inclut le départ actif et le départ passif.

##### b) Séquence temporelle pour les appareils de terrain quittant le réseau

En fonction de la source du départ, le processus des appareils de terrain quittant le réseau inclut le départ actif et le départ passif.

Voir 9.5.4 pour le processus détaillé du départ d'appareil.

#### 8.6.5 DLME-CHANNEL-CONDITION.indication

La primitive DLME-CHANNEL-CONDITION.indication est utilisée pour que la DLSL rapporte les informations concernant les conditions de canaux au DMAP. Les données de performance rapportées comprennent l'indication de qualité de liaison (LQI), le taux de perte de paquets et le nombre de nouvelles tentatives.

La sémantique de DLME-CHANNEL-CONDITION.indication est décrite comme suit:

DLME-CHANNEL-CONDITION.indication (

ChannelNum,  
ChannelStructure  
)

Le Tableau 55 spécifie les paramètres pour DLME-CHANNEL-CONDITION.indication.

**Tableau 55 – Paramètres de DLME-CHANNEL-CONDITION.indication**

| Nom              | Type de données | Plage valide | Description            |
|------------------|-----------------|--------------|------------------------|
| ChannelNum       | Unsigned8       | 0 à 255      | Nombre de canaux       |
| ChannelStructure | ChanCon_Struct  |              | Informations de canaux |

#### 8.6.6 DLME-NEIGHBOUR-INFO.indication

La primitive DLME-NEIGHBOUR-INFO.indication est utilisée pour rapporter les informations recueillies concernant les voisins au DMAP et mettre à jour les attributs voisins.

La sémantique de DLME-NEIGHBOUR-INFO.indication est décrite comme suit:

DLME-NEIGHBOUR-INFO.indication (

NeighbourCount,  
NeighbourStructure  
)

Le Tableau 56 spécifie les paramètres pour DLME-NEIGHBOUR-INFO.indication.

**Tableau 56 – Paramètres de DLME-NEIGHBOUR-INFO.indication**

| Nom                | Type de données               | Plage valide | Description                |
|--------------------|-------------------------------|--------------|----------------------------|
| NeighbourCount     | Unsigned8                     | 0 à 255      | Nombre d'appareils voisins |
| NeighbourStructure | Structure<br>Neighbour_Struct |              | Informations de voisins    |

### 8.6.7 DLME-COMM-STATUS.indication

La primitive DLME-COMM-STATUS.indication est utilisée pour rapporter l'état de communication à la couche supérieure.

La sémantique de DLME-COMM-STATUS.indication est décrite comme suit:

DLME-COMM-STATUS.indication (

PhyAddr,  
Statut

)

Le Tableau 57 spécifie les paramètres pour DLME-COMM-STATUS.indication.

**Tableau 57 – Paramètres de DLME-COMM-STATUS.indication**

| Nom     | Type de données | Plage valide       | Description                                                                                                                                         |
|---------|-----------------|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|
| PhyAddr | Unsigned64      | 0 à ( $2^{64}-1$ ) | Adresse d'un nouvel appareil qui vient juste de se rattacher au réseau                                                                              |
| Status  | Unsigned8       | 0 à 255            | L'état de rattachement d'un appareil:<br>0 = SUCCESS (succès)<br>1 = FAILURE_TOP_DISMATCH<br>2 = FAILURE_ELSE<br>Les autres valeurs sont réservées. |

### 8.6.8 Services d'entretien

#### 8.6.8.1 DLME-KEEP-LIVE.request

La primitive DLME-KEEP-LIVE.request est utilisée pour envoyer les trames de commande d'entretien qui sont demandées par le DMAP.

La sémantique de DLME-KEEP-LIVE.request est décrite comme suit:

DLME-KEEP-LIVE.request (  
)

### 8.6.8.2 DLME-KEEP-LIVE.confirm

La primitive DLME-KEEP-LIVE.confirm est utilisée pour répondre à la primitive DLME -KEEP-LIVE.request.

La sémantique de DLME -KEEP-LIVE.confirm est décrite comme suit:

DLME -KEEP-LIVE.confirm (

Statut

)

Le Tableau 58 spécifie les paramètres pour DLME-KEEP-LIVE.confirm.

**Tableau 58 – Paramètres de DLME -KEEP-LIVE.confirm**

| Nom    | Type de données | Plage valide | Description                                                                                                   |
|--------|-----------------|--------------|---------------------------------------------------------------------------------------------------------------|
| Status | Unsigned8       | 0 à 255      | Résultat de l'entretien:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

### 8.6.8.3 DLME-KEEP-LIVE.indication

La primitive DLME-KEEP-LIVE.indication est utilisée pour informer le DMAP que la trame de commande d'entretien a été reçue avec succès.

La sémantique de DLME-KEEP-LIVE.indication est décrite comme suit:

DLME-KEEP-LIVE.indication (

SrcAddr

)

Le Tableau 59 spécifie les paramètres pour DLME-KEEP-LIVE.indication.

**Tableau 59 – Paramètres de DLME -KEEP-LIVE.indication**

| Nom     | Type de données | Plage valide | Description    |
|---------|-----------------|--------------|----------------|
| SrcAddr | Unsigned16      | 0 à 65 535   | Adresse source |

## 8.6.9 Services de synchronisation du temps

### 8.6.9.1 DLME-TIME-SYN.request

La primitive DLME-TIME-SYN.request est utilisée pour envoyer des trames de commande de synchronisation du temps qui sont demandées par le DMAP.

La sémantique de DLME-TIME-SYN.request est décrite comme suit:

DLME-TIME-SYN.request (

TimeValue

)

Le Tableau 60 spécifie les paramètres pour DLME-TIME-SYN.request.

**Tableau 60 – Paramètres de DLME-TIME-SYN.request**

| Nom       | Type de données | Plage valide     | Description                                                                                              |
|-----------|-----------------|------------------|----------------------------------------------------------------------------------------------------------|
| TimeValue | Unsigned16      | 0 à $(2^{16}-1)$ | Différence de temps entre le début de l'émission et le début de l'intervalle de temps (en microsecondes) |

**8.6.9.2 DLME-TIME-SYN.confirm**

La primitive DLME-TIME-SYN.confirm est utilisée pour répondre à la primitive DLME-TIME-SYN.request.

La sémantique de DLME-TIME-SYN.confirm est décrite comme suit:

DLME-TIME-SYN.confirm (

Statut  
)

Le Tableau 61 spécifie les paramètres pour DLME-TIME-SYN.confirm.

**Tableau 61 – Paramètres de DLME-TIME-SYN.confirm**

| Nom    | Type de données | Plage valide | Description                                                                                                                   |
|--------|-----------------|--------------|-------------------------------------------------------------------------------------------------------------------------------|
| Statut | Unsigned8       | 0 à 255      | Résultat de la synchronisation du temps:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

**8.6.9.3 DLME-TIME-SYN.indication**

La primitive DLME-TIME-SYN.indication est utilisée pour informer le DMAP que la trame de commande de synchronisation de temps a été reçue avec succès.

La sémantique de DLME-TIME-SYN.indication est décrite comme suit:

DLME-TIME-SYN.indication (

SrcAddr,  
TimeValue  
)

Le Tableau 62 spécifie les paramètres pour DLME-TIME-SYN.indication.

**Tableau 62 – Paramètres de DLME-TIME-SYN.indication**

| Nom       | Type de données | Plage valide     | Description                                                                                              |
|-----------|-----------------|------------------|----------------------------------------------------------------------------------------------------------|
| SrcAddr   | Unsigned16      | 0 à 65 535       | Adresse source                                                                                           |
| TimeValue | Unsigned16      | 0 à $(2^{16}-1)$ | Différence de temps entre le début de l'émission et le début de l'intervalle de temps (en microsecondes) |



## 8.7 Formats de trame DLSL

### 8.7.1 Format général de trame

Le format général de trame DLSL est représenté à la Figure 37.

| MAC Protocol Data Unit (MPDU); Unité de données de protocole MAC (MPDU)         |                                             |                                  |     |
|---------------------------------------------------------------------------------|---------------------------------------------|----------------------------------|-----|
| MHR                                                                             | DLPDU                                       |                                  | FCS |
| IEEE 802.15.4-2011 MAC header (MHR) (En-tête MAC [MHR] de l'IEEE 802.15.4-2011) | DLSL frame control (contrôle de trame DLSL) | DLSL payload (charge utile DLSL) |     |

IEC

**Figure 37 – Format général de trame**

La trame DLSL se compose de:

- l'en-tête MAC (MHR) IEEE 802.15.4-2011 (voir 5.2.1 de l'IEEE 802.15.4-2011);
- la commande de trame DLSL (voir Tableau 63);
- la charge utile DLSL;
- Séquence de contrôle de trame (FCS, Frame Check Sequence).

Voir 11.3.2 pour le contenu relatif à la sécurité.

Le format du contrôle de trame de sous-couche DLSL du réseau WIA-PA est indiqué au Tableau 63.

**Tableau 63 – Champ DLSL frame control (contrôle de trame DLSL)**

| Champ DLSL frame control (contrôle de trame DLSL) |                            |                                 |                                             |                                                   |
|---------------------------------------------------|----------------------------|---------------------------------|---------------------------------------------|---------------------------------------------------|
| Longueur en bit(s)                                | 1                          | 1                               | 1                                           | 5                                                 |
| Nom de sous-champ                                 | Frame type (type de trame) | Time source (source temporelle) | Security enable (activation de la sécurité) | Index of main channel (indice de canal principal) |

Les sous-champs du Tableau 63 sont définis comme suit.

- Le sous-champ Frame type (type de trame) est de 1 bit, il est utilisé pour spécifier le type d'une trame. Si une trame est une trame de données, ce sous-champ est défini sur 0; autrement, il est défini sur 1.
- Le sous-champ Time source (source temporelle) est de 1 bit, il est utilisé pour indiquer si cet appareil est une source temporelle ou non. Si l'appareil est une source temporelle, ce sous-champ est défini sur 1; autrement, il est défini sur 0.
- Le sous-champ Security enable (activation de la sécurité) est de 1 bit, il est utilisé pour spécifier à la DLSL d'utiliser le mécanisme de sécurité ou non. La valeur 0 signifie que le mécanisme de sécurité est désactivé et la valeur 1 signifie que le mécanisme de sécurité est activé.
- Le sous-champ Index of main channel (indice de canal principal) est utilisé pour indiquer le canal de communication courant.

Il convient de transmettre ou recevoir tous les champs d'octets multiples avec l'octet de poids faible en premier lieu et il convient de transmettre ou recevoir d'abord chaque octet avec le bit de poids faible (LSB). Il convient d'appliquer le même ordre de transmission aux champs de données transférés entre les couches.

### 8.7.2 Format de trame de données

Le format de la trame de données DLSL est indiqué au Tableau 64.

**Tableau 64 – Format de trame de données**

|                      | Format de trame de données                        |                                           |
|----------------------|---------------------------------------------------|-------------------------------------------|
| Longueur en octet(s) | 1                                                 | Longueur variable                         |
| Nom de champ         | DLSL frame control<br>(contrôle de<br>trame DLSL) | Data payload (charge utile de<br>données) |

Les sous-champs du Tableau 64 sont définis comme suit:

- a) le sous-champ DLSL frame control (contrôle de trame DLSL) est défini au Tableau 63;
- b) le sous-champ Data payload (charge utile de données) est doté d'une longueur variable et il est rempli avec les données DLSL.

### 8.7.3 Format de trame de commande

#### 8.7.3.1 Format général d'une trame de commande

Le format général de trame de commande est indiqué au Tableau 65.

**Tableau 65 – Format général d'une trame de commande**

|                      | Format général d'une trame de commande            |                                                                      |                                               |
|----------------------|---------------------------------------------------|----------------------------------------------------------------------|-----------------------------------------------|
| Longueur en octet(s) | 1                                                 | 1                                                                    | Longueur variable                             |
| Nom de champ         | DLSL frame control<br>(contrôle de<br>trame DLSL) | Command frame<br>identifier (identificateur<br>de trame de commande) | Command payload (charge utile<br>de commande) |

Les sous-champs du Tableau 65 sont définis comme suit:

- a) le sous-champ DLSL frame control (contrôle de trame DLSL) est défini au Tableau 63;
- b) le sous-champ Command frame identifier (identificateur de trame de commande) est défini au Tableau 66;
- c) le sous-champ Command payload (charge utile de commande) est doté d'une longueur variable et il est rempli avec les données de gestion DLSL.

#### 8.7.3.2 Trame de commande DLSL

##### 8.7.3.2.1 Généralités

Les trames de commande DLSL sont définies et indiquées au Tableau 66.

**Tableau 66 – Trame de commande DLSL**

| Command frame identifier<br>(identificateur de trame de commande) | Trame de commande DLSL                          |                                                                |                                                                      |
|-------------------------------------------------------------------|-------------------------------------------------|----------------------------------------------------------------|----------------------------------------------------------------------|
|                                                                   | Nom de commande                                 | Utilisateur                                                    | Description                                                          |
| 1                                                                 | Trame de commande d'entretien                   | Appareil de passerelle/Appareil de routage/Appareil de terrain | Indiquant un appareil existant                                       |
| 2                                                                 | Trame de commande de synchronisation de l'heure | Appareil de passerelle/Appareil de routage                     | Réalisation la synchronisation de l'heure pour le réseau tout entier |
| 3 à 255                                                           | Réservé                                         | Réservé                                                        | A étendre                                                            |

La trame de commande d'entretien facilite la maintenance des connexions entre appareils voisins. Après le rattachement des appareils au réseau, leurs DMAP envoient une trame de commande d'entretien avec la primitive de demande d'entretien. L'appareil de passerelle envoie la trame de commande d'entretien pendant la période de communication intergroupe, afin d'indiquer l'état vivant. Les appareils de routage envoient les trames de commande d'entretien pendant la période de communication intragroupe, afin d'indiquer qu'ils sont vivants à leurs éléments de groupe; en outre, les appareils de routage envoient des trames de commande d'entretien pendant la période de communication intergroupe, afin d'indiquer qu'ils sont vivants aux autres appareils de routage et à l'appareil de passerelle. Les appareils de terrain envoient les trames de commande d'entretien pendant la période de communication intragroupe, afin d'indiquer qu'ils sont vivants à leurs têtes de groupe.

Afin de garantir la fiabilité du code de communication AMRT, il convient que les appareils dans un réseau se synchronisent avec la source temporelle. Les erreurs de temps parmi les appareils sont inévitables en dépit de toute source temporelle matérielle. Afin de surmonter la dérive d'horloge temporelle, le réseau WIA-PA accomplit deux sortes de synchronisation du temps: balise de l'IEEE 802.15.4-2011 et la trame de commande de synchronisation du temps spécialement conçue. Dans le réseau en étoile uniquement, l'appareil de passerelle est la source de temps TUC. Dans la combinaison de réseau en étoile et de réseau maillé, l'appareil de passerelle est la source de temps TUC de la partie maillée et tous les appareils de routage se synchronisent avec l'appareil de passerelle; chaque appareil de routage est la source temporelle pour ses appareils de terrain dans la partie en étoile, qui se synchronise avec leurs appareils de routage.

Le présent document spécifie que l'erreur maximale de synchronisation est inférieure à 10 % de la longueur d'intervalle de temps de base de la durée maximale de supertrame.

#### 8.7.3.2.2 Trame de commande d'entretien

Le format de la trame de commande d'entretien est indiqué au Tableau 67.

**Tableau 67 – Format de la trame de commande d'entretien**

| Longueur en octet(s) | Format de la trame de commande d'entretien  |                                                                |
|----------------------|---------------------------------------------|----------------------------------------------------------------|
|                      | 1                                           | 1                                                              |
| Nom de champ         | DLSL frame control (contrôle de trame DLSL) | Command frame identifier (identificateur de trame de commande) |

Les sous-champs du Tableau 67 sont définis comme suit.

- Voir Tableau 63 pour DLSL frame control (contrôle de trame DLSL).
- Le sous-champ Command frame identifier (identificateur de trame de commande) est 10.

### 8.7.3.2.3 Trame de commande de synchronisation de l'heure

La trame de commande de synchronisation du temps est utilisée pour la synchronisation du réseau tout entier. L'appareil de passerelle et les appareils de routage envoient périodiquement les trames de commande de synchronisation du temps.

Si la topologie de réseau est en étoile uniquement, l'appareil de passerelle diffuse périodiquement la trame de commande de synchronisation du temps. Si la topologie de réseau est une combinaison de la configuration en étoile et de la configuration maillée, l'appareil de passerelle envoie en monodiffusion la trame de commande de synchronisation du temps au cours de la période de communication intergroupe; les appareils de routage diffusent les trames de commande de synchronisation du temps au cours de la période de communication intragroupe pour synchroniser leurs réseaux en étoile et les envoient en monodiffusion pendant la période de communication intergroupe pour se synchroniser avec le réseau maillé.

Le format de la trame de commande de synchronisation du temps est indiqué au Tableau 68.

**Tableau 68 – Format de la trame de commande de synchronisation du temps**

|                      | Format de la trame de commande de synchronisation de l'heure |                                                                |                              |
|----------------------|--------------------------------------------------------------|----------------------------------------------------------------|------------------------------|
| Longueur en octet(s) | 1                                                            | 1                                                              | 2                            |
| Nom de champ         | DLSL frame control (contrôle de trame DLSL)                  | Command frame identifier (identificateur de trame de commande) | Valeur étalonée de TimeValue |

Les sous-champs du Tableau 68 sont définis comme suit:

- voir Tableau 63 pour DLSL frame control (contrôle de trame DLSL);
- le sous-champ Command frame identifier (identificateur de trame de commande) est 11;
- voir Tableau 60 pour le sous-champ Calibrated value of TimeValue (valeur étalonée de TimeValue).


## 9 Couche Réseau

### 9.1 Généralités

La couche réseau (NL) du réseau WIA-PA reçoit et transporte des paquets sur les réseaux, fournit des interfaces à la sous-couche application (ASL) et exécute la gestion, la configuration et la commande de couche réseau.

### 9.2 Pile de protocole

La pile de protocole de la couche réseau WIA-PA est indiquée à la Figure 38.

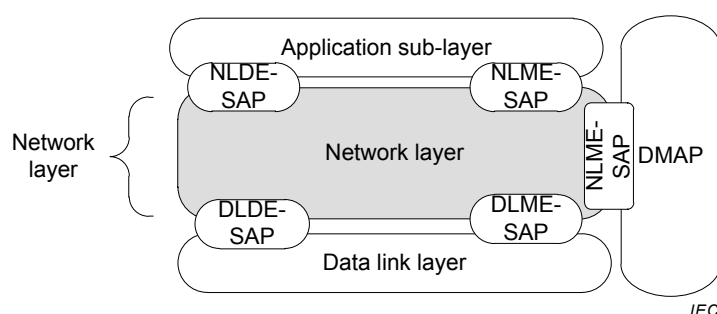


| Anglais               | Français                        |
|-----------------------|---------------------------------|
| Application sub-layer | Sous-couche application (ASL)   |
| Network layer         | Couche réseau (NL)              |
| Data link layer       | Couche liaison de données (DLL) |

**Figure 38 – Pile de protocole de la couche réseau WIA-PA**

Les couches et entités à la Figure 39 sont définies comme suit:

- la couche NL définit l'entité NLDE et l'entité de gestion de couche réseau (NLME);
- l'entité NLDE fournit l'interface de service par laquelle la sous-couche ASL émet et reçoit des données;
- l'entité NLME fournit les interfaces de service par lesquelles les fonctions de gestion de couche sont invoquées par la couche supérieure et le processus DMAP.

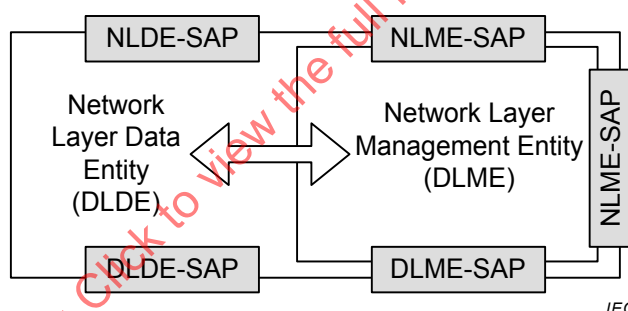

| Anglais                                | Français                                     |
|----------------------------------------|----------------------------------------------|
| Network Layer Data Entity (NLDE)       | Entité de données de la couche réseau (NLDE) |
| Network Layer Management Entity (NLME) | Entité de gestion de la couche réseau (NLME) |

**Figure 39 – Modèle de référence de couche réseau WIA-PA**

La NL fournit deux types de services auxquels on accède grâce aux deux SAP suivants:

- le service de données de couche réseau, accédé via le point d'accès au service entité de données de couche réseau (NLDE-SAP);
- le service de gestion de couche réseau, accédé via le point d'accès au service entité de gestion de couche réseau (NLME-SAP).

### 9.3 Description de fonction

#### 9.3.1 Généralités

La couche réseau (NL) est conçue pour accomplir les fonctions suivantes:

- adressage;
- routing;

- c) affectation de ressources de communication;
- d) gestion de cycle de vie des paquets;
- e) gestion des appareils se rattachant et quittant le réseau;
- f) surveillance bout en bout des performances du réseau;
- g) fragmentation et réassemblage.

### 9.3.2 Adressage

Chaque appareil a une adresse longue unique globale de 64 bits et une adresse courte de 16 bits. Chaque appareil se rattache au réseau en utilisant l'adresse longue et communique avec d'autres appareils en utilisant l'adresse courte après s'être rattaché au réseau. L'adresse courte de 16 bits est désignée comme  $x.y$ , où  $x$  et  $y$  sont des nombres entiers de 8 bits. Les 8 bits de poids fort dans l'adresse courte de 16 bits correspondent à l'adresse de groupe tandis que les 8 bits de poids faible correspondent à l'adresse intragroupe. La plage d'adresses de groupe s'étend de 0 à 255 tandis que la plage d'adresses intragroupe s'étend de 0 à 255. Le nombre 255 est utilisé pour l'adresse de diffusion. L'adresse intragroupe d'un appareil de routage est 0.

Les classifications des adresses courtes sont définies de la manière suivante:

- a) Adresses de monodiffusion: chaque adresse d'appareil est l'adresse de monodiffusion, y compris les types suivants:
  - l'adresse de l'appareil de passerelle est 0.0;
  - l'adresse de l'appareil de routage est  $x.0$ , où  $x$  est compris entre 1 et 254;
  - si la topologie de réseau est en étoile uniquement, à savoir  $\text{NetworkTopology}=1$ , l'adresse de l'appareil de terrain est  $0.y$ , où  $y$  est compris entre 1 et 254; sinon, l'adresse de l'appareil de terrain est  $x.y$ , où  $x$  et  $y$  sont compris entre 1 et 254; voir 6.9.1.2.1 pour  $\text{NetworkTopology}$ .
- b) Adresse de diffusion: conformément aux différents domaines de diffusion, il y a quatre types d'adresses de diffusion:
  - l'adresse de diffusion intragroupe est  $x.255$ , où  $x$  est compris entre 0 et 254;
  - l'adresse de diffusion globale est 255.255;
  - l'adresse de diffusion du réseau maillé est 255.0;
  - l'adresse de diffusion de l'appareil de passerelle est 0.255.

### 9.3.3 Routage

#### 9.3.3.1 Généralités

Le réseau WIA-PA prend en charge les algorithmes de routage statique configurés par le gestionnaire de réseau (NM). Après avoir obtenu de chaque appareil de routage les informations relatives aux voisins, le NM génère la relation de connexion de tous les appareils de routage. Sur la base de la relation de connexion, le NM génère et écrit les informations de routage dans chaque appareil de routage sous la forme d'une table de routage. Un identificateur d'itinéraire est assigné à chaque itinéraire de la table. Plusieurs chemins correspondent à chaque VCR, notamment le chemin principal et le chemin redondant. Le chemin principal et le chemin redondant utilisent le même identificateur d'itinéraire.

#### 9.3.3.2 Table de routage

Chaque appareil de routage maintient une table de routage, qui est générée par le NM. La table de routage est utilisée pour choisir un chemin dans le réseau maillé. La table comporte cinq éléments. `RouteID` est l'identificateur d'un itinéraire. `SourceAddress` est l'adresse du point de départ d'un itinéraire, `DestinationAddress` est l'adresse du point d'extrémité d'un itinéraire, `NextHop` est l'adresse de l'appareil de prochain saut dans un itinéraire et `RetryCounter` enregistre le nombre de nouvelles tentatives en un saut dans un itinéraire qui

reflète l'état de l'itinéraire. Les RouteID des chemins avec la même adresse source et adresse de destination sont identiques.

Un exemple d'une table de routage est fourni au Tableau 69.

**Tableau 69 – Exemple de table de routage**

| RouteID                                                                                                                                                              | SourceAddress | DestinationAddress | NextHop | RetryCounter |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|--------------------|---------|--------------|
| 5                                                                                                                                                                    | F1            | N1                 | N3      | 0            |
| 8                                                                                                                                                                    | F2            | Ng                 | N2      | 0            |
| ...                                                                                                                                                                  | ...           | ...                | ...     | ...          |
| Ng dans la table désigne une adresse passerelle; N1, N2 et N3 désignent des adresses d'appareils de routage; F1 et F2 désignent des adresses d'appareils de terrain. |               |                    |         |              |

### 9.3.4 Gestion du cycle de vie des paquets

Chaque paquet a un cycle de vie dans le réseau WIA-PA. Le cycle de vie est exprimé comme un temps maximal de survie. La couche NL enregistre l'heure de création des paquets à l'aide de marqueurs temporels. Le temps de survie est calculé en fonction de l'heure de création. Lorsque le temps de survie d'un paquet dépasse son cycle de vie, il convient de rejeter le paquet.

### 9.3.5 Rattachement à un réseau et départ d'un réseau pour un appareil

La couche NL du réseau WIA-PA prend en charge les processus de rattachement et de départ des appareils. Les processus de rattachement et de départ comprennent le rattachement et le départ d'appareils de terrain et d'appareils de routage.

### 9.3.6 Surveillance bout en bout des performances du réseau


La couche réseau WIA-PA surveille chaque état de santé de chemin. L'entité NLME enregistre le nombre de nouvelles tentatives de chaque chemin pour estimer les défaillances de chemin. En cas de défaillance de chemin, l'entité NLME envoie une indication DMAP (voir 9.5.12).

### 9.3.7 Fragmentation et réassemblage

La fragmentation et le réassemblage sont gérés par la couche NL. Si la longueur d'une unité NPDU est plus grande que celle de la charge utile DLSL maximale, il convient de fragmenter l'unité NPDU au niveau de la NL de l'expéditeur. Lorsque les unités NPDU défragmentées atteignent le destinataire, elles sont réassemblées au niveau de la NL. Voir 9.6.2 pour les détails du format de paquet.

### 9.3.8 Diagramme d'états de la couche réseau

Les transitions d'états de la NL sont indiquées à la Figure 40 et au Tableau 70.

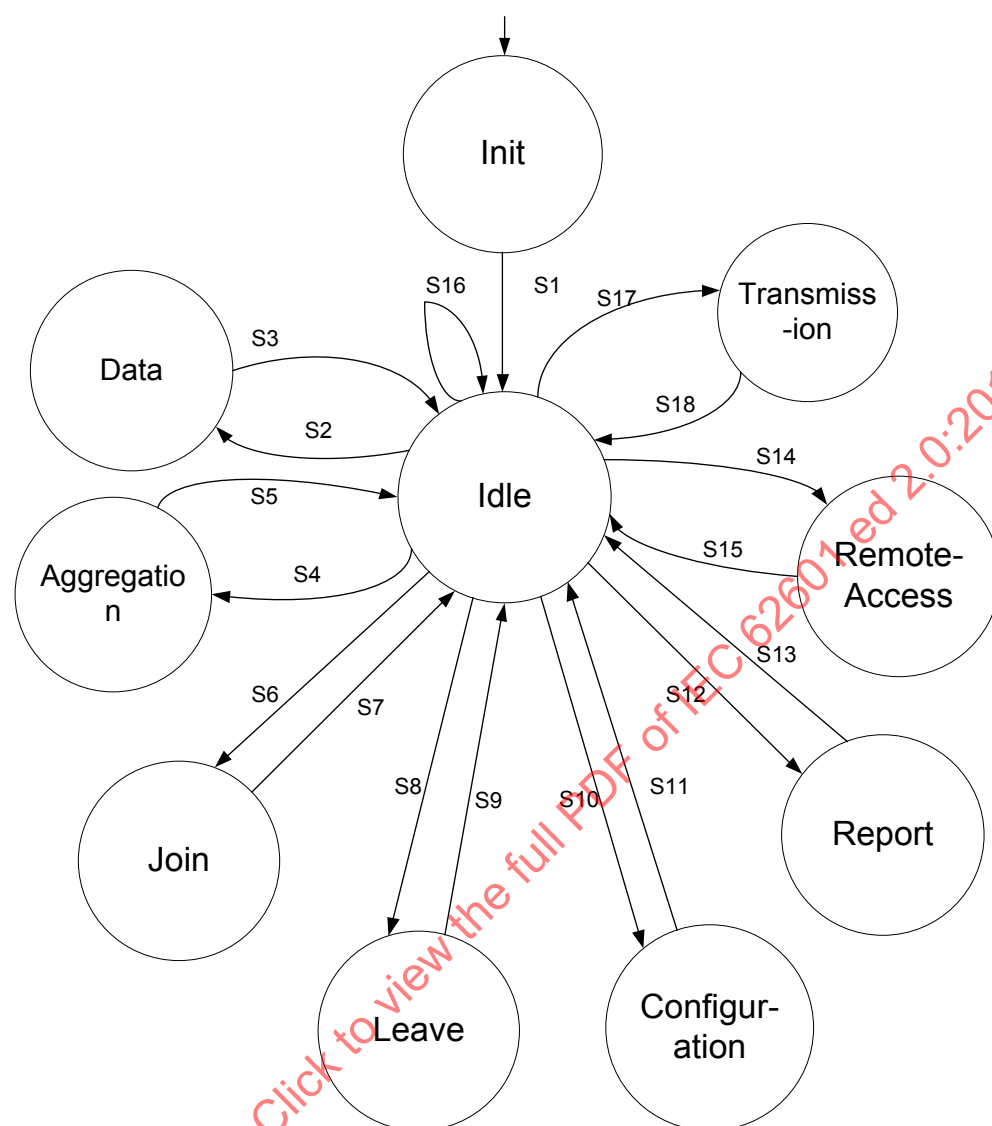

IEC

| Anglais       | Français         |
|---------------|------------------|
| Init          | Init             |
| Idle          | Repos            |
| Transmission  | Emission         |
| Remote-access | Accès à distance |
| Report        | Rapport          |
| Configuration | Configuration    |
| Leave         | Départ           |
| Join          | Rattachement     |
| Aggregation   | Agrégation       |
| Data          | Données          |

Figure 40 – Diagramme d'états de la couche réseau



**Tableau 70 – Transitions d'états de la NL (1 de 4)**

| Numéro séquentiel # | Etat courant | Evénement ou condition                                                                                                                                                     | Actions                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Prochain état |
|---------------------|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| S1                  | Init         |                                                                                                                                                                            | Initiation                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Idle          |
| S2                  | Idle         | A partir de la DLSSL: DLSSL-DATA.confirm() ou DLSSL-DATA.indication() & Packet type = 0 dans la NSDU;<br>A partir de la sous-couche application (ASL): NLDE-DATA.request() |                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Data          |
| S3                  | Data         |                                                                                                                                                                            | A partir de la DLSSL: invocation de NLDE-DATA.confirm() pour la sous-couche application (ASL) ou analyse de la NSDU et invocation de NLDE-DATA.indication() pour la NSDU;<br>A partir de la sous-couche application (ASL): compression de la NPDU et invocation de DLDE-DATA.request();<br>Tous les messages ou paquets sont envoyés dans la file d'attente d'émission.                                                                                         | Idle          |
| S4                  | Idle         | A partir de la DLSSL: DLSSL-DATA.indication() & Packet type = 1 dans la NSDU;<br>A partir du processus DMAP: NLME-AGO-SEND.request()                                       |                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Aggregation   |
| S5                  | Aggregation  |                                                                                                                                                                            | A partir de la DLSSL: analyse de la NSDU en fonction du format de paquets agrégés de la NL et invocation de NLME-DAG.indication() pour le DMAP;<br>A partir du processus DMAP: compression de paquets agrégés de la NL;<br>Tous les messages ou paquets sont envoyés dans la file d'attente d'émission relative.                                                                                                                                                | Idle          |
| S6                  | Idle         | A partir de la DLSSL: DLSSL-DATA.indication() & Packet type = 2 et Command ID = 0, 1 dans la NSDU;<br>A partir du processus DMAP: NLME-JOIN.request/response()             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Join          |
| S7                  | Join         |                                                                                                                                                                            | A partir de la DLSSL: analyse de la NSDU en fonction du format de paquet de demande de rattachement de la NL si Command ID = 0 ou format de paquet de réponse de rattachement si Command ID = 1 et invocation de NLME-JOIN.indication() / NLME-JOIN.confirm() pour le DMAP;<br>A partir du processus DMAP: compression de paquets de réponse de rattachement de la NL;<br>Tous les messages ou paquets sont envoyés dans la file d'attente d'émission relative. | Idle          |

Tableau 70 (2 de 4)

| Numéro séquentiel # | Etat courant  | Événement ou condition                                                                                                                                                                                                                       | Actions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Prochain état |
|---------------------|---------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| S8                  | Idle          | A partir de la DLSL: DLSL-DATA.indication() & Packet type = 2 et Command ID = 3, 4 dans la NSDU;<br>A partir du processus DMAP: NLME- LEAVE. request/response ()                                                                             |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Leave         |
| S9                  | Leave         |                                                                                                                                                                                                                                              | A partir de la DLSL: analyse de la NSDU en fonction du format de paquet de demande de départ de la NL si Command ID = 3 ou format de paquet de réponse de départ si Command ID = 4 et invocation de NLME- LEAVE.indication()/NLME- LEAVE.confirm() pour le DMAP;<br>A partir du processus DMAP: compression de paquets de réponse de départ de la NL;<br>Tous les messages ou paquets sont envoyés dans la file d'attente d'émission relative.                                                                                                                                                                                       | Idle          |
| S10                 | Idle          | A partir de la DLSL: DLSL-DATA.indication() & Packet type = 2 et Command ID = 8-25 dans la NSDU;<br>A partir du processus DMAP: NLME- ADD/UPDATE/DELETE_ROUTE. request/response () ou NLME- ADD/UPDATE/RELEASE- LINK/SFR. request/response() |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Configuration |
| S11                 | Configuration |                                                                                                                                                                                                                                              | A partir de la DLSL: analyse de la NSDU en fonction du format de paquet de demande d'itinéraire/de liaison/d'ajout de supertrame/de mise à jour/de suppression/de demande de libération/de réponse de la NL si Command ID = 8-25 et invocation de NLME- ADD/UPDATE/DELETE_ROUTE.indication() ou NLME- ADD/UPDATE/RELEASE- LINK/SFR.indication() pour le DMAP;<br><br>A partir du processus DMAP: compression des paquets d'itinéraire/de liaison/d'ajout de supertrame/de mise à jour/de suppression/de réponse de libération de la NL;<br><br>Tous les messages ou paquets sont envoyés dans la file d'attente d'émission relative. | Idle          |
| S12                 | Idle          | A partir de la DLSL: DLSL-COMM-STATUS.confirm() ou DLSL-DATA.indication() & Packet type = 2 et Command ID = 2, 5-7, 26-28;<br><br>A partir du processus DMAP: NLME-RPT-CLRMEM.response()                                                     |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Report        |

Tableau 70 (3 de 4)

| Numéro séquentiel # | Etat courant | Evénement ou condition                                                                                                                                                                 | Actions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 | Prochain état |
|---------------------|--------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| S13                 | Report       |                                                                                                                                                                                        | <p>A partir de la DLSL: invocation de NLME-COMM-STATUS.confirm () pour le DMAP.</p> <p>si Command ID = 2, analyse de la NSDU en fonction du format de paquet de demande de rapport sur l'état de communication de la NL et invocation de NLME-COMM-STATUS.indication(); si Command ID = 5, 6, analyse de la NSDU en fonction du format de paquet de demande/réponse du rapport sur l'élément de groupe de la NL et invocation de NLME-RPT-CLRMEM.indication/confirm () pour le DMAP; si Command ID = 7; analyse de la NSDU en fonction du format de paquets de demande de rapport sur les informations de voisins de la NL et invocation de NLME-NEIGHBOUR-INFO.indication() pour le DMAP; si Command ID = 26; analyse de la NSDU en fonction du format de paquets de demande de rapport sur la condition d'appareil de la NL et invocation de NLME-DEVICE-STATUS.indication() pour le DMAP; si Command ID = 27, analyse de la NSDU en fonction du format de paquets de demande de rapport sur la condition de canal de la NL et invocation de NLME-CHANNEL-CONDITION.indication() pour le DMAP; si Command ID = 28, analyse de la NSDU en fonction du format de paquets de demande de rapport sur la défaillance des chemins de la NL et invocation de NLME-PATH_FAILURE.indication() pour le DMAP;</p> <p>A partir du processus DMAP: compression de paquets de réponse de rapport sur l'élément de groupe de la NL;</p> <p>Tous les messages ou paquets sont envoyés dans la file d'attente d'émission relative.</p> | Idle          |
| S14                 | Idle         | <p>A partir de la DLSL: DLSL-DATA.indication() &amp; Packet type = 2 et Command ID =29-32;</p> <p>A partir du processus DMAP: NLME-INFO_GET.response() ou NLME-INFO_SET.response()</p> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | Remote Access |

Tableau 70 (4 de 4)

| Numéro séquentiel # | Etat courant  | Evénement ou condition                                                                                  | Actions                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Prochain état |
|---------------------|---------------|---------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------|
| S15                 | Remote Access |                                                                                                         | <p>A partir de la DLSSL: si Command ID = 29, 30, analyse de la NSDU en fonction du format de paquets de demande/réponse d'obtention d'attribut de la NL et invocation de NLME-INFO_GET.indication() / NLME-INFO_GET.confirm pour le DMAP; si Command ID = 31, 32, analyse de la NSDU en fonction du format de paquets de demande/réponse d'établissement d'attribut de la NL et invocation de NLME-INFO_SET.indication() / NLME-INFO_SET.confirm pour le DMAP;</p> <p>A partir du processus DMAP: compression de paquets de réponse d'obtention/établissement d'attribut de la NL.</p> <p>Tous les messages ou paquets sont envoyés dans la file d'attente d'émission relative.</p> | Repos         |
| S16                 | Idle          | A partir de la DLSSL: DLSSL-DATA.indication() & Packet type = 2 et Command ID > 32 ou aucun paquet reçu | Rejet des NSDU relatives                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | Idle          |
| S17                 | Idle          | La file d'attente n'est pas vide                                                                        |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Transmission  |
| S18                 | Transmission  | La transmission est terminée                                                                            |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | Idle          |

Les états dans le diagramme d'états de la NL sont spécifiés ci-après.

a) Etat Idle (repos)

Les transitions suivantes peuvent survenir pendant l'état Idle (repos):

- lorsque la DLSSL invoque la primitive DLDE-DATA.indication, la couche réseau (NL) entre dans l'état Receive (réception);
- lorsque la sous-couche application (ASL) invoque la primitive NLDE-DATA.request, la couche réseau (NL) entre dans l'état Transmit (émission).

b) Etat Transmit (émission)

Dans l'état Transmit (émission), si la couche NL reçoit la primitive NLDE-DATA.confirm, elle entre dans l'état Idle (repos).

c) Etat Receive (réception)

Dans l'état Receive (réception), la NL entre dans l'état Idle (repos) après que la NL a émis la primitive NLDE-DATA.indication à la couche supérieure.

Voir 9.4 pour les services NLdata, par exemple NLDE-DATA; voir 9.5 pour les services de gestion NL, par exemple NLME-; voir 9.6.1 pour le type de paquet et 9.6.4 pour l'ID de commande.

Les états dans le diagramme d'états de la NL sont spécifiés ci-après.

a) Etat Idle (repos)

Après qu'un appareil déclenche la NL, la NL se met dans l'état Idle (repos). Les transitions suivantes peuvent survenir pendant que la sous-couche DLSSL est dans l'état Idle (repos):

b) Lorsqu'une trame DLSSL, ASL, ou DMAP arrive, la NL traite la NSDU.

Les paquets qu'un appareil peut recevoir englobent les paquets dont les adresses de destination finale sont celles de cet appareil. Les fonctions de l'état Idle (repos) sont de recevoir et traiter le paquet et traiter les primitives DMAP, ASL et DLSL.

Les transitions suivantes peuvent survenir pendant que la NL est dans l'état Receive (réception):

- Si un paquet de données est reçu de la DLSL ou si la primitive NLDE-DATA.request() est reçue de la sous-couche application (ASL), la NL se met à l'état Data (données).
  - Si un paquet agrégé est reçu de la DLSL ou si la primitive NLME-AGO-SEND.request() est reçue du DMAP, la NL se met à l'état Aggregation (agrégation).
  - Si un paquet de demande de rattachement ou de commande de réponse est reçu de la DLSL ou si la primitive NLME-JOIN.request/response () est reçue du DMAP, la NL se met à l'état Join (rattachement).
  - Si un paquet de demande de départ ou de commande de réponse est reçu de la DLSL ou si la primitive NLME- LEAVE. request/response () est reçue du DMAP, la NL se met à l'état Leave (départ).
  - Si un paquet de commande identifié de 8 à 25 est reçu de la DLSL ou si les primitives NLME-ADD/UPDATE/DELETE\_ROUTE.request/response() ou NLME-ADD/UPDATE/RELEASE-LINK/SFR. request/response() sont reçues du DMAP, la NL se met à l'état Configuration (configuration).
  - Si un paquet de commande identifié par 2, 5-7, 26-28 est reçu de la DLSL ou si la primitive NLME-RPT-CLRMEM.response() est reçue du DMAP, la NL se met à l'état Report (rapport).
  - Si un paquet de commande d'obtention ou d'établissement d'attribut identifié de 29 à 32 est reçu de la DLSL ou si la primitive NLME-INFO\_GET.response() /NLME-INFO\_SET.response() est reçue du DMAP, la NL se met à l'état Remote Access (accès à distance).
  - Si aucun paquet ou aucune primitive n'est reçu(e) ou si un identificateur de paquets de commande supérieur à 32 est reçu de la DLSL, la NL entre dans l'état Idle (repos).
- c) Lorsque la file d'attente de transmission n'est pas vide, la NL se met à l'état Transmission (émission).
- d) Etat Data (données)
- Cet état gère la procédure de traitement des données d'un appareil. Si des données sont reçues d'une DLSL ou si une demande de données ASL est reçue, la NL passe à l'état Data (données).
- e) Etat Aggregation (agrégation)
- Cet état gère les procédures d'agrégation et de désagrégation de données/paquets.
- f) Etat Join (rattachement)
- Cet état gère la procédure de rattachement d'un appareil.
- g) Etat Leave (départ)
- Cet état gère la procédure de départ d'un appareil.
- h) Etat Configuration (configuration)
- Cet état gère les procédures d'affectation de ressources, qui comprennent l'ajout/la mise à jour/la suppression ou la libération d'un itinéraire, d'une liaison ou d'une supertrame.
- i) Etat Report (rapport)
- Cet état gère les procédures de rapport, qui incluent les rapports sur l'élément de groupe, d'informations de voisins, de conditions d'appareil, de conditions de canaux et de défaillance des chemins.
- j) Etat Remote access (accès à distance)
- Cet état gère les procédures d'accès d'attribut à distance, notamment l'obtention et l'établissement d'attribut.
- k) Etat Transmission (émission)

Cet état gère les procédures de transmission de données ou de paquets. Si la file d'attente de transmission n'est pas vide, la NL se met à l'état Transmission (émission).

## 9.4 Services de données de la couche réseau

### 9.4.1 Généralités

Le point d'accès NLDE-SAP est utilisé par la sous-couche ASL pour recevoir et émettre des données. Les primitives prises en charge par les services de données de la NL comprennent NLDE-DATA.request, NLDE-DATA.confirm et NLDE-DATA.indication.

### 9.4.2 NLDE-DATA.request

L'entité NLDE reçoit la charge utile de la sous-couche application (ASL) par le biais de NLDE-DATA.request et l'ajoute à la file d'attente de messages de la couche NL.

La sémantique de NLDE-DATA.request est décrite comme suit:

```
NLDE-DATA.request (
 VcrID,
 SrcAddr,
 Priority,
 PayloadLength,
 Payload,
 PayloadHandle
)
```

Le Tableau 71 spécifie les paramètres pour NLDE-DATA.request.

**Tableau 71 – Paramètres de NLDE-DATA.request**

| Nom                    | Type de données | Plage valide                          | Description                                       |
|------------------------|-----------------|---------------------------------------|---------------------------------------------------|
| VcrID                  | Unsigned16      | 0 à 65 535                            | Identificateur de la VCR                          |
| SrcAddr                | Unsigned16      | 0 à 65 535<br>(adresse monodiffusion) | Adresse courte 16 bits de la source d'unités NSDU |
| Priorité               | Unsigned8       | 0 à 15                                | Priorité de cette NSDU                            |
| PayloadLength          | Unsigned16      | 0 à 65 535                            | Longueur de la NSDU à émettre                     |
| Payload (charge utile) | Octetstring     |                                       | NSDU                                              |
| PayloadHandle          | Unsigned8       | 0 à 255                               | Descripteur associé à la NSDU à émettre           |

### 9.4.3 NLDE-DATA.confirm

La primitive NLDE-DATA.confirm retourne les résultats de NLDE-DATA.request.

La sémantique de NLDE-DATA.confirm est décrite comme suit:

```
NLDE-DATA.confirm (
 PayloadHandle,
 Statut
)
```

Le Tableau 72 spécifie les paramètres pour NLDE-DATA.confirm.

**Tableau 72 – Paramètres de NLDE-DATA.confirm**

| Nom           | Type de données | Plage valide | Description                                                                                                         |
|---------------|-----------------|--------------|---------------------------------------------------------------------------------------------------------------------|
| PayloadHandle | Unsigned8       | 0 à 255      | Gestion de la NSDU, qui est utilisée pour indiquer la charge utile de la NL                                         |
| Statut        | Unsigned8       | 0 à 255      | Résultat de NLDE-DATA.request:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

#### 9.4.4 NLDE-DATA.indication

La primitive NLDE-DATA.indication informe la sous-couche ASL lorsque la NL reçoit un paquet.

La sémantique de NLDE-DATA.indication est décrite comme suit:

NLDE-DATA.indication (

SrcAddr,  
Priority,  
NSDULength,  
NSDU

)

Le Tableau 73 spécifie les paramètres pour NLDE-DATA.indication.

**Tableau 73 – Paramètres de NLDE-DATA.indication**

| Nom        | Type de données | Plage valide                          | Description                                       |
|------------|-----------------|---------------------------------------|---------------------------------------------------|
| SrcAddr    | Unsigned16      | 0 à 65 535 (adresse de monodiffusion) | Adresse courte 16 bits de la source d'unités NSDU |
| Priorité   | Unsigned8       | 0 à 15                                | Priorité de cette NSDU                            |
| NSDULength | Unsigned16      | 0 à 65 535                            | Longueur de la NSDU                               |
| NSDU       | octet           |                                       | Données de la NSDU                                |

#### 9.4.5 Séquence temporelle des services de données de la NL

La Figure 41 montre les procédures de base de l'envoi et de la réception de paquets. La primitive NLDE-DATA.request est générée par une entité de données de sous-couche application (ASLDE) locale lorsqu'une unité de données de protocole de sous-couche application (ASLPDU) doit être transférée à une entité NLDE homologue. A la réception d'une primitive NLDE-DATA.request, l'entité NLDE commence à émettre la NPDU.

La primitive NLDE-DATA.confirm est générée par l'entité NLDE d'un appareil source en réponse à la primitive NLDE-DATA.request. La primitive NLDE-DATA.confirm renvoie un état indiquant le résultat de l'émission.

La primitive NLDE-DATA.indication est générée par l'entité NLDE d'un appareil de destination et envoyée à l'entité ASLDE à la réception d'un paquet de données au niveau de l'entité NLDE locale.

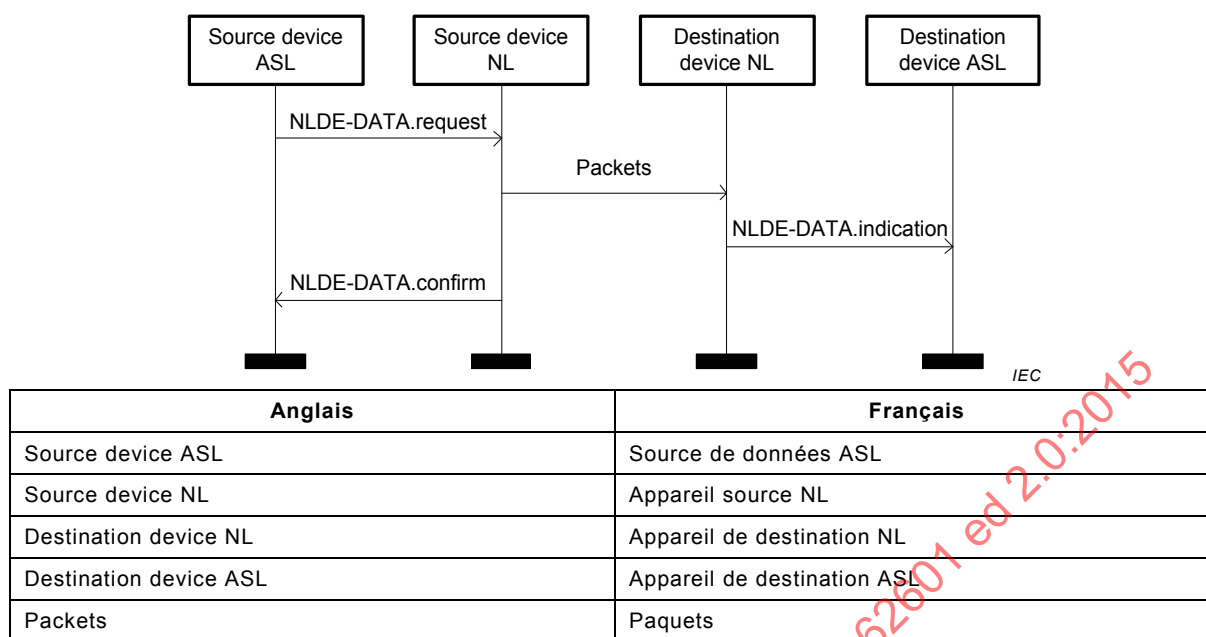


**Figure 41 – Séquence temporelle des services de données de la NL**

## 9.5 Services de gestion de la NL

### 9.5.1 Généralités

Le processus DMAP utilise l'interface fournie par le point d'accès NLME-SAP pour configurer et commander le fonctionnement de la couche réseau (NL).

### 9.5.2 Services de rapport sur l'état de communication du réseau

#### 9.5.2.1 NLME-COMM-STATUS.request

La sémantique de NLME-COMM-STATUS.request est décrite comme suit:

```
NLME-COMM-STATUS.request (
 ProxyAddr,
 PhyAddr,
 DeviceType,
 Statut
)
```



Le Tableau 74 spécifie les paramètres pour NLME-COMM-STATUS.request.

**Tableau 74 – Paramètres de NLLME-COMM-STATUS.indication**

| Nom                             | Type de données | Plage valide     | Description                                                                                                                                                                       |
|---------------------------------|-----------------|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ProxyAddr                       | Unsigned16      | 0 à 65 535       | Adresse de l'appareil de routage choisie par le nouvel appareil (adresse de monodiffusion)                                                                                        |
| PhyAddr                         | Unsigned64      | 0 à $(2^{64}-1)$ | Adresse physique 64 bits du nouvel appareil                                                                                                                                       |
| DeviceType<br>(Type d'appareil) | Unsigned8       | 0 à 255          | Type du nouvel appareil:<br>0 = Appareil de passerelle<br>1 = Appareil de routage<br>2 = Appareil de terrain<br>3 = Appareil tenu à la main<br>Les autres valeurs sont réservées. |
| Statut                          | Unsigned8       | 0 à 255          | Résultats du processus de rattachement d'un nouvel appareil:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées.                                 |

#### 9.5.2.2 NLME-COMM-STATUS.indication

La sémantique de NLME-COMM-STATUS.indication est décrite comme suit:

NLME-COMM-STATUS.indication (

ProxyAddr,  
PhyAddr,  
DeviceType,  
Statut  
)

Le Tableau 75 spécifie les paramètres pour NLME-COMM-STATUS.indication.

**Tableau 75 – Paramètres de NLME-COMM-STATUS.indication**

| Nom                             | Type de données | Plage valide       | Description                                                                                                                                                                       |
|---------------------------------|-----------------|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ProxyAddr                       | Unsigned16      | 0 à 65 535         | Adresse de l'appareil de routage choisie par le nouvel appareil (adresse de monodiffusion)                                                                                        |
| PhyAddr                         | Unsigned64      | 0 à ( $2^{64}-1$ ) | Adresse physique 64 bits du nouvel appareil                                                                                                                                       |
| DeviceType<br>(Type d'appareil) | Unsigned8       | 0 à 255            | Type du nouvel appareil:<br>0 = Appareil de passerelle<br>1 = Appareil de routage<br>2 = Appareil de terrain<br>3 = Appareil tenu à la main<br>Les autres valeurs sont réservées. |
| Statut                          | Unsigned8       | 0 à 255            | Résultats du processus de rattachement d'un nouvel appareil:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées.                                 |

A la réception d'un paquet de demande d'état de communication de la NL, la NL de l'appareil de passerelle invoquera la primitive NLME-COMM-STATUS.indication et informera le DMAP.

### 9.5.2.3 NLME-COMM-STATUS.confirm

La sémantique de NLME-COMM-STATUS.confirm est décrite comme suit:

NLME-COMM-STATUS.confirm (  
PhyAddr,  
Statut  
)

Le Tableau 76 spécifie les paramètres pour NLME-COMM-STATUS.confirm.

**Tableau 76 – Paramètres de NLME-COMM-STATUS.confirm**

| Nom     | Type de données | Plage valide       | Description                                                                                                              |
|---------|-----------------|--------------------|--------------------------------------------------------------------------------------------------------------------------|
| PhyAddr | Unsigned64      | 0 à ( $2^{64}-1$ ) | Adresse physique 64 bits du nouvel appareil                                                                              |
| Statut  | Unsigned8       | 0 à 255            | Résultat d'exécution de la demande:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

NLME-COMM-STATUS.confirm est générée par la NL en réponse à NLME-COMM-STATUS.request. NLME-COMM-STATUS.confirm retourne à un état soit SUCCESS (succès) indiquant que l'émission demandée a réussi, soit FAILURE (échec) indiquant que l'émission demandée a échoué.

### 9.5.3 Services de rattachement au réseau

#### 9.5.3.1 NLME-JOIN.request

La sémantique de NLME-JOIN.request est décrite comme suit:

```
NLME-JOIN.request (
 ProxyAddr,
 PhyAddr,
 SecMaterial,
 DeviceType (Type d'appareil)
)
```

Le Tableau 77 spécifie les paramètres pour NLME-JOIN.request.

**Tableau 77 – Paramètres de NLME-JOIN.request**

| Nom                             | Type de données | Plage valide     | Description                                                                                                                                                                       |
|---------------------------------|-----------------|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ProxyAddr                       | Unsigned16      | 0 à 65 535       | Adresse de l'appareil de routage choisie par le nouvel appareil (adresse de monodiffusion)                                                                                        |
| PhyAddr                         | Unsigned64      | 0 à $(2^{64}-1)$ | Adresse physique 64 bits du nouvel appareil                                                                                                                                       |
| SecMaterial                     | Unsigned32      | 0 à $(2^{32}-1)$ | Informations sur l'identité d'un appareil                                                                                                                                         |
| DeviceType<br>(Type d'appareil) | Unsigned8       | 0 à 255          | Type du nouvel appareil:<br>0 = Appareil de passerelle<br>1 = Appareil de routage<br>2 = Appareil de terrain<br>3 = Appareil tenu à la main<br>Les autres valeurs sont réservées. |

#### 9.5.3.2 NLME-JOIN.indication

La sémantique de NLME-JOIN.indication est décrite comme suit:

```
NLME-JOIN.indication (
 ProxyAddr,
 PhyAddr,
 SecMaterial,
 DeviceType (Type d'appareil)
)
```

Le Tableau 78 spécifie les paramètres pour NLME-JOIN.indication.

**Tableau 78 – Paramètres de NLME-JOIN.indication**

| Nom                             | Type de données | Plage valide       | Description                                                                                                                                                                       |
|---------------------------------|-----------------|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ProxyAddr                       | Unsigned16      | 0 à 65 535         | Adresse courte de l'appareil de routage qui génère la demande de rattachement de NL                                                                                               |
| PhyAddr                         | Unsigned64      | 0 à ( $2^{64}-1$ ) | Adresse physique de l'appareil                                                                                                                                                    |
| SecMaterial                     | Unsigned32      | 0 à ( $2^{32}-1$ ) | Informations sur l'identité d'un appareil                                                                                                                                         |
| DeviceType<br>(Type d'appareil) | Unsigned8       | 0 à 255            | Type du nouvel appareil:<br>0 = Appareil de passerelle<br>1 = Appareil de routage<br>2 = Appareil de terrain<br>3 = Appareil tenu à la main<br>Les autres valeurs sont réservées. |

A la réception d'un paquet de demande de rattachement de la NL, la NL de l'appareil de passerelle invoquera la primitive NLME-JOIN.indication et informera le DMAP.

### 9.5.3.3 NLME-JOIN.response

La sémantique de NLME-JOIN.response est décrite comme suit:

NLME-JOIN.response (

ProxyAddr,  
PhyAddr,  
ShortAddr,  
Statut  
)

Le Tableau 79 spécifie les paramètres pour NLME-JOIN.response.

**Tableau 79 – Paramètres de NLME-JOIN.response**

| Nom       | Type de données | Plage valide       | Description                                                                                                              |
|-----------|-----------------|--------------------|--------------------------------------------------------------------------------------------------------------------------|
| ProxyAddr | Unsigned16      | 0 à 65 535         | Adresse courte de l'appareil de routage qui génère la demande de rattachement de NL                                      |
| PhyAddr   | Unsigned64      | 0 à ( $2^{64}-1$ ) | Adresse physique du nouvel appareil                                                                                      |
| ShortAddr | Unsigned16      | 0 à 65 535         | Adresse réseau allouée (Adresse de monodiffusion) au nouvel appareil                                                     |
| Statut    | Unsigned8       | 0 à 255            | Résultat d'exécution de la demande:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

Le DMAP invoque NLME-JOIN.response pour assigner une adresse réseau au nouvel appareil.

#### 9.5.3.4 NLME-JOIN.confirm

La sémantique de NLME-JOIN.confirm est décrite comme suit:

NLME-JOIN.confirm ( ShortAddr, Statut )

Le Tableau 80 spécifie les paramètres pour NLME-JOIN.confirm.

**Tableau 80 – Paramètres de NLME-JOIN.confirm**

| Nom       | Type de données | Plage valide | Description                                                                                                              |
|-----------|-----------------|--------------|--------------------------------------------------------------------------------------------------------------------------|
| ShortAddr | Unsigned16      | 0 à 65 535   | Adresse réseau (adresse de monodiffusion)                                                                                |
| Statut    | Unsigned8       | 0 à 255      | Résultat d'exécution de la demande:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

NLME-JOIN.confirm est générée par la NL en réponse à NLME-JOIN.request. NLME-JOIN.confirm retourne à un état soit SUCCESS (succès) indiquant que l'émission demandée a réussi, soit FAILURE (échec) indiquant que l'émission demandée a échoué.

#### 9.5.3.5 Séquence temporelle pour le rattachement d'appareil


##### 9.5.3.5.1 Séquence temporelle pour le rattachement d'appareil de terrain

Pour se rattacher au réseau en étoile, il convient qu'un appareil de terrain lance une demande de rattachement dans la couche MAC par le DMAP à l'appareil de routage ou à l'appareil de passerelle. Il convient qu'un appareil de terrain soit rattaché au réseau par le biais de l'appareil de passerelle ou d'un appareil de routage.

Lorsque l'appareil de passerelle reçoit une demande de rattachement d'un appareil de terrain, il convient qu'il indique le rattachement au NM puis renvoie une réponse de rattachement. Si le nouvel appareil de terrain reçoit la réponse d'association à la couche MAC de l'appareil de passerelle, il rejoint le réseau.

Lorsque l'appareil de routage reçoit une demande de rattachement issue d'un appareil de terrain, il convient qu'il produise une demande de rattachement de la NL et envoie cette demande à l'appareil de passerelle. Si le nouvel appareil de terrain reçoit la réponse de rattachement, le processus de rattachement est terminé.

La Figure 42 représente un exemple de processus de rattachement d'un appareil de terrain dans le réseau hiérarchique qui est la combinaison de la configuration en étoile et de la configuration maillée.

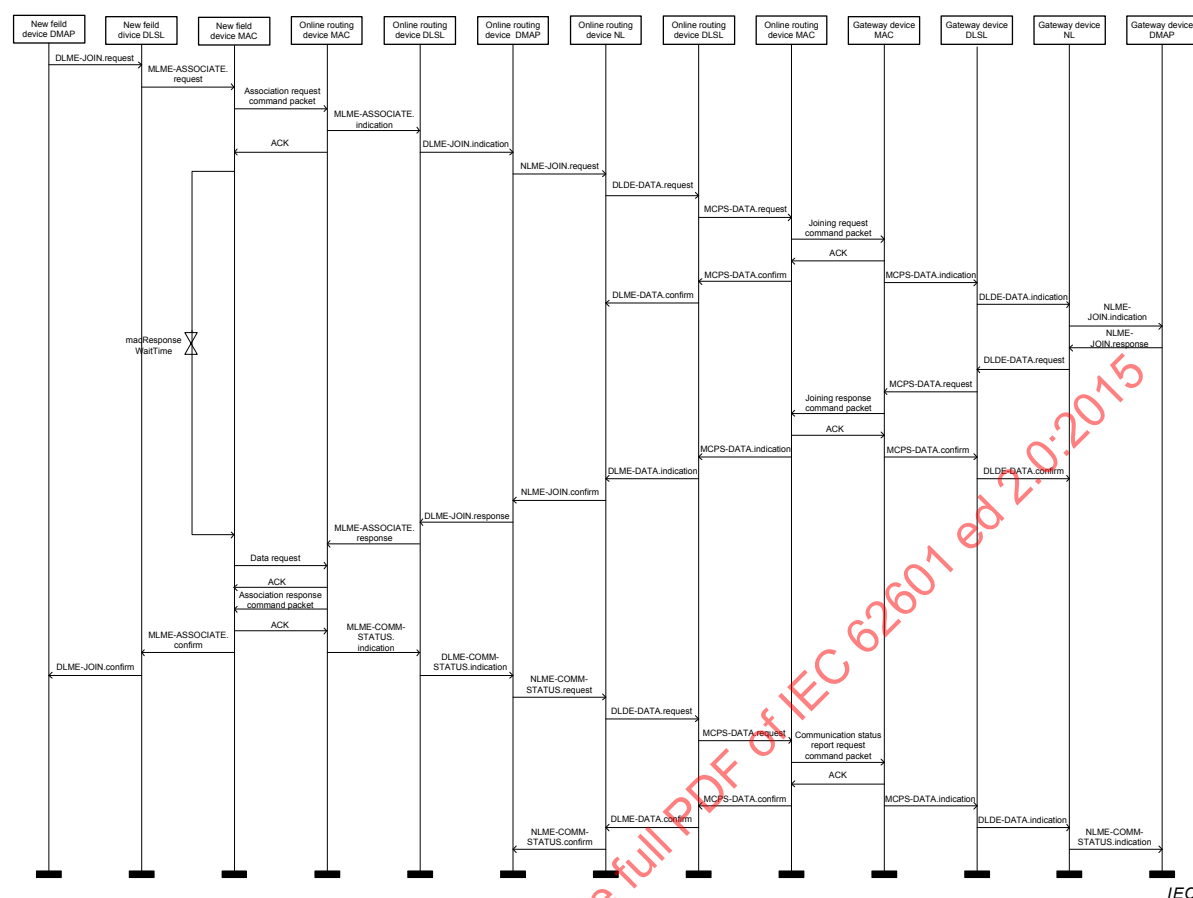

| Anglais                                            | Français                                                               |
|----------------------------------------------------|------------------------------------------------------------------------|
| New field device DMAP                              | DMAP du nouvel appareil de terrain                                     |
| New field device DLSL                              | DLSL du nouvel appareil de terrain                                     |
| New field device MAC                               | MAC du nouvel appareil de terrain                                      |
| Online routing device MAC                          | MAC de l'appareil de routage en ligne                                  |
| Online routing device DLSL                         | DLSL de l'appareil de routage en ligne                                 |
| Online routing device DMAP                         | DMAP de l'appareil de routage en ligne                                 |
| Online routing device NL                           | NL de l'appareil de routage en ligne                                   |
| Gateway device                                     | Appareil de passerelle                                                 |
| Association request command packet                 | Paquet de commande de demande d'association                            |
| Joining request command packet                     | Paquet de commande de demande de rattachement                          |
| Joining response command packet                    | Paquet de commande de réponse de rattachement                          |
| Data request                                       | Demande de données                                                     |
| ACK                                                | ACK                                                                    |
| Association response command packet                | Paquet de commande de réponse d'association                            |
| Communication status report request command packet | Paquet de commande de demande de rapport sur l'état des communications |

**Figure 42 – Séquence temporelle pour le rattachement d'appareil de terrain via un appareil de routage**


#### 9.5.3.5.2 Séquence temporelle pour le rattachement d'appareil de routage

Si un appareil de routage souhaite se rattacher au réseau maillé, il convient qu'il envoie une demande de rattachement à l'appareil de passerelle, et la demande inclut l'adresse longue de cet appareil de routage. Les processus de rattachement pour les appareils de routage sont de

deux sortes: rattachement en un saut et rattachement multisaut. Si le nouvel appareil de routage envoie une demande de rattachement à l'appareil de passerelle, le processus de rattachement en un saut est utilisé; si le nouvel appareil de routage se rattache au réseau maillé via un autre appareil de routage existant, le processus de rattachement multisaut est utilisé.

L'appareil de passerelle reçoit la demande de rattachement et informe le NM. Il convient que le NM retourne une réponse. Si le nouvel appareil de routage reçoit la réponse, son processus de rattachement est terminé.


La Figure 43 et la Figure 44 représentent des exemples du processus de rattachement des appareils de routage.

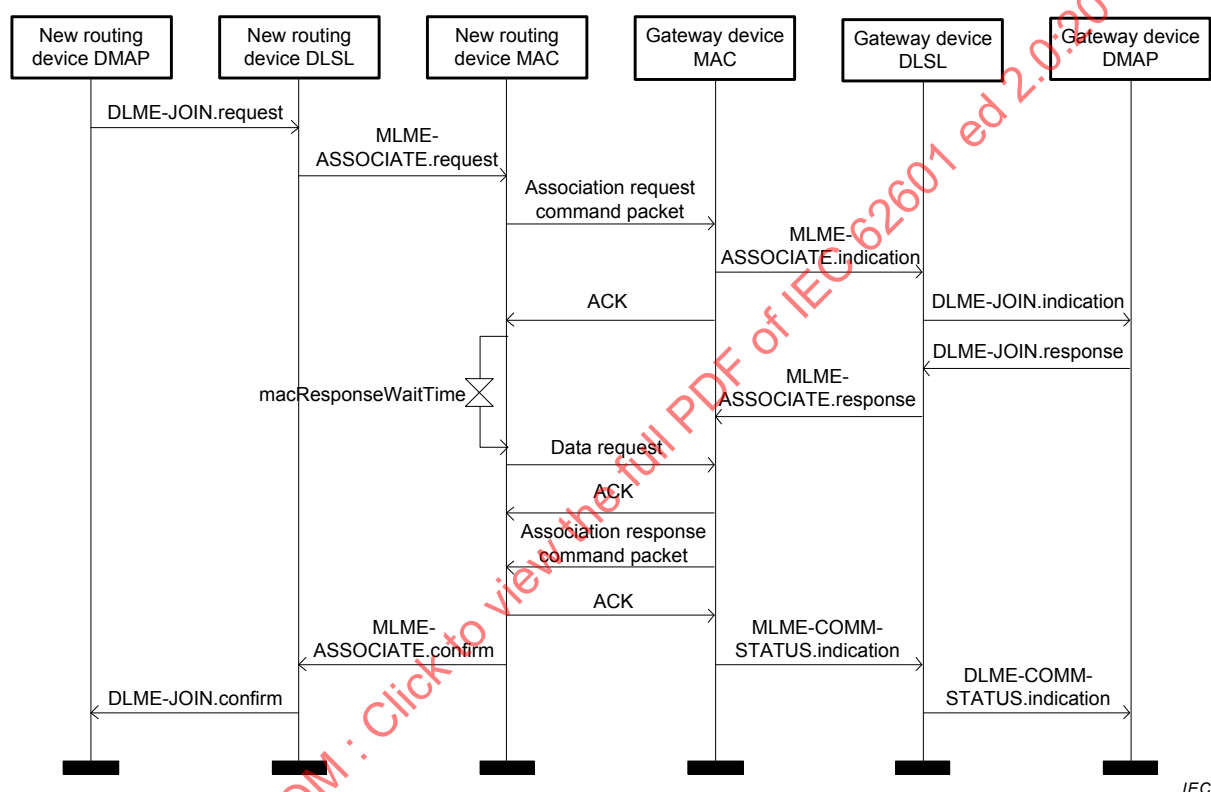

| Anglais                             | Français                                    |
|-------------------------------------|---------------------------------------------|
| New routing device DMAP             | DMAP du nouvel appareil de routage          |
| New routing device DLSL             | DLSL du nouvel appareil de routage          |
| New routing device MAC              | MAC du nouvel appareil de routage           |
| Gateway device MAC                  | MAC de l'appareil passerelle                |
| Gateway device DLSL                 | DLSL de l'appareil passerelle               |
| Gateway device DMAP                 | DMAP de l'appareil passerelle               |
| Association request command packet  | Paquet de commande de demande d'association |
| Data request                        | Demande de données                          |
| ACK                                 | ACK                                         |
| Association response command packet | Paquet de commande de réponse d'association |

**Figure 43 – Processus de rattachement en un saut d'un appareil de routage**

Se référer à l'IEEE 802.15.4-2011 (Figure 17 et Figure 18) pour le diagramme de séquence de message détaillé entre les entités MAC homologues.

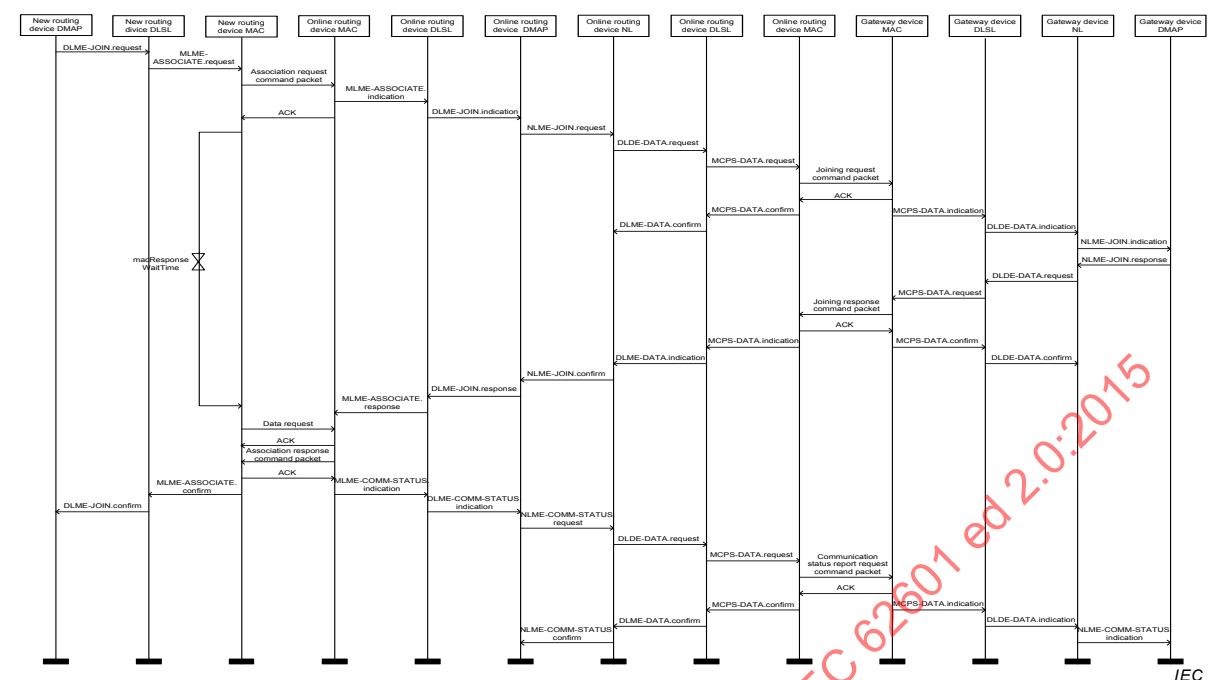

| Anglais                                            | Français                                                               |
|----------------------------------------------------|------------------------------------------------------------------------|
| New routing device DMAP                            | DMAP du nouvel appareil de routage                                     |
| New routing device DLSL                            | DLSL du nouvel appareil de routage                                     |
| New routing device MAC                             | MAC du nouvel appareil de routage                                      |
| Online routing device MAC                          | MAC de l'appareil de routage en ligne                                  |
| Online routing device DLSL                         | DLSL de l'appareil de routage en ligne                                 |
| Online routing device DMAP                         | DMAP de l'appareil de routage en ligne                                 |
| Online routing device NL                           | NL de l'appareil de routage en ligne                                   |
| Gateway device MAC                                 | MAC de l'appareil passerelle                                           |
| Gateway device DLSL                                | DLSL de l'appareil passerelle                                          |
| Gateway device NL                                  | NL de l'appareil passerelle                                            |
| Gateway device DMAP                                | DMAP de l'appareil passerelle                                          |
| Association request command packet                 | Paquet de commande de demande d'association                            |
| Joining request command packet                     | Paquet de commande de demande de rattachement                          |
| Joining response command packet                    | Paquet de commande de réponse de rattachement                          |
| Data request                                       | Demande de données                                                     |
| ACK                                                | ACK                                                                    |
| Association response command packet                | Paquet de commande de réponse d'association                            |
| Communication status report request command packet | Paquet de commande de demande de rapport sur l'état des communications |

**Figure 44 – Processus de rattachement multisaut de l'appareil de routage**

Avant de se rattacher au réseau, les appareils de terrain et les appareils de routage règlent DeviceState (voir Tableau 20) sur 0 pour indiquer que les appareils ne se sont pas rattachés au réseau. Si les nouveaux appareils ont envoyé la demande de rattachement mais qu'ils n'ont pas reçu la réponse de rattachement, ils règlent DeviceState sur 1 pour indiquer que les appareils rejoignent le réseau. Si les nouveaux appareils ont envoyé la demande de rattachement et qu'ils ont reçu la réponse de rattachement, ils règlent DeviceState sur 3 pour indiquer que les appareils ont rejoint le réseau. Si le processus de rattachement nécessite une authentification de sécurité, les appareils règlent DeviceState sur 3 durant le processus d'authentification. Pour plus d'informations sur l'attribut DeviceState, voir le Tableau 20.



## 9.5.4 Services de départ de réseau

### 9.5.4.1 NLME-LEAVE.request

La sémantique de NLME-LEAVE.request est décrite comme suit:

```
NLME-LEAVE.request (
 SrcAddr,
 DstAddr,
 LeavingReason
)
```

Le Tableau 81 spécifie les paramètres pour NLME-LEAVE.request.

**Tableau 81 – Paramètres de NLME-LEAVE.request**

| Nom           | Type de données | Plage valide | Description                                                                                                                                               |
|---------------|-----------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| SrcAddr       | Unsigned16      | 0 à 65 535   | Adresse de l'appareil auquel la réponse de départ doit être envoyée                                                                                       |
| LeavingReason | Unsigned8       | 0 à 255      | 1 = départ passif d'un appareil de routage ou d'un appareil de terrain<br>2 = départ actif d'un appareil de routage<br>Les autres valeurs sont réservées. |

Lorsqu'un appareil de routage souhaite quitter le réseau ou que l'appareil de passerelle souhaite qu'un appareil quitte le réseau, le DMAP invoque la primitive NLME-LEAVE.request et demande à sa couche réseau (NL) de démarrer le processus de départ.

### 9.5.4.2 NLME-LEAVE.indication

La sémantique de NLME-LEAVE.indication est décrite comme suit:

```
NLME-LEAVE.indication (
 DeviceAddr,
 LeavingReason
)
```

Le Tableau 82 spécifie les paramètres pour NLME-LEAVE.indication.

**Tableau 82 – Paramètres de NLME-LEAVE.indication**

| Nom           | Type de données | Plage valide | Description                                                                                                                                               |
|---------------|-----------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------|
| DeviceAddr    | Unsigned16      | 0 à 65 535   | Adresse de l'appareil invoquant la demande de départ                                                                                                      |
| LeavingReason | Unsigned8       | 0 à 255      | 1 = départ passif d'un appareil de routage ou d'un appareil de terrain<br>2 = départ actif d'un appareil de routage<br>Les autres valeurs sont réservées. |

A la réception d'un paquet de commande de demande de départ, la NL invoquera la primitive NLME-LEAVE.indication et informera le DMAP.

### 9.5.4.3 NLME-LEAVE.response

La sémantique de NLME-LEAVE.response est décrite comme suit:

```
NLME-LEAVE.response (
 DevAddr,
 Statut
)
```

Le Tableau 83 spécifie les paramètres pour NLME-LEAVE.response.

**Tableau 83 – Paramètres de NLME-LEAVE.response**

| Nom     | Type de données | Plage valide | Description                                                                                                              |
|---------|-----------------|--------------|--------------------------------------------------------------------------------------------------------------------------|
| DevAddr | Unsigned16      | 0 à 65 535   | Adresse de l'appareil qui a demandé le départ                                                                            |
| Statut  | Unsigned8       | 0 à 255      | Résultat d'exécution de la demande:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

La primitive NLME-LEAVE.response est utilisée par le DMAP ou la NM pour signaler à l'appareil partant si la demande de départ a été acceptée ou non.

### 9.5.4.4 NLME-LEAVE.confirm

La sémantique de NLME-LEAVE.confirm est décrite comme suit:

```
NLME-LEAVE.confirm (
 DevAddr,
 Statut
)
```

Le Tableau 84 spécifie les paramètres pour NLME-LEAVE.confirm.

**Tableau 84 – Paramètres de NLME-LEAVE.confirm**

| Nom     | Type de données | Plage valide | Description                                                                                                              |
|---------|-----------------|--------------|--------------------------------------------------------------------------------------------------------------------------|
| DevAddr | Unsigned16      | 0 à 65 535   | Adresse de l'appareil qui a demandé le départ ou à qui l'appareil de passerelle a demandé de quitter le réseau           |
| Statut  | Unsigned8       | 0 à 255      | Résultat d'exécution de la demande:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |


NLME-LEAVE.confirment générée par la NL en réponse à NLME-LEAVE.request. NLME-LEAVE.confirm retourne un état soit SUCCESS (succès) indiquant que la demande d'émettre a réussi, soit FAILURE (échec) indiquant que la demande d'émettre a échoué.

#### 9.5.4.5 Séquence temporelle pour le départ d'appareil

#### 9.5.4.5.1 Séquence temporelle pour le départ d'appareil de terrain

Les processus de départ des appareils de terrain comprennent les deux types suivants.

- a) Départ actif. Pour un appareil de terrain, le DMAP invoque DLME-LEAVE.request pour envoyer une demande de départ à l'appareil de routage ou à l'appareil de passerelle qui est sa tête de groupe. Après avoir reçu de l'appareil de terrain le paquet de commande de demande de départ, la NL de l'appareil de routage ou de l'appareil de passerelle informe le DMAP en émettant une DLME-LEAVE.indication. Si l'appareil de terrain quitte l'appareil de routage, l'appareil de routage envoie NLME-RPT-CLRMEM.request à l'appareil de passerelle. La Figure 45 représente la séquence temporelle pour le départ actif d'un appareil de terrain.

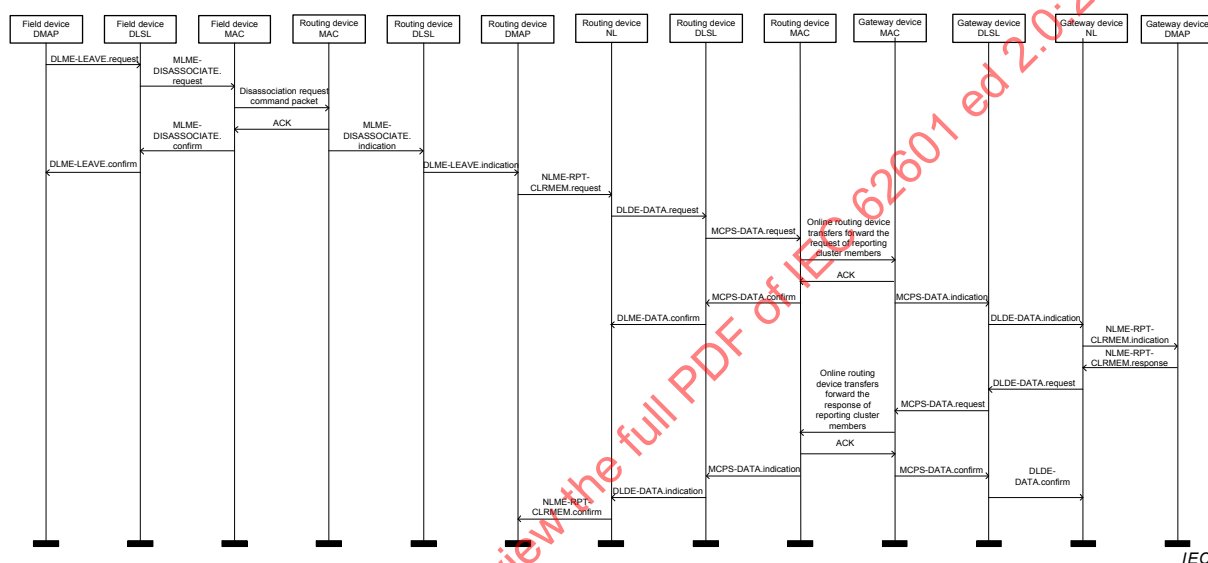


| Anglais                                                                          | Français                                                                             |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Field device DMAP                                                                | DMAP de l'appareil de terrain                                                        |
| Field device DLSL                                                                | DLSL de l'appareil de terrain                                                        |
| Field device MAC                                                                 | MAC de l'appareil de terrain                                                         |
| Routing device MAC                                                               | MAC de l'appareil de routage                                                         |
| Routing device DLSL                                                              | DLSL de l'appareil de routage                                                        |
| Routing device DMAP                                                              | DMAP de l'appareil de routage                                                        |
| Routing device NL                                                                | NL de l'appareil de routage                                                          |
| Gateway device MAC                                                               | MAC de l'appareil passerelle                                                         |
| Gateway device DLSL                                                              | DLSL de l'appareil passerelle                                                        |
| Gateway device NL                                                                | NL de l'appareil passerelle                                                          |
| Gateway device DMAP                                                              | DMAP de l'appareil passerelle                                                        |
| Disassociation request command packet                                            | Paquet de commande de demande de dissociation                                        |
| Online routing device transfers forward the request of reporting cluster members | L'appareil de routage en ligne retransmet la demande de rapport d'éléments de groupe |

**Figure 45 – Processus de départ actif d'un appareil de terrain (appareil de routage partant)**

Se référer à l'IEEE 802.15.4-2011 (Figure 27) pour le diagramme de séquence de message détaillé entre les entités MAC homologues.

- b) Départ passif. Le DMAP d'un appareil de routage demande pour son appareil de terrain de quitter le réseau par la primitive DLME-LEAVE.request. Après avoir reçu cette demande, l'appareil de terrain retourne un acquittement (ACK). Si l'appareil de routage reçoit la primitive DLME-LEAVE.confirm, il envoie la demande de rapport sur l'élément de groupe à l'appareil de passerelle. La Figure 46 représente la séquence temporelle pour le départ passif d'un appareil de terrain.

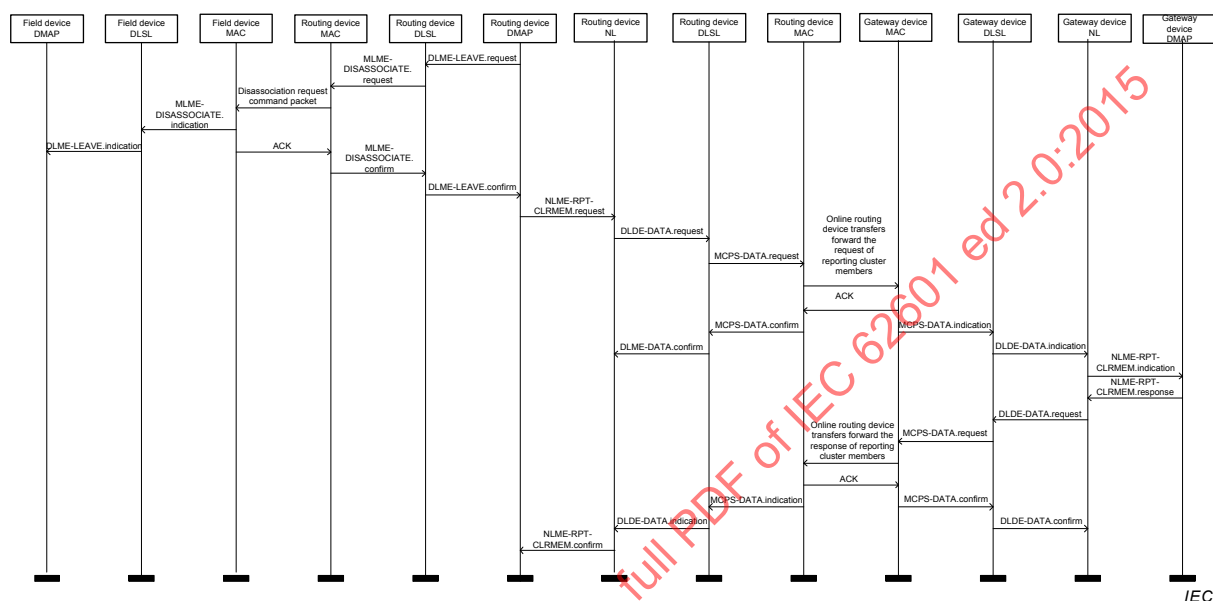

| Anglais                                                                          | Français                                                                             |
|----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
| Field device DMAP                                                                | DMAP de l'appareil de terrain                                                        |
| Field device DLSL                                                                | DLSL de l'appareil de terrain                                                        |
| Field device MAC                                                                 | MAC de l'appareil de terrain                                                         |
| Routing device MAC                                                               | MAC de l'appareil de routage                                                         |
| Routing device DLSL                                                              | DLSL de l'appareil de routage                                                        |
| Routing device DMAP                                                              | DMAP de l'appareil de routage                                                        |
| Routing device NL                                                                | NL de l'appareil de routage                                                          |
| Gateway device MAC                                                               | MAC de l'appareil passerelle                                                         |
| Gateway device DLSL                                                              | DLSL de l'appareil passerelle                                                        |
| Gateway device NL                                                                | NL de l'appareil passerelle                                                          |
| Gateway device DMAP                                                              | DMAP de l'appareil passerelle                                                        |
| Disassociation request command packet                                            | Paquet de commande de demande de dissociation                                        |
| Online routing device transfers forward the request of reporting cluster members | L'appareil de routage en ligne retransmet la demande de rapport d'éléments de groupe |

**Figure 46 – Départ passif d'un appareil de terrain**


Les appareils de routage se connectent tant au réseau maillé qu'au réseau en étoile. Par conséquent, il convient que l'appareil de routage informe de son départ tant l'appareil de passerelle que ses appareils de terrain.

Se référer à l'IEEE 802.15.4-2011, Figure 27 pour le diagramme de séquence de message détaillé entre les entités MAC homologues.

### 9.5.4.5.2 Séquence temporelle pour le départ d'appareil de routage

Les processus de départ des appareils de routage comprennent les deux types suivants.

- a) Départ actif. Le DMAP d'un appareil de routage envoie sa demande de départ à l'appareil de passerelle par la primitive NLME-LEAVE.request. Après avoir reçu la demande de départ, l'appareil de passerelle retourne une réponse de départ. Lorsque le DMAP de l'appareil de routage partant reçoit NLME-LEAVE.confirm, il informe ses éléments de groupe. La Figure 47 représente la séquence temporelle pour le départ actif d'un appareil de routage.

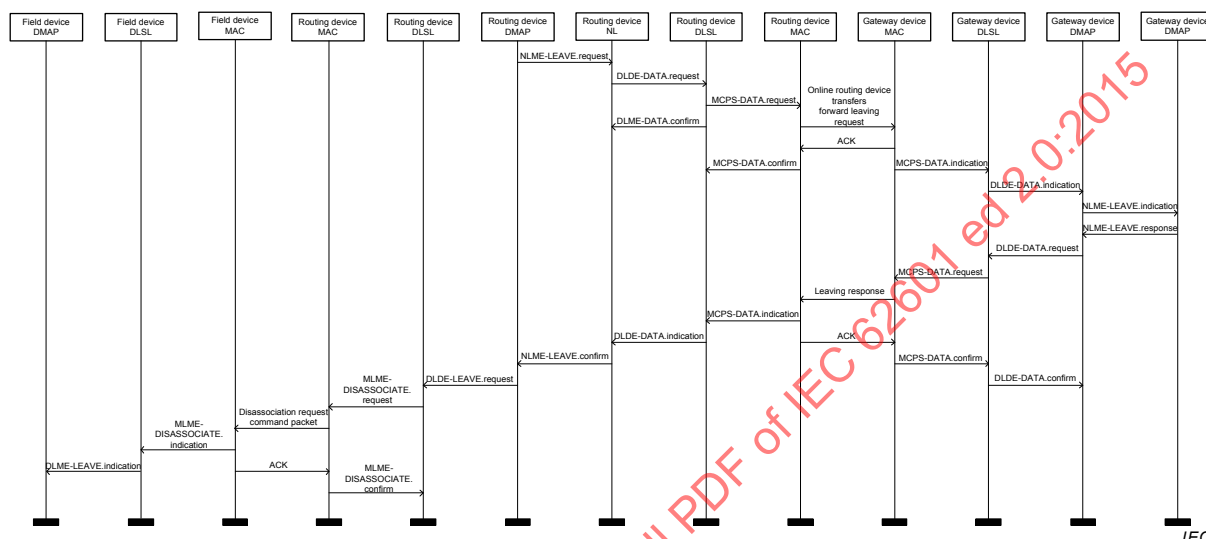

| Anglais                                                     | Français                                                       |
|-------------------------------------------------------------|----------------------------------------------------------------|
| Field device DMAP                                           | DMAP de l'appareil de terrain                                  |
| Field device DLNL                                           | DLNL de l'appareil de terrain                                  |
| Field device MAC                                            | MAC de l'appareil de terrain                                   |
| Routing device MAC                                          | MAC de l'appareil de routage                                   |
| Routing device DLNL                                         | DLNL de l'appareil de routage                                  |
| Routing device DMAP                                         | DMAP de l'appareil de routage                                  |
| Routing device NL                                           | NL de l'appareil de routage                                    |
| Gateway device MAC                                          | MAC de l'appareil passerelle                                   |
| Gateway device DLNL                                         | DLNL de l'appareil passerelle                                  |
| Gateway device NL                                           | NL de l'appareil passerelle                                    |
| Gateway device DMAP                                         | DMAP de l'appareil passerelle                                  |
| Leaving response                                            | Réponse de départ                                              |
| Online routing device transfers forward the leaving request | L'appareil de routage en ligne retransmet la demande de départ |
| Disassociation request command packet                       | Paquet de commande de demande de dissociation                  |

**Figure 47 – Processus de départ actif d'un appareil de routage**

Se référer à l'IEEE 802.15.4-2011, Figure 27 pour le diagramme de séquence de message détaillé entre les entités MAC homologues.

- b) Départ passif. Si l'appareil de passerelle souhaite qu'un appareil de routage quitte le réseau, il produit un paquet de demande de départ de NL et l'envoie à l'appareil de routage désigné. Après avoir reçu de l'appareil de passerelle le paquet de demande de départ, l'appareil de routage informe tous ses éléments de groupe de son départ. La Figure 48 représente la séquence temporelle pour le départ passif d'un appareil de routage.

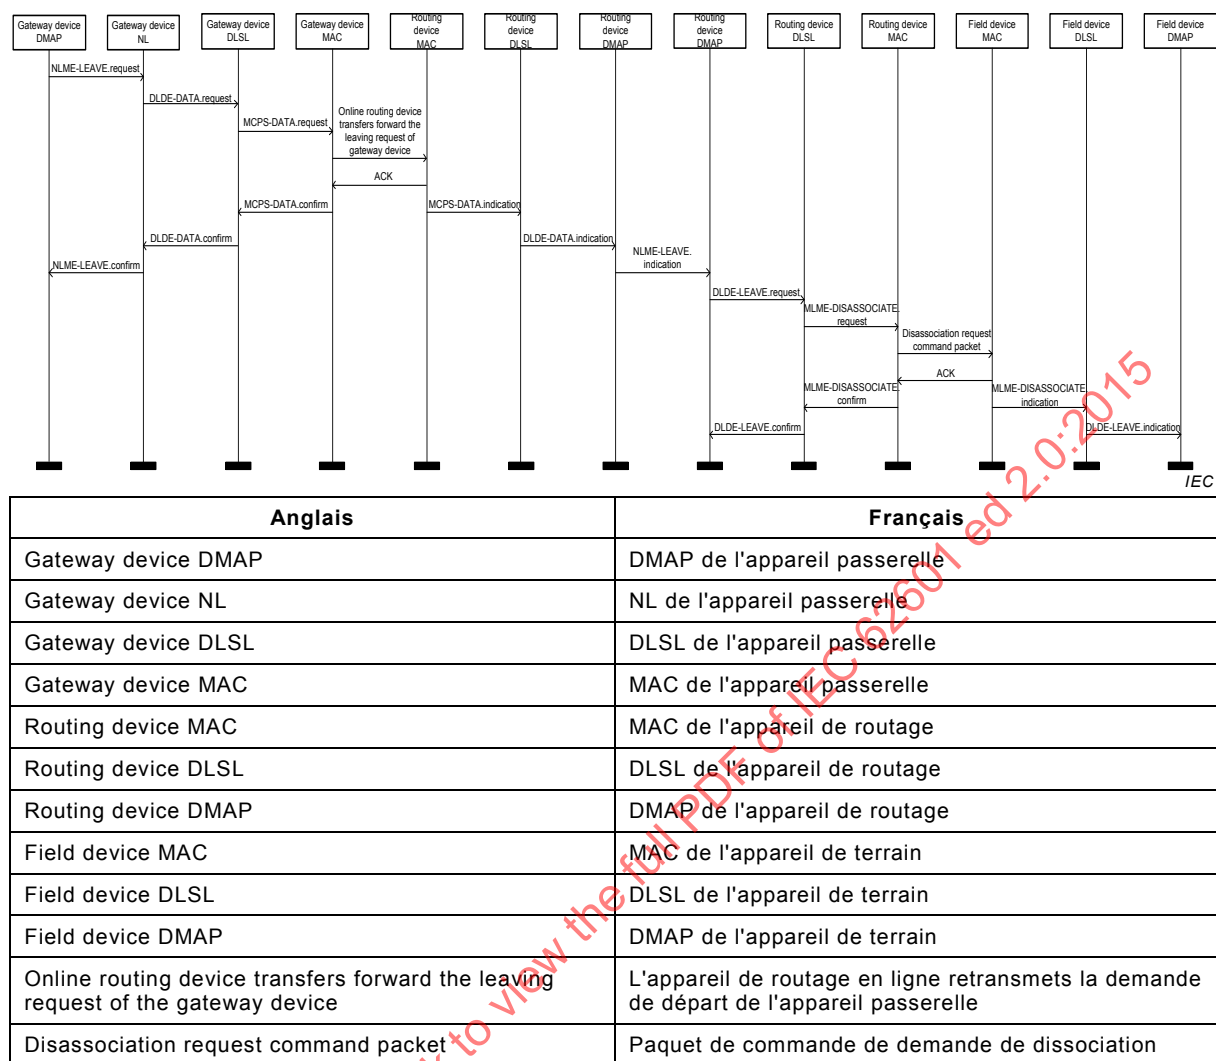


**Figure 48 – Processus de départ passif d'un appareil de routage**

Se référer à l'IEEE 802.15.4-2011, Figure 20 pour le diagramme de séquence de message détaillé entre les entités MAC homologues.

### 9.5.5 Services de rapport sur l'élément de groupe

#### 9.5.5.1 NLME-RPT-CLRMEM.request

La primitive NLME-RPT-CLRMEM.request est utilisée par les appareils de routage pour rapporter les informations des éléments de groupe à l'appareil de passerelle.

La sémantique de NLME-RPT-CLRMEM.request est décrite comme suit:

NLME-RPT-CLRMEM.request (

SrcAddr,  
DstAddr,  
ClrMemFlag,  
ClrMemAddr

)

Le Tableau 85 spécifie les paramètres pour NLME-RPT-CLRMEM.request.

**Tableau 85 – Paramètres de NLME-RPT-CLRMEM.request**

| Nom        | Type de données | Plage valide | Description                                                                                                          |
|------------|-----------------|--------------|----------------------------------------------------------------------------------------------------------------------|
| SrcAddr    | Unsigned16      | 0 à 65 535   | Adresse source                                                                                                       |
| DstAddr    | Unsigned16      | 0 à 65 535   | Adresse de destination                                                                                               |
| ClrMemFlag | Unsigned8       | 0 à 255      | Fanion de la modification d'élément de groupe:<br>0 = Ajouter<br>1 = Supprimer<br>Les autres valeurs sont réservées. |
| ClrMemAddr | Unsigned16      | 0 à 65 535   | Adresse réseau de l'élément de groupe modifié                                                                        |

#### 9.5.5.2 NLME-RPT-CLRMEM.confirm

La primitive NLME-RPT-CLRMEM.confirm est utilisée par la NL pour envoyer le résultat de NLME-RPT-CLRMEM.request au DMAP.

La sémantique de NLME-RPT-CLRMEM.confirm est décrite comme suit:

```
NLME-RPT-CLRMEM.confirm (
 Statut
)
```

Le Tableau 86 spécifie les paramètres pour NLME-RPT-CLRMEM.confirm.

**Tableau 86 – Paramètres de NLME-RPT-CLRMEM.confirm**

| Nom    | Type de données | Plage valide | Description                                                                                                                       |
|--------|-----------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------|
| Statut | Unsigned8       | 0 à 255      | Résultat du rapport sur l'élément de groupe:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

#### 9.5.5.3 NLME-RPT-CLRMEM.indication

La primitive NLME-RPT-CLRMEM.indication est utilisée par la NL pour rapporter la réception réussie du paquet de demande de rapport sur l'élément de groupe.

La sémantique de NLME-RPT-CLRMEM.indication est décrite comme suit:

```
NLME-RPT-CLRMEM.indication (
 SrcAddr,
 ClrMemFlag,
 ClrMemAddr
)
```

Le Tableau 85 spécifie les paramètres pour NLME-RPT-CLRMEM.indication.

#### 9.5.5.4 NLME-RPT-CLRMEM.response

La primitive NLME-RPT-CLRMEM.response est utilisée pour répondre à NLME-RPT-CLRMEM.indication.

La sémantique de NLME-RPT-CLRMEM.response est décrite comme suit:

NLME-RPT-CLRMEM.response (

DstAddr,  
Statut

)

Le Tableau 87 spécifie les paramètres pour NLME-RPT-CLRMEM.response.


**Tableau 87 – Paramètres de NLME-RPT-CLRMEM.response**

| Nom     | Type de données | Plage valide | Description                                                                                                                                |
|---------|-----------------|--------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| DstAddr | Unsigned16      | 0 à 65 535   | Adresse de destination                                                                                                                     |
| Statut  | Unsigned8       | 0 à 255      | Résultat retourné du rapport sur l'élément de groupe:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

#### 9.5.5.5 Séquence temporelle pour la production de rapport sur l'élément de groupe

Le diagramme de séquence temporelle pour la production de rapport sur l'élément de groupe est représenté à la Figure 49.



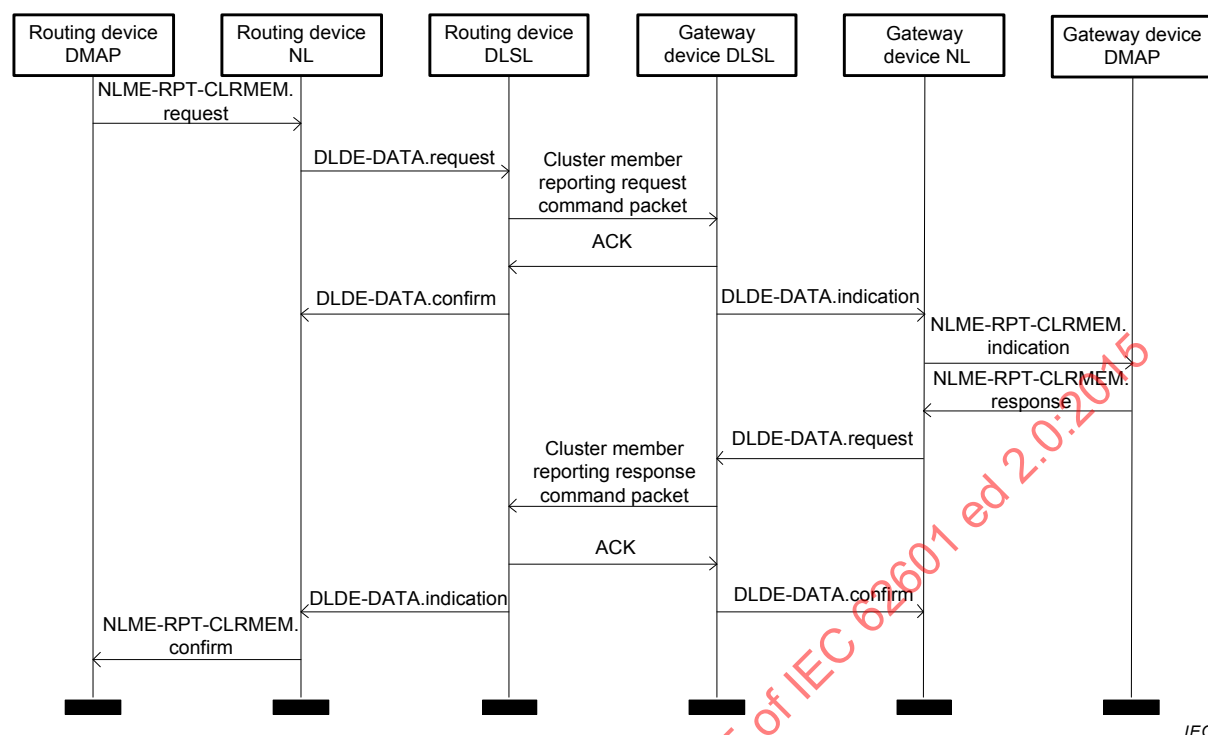

| Anglais                                          | Français                                                                        |
|--------------------------------------------------|---------------------------------------------------------------------------------|
| Routing device DMAP                              | DMAP de l'appareil de routage                                                   |
| Routing device NL                                | NL de l'appareil de routage                                                     |
| Routing device DLSL                              | DLSL de l'appareil de routage                                                   |
| Gateway device DLSL                              | DLSL de l'appareil passerelle                                                   |
| Gateway device NL                                | NL de l'appareil passerelle                                                     |
| Gateway device DMAP                              | DMAP de l'appareil passerelle                                                   |
| Cluster member reporting request command packet  | Paquet de commande de demande pour la production de rapport d'élément de groupe |
| Cluster member reporting response command packet | Paquet de commande de réponse pour la production de rapport d'élément de groupe |

Figure 49 – Processus de production de rapport sur l'élément de groupe

## 9.5.6 Services de rapport sur les informations de voisins

### 9.5.6.1 NLME-NEIGHBOUR-INFO.request

La primitive NLME-NEIGHBOUR-INFO.request est utilisée par un appareil de routage pour rapporter ses informations de voisins à un saut à l'appareil de passerelle. Cette utilisation de NLME-NEIGHBOUR-INFO.request est déclenchée uniquement lorsqu'un voisin se rattache au réseau WIA-PA ou le quitte. Le voisin proprement dit et son voisin de prochain saut vers l'appareil de passerelle (GW) rapporte les informations de voisins à l'appareil de passerelle (GW).

La sémantique de NLME-NEIGHBOUR-INFO.request est décrite comme suit:

```

NLME-NEIGHBOUR-INFO.request (
 SrcAddr,
 DstAddr,
 NeighbourCount,
 NeighbourStructure
)

```

Le Tableau 88 spécifie les paramètres pour NLME-NEIGHBOUR-INFO.request.

**Tableau 88 – Paramètres de NLME-NEIGHBOUR-INFO.request**

| Nom                | Type de données                                    | Plage valide | Description                    |
|--------------------|----------------------------------------------------|--------------|--------------------------------|
| SrcAddr            | Unsigned16                                         | 0 à 65 535   | Adresse source de 16 bits      |
| DstAddr            | Unsigned16                                         | 0 à 65 535   | Adresse de destination 16 bits |
| NeighbourCount     | Unsigned8                                          | 0 à 255      | Nombre de voisins              |
| NeighbourStructure | Structure<br>Neighbour_Struct (voir<br>Tableau 18) |              | Informations des voisins       |

#### 9.5.6.2 NLME-NEIGHBOUR-INFO.indication

NLME-NEIGHBOUR-INFO.indication est utilisée pour que la DLSL rapporte au DMAP le paquet de NLME-NEIGHBOUR-INFO.request.

La sémantique de NLME-NEIGHBOUR-INFO.indication est décrite comme suit:

NLME-NEIGHBOUR-INFO.indication (

SrcAddr,  
NeighbourCount,  
NeighbourStructure  
)

Le Tableau 88 spécifie les paramètres pour NLME-NEIGHBOUR-INFO.indication.

#### 9.5.6.3 NLME-NEIGHBOUR-INFO.confirm

NLME-NEIGHBOUR-INFO.confirm est utilisée pour rapporter l'envoi réussi des paquets de demande de rapport sur les informations des voisins.

La sémantique de NLME-NEIGHBOUR-INFO.confirm est décrite comme suit:

NLME-NEIGHBOUR-INFO.confirm (

Statut  
)


Le Tableau 89 spécifie les paramètres pour NLME-NEIGHBOUR-INFO.confirm.

**Tableau 89 – Paramètres de NLME-NEIGHBOUR-INFO.confirm**

| Nom    | Type de données | Plage valide | Description                                                                                                                                                 |
|--------|-----------------|--------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Statut | Unsigned8       | 0 à 255      | Production de rapport sur le résultat des informations de voisins:<br><br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

#### 9.5.6.4 Séquence temporelle de production de rapport sur les informations de voisins

Le diagramme de séquence temporelle pour la production de rapport sur les informations de voisins est représenté à la Figure 50.

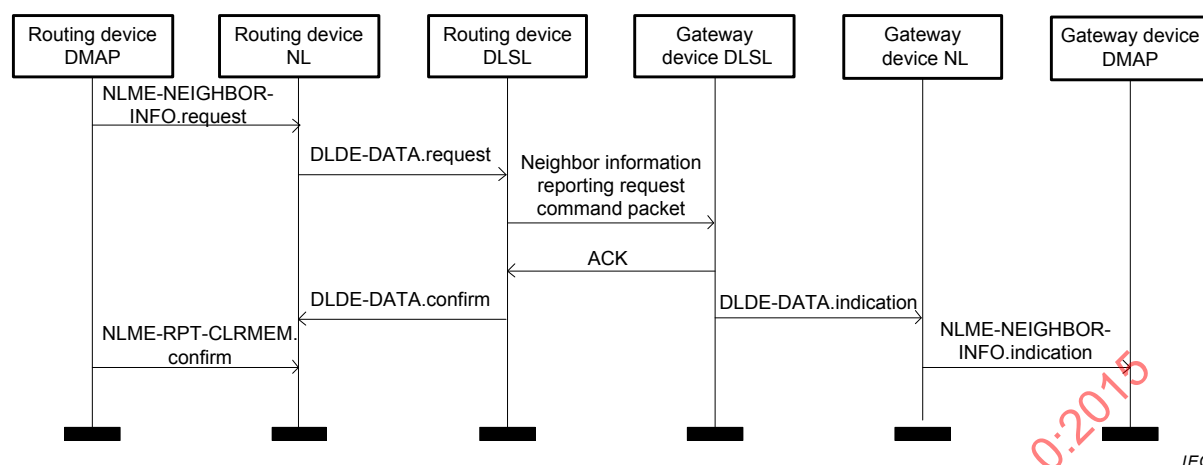

IEC

| Anglais                                    | Français                                                 |
|--------------------------------------------|----------------------------------------------------------|
| Routing device DMAP                        | DMAP de l'appareil de routage                            |
| Routing device NL                          | NL de l'appareil de routage                              |
| Routing device DLSL                        | DLSL de l'appareil de routage                            |
| Gateway device DLSL                        | DLSL de l'appareil passerelle                            |
| Gateway device NL                          | NL de l'appareil passerelle                              |
| Gateway device DMAP                        | DMAP de l'appareil passerelle                            |
| Neighbour reporting request command packet | Paquet de commande de demande de rapport sur les voisins |

**Figure 50 – Processus de production de rapport sur les informations de voisins**

## 9.5.7 Services d'allocation d'itinéraire

### 9.5.7.1 Services d'ajout d'itinéraire

#### 9.5.7.1.1 NLME-ADD\_ROUTE.request

La primitive NLME-ADD\_ROUTE.request est utilisée pour ajouter un enregistrement à la table de routage d'un appareil de routage.

La sémantique de NLME-ADD\_ROUTE.request est décrite comme suit:

NLME-ADD\_ROUTE.request (

DstAddr,

RoutingTableRecord

)

Le Tableau 90 spécifie les paramètres pour NLME-ADD\_ROUTE.request.

**Tableau 90 – Paramètres de NLME-ADD\_ROUTE.request**

| Nom                | Type de données                                  | Plage valide | Description                                     |
|--------------------|--------------------------------------------------|--------------|-------------------------------------------------|
| DstAddr            | Unsigned16                                       | 0 à 65 535   | Adresse courte 16 bits de l'appareil de routage |
| RoutingTableRecord | Structure<br>NLRoute_Struct<br>(voir Tableau 15) |              | Élément de la table de routage                  |

#### 9.5.7.1.2 NLME-ADD\_ROUTE.confirm

La primitive NLME-ADD\_ROUTE.confirm retourne le résultat d'une NLME-ADD\_ROUTE.request.

La sémantique de NLME\_ADD-ROUTE.confirm est décrite comme suit:

```
NLME-ADD_ROUTE.confirm(
 Statut
)
```

Le Tableau 91 spécifie les paramètres pour NLME-ADD\_ROUTE.confirm.

**Tableau 91 – Paramètres de NLME-ADD\_ROUTE.confirm**

| Nom    | Type de données | Plage valide | Description                                                                                                                 |
|--------|-----------------|--------------|-----------------------------------------------------------------------------------------------------------------------------|
| Statut | Unsigned8       | 0 à 255      | Résultat d'une NLME-ADD_ROUTE.request:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

A la réception de NLME-ADD\_ROUTE.request, il convient que la NL émette un paquet de demande d'ajout d'itinéraire (adding-route-request packet) vers l'appareil de routage et il convient qu'il retourne une NLME-ADD\_ROUTE.confirm pour rapporter le résultat.

#### 9.5.7.1.3 NLME-ADD\_ROUTE.indication

La primitive NLME-ADD\_ROUTE.indication est utilisée pour rapporter au DMAP qu'un appareil a reçu avec succès un paquet de demande d'ajout d'itinéraire.

La sémantique de NLME\_ADD-ROUTE.confirm est décrite comme suit:

```
NLME-ADD_ROUTE.indication (
 RoutingTableRecord
)
```

Le Tableau 90 spécifie les paramètres pour NLME-ADD\_ROUTE.indication.

#### 9.5.7.1.4 NLME-ADD\_ROUTE.response

La primitive NLME-ADD\_ROUTE.response est la réponse de NLME-ADD\_ROUTE.indication.

La sémantique de NLME-ADD\_ROUTE.response est décrite comme suit:

```
NLME-ADD_ROUTE.response (
 Statut
)
```

Le Tableau 91 spécifie les paramètres pour NLME-ADD\_ROUTE.response.

#### 9.5.7.1.5 Séquence temporelle pour l'ajout d'itinéraire

Le diagramme de séquence temporelle pour ajouter un enregistrement à la table de routage d'un appareil de routage est représenté à la Figure 51.

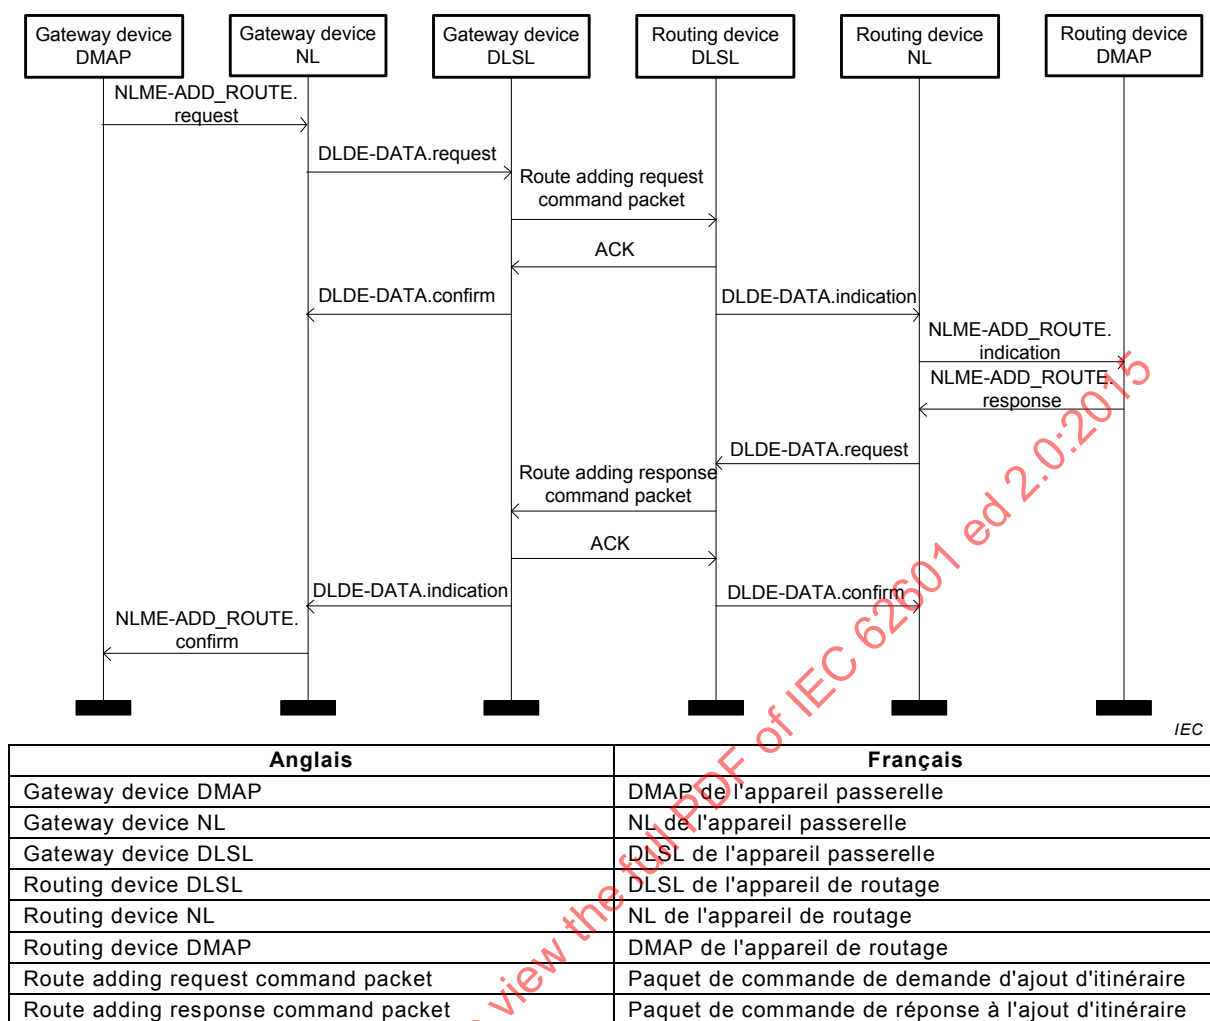


Figure 51 – Séquence temporelle pour l'ajout d'itinéraire

## 9.5.7.2 Services de mise à jour d'itinéraire

### 9.5.7.2.1 NLME-UPDATE\_ROUTE.request

NLME-UPDATE\_ROUTE.request met à jour un enregistrement dans la table de routage d'un appareil de routage.

La sémantique de NLME-UPDATE\_ROUTE.request est décrite comme suit:

```
NLME-UPDATE_ROUTE.request (
 DstAddr,
 RoutingTableRecord
)
```

Le Tableau 92 spécifie les paramètres pour NLME-UPDATE\_ROUTE.request.

Tableau 92 – Paramètres de NLME-UPDATE\_ROUTE.request

| Nom                | Type de données                                  | Plage valide | Description                                     |
|--------------------|--------------------------------------------------|--------------|-------------------------------------------------|
| DstAddr            | Unsigned16                                       | 0 à 65 535   | Adresse courte 16 bits de l'appareil de routage |
| RoutingTableRecord | Structure<br>NLRoute_Struct<br>(voir Tableau 15) |              | Élément de la table de routage                  |

Le gestionnaire de réseau (NM) invoque NLME-UPDATE\_ROUTE.request pour mettre à jour un enregistrement dans la table de routage des appareils de routage.

#### 9.5.7.2.2 NLME-UPDATE ROUTE.confirm

La primitive NLME\_UPDATE-ROUTE.confirm rapporte le résultat d'exécution d'une NLME-UPDATE ROUTE.request.

La sémantique de NLME-UPDATE ROUTE.confirm est décrite comme suit:

```
NLME-UPDATE_ROUTE.confirm (Statut
)
```

Le Tableau 93 spécifie les paramètres pour NLME-UPDATE-ROUTE.confirm.

**Tableau 93 – Paramètres de NLME-UPDATE-ROUTE.confirm**

| Nom    | Type de données | Plage valide | Description                                                                                                                        |
|--------|-----------------|--------------|------------------------------------------------------------------------------------------------------------------------------------|
| Statut | Unsigned8       | 0 à 255      | Résultat d'une NLME-<br>UPDATE_ROUTE.request:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

A la réception de NLME-UPDATE\_ROUTE.request, la NL émettra un paquet de demande de mise à jour d'itinéraire vers l'appareil de routage et retournera une NLME-UPDATE\_ROUTE.confirm pour rapporter le résultat.

#### 9.5.7.2.3 NLME-UPDATE ROUTE.indication

La primitive NLME-UPDATE\_ROUTE.indication est utilisée pour rapporter au DMAP qu'un appareil a reçu avec succès un paquet de demande de mise à jour d'itinéraire.

La sémantique de NLME-UPDATE ROUTE.confirm est décrite comme suit:

```
NLME-UPDATE_ROUTE.indication (RoutingTableRecord)
```

Le Tableau 92 spécifie les paramètres pour NLME-UPDATE ROUTE.indication.

#### 9.5.7.2.4 NLME-UPDATE\_ROUTE.response

La primitive NLME-UPDATE\_ROUTE.response est la réponse de NLME-UPDATE\_ROUTE.indication.


La sémantique de NLME-UPDATE ROUTE.response est décrite comme suit:

```
NLME-UPDATE_ROUTE.response(Statut
```

Le Tableau 93 spécifie les paramètres pour NLME-UPDATE ROUTE.response.

#### 9.5.7.2.5 Séquence temporelle pour la mise à jour d'itinéraire

Le diagramme de séquence temporelle pour mettre à jour un enregistrement dans la table de routage d'un appareil de routage est représenté à la Figure 52.

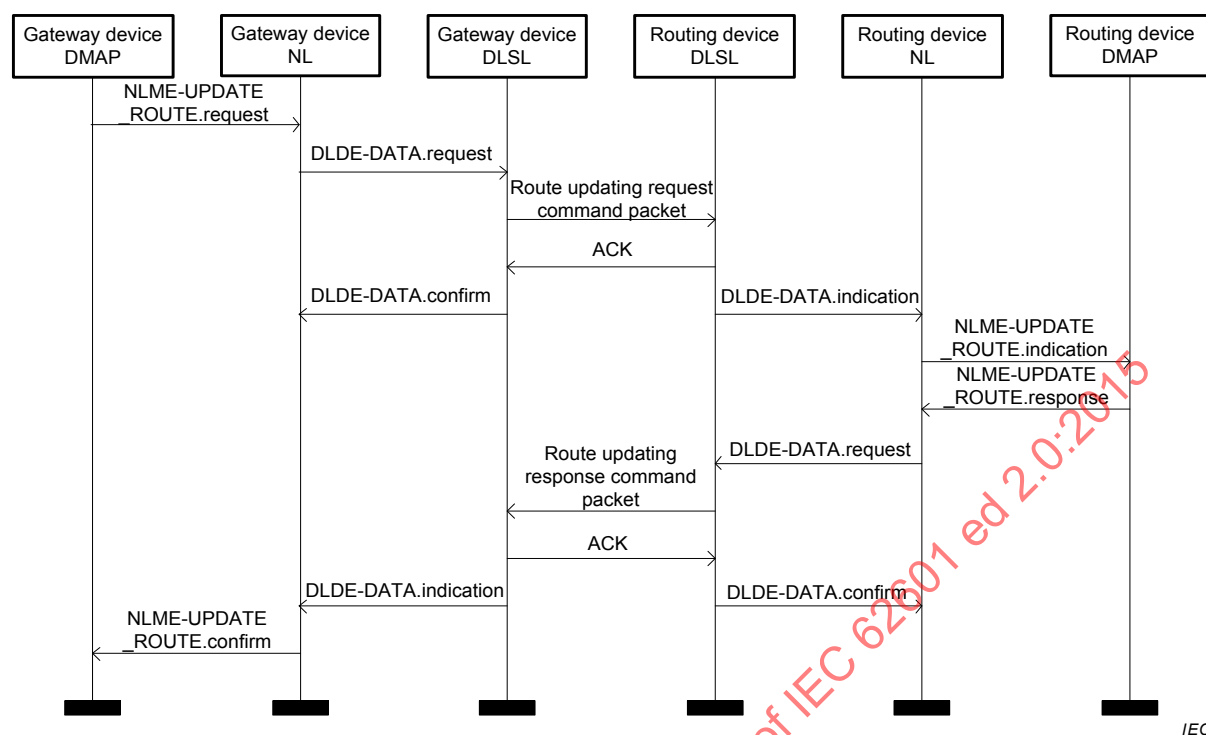

| Anglais                                | Français                                                  |
|----------------------------------------|-----------------------------------------------------------|
| Gateway device DMAP                    | DMAP de l'appareil passerelle                             |
| Gateway device NL                      | NL de l'appareil passerelle                               |
| Gateway device DLSL                    | DLSL de l'appareil passerelle                             |
| Routing device DLSL                    | DLSL de l'appareil de routage                             |
| Routing device NL                      | NL de l'appareil de routage                               |
| Routing device DMAP                    | DMAP de l'appareil de routage                             |
| Route updating request command packet  | Paquet de commande de demande de mise à jour d'itinéraire |
| Route updating response command packet | Paquet de commande de réponse de mise à jour d'itinéraire |

**Figure 52 – Séquence temporelle pour la mise à jour d'itinéraire**

### 9.5.7.3 Services de suppression d'itinéraire

#### 9.5.7.3.1 NLME-DELETE\_ROUTE.request

Le gestionnaire de réseau (NM) invoque NLME-DELETE\_ROUTE.request pour supprimer un enregistrement dans la table de routage d'un appareil de routage.

La sémantique de NLME\_DELETE-ROUTE.confirm est décrite comme suit:

```
NLME-DELETE_ROUTE.request(
 DstAddr,
 RouteID
)
```

Le Tableau 94 spécifie les paramètres pour NLME-DELETE-ROUTE.request.

**Tableau 94 – Paramètres de NLME-UPDATE\_ROUTE.request**

| Nom     | Type de données | Plage valide | Description                                                    |
|---------|-----------------|--------------|----------------------------------------------------------------|
| DstAddr | Unsigned16      | 0 à 65 535   | Adresse courte 16 bits de l'appareil de routage de destination |
| RouteID | Unsigned16      | 0 à 65 535   | ID d'itinéraire                                                |

### 9.5.7.3.2 NLME-DELETE\_ROUTE.confirm

La primitive NLME\_DELETE\_ROUTE.confirm retourne le résultat d'exécution d'une NLME\_DELETE\_ROUTE.request.

La sémantique de NLME\_DELETE\_ROUTE.confirm est décrite comme suit:

```
NLME-DELETE_ROUTE.confirm(
 Statut
)
```

Le Tableau 95 spécifie les paramètres pour NLME\_DELETE\_ROUTE.confirm.

**Tableau 95 – Paramètres de NLME-DELETE\_ROUTE.confirm**

| Nom    | Type de données | Plage valide | Description                                                                                                                    |
|--------|-----------------|--------------|--------------------------------------------------------------------------------------------------------------------------------|
| Statut | Unsigned8       | 0 à 255      | Résultat d'une NLME_DELETE_ROUTE.request:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

A la réception de NLME\_DELETE\_ROUTE.request, il convient que la NL émette un paquet de demande de suppression d'itinéraire vers l'appareil de routage et retourne une NLME\_DELETE\_ROUTE.confirm pour rapporter le résultat.

### 9.5.7.3.3 NLME-DELETE\_ROUTE.indication

La primitive NLME\_DELETE\_ROUTE.indication est utilisée pour rapporter au DMAP que l'appareil a reçu avec succès un paquet de demande de suppression d'itinéraire.

La sémantique de NLME\_DELETE\_ROUTE.confirm est décrite comme suit:

```
NLME-DELETE_ROUTE.indication (
 RouteID
)
```

Le Tableau 94 spécifie les paramètres pour NLME\_DELETE\_ROUTE.indication.

### 9.5.7.3.4 NLME-DELETE\_ROUTE.response

La primitive NLME\_DELETE\_ROUTE.response est la réponse de NLME\_DELETE\_ROUTE.indication.

La sémantique de NLME\_DELETE\_ROUTE.response est décrite comme suit:


```
NLME-DELETE_ROUTE.response (
 Statut
)
```

Le Tableau 95 spécifie les paramètres pour NLME\_DELETE\_ROUTE.response.

### 9.5.7.3.5 Séquence temporelle pour la suppression d'itinéraire

Le diagramme de séquence temporelle pour supprimer des enregistrements des tables de routage des appareils de routage est représenté à la Figure 53.



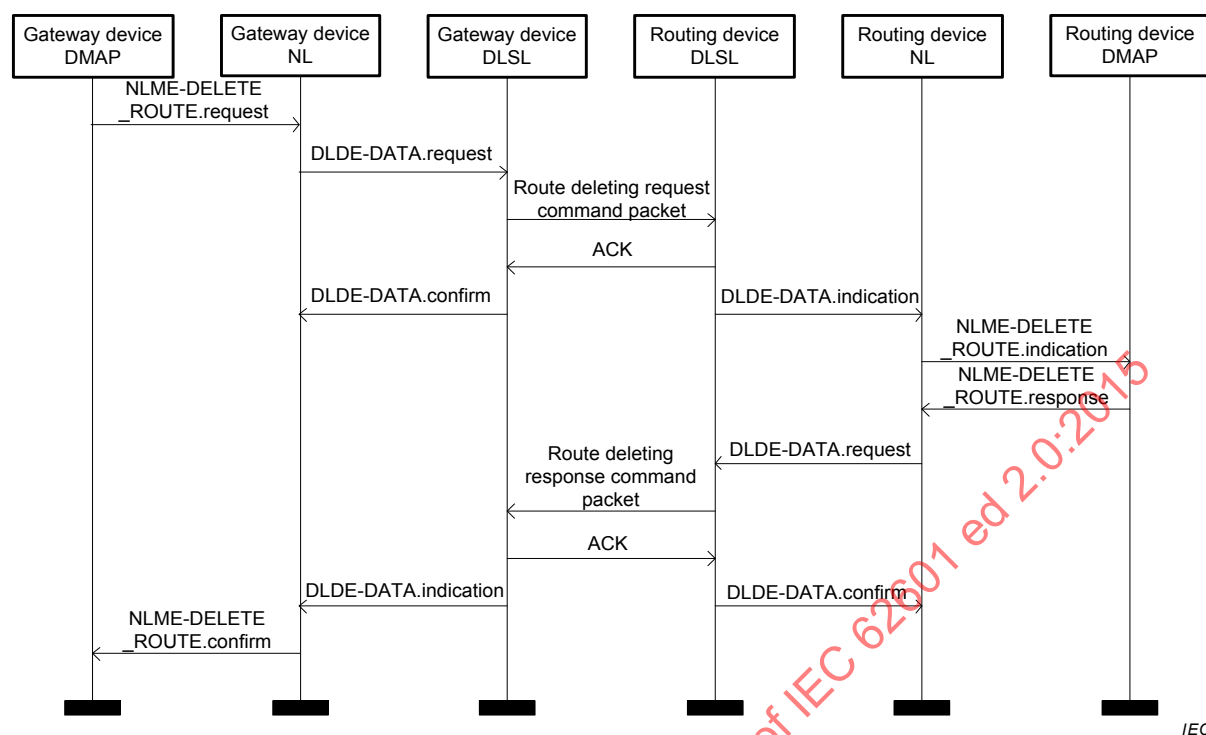

| Anglais                                | Français                                                  |
|----------------------------------------|-----------------------------------------------------------|
| Gateway device DMAP                    | DMAP de l'appareil passerelle                             |
| Gateway device NL                      | NL de l'appareil passerelle                               |
| Gateway device DLSL                    | DLSL de l'appareil passerelle                             |
| Routing device DLSL                    | DLSL de l'appareil de routage                             |
| Routing device NL                      | NL de l'appareil de routage                               |
| Routing device DMAP                    | DMAP de l'appareil de routage                             |
| Route deleting request command packet  | Paquet de commande de demande de suppression d'itinéraire |
| Route deleting response command packet | Paquet de commande de réponse de suppression d'itinéraire |

**Figure 53 – Séquence temporelle pour la suppression d'itinéraire**

## 9.5.8 Services d'allocation de ressources de communication

### 9.5.8.1 Généralités

L'allocation de ressources de communication comprend l'allocation de liaison et de supertrame. Ces services fournissent les primitives suivantes:

- Services d'ajout de liaison:
  - NLME-ADD-LINK.request,
  - NLME-ADD-LINK.confirm,
  - NLME-ADD-LINK.response, et
  - NLME-ADD-LINK.indication;
- Services de mise à jour de liaison:
  - NLME-UPDATE-LINK.request,
  - NLME-UPDATE-LINK.confirm,
  - NLME-UPDATE-LINK.response, et
  - NLME-UPDATE-LINK.indication;
- Services de libération de liaison:
  - NLME-RELEASE-LINK.request,

- NLME-RELEASE-LINK.confirm,
- NLME-RELEASE-LINK.response, et
- NLME-RELEASE-LINK.indication;
- Services d'ajout de supertrame:
  - NLME-ADD-SFR.request,
  - NLME-ADD-SFR.confirm,
  - NLME-ADD-SFR.response, et
  - NLME-ADD-SFR.indication;
- Services de mise à jour de supertrame:
  - NLME-UPDATE-SFR.request,
  - NLME-UPDATE-SFR.confirm,
  - NLME-UPDATE-SFR.response, et
  - NLME-UPDATE-SFR.indication;
- Services de libération de supertrame:
  - NLME-RELEASE-SFR.request,
  - NLME-RELEASE-SFR.confirm,
  - NLME-RELEASE-SFR.response, et
  - NLME-RELEASE-SFR.indication.

### 9.5.8.2 Services d'ajout de liaison

#### 9.5.8.2.1 NLME-ADD-LINK.request

La primitive NLME-ADD-LINK.request est utilisée pour ajouter un ou plusieurs enregistrements de nouvelle(s) liaison(s) allant de l'appareil de passerelle à un appareil de routage ou d'un appareil de routage à un appareil de terrain.

La sémantique de NLME-ADD-LINK.request est décrite comme suit:

NLME-ADD-LINK.request (

- DstAddr,
- LinkCount,
- LinkStructure

)

Le Tableau 96 spécifie les paramètres pour NLME-ADD-LINK.request.

**Tableau 96 – Paramètres de NLME-ADD-LINK.request**

| Nom           | Type de données                         | Plage valide | Description                                                                                  |
|---------------|-----------------------------------------|--------------|----------------------------------------------------------------------------------------------|
| DstAddr       | Unsigned16                              | 0 à 65 535   | Adresse de destination 16 bits                                                               |
| LinkCount     | Unsigned16                              | 0 à 65 535   | Nombre de liaisons ajoutées pour prendre en charge l'ajout de plusieurs liaisons chaque fois |
| LinkStructure | Structure Link_Struct (voir Tableau 17) |              | Informations des liaisons                                                                    |

#### 9.5.8.2.2 NLME-ADD-LINK.confirm

La primitive NLME-ADD-LINK.confirm retourne les résultats de NLME-ADD-LINK.request.

La sémantique de NLME-ADD-LINK.confirm est décrite comme suit:

NLME-ADD-LINK.confirm (

Statut  
)

Le Tableau 97 spécifie les paramètres pour NLME-ADD-LINK.confirm.

**Tableau 97 – Paramètres de NLME-ADD-LINK.confirm**

| Nom    | Type de données | Plage valide | Description                                                                                                                      |
|--------|-----------------|--------------|----------------------------------------------------------------------------------------------------------------------------------|
| Statut | Unsigned8       | 0 à 255      | Résultats de la demande d'ajout de liaison:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

#### 9.5.8.2.3 NLME-ADD-LINK.indication

La primitive NLME-ADD\_LINK.indication est utilisée pour rapporter au DMAP que l'appareil a reçu avec succès un paquet de demande d'ajout de liaison.

La sémantique de NLME-ADD-LINK.indication est décrite comme suit:

NLME-ADD-LINK.indication (

LinkCount,  
LinkStructure

)

Le Tableau 96 spécifie les paramètres pour NLME-ADD-LINK.indication.

#### 9.5.8.2.4 NLME-ADD-LINK.response

La primitive NLME-ADD\_LINK.response est la réponse de NLME-ADD\_LINK.indication.

La sémantique de NLME-ADD-LINK.response est décrite comme suit:

NLME-ADD-LINK.response (


Statut

)

Le Tableau 97 spécifie les paramètres pour NLME-ADD-LINK.response.

#### 9.5.8.2.5 Séquence temporelle pour l'ajout de liaison

Le diagramme de séquence temporelle pour l'ajout d'une liaison allant d'un appareil de passerelle à un appareil de routage est représenté à la Figure 54.

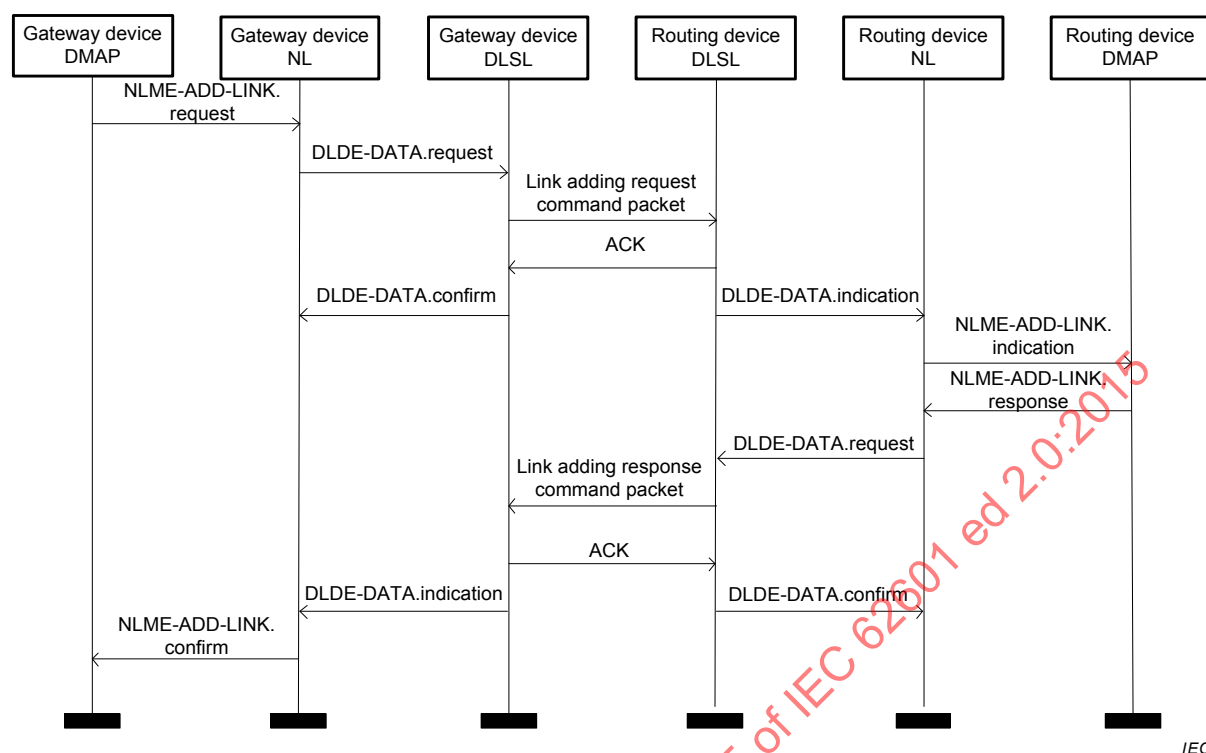

| Anglais                             | Français                                           |
|-------------------------------------|----------------------------------------------------|
| Gateway device DMAP                 | DMAP de l'appareil passerelle                      |
| Gateway device NL                   | NL de l'appareil passerelle                        |
| Gateway device DLSL                 | DLSL de l'appareil passerelle                      |
| Routing device DLSL                 | DLSL de l'appareil de routage                      |
| Routing device NL                   | NL de l'appareil de routage                        |
| Routing device DMAP                 | DMAP de l'appareil de routage                      |
| Link adding request command packet  | Paquet de commande de demande d'ajout de liaison   |
| Link adding response command packet | Paquet de commande de réponse à l'ajout de liaison |

**Figure 54 – Ajout d'une liaison allant d'un appareil de passerelle à un appareil de routage**

Le diagramme de séquence temporelle pour ajouter une liaison allant d'un appareil de routage à un appareil de terrain est représenté à la Figure 55.

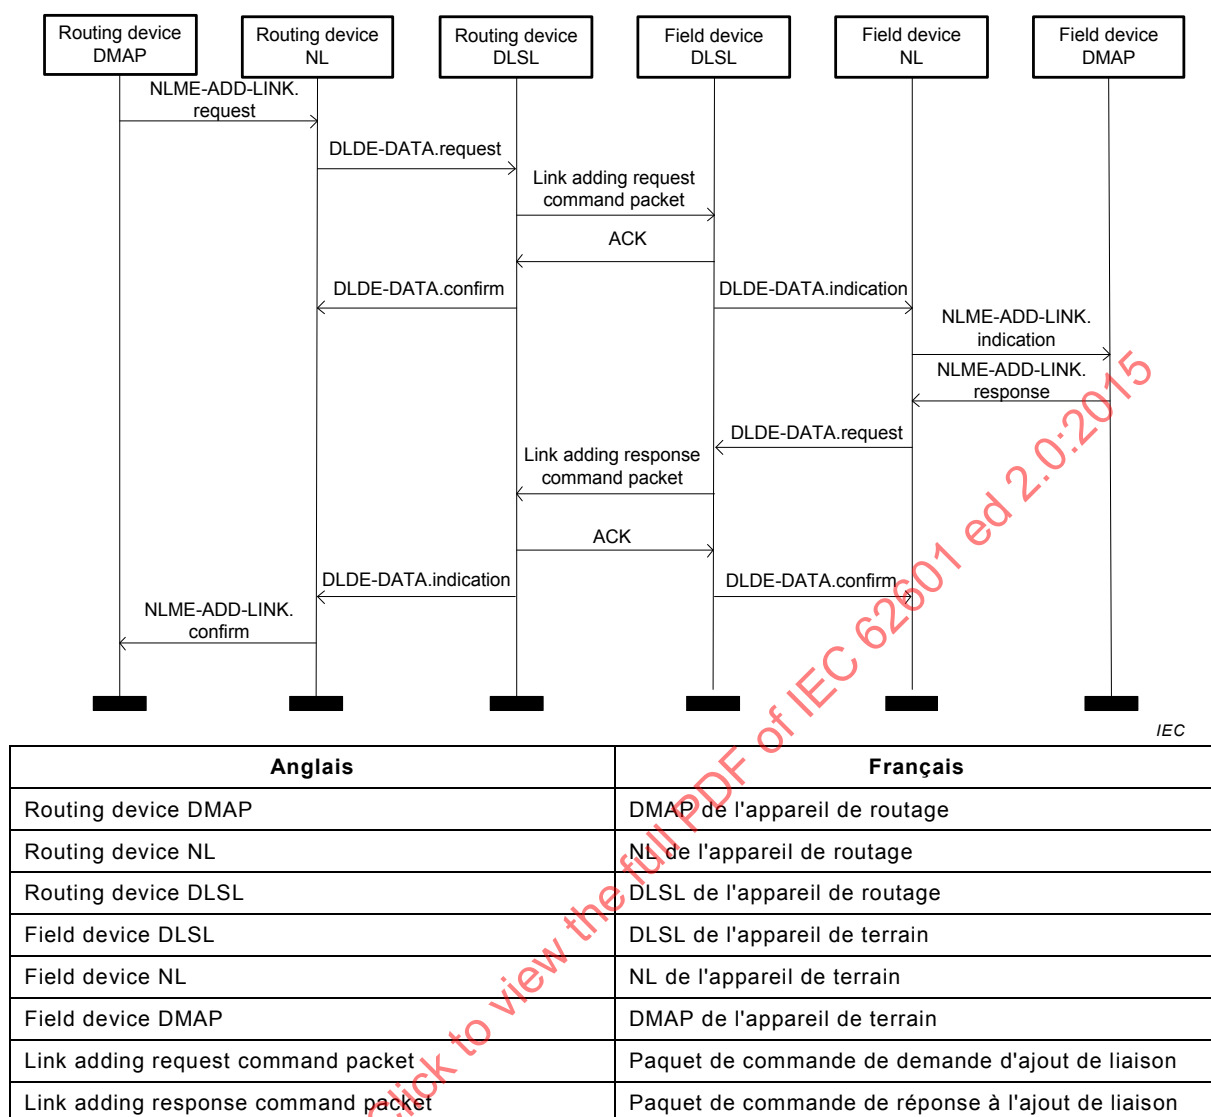


**Figure 55 – Ajout d'une liaison allant d'un appareil de routage à un appareil de terrain**

### 9.5.8.3 Services de mise à jour de liaison

#### 9.5.8.3.1 NLME-UPDATE-LINK.request

La primitive NLME-UPDATE-LINK.request est utilisée pour mettre à jour un ou plusieurs enregistrements de liaison(s) existante(s) allant de l'appareil de passerelle à un appareil de routage ou d'un appareil de routage à un appareil de terrain.

La sémantique de NLME-UPDATE-LINK.request est décrite comme suit:

```
NLME-UPDATE-LINK.request (
 DstAddr,
 LinkCount,
 LinkStructure
)
```

Le Tableau 98 spécifie les paramètres pour NLME-UPDATE-LINK.request.

**Tableau 98 – Paramètres de NLME-UPDATE-LINK.request**

| Nom           | Type de données                         | Plage valide | Description                                                                                         |
|---------------|-----------------------------------------|--------------|-----------------------------------------------------------------------------------------------------|
| DstAddr       | Unsigned16                              | 0 à 65 535   | Adresse de destination 16 bits                                                                      |
| LinkCount     | Unsigned16                              | 0 à 65 535   | Nombre de liaisons ajoutées pour prendre en charge la mise à jour de plusieurs liaisons chaque fois |
| LinkStructure | Structure Link_Struct (voir Tableau 17) |              | Informations des liaisons                                                                           |

#### 9.5.8.3.2 NLME-UPDATE-LINK.confirm

La primitive NLME-UPDATE-LINK.confirm retourne les résultats de NLME-UPDATE-LINK.request.

La sémantique de NLME-UPDATE-LINK.confirm est décrite comme suit:

```
NLME-UPDATE-LINK.confirm (
 Statut
)
```

Le Tableau 99 spécifie les paramètres pour NLME-UPDATE-LINK.confirm.

**Tableau 99 – Paramètres de NLME-UPDATE-LINK.confirm**

| Nom    | Type de données | Plage valide | Description                                                                                                                             |
|--------|-----------------|--------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| Statut | Unsigned8       | 0 à 255      | Résultats de la demande de mise à jour de liaison:<br>0 = SUCCESS (succès)<br>1 = FAILURE (échec)<br>Les autres valeurs sont réservées. |

#### 9.5.8.3.3 NLME-UPDATE-LINK.indication

La primitive NLME-UPDATE\_LINK.indication est utilisée pour rapporter au DMAP que l'appareil a reçu avec succès un paquet de demande de mise à jour de liaison.

La sémantique de NLME-UPDATE-LINK.indication est décrite comme suit:

```
NLME-UPDATE-LINK.indication (
 LinkCount,
 LinkStructure
)
```

Le Tableau 98 spécifie les paramètres pour NLME-UPDATE-LINK.indication.

#### 9.5.8.3.4 NLME-UPDATE-LINK.response

La primitive NLME-UPDATE-LINK.response est la réponse de NLME-UPDATE-LINK.indication.


La sémantique de NLME-UPDATE-LINK.response est décrite comme suit:

```
NLME-UPDATE-LINK.response (
 Statut
)
```

Le Tableau 99 spécifie les paramètres pour NLME-UPDATE-LINK.response.

### 9.5.8.3.5 Séquence temporelle pour la mise à jour de liaison


Le diagramme de séquence temporelle pour mettre à jour une liaison allant d'un appareil de passerelle à un appareil de routage est représenté à la Figure 56.

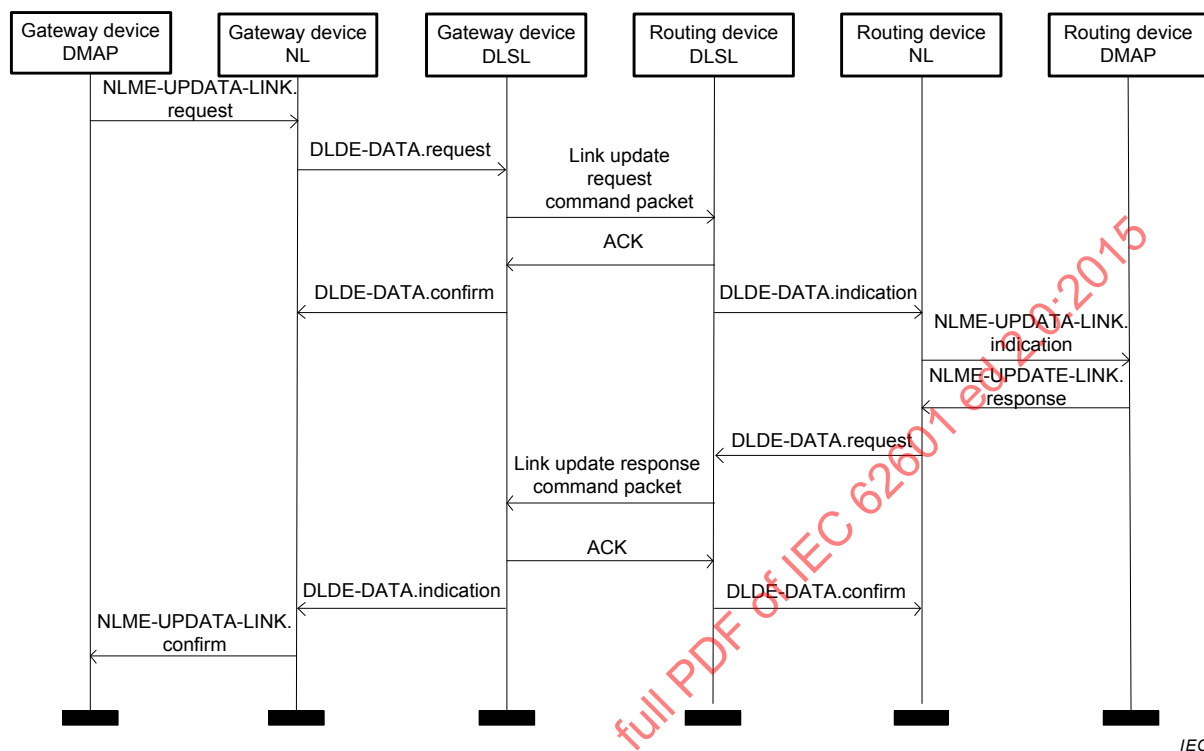

| Anglais                             | Français                                                |
|-------------------------------------|---------------------------------------------------------|
| Gateway device DMAP                 | DMAP de l'appareil passerelle                           |
| Gateway device NL                   | NL de l'appareil passerelle                             |
| Gateway device DLSL                 | DLSL de l'appareil passerelle                           |
| Routing device DLSL                 | DLSL de l'appareil de routage                           |
| Routing device NL                   | NL de l'appareil de routage                             |
| Routing device DMAP                 | DMAP de l'appareil de routage                           |
| Link update request command packet  | Paquet de commande de demande de mise à jour de liaison |
| Link update response command packet | Paquet de commande de réponse de mise à jour de liaison |

**Figure 56 – Mise à jour d'une liaison allant d'un appareil de passerelle à un appareil de routage**

Le diagramme de séquence temporelle pour mettre à jour une liaison allant d'un appareil de routage à un appareil de terrain est représenté à la Figure 57.

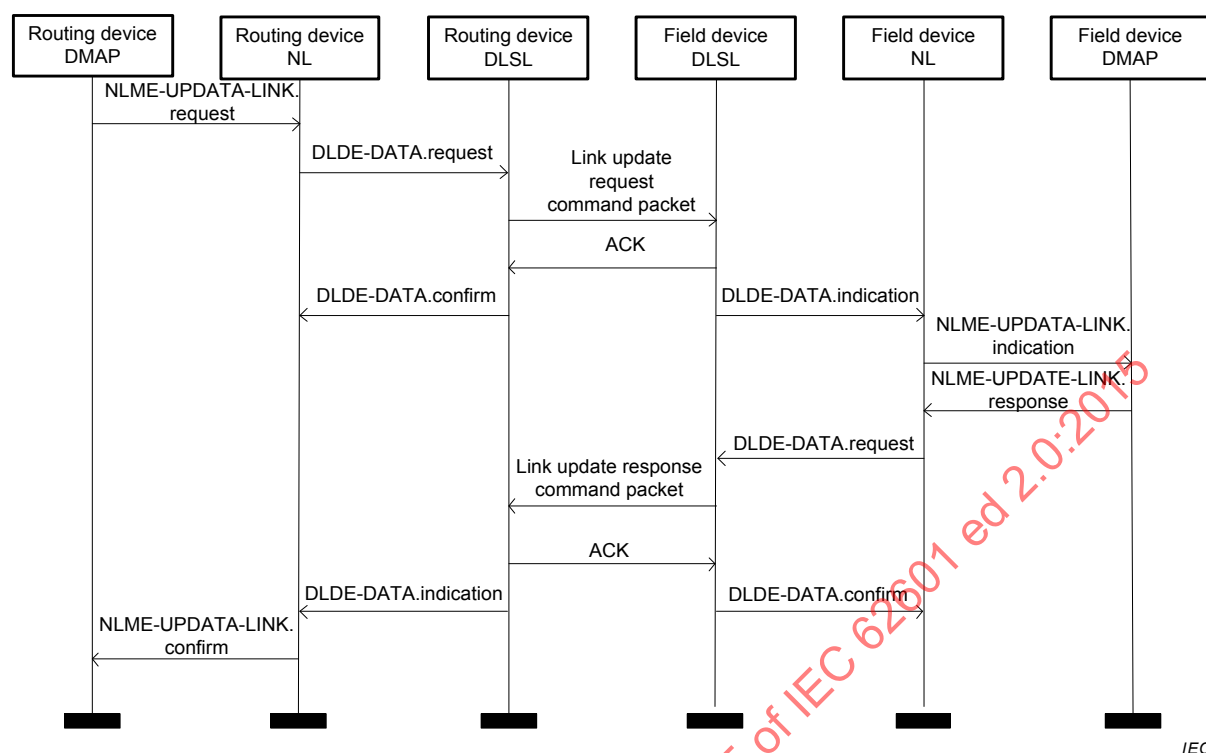

IEC

| Anglais                             | Français                                                |
|-------------------------------------|---------------------------------------------------------|
| Routing device DMAP                 | DMAP de l'appareil de routage                           |
| Routing device NL                   | NL de l'appareil de routage                             |
| Routing device DLSL                 | DLSL de l'appareil de routage                           |
| Field device DLSL                   | DLSL de l'appareil de terrain                           |
| Field device NL                     | NL de l'appareil de terrain                             |
| Field device DMAP                   | DMAP de l'appareil de terrain                           |
| Link update request command packet  | Paquet de commande de demande de mise à jour de liaison |
| Link update response command packet | Paquet de commande de réponse de mise à jour de liaison |

**Figure 57 – Mise à jour d'une liaison allant d'un appareil de routage à un appareil de terrain**

#### 9.5.8.4 Services de libération de liaison

##### 9.5.8.4.1 NLME-RELEASE-LINK.request

La primitive NLME-RELEASE-LINK.request est utilisée pour supprimer une ou plusieurs liaison(s) existante(s) allant de l'appareil de passerelle à un appareil de routage ou d'un appareil de routage à un appareil de terrain.

La sémantique de NLME-RELEASE-LINK.request est décrite comme suit:

```

NLME-RELEASE-LINK.request (
 DstAddr,
 LinkCount,
 LinkID[LinkCount]
)

```

Le Tableau 100 spécifie les paramètres pour NLME-RELEASE-LINK.request.