
**Road vehicles — Communication
between vehicle and external equipment
for emissions-related diagnostics —
Part 5:
Emissions-related diagnostic services**

*Véhicules routiers — Communications entre un véhicule et un
équipement externe pour le diagnostic relatif aux émissions —*

Partie 5: Services de diagnostic relatif aux émissions



PDF disclaimer

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.

STANDARDSISO.COM : Click to view the full PDF of ISO 15031-5:2006

© ISO 2005

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
Case postale 56 • CH-1211 Geneva 20
Tel. + 41 22 749 01 11
Fax + 41 22 749 09 47
E-mail copyright@iso.org
Web www.iso.org

Published in Switzerland

Contents

Page

Foreword.....	iv
Introduction	v
1 Scope	1
2 Normative references	1
3 Terms and definitions.....	2
4 Symbols and abbreviated terms	4
5 Technical requirements	4
5.1 General requirements.....	4
5.2 Diagnostic service requirements	4
5.3 Diagnostic message format.....	25
5.4 Allowance for expansion and enhanced diagnostic services	29
5.5 Definition of PIDs for Services \$01 and \$02.....	29
5.6 Format of data to be displayed.....	29
6 Diagnostic service definition for ISO 9141-2, ISO 14230-4, and SAE J1850.....	31
6.1 Service \$01 — Request current powertrain diagnostic data.....	31
6.2 Service \$02 — Request powertrain freeze frame data.....	35
6.3 Service \$03 — Request emission-related diagnostic trouble codes.....	39
6.4 Service \$04 — Clear/reset emission-related diagnostic information	44
6.5 Service \$05 — Request oxygen sensor monitoring test results	46
6.6 Service \$06 — Request on-board monitoring test results for specific monitored systems	51
6.7 Service \$07 - Request emission-related diagnostic trouble codes detected during current or last completed driving cycle.....	56
6.8 Service \$08 — Request control of on-board system, test or component.....	57
6.9 Service \$09 — Request vehicle information	60
7 Diagnostic service definition for ISO 15765-4	73
7.1 Service \$01 — Request current powertrain diagnostic data.....	73
7.2 Service \$02 — Request powertrain freeze frame data.....	79
7.3 Service \$03 — Request emission-related diagnostic trouble codes.....	84
7.4 Service \$04 — Clear/reset emission-related diagnostic information	87
7.5 Service \$05 — Request oxygen sensor monitoring test results	88
7.6 Service \$06 — Request on-board monitoring test results for specific monitored systems	89
7.7 Service \$07 — Request emission-related diagnostic trouble codes detected during current or last completed driving cycle.....	99
7.8 Service \$08 — Request control of on-board system, test or component.....	100
7.9 Service \$09 — Request vehicle information	104
Annex A (normative) PID (Parameter ID)/OBDMID (On-Board Monitor ID)/TID (Test ID)/INFOTYPE supported definition	114
Annex B (normative) PIDs (Parameter ID) for Services \$01 and \$02 scaling and definition.....	115
Annex C (normative) TIDs (Test ID) scaling description.....	148
Annex D (normative) OBDMIDs (On-Board Diagnostic Monitor ID) definition for Service \$06	149
Annex E (normative) Unit and Scaling definition for Service \$06	154
Annex F (normative) TIDs (Test ID) for Service \$08 scaling and definition	177
Annex G (normative) INFOTYPES for Service \$09 scaling and definition.....	178
Bibliography	185

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 15031-5 was prepared by Technical Committee ISO/TC 22, *Road vehicles*, Subcommittee SC 3, *Electrical and electronical equipment*.

ISO 15031 consists of the following parts, under the general title *Road vehicles — Communication between vehicle and external equipment for emissions-related diagnostics*:

- *Part 1: General information*
- *Part 2: Terms, definitions, abbreviations and acronyms*
- *Part 3: Diagnostic connector and related electrical circuits, specification and use*
- *Part 4: External test equipment*
- *Part 5: Emissions-related diagnostic services*
- *Part 6: Diagnostic trouble code definitions*
- *Part 7: Data link security*

Introduction

ISO 15031 consists of a number of parts which, taken together, provide a coherent self-consistent set of specifications to facilitate emissions-related diagnostics. Parts 2 through 7 are based on SAE recommended practices. This part is based on SAE J1979 SEP97 (E/E Diagnostic Test Modes).

ISO 15031-1 provides an introduction to the series of International Standards.

This part of ISO 15031 is based on the Open Systems Interconnection (OSI) Basic Reference Model in accordance with ISO/IEC 7498 and ISO/IEC 10731, which structures communication systems into seven layers as shown in the table below.

Table 1 — Applicability and relationship between documents

Applicability	OSI 7 layer	Emissions-related diagnostics			
Seven layer according to ISO/IEC 7498 and ISO/IEC 10731	Physical (layer 1)	ISO 9141-2	ISO 14230-1	SAE J1850	ISO 11898, ISO 15765-4
	Data link (layer 2)	ISO 9141-2	ISO 14230-2	SAE J1850	ISO 11898, ISO 15765-4
	Network (layer 3)	—	—	—	ISO 15765-2, ISO 15765-4
	Transport (layer 4)	—	—	—	—
	Session (layer 5)	—	—	—	ISO 15765-4
	Presentation (layer 6)	—	—	—	—
	Application (layer 7)	ISO 15031-5	ISO 15031-5	ISO 15031-5	ISO 15031-5

STANDARDSISO.COM : Click to view the full PDF of ISO 15031-5:2006

Road vehicles — Communication between vehicle and external equipment for emissions-related diagnostics —

Part 5: Emissions-related diagnostic services

1 Scope

This part of ISO 15031 specifies diagnostic services and functionally addressed request/response messages required to be supported by motor vehicles and external test equipment for diagnostic purposes which pertain to motor vehicle emission-related data. Any external test equipment meeting the requirements of ISO 15031-4 use these messages to retrieve emissions-related information from the vehicle.

Each section of this part of ISO 15031, which specifies additional detail to existing sections of ISO 9141-2, ISO 14230-4, SAE J1850, and ISO 15765-4 supersede those specifications.

NOTE This part of ISO 15031 provides the mechanism to satisfy the requirements included in the country-specific regulations and not all capabilities included in this document are required by the country-specific regulations. This part of ISO 15031 also is not considered a final authority for interpretation of the regulations, so readers should determine the applicability of capabilities defined in this document for their specific needs.

2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 9141-2, *Road vehicles — Diagnostic systems — Part 2: CARB requirements for interchange of digital information*

ISO 9141-2/Amendment 1, *Road vehicles — Diagnostic systems — Part 2: CARB requirements for interchange of digital information*

ISO 14230-4, *Road vehicles — Diagnostic systems — Keyword Protocol 2000 — Part 4: Requirements for emission-related systems*

ISO 15031-1, *Road vehicles — Communication between vehicle and external equipment for emissions-related diagnostics — Part 1: General information*

ISO/TS 15031-2, *Road vehicles — Communication between vehicle and external equipment for emissions-related diagnostics — Part 2: Terms, definitions, abbreviations and acronyms*

ISO 15031-3, *Road vehicles — Communication between vehicle and external equipment for emissions-related diagnostics — Part 3: Diagnostic connector and related electrical circuits, specification and use*

ISO 15031-4, *Road vehicles — Communication between vehicle and external equipment for emissions-related diagnostics — Part 4: External test equipment*

ISO 15031-6, *Road vehicles — Communication between vehicle and external equipment for emissions-related diagnostics — Part 6: Diagnostic trouble code definitions*

ISO 15765-2, *Road vehicles — Diagnostics on Controller Area Networks (CAN) — Part 2: Network layer services*

ISO 15765-4, *Road vehicles — Diagnostics on Controller Area Networks (CAN) — Part 4: Requirements for emissions-related systems*

SAE J1850: MAY2001, *Class B Data Communications Network Interface*

3 Terms and definitions

For the purposes of this document, the terms and definitions given in ISO 15031-2 and the following apply.

3.1

absolute throttle position sensor

value intended to represent the throttle opening

NOTE For systems where the output is proportional to the input voltage, this value is the percent of maximum input signal. For systems where the output is inversely proportional to the input voltage, this value is 100 % minus the percent of maximum input signal. Throttle position at idle usually indicates greater than 0 %, and throttle position at wide open throttle usually indicates less than 100 %.

3.2

bank

specific group of cylinders sharing a common control sensor, bank 1 always containing cylinder number 1, bank 2 the opposite bank

NOTE If there is only one bank, bank #1 DTCs is used, and the word bank may be omitted. With a single "bank" system utilising multiple sensors, bank #1 DTCs is used identifying the sensors as #1, #2, #3 in order as they move further away from the cylinder(s).

3.3

base fuel schedule

the fuel calibration schedule programmed into the Powertrain Control Module or PROM when manufactured or when updated by some off-board source, prior to any learned on-board correction

3.4

Calculated Load Value

for spark ignition engines, typically an indication of the current airflow divided by peak airflow at wide open throttle as a function of rpm, where airflow is corrected for altitude and ambient temperature

NOTE 1 This definition provides a unit-less number, and provides the service technician with an indication of the percent engine capacity that is being used.

NOTE 2 For diesel applications, the calculated load value shall be determined by substituting fuelflow in place of airflow in the calculation.

3.5

client

function that is part of the tester and that makes use of the diagnostic services

NOTE A tester normally makes use of other functions such as data base management, specific interpretation, man-machine interface.

3.6

continuous monitoring

sampling at a rate no less than two samples per second

3.7 convention Cvt

column integrated in each message table which marks each parameter included

NOTE The following conventions are used: C = Conditional: the parameter marked "C" in a request/response message is present only under a condition specified in the bottom row of the message table. M = Mandatory: the parameter marked "M" in a request/response message table is always present. U = User optional: the parameter marked "U" in a request/response message table is or is not supplied, depending on dynamic usage by the manufacturer. The convention recommends a mnemonic, which might be used for implementation. In no case is the specified mnemonic a mandatory requirement for any implementation.

3.8 Electronic Control Unit ECU

generic term for any electronic control unit

3.9 Fuel Trim FT

feedback adjustments to the base fuel schedule

NOTE Short-term fuel trim refers to dynamic or instantaneous adjustments. Long-term fuel trim refers to much more gradual adjustments to the fuel calibration schedule than short-term trim adjustments. These long-term adjustments compensate for vehicle differences and gradual changes that occur over time.

3.10 negative numbers

signed binary, the most significant bit (MSB) of the binary number used to indicate positive (0) / negative (1)

NOTE 1 2s complement: negative numbers are represented by complementing the binary number and then adding 1.

EXAMPLE – 0,99 = 8001 hex = 1000 0000 0000 0001 binary
 0 = 0000 hex = 0000 0000 0000 0000 binary
 + 0,99 = 7FFF hex = 0111 1111 1111 1111 binary

NOTE 2 (– 0,99) + (+ 0,99) = 0.

3.11 number

expressed by this symbol "#"

3.12 P2, P3 timing parameter

application timing parameters for the ECU(s) and the external test equipment

3.13 server

function that is part of an electronic control unit that provides the diagnostic services

NOTE This part of ISO 15031 differentiates between the server (i.e. the function) and the electronic control unit so that this document remains independent from the implementation.

3.14 service

information exchange initiated by a client (external test equipment) in order to require diagnostic information from a server (ECU) and/or to modify its behaviour for diagnostic purpose

NOTE This is also the equivalent of test mode or mode.

4 Symbols and abbreviated terms

CVN	Calibration Verification Number
ECM	Engine Control Module
ISR	Interrupt Service Routine
LSB	Least Significant Bit
MSB	Most Significant Bit
NRC	Negative Response Code
PCM	Powertrain Control Module
SI	International System of Units
TCM	Transmission Control Module

5 Technical requirements

5.1 General requirements

The requirements specified in this clause are necessary to ensure proper operation of both the external test equipment and the vehicle during diagnostic procedures. External test equipment, when using messages specified, shall not affect normal operation of the emission control system.

5.2 Diagnostic service requirements

5.2.1 Multiple responses to a single data request

The request messages are functional messages, which means the external test equipment will request data without knowledge of which ECU(s) on the vehicle will respond. In some vehicles, multiple ECUs may respond with the information requested. Any external test equipment requesting information shall therefore have provisions for receiving multiple responses.

IMPORTANT — All emissions-related OBD ECUs which at least support one of the services defined in this part of ISO 15031 shall support service \$01 and PID \$00. Service \$01 with PID \$00 is defined as the universal “initialization/keep alive/ping” message for all emissions-related OBD ECUs.

5.2.2 Application timing parameter definition

5.2.2.1 Overview

The definition of P2 and P3 is included in this clause. A subscript is added to each timing parameter to identify the protocol:

- P2_{K-line}, P3_{K-line}: P2, P3 for ISO 9141-2 and ISO 14230-4 protocols
- P2_{J1850}: P2 for SAE J1850 protocol
- P2_{CAN}: P2 for ISO 15765-4 protocol

IMPORTANT — It is the vehicle manufacturer’s responsibility to specify a shorter P2 timing window than specified in this part of ISO 15031 for each emission-related server/ECU in the vehicle to make sure that network topology delays of the vehicle architecture are considered.

5.2.2.2 Definition for ISO 9141-2

For ISO 9141-2 interfaces, Data Link Layer response time requirements (P1, P4) are specified in ISO 9141-2.

Table 2 specifies the application timing parameter values for P2 and P3.

Table 2 — Definition ISO 9141-2 application timing parameter values

Parameter	Minimum value (ms)	Maximum value (ms)	Description
P2 _{K-line} Key Bytes: \$08 \$08	25	50	Time between external test equipment request message and the successful transmission of the ECU(s) response message(s). Each OBD ECU shall start sending its response message within P2 _{K-line} after the request message has been correctly received. Subsequent response messages shall also be transmitted within P2 _{K-line} of the previous response message for multiple message responses.
P2 _{K-line} Key Bytes: \$94 \$94	0	50	Time between external test equipment request message and the successful transmission of the ECU response message(s). The OBD ECU shall start sending its response message within P2 _{K-line} after the request message has been correctly received. Subsequent response messages shall also be transmitted within P2 _{K-line} of the previous response message for multiple message responses.
P3 _{K-line}	55	5000	Time between the end of an ECU(s) successful transmission of response message(s) and start of new external test equipment request message. The external test equipment may send a new request message if all response messages related to the previously sent request message have been received and if P3 _{K-line} minimum time expired. ECU implementation guideline: TX (transmit) and RX (receive) line are connected. Each transmitted byte is read back by the receiver in the ECU. Upon the reception of a received byte, e.g. last byte of a request message (checksum) from the tester, the ECU shall reset the P3 timer value to zero. If the ECU supports the request message, it will start transmitting the response message within the P2 timing window. Each transmitted byte will cause the P3 timer value to be reset. If the ECU does not support the request and does not send a response message then in a single OBD ECU system the P3 is started with the last byte received of the request message. In a multiple OBD ECU system a response message by any one or more ECUs shall cause the P3 timer value to be reset in all ECUs including any ECU not supporting the request message.

5.2.2.3 Definition for ISO 14230-4

For ISO 14230-4 interfaces, Data Link Layer response time requirements are specified in ISO 14230-4.

Table 3 specifies the application timing parameter values for P2 and P3.

Table 3 — Definitions of ISO 14230-4 application timing parameter values

Parameter	Minimum value (ms)	Maximum value (ms)	Description
P2 _{K-line}	25	50	Time between external test equipment request message and the successful transmission of the ECU(s) response message(s). Each OBD ECU shall start sending its response message within P2 _{K-line} after the request message has been correctly received. Subsequent response messages shall also be transmitted within P2 _{K-line} of the previous response message for multiple message responses.
P3 _{K-line}	55	5000	Time between the end of an ECU(s) successful transmission of response message(s) and start of new external test equipment request message. The external test equipment may send a new request message if all response messages related to the previously sent request message have been received and if P3 _{K-line} minimum time expired. ECU implementation guideline: TX (transmit) and RX (receive) line are connected. Each transmitted byte is read back by the receiver in the ECU. Upon the reception of a received byte, e.g. last byte of a request message (checksum) from the tester, the ECU shall reset the P3 timer value to zero. If the ECU supports the request message, it will start transmitting the response message within the P2 timing window. Each transmitted byte will cause the P3 timer value to be reset. If the ECU does not support the request and does not send a response message, then in a single OBD ECU system the P3 is started with the last byte received of the request message. In a multiple OBD ECU system, a response message by any one or more ECUs shall cause the P3 timer value to be reset in all ECUs including any ECU not supporting the request message.

5.2.2.4 Implementation guidance example for ISO 9141-2 and ISO 14230-4 protocols

This subclause provides an implementation example for client/external test equipment and server/ECU. It is assumed that the client (external test equipment) communicates to a vehicle with two (2) emission-related OBD servers (ECUs). The client requests a CVN, which is only supported by server #1 (ECU #1) with two (2) response messages. Server #2 (ECU #2) is not flash programmable. Figure 1 graphically depicts the timing handling in the client and two (2) servers for a functionally addressed request message. A description follows the figure that references the points marked in Figure 1.

From a server point of view, there is no difference in the timing handling compared to a physically addressed request message. The server shall reset the P3_{K-line} timer value on each received byte regardless of whether the byte is part of a request message or a response message from any another server or an echo from its transmit line. There are several methods of how a server could implement the timing handling. The implementation of timing parameters is not part of this International Standard but an important system supplier responsibility. Some general server timing parameter implementation guidelines are described in this subclause. The server time stamps each receiver interrupt event and restarts/resets the P3_{K-line_server} timer or timing value, e.g. ISR time stamps received byte, and processing of the received information is performed outside the ISR. For simplification of the diagram, the Figure 1 only shows a P3_{K-line_server} restart after the reception of the first byte and last byte (checksum) of a received message. The P3_{K-line_server} restart is required on each received byte. The received message can be either a request message from the client or a response message from any other server connected and initialized by the 33 hex address. If the server has received a complete message, it compares the target address with the 33 hex address.

- c) The completion of the request message is indicated in the client with DL_Data.confirmation. When receiving the DL_Data.confirmation, the client starts its P2_{K-line} and P3_{K-line} timer, using the default reload values P2_{K-line_max} and P3_{K-line_max}.
- d) If the last message byte is received, each server checks whether the received message includes a target address which matches the 33 hex address. If the result is a match (server #1 and #2), then the completion of the request message is indicated in the servers via DL_Data.indication and each server determines whether it supports the request and has a message available to respond with. If a server determines that the address in the received message is different from 33 hex, or if the address is a match but no response needs to be sent (server #2), the P2 timer is stopped. Since the P3_{K-line} timer has already been restarted, no further action is required. If a response message is available and has to be sent (server #1, but not server #2), then the transmission of the response message shall be started after P2_{K-line_min} timing is expired.
- e) Server #1 starts the response message by indicating a DL_Data.request from the application to the data link layer and at the same time stops its P2_{K-line} timer.
- f) Both servers and the client receive a byte of a message via a receive interrupt by the UART. The ISR (Interrupt Service Routine) restarts the P2_{K-line}/P3_{K-line} timers or time stamps the received byte and the client issues a DL_Data_FB.indication to the application layer.
- g) The completion of the response message is indicated in the client with DL_Data.indication. When receiving the DL_Data.indication, the client starts its P2_{K-line} and P3_{K-line} timer, using the default reload values P2_{K-line_max} and P3_{K-line_max}.
- h) Both servers have received the last byte of a message via a receive interrupt by the UART. The ISR (Interrupt Service Routine) either resets the P2_{K-line}/P3_{K-line} timers or time stamps the received byte. The completion of the response message (e.g. length and checksum check) is indicated in server #1 via DL_Data.confirmation. If server #1 does not want to send further response messages, it stops its P2 timer. In server #2 the message is received and the P3_{K-line} timer is restarted, but no DL_Data.indication is forwarded to the application because the target address does not match the 33 hex (target address of this message is the tester address F1 hex).
- i) The client application detects a P2_{K-line_max} timeout, which indicates that all response messages from all servers are received.
- j) The client application indicates that P3_{K-line_min} is reached and that the P3_{K-line} timing window is now open to send a new request message [see a)].

5.2.2.5 Definition for SAE J1850

For SAE J1850 network interfaces, the on-board systems shall respond to a request within P2_{J1850} of a request or a previous response message. With multiple response messages possible from a single request message, this allows as much time as is necessary for all ECUs to access the data link and transmit their response message(s). If there is no response message within this time period, the external test equipment can either assume no response message will be received, or if a response message has already been received, that no more response messages will be received. The application timing parameter value P2_{J1850} is specified in Table 4.

Table 4 — Definition of SAE J1850 application timing parameter values

Parameter	Minimum value (ms)	Maximum value (ms)	Description
P2 _{J1850}	0	100	Time between external test equipment request message and the successful transmission of the ECU(s) response message(s). Each OBD ECU shall attempt to send its response message (or at least the first of multiple response messages) within P2 _{J1850} after the request message has been correctly received. Subsequent response messages shall also be transmitted within P2 _{J1850} of the previous response message for multiple message responses.

5.2.2.6 Definition for ISO 15765-4

For CAN bus systems based on ISO 15765-4, the (all) responding ECU(s) of the on-board system shall respond to a request message within $P2_{CAN}$. The table below specifies the application timing parameter values for $P2$.

Table 5 — Definition of ISO 15765-4 application timing parameter values

Parameter	Minimum value (ms)	Maximum value (ms)	Description
$P2_{CAN}$	0	50	Time between external test equipment request message and the receipt of all unsegmented response messages and all first frames of segmented response message(s). In case the vehicle's network architecture uses a gateway to report emissions-related diagnostic data, all unsegmented response messages and all first frames of segmented response message(s) shall be received by the external test equipment within $P2_{CAN}$.
$P2^*_{CAN}$	0	5000	Time between the successful reception of a negative response message with response code \$78 and the next response message (positive or negative message). A negative response message with NRC 78 hex shall not be used as a response message to a service \$01 request.

5.2.2.7 Implementation guidance example for ISO 15765-4 protocol

5.2.2.7.1 Functional OBD communication during defaultSession

Figure 2 graphically depicts the timing handling in the client and two (2) servers for a functionally addressed request message during the default session. A description follows the figure that references the points marked in Figure 2.

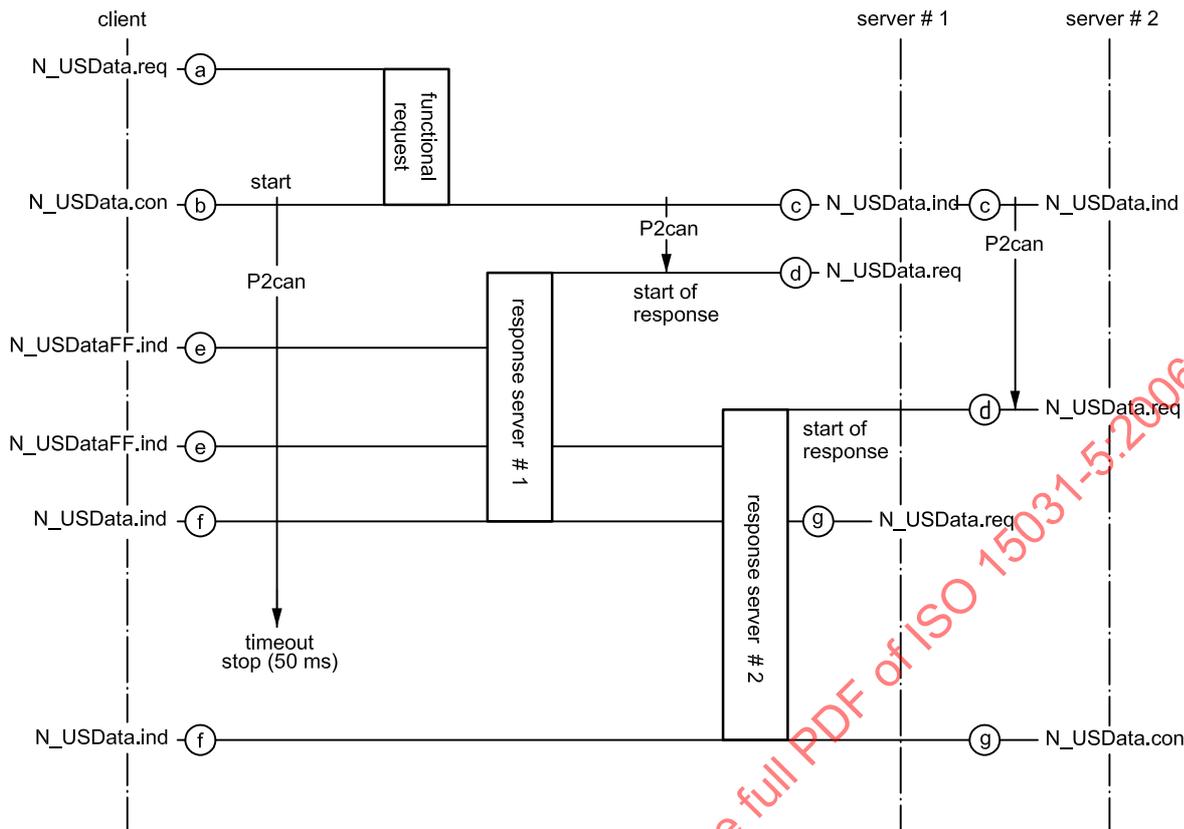


Figure 2 — Functional OBD communication: Default response timing

From a server point of view, there is no difference in the timing handling compared to a physically addressed request message, but the client shall handle the timing differently compared with physical communication.

- a) The diagnostic application of the client starts the transmission of a functionally addressed request message by issuing an N_USData.req to its network layer. The network layer transmits the request message to the servers. A functionally addressed request message shall only be a single-frame message.
- b) The completion of the request message is indicated in the client via N_USData.con. When receiving the N_USData.con, the client starts its P2_{CAN} timer, using the default reload value P2_{CAN}. For simplicity, Figure 2 assumes that the client and the server are located on the same network.
- c) The completion of the request message is indicated in the servers via N_USData.ind.
- d) The functionally addressed servers are required to start with their response messages within P2_{CAN} after the reception of N_USData.ind. This means that in case of multi-frame response messages, the FirstFrame shall be sent within P2_{CAN} and, for single-frame response messages, that the SingleFrame shall be sent within P2_{CAN}.
- e) In case of a multi-frame response message, the reception of the FirstFrame from any server is indicated in the client via the N_USDataFF.ind of the network layer. A single-frame response message is indicated via N_USData.ind.
- f) When receiving the FirstFrame/SingleFrame indication of an incoming response message, the client either stops its P2_{CAN} in case it knows the servers to be expected to respond and all servers have responded, or keeps the P2_{CAN} running if the client does not know the servers to be expected to respond (client awaits the start of further response messages). The network layer of the client will generate a final N_USData.ind in case the complete message is received or an error occurred during the reception. The reception of a final N_USData.ind of a multi-frame message in the client will not have any influence on the P2_{CAN} timer.

- g) The completion of the transmission of the response message will also be indicated in the servers via N_USData.con.

5.2.2.7.2 Functional OBD communication during defaultSession with enhanced response timing

Figure 3 graphically depicts the timing handling in the client and two (2) servers for a functionally addressed request message during the default session, where one server requests an enhanced response timing via a negative response message including response code 78 hex. A description follows the figure that references the points marked in Figure 3.

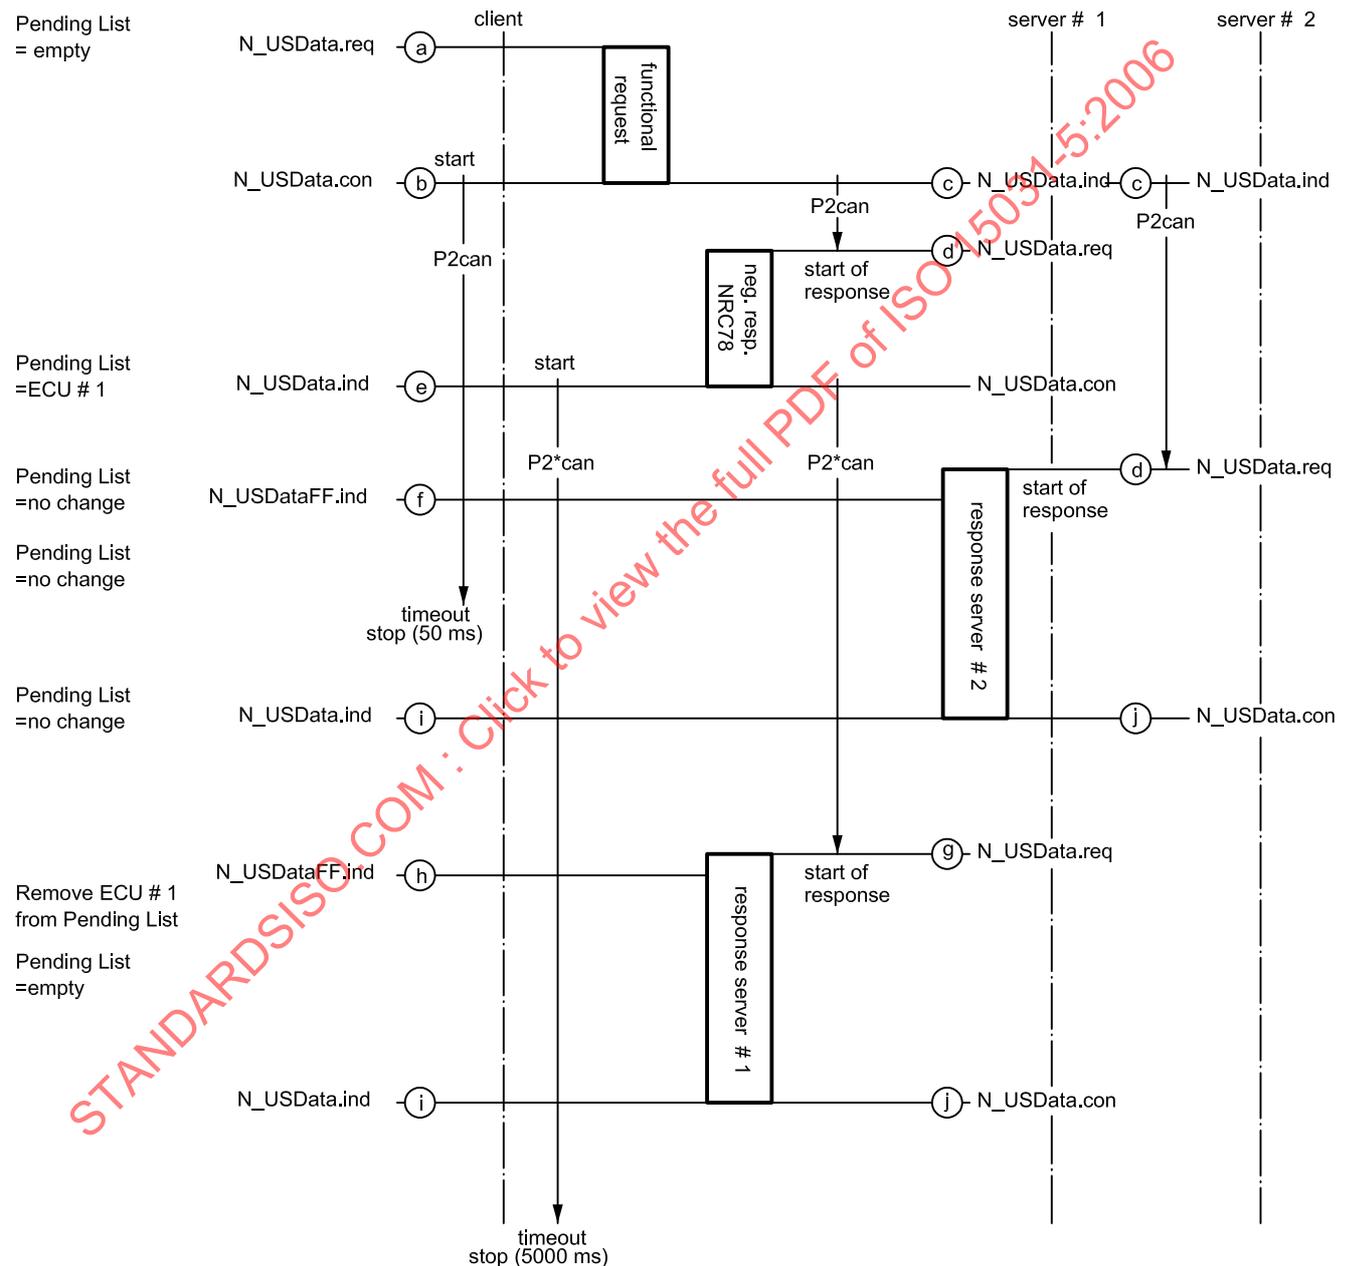


Figure 3 — Functional OBD communication – enhanced response timing

From a server point of view, there is no difference in the timing handling compared to a physically addressed request message that requires enhanced response timing, but the client shall handle the timing differently compared with physical communication.

- a) The diagnostic application of the client starts the transmission of the functionally addressed request message by issuing a N_USData.req to its network layer. The network layer transmits the request message to the servers. A functionally addressed request message shall only be a single-frame message.
- b) The completion of the request message is indicated in the client via N_USData.con. When receiving N_USData.con, the client starts its P2_{CAN} timer, using the default reload value P2_{CAN}. For the response message, the value of the P2_{CAN} timer shall consider any latency that is involved based on the vehicle network design (e.g. communication over gateways, bus bandwidth, etc.). For simplicity, the figure assumes that the client and the server are located on the same network.
- c) The completion of the request message is indicated in the servers via N_USData.ind.
- d) The functionally addressed servers shall start with their response messages within P2_{CAN} after the reception of N_USData.ind. This means that in case of a multi-frame response messages, the FirstFrame shall be sent within P2_{CAN} and for single-frame response messages, that the SingleFrame shall be sent within P2_{CAN}. In case any of the addressed servers cannot provide the requested information within the P2_{CAN} response timing, it can request an enhanced response-timing window by sending a negative response message including response code 78 hex (this is not allowed for service \$01).
- e) Upon the reception of the negative response message within the client, the client network layer generates a N_USData.ind. The reception of a negative response message with response code 78 hex causes the client to continue its P2_{CAN} timer in order to observe other servers to respond within P2_{CAN}. In addition, the client establishes an enhanced P2*_{CAN} timer for observation of further server #1 response(s). The client shall store a server identification in a list of pending response messages. Once a server that is stored as pending in the client starts with its final response message (positive response message or negative response message including a response code other than 78 hex), it is deleted from the list of pending response messages. For simplicity, Figure 5 only shows a single negative response message including response code 78 hex from server #1.
- f) Server #2 transmits a FirstFrame of a multi-frame response message within P2*_{CAN}. The reception of the FirstFrame is indicated in the client network layer by a N_USDataFF.ind. Figure 5 shows when the client receives the start of the response message of the second server.
- g) Server #1 previously indicated to the client (e) enhanced response timing. Once server #1 can provide the requested information, it starts with its final response message by issuing a N_USData.req to its network layer. If server #1 can still not provide the requested information within the enhanced P2*_{CAN}, then a further negative response message including response code 78 hex can be sent. This will cause the client to reload its P2*_{CAN} timer value again. A negative response message including response code 78 hex from a server that is already stored in the list of pending response messages has no affect to the client internal list of pending response message.
- h) Server #1 transmits a FirstFrame of a multi-frame response message within P2*_{CAN}. The reception of the FirstFrame is indicated in the client network layer by a N_USDataFF.ind. Figure 5 shows when the client receives the start of the response message of the server #1. The client removes server #1 from the internal list of pending response messages.
- i) The client network layer will generate a N_USData.ind.
- j) The server network layer will generate a N_USData.con based on the completion of the transmission.

5.2.3 Minimum time between requests from external test equipment

5.2.3.1 ISO 9141-2, ISO 14230-4 — Minimum time between requests from external test equipment

For ISO 9141-2 (K-line) interfaces, the required times between request messages are specified in ISO 9141-2.

For ISO 14230-4 (K-line) interfaces, the required times between request messages are specified in ISO 14230-4. Figure 4 shows an example of a request message followed by four (4) response messages and another request message.

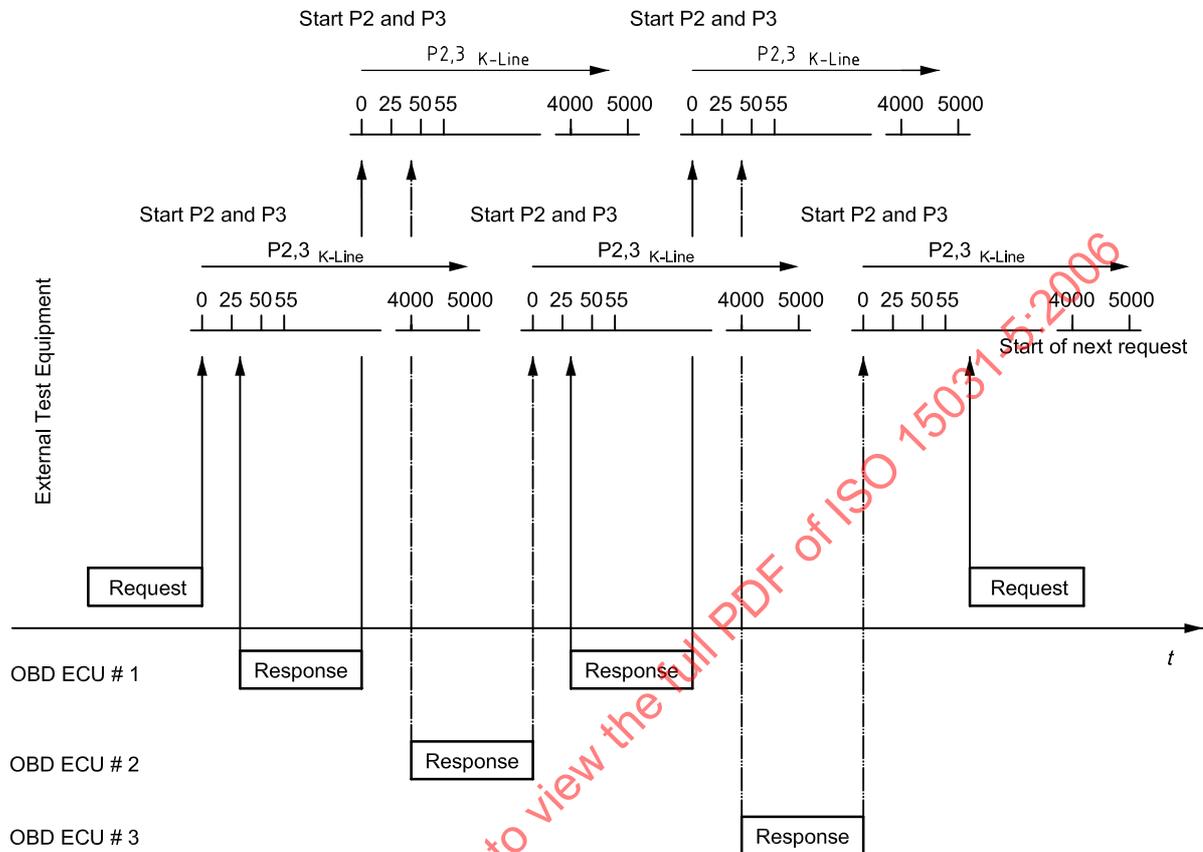


Figure 4 — ISO 9141-2 (Key Bytes: \$08 \$08) and ISO 14230-4 application timing parameter overview

5.2.3.2 SAE J1850 — Minimum time between requests from external test equipment

For SAE J1850 network interfaces, an external test equipment shall always wait for a response message from the previous request, or “no response” time-out before sending another request message. If the number of response messages is known and all response messages have been received, then the external test equipment is permitted to send the next request message immediately. If the number of response messages is not known, then the external test equipment shall wait at least $P2_{J1850}$ maximum time.

Figure 5 shows an example of a request message followed by four (4) response messages and another request message.

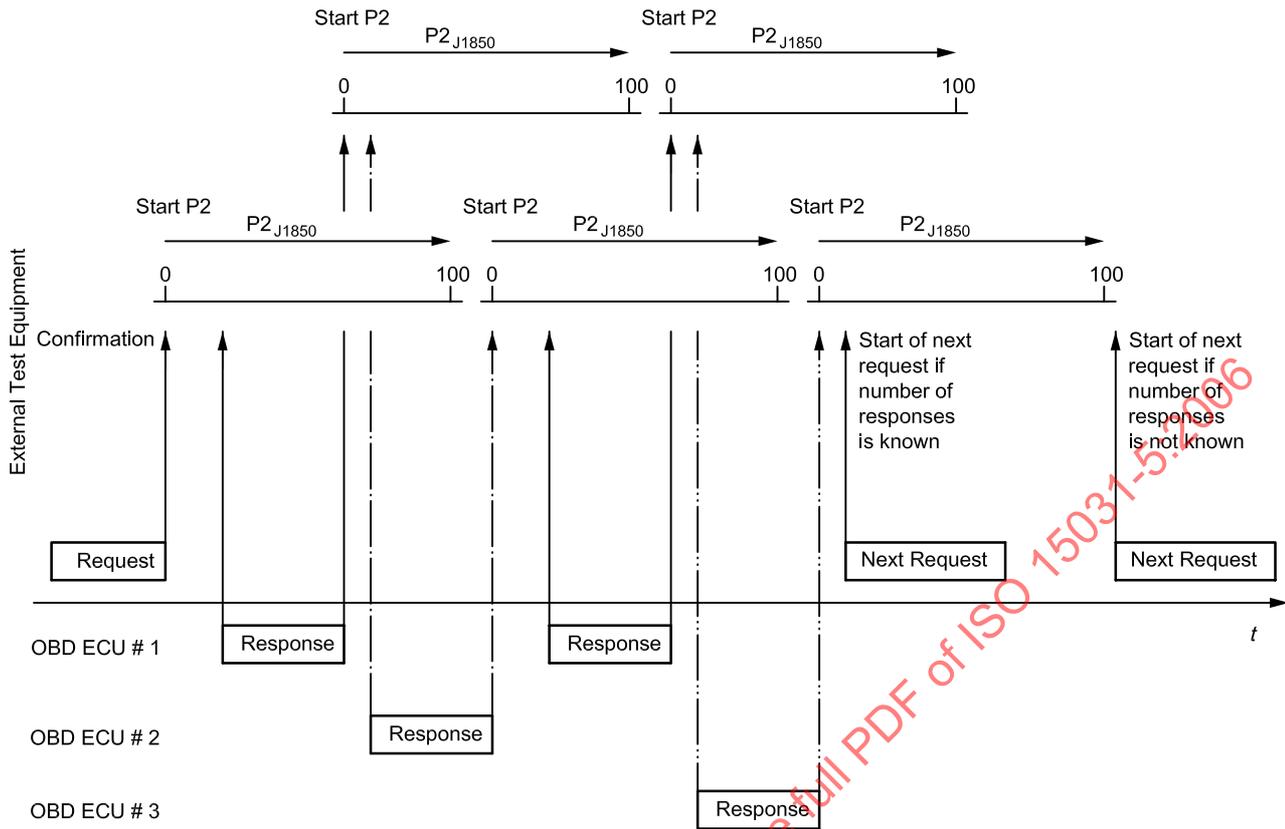


Figure 5 — SAE J1850 application timing parameter overview

5.2.3.3 ISO 15765-4 — Minimum time between requests from external test equipment

For ISO 15765-4 network interfaces, the external test equipment may send a new request message immediately after it has determined that all responses related to the previously sent request message have been received. If the external test equipment does not know whether it has received all response messages, (e.g. after sending the initial OBD request message: Service \$01, PID \$00), it shall wait ($P2_{CAN}$ maximum) after the last request (if no responses are sent) or the last response message. The timer $P2_{CAN}$ of the external test equipment starts with the confirmation of a successful transmission of the request message.

Figure 6 shows an example of a request message followed by three (3) single-frame response messages and another request message.

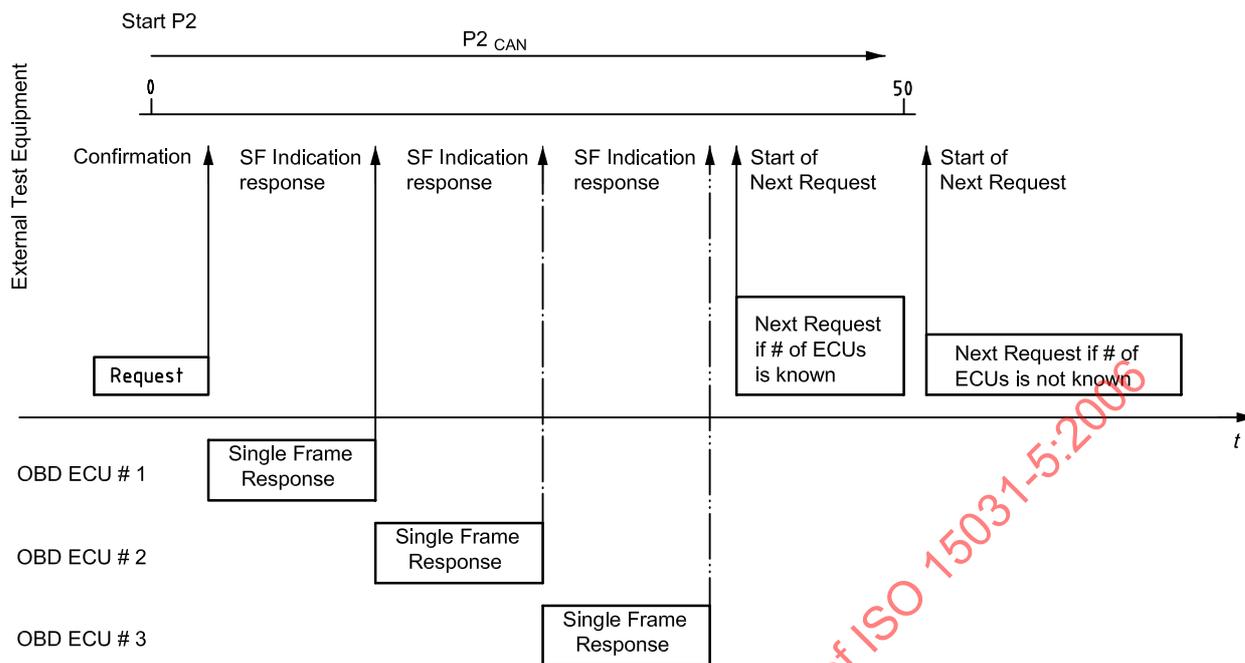


Figure 6 — ISO 15765-4 application timing parameter (Single Frame Response Messages) overview

Figure 7 shows an example of a request message followed by two (2) single frames, one (1) multiple frame response message and another request message. The next request message can be sent immediately by the external test equipment after completion of all response messages in case the transmission of the response messages takes longer than P2_{CAN} even if the external test equipment does not know the number of responding ECUs.

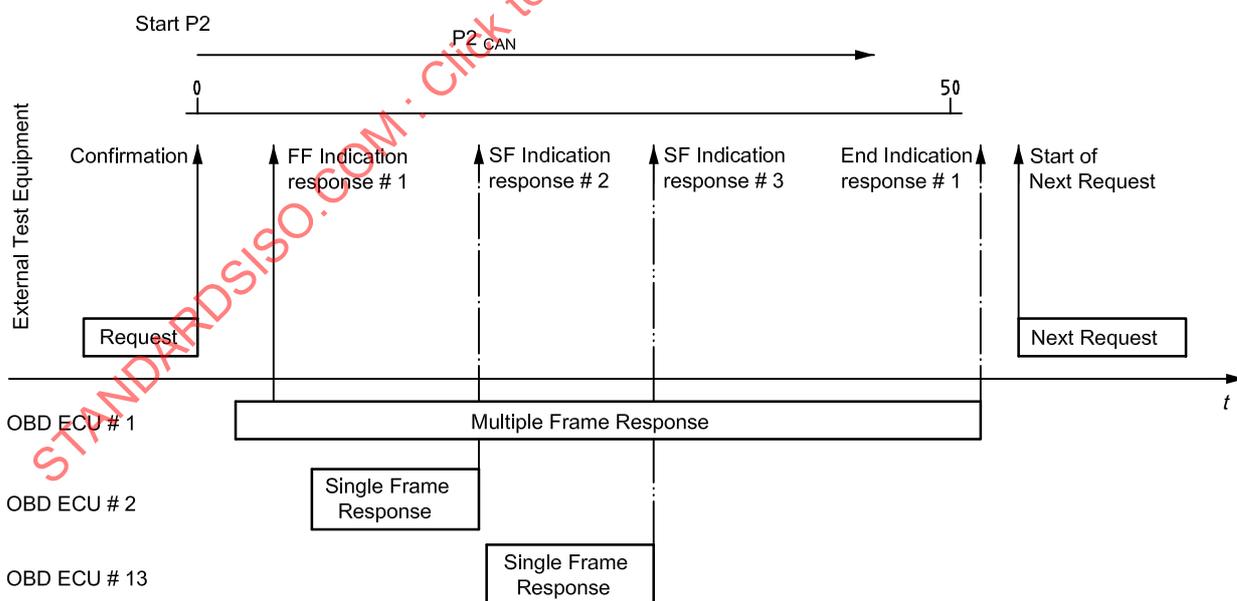


Figure 7 — ISO 15765-4 application timing parameter (Single and Multiple Frame Response Messages not finished within P2_{CAN}) overview

NOTE The Network Layer timing parameters for the multiple frame response are not shown. Network Layer timing requirements for legislated diagnostic messages are specified in ISO 15765-4.

Figure 8 shows an example of a request message followed by one (1) single frame, one (1) multiple frame response message (completion within $P2_{CAN}$) and another request message. The next request message can be sent immediately by the external test equipment after completion of all response messages if the external test equipment knows the number of responding ECUs. If not, it needs to wait until $P2_{CAN}$ is expired.


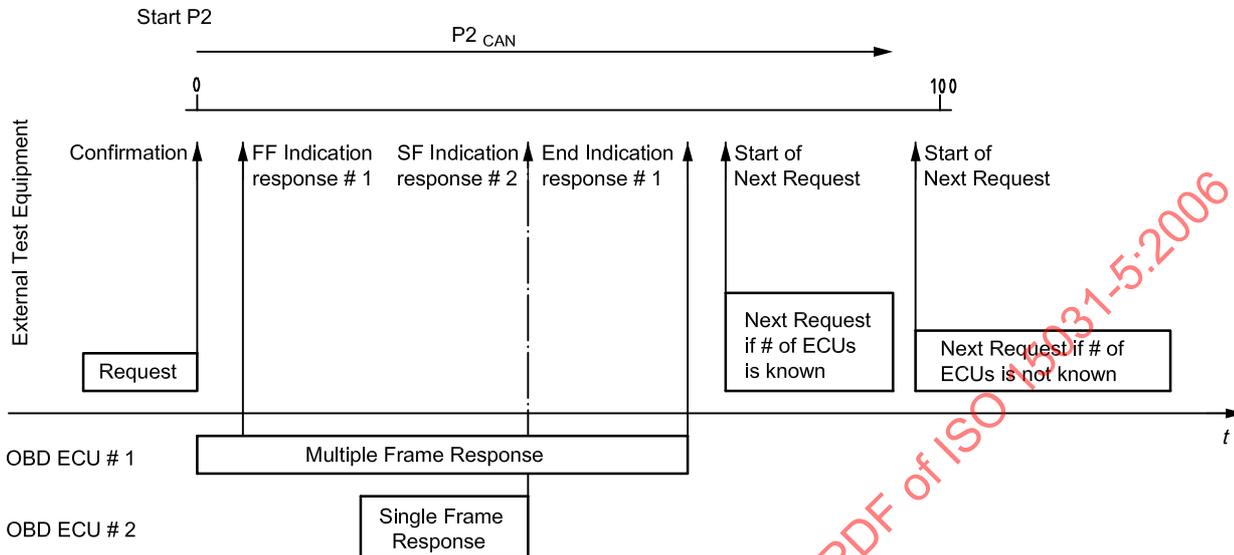


Figure 8 — ISO 15765-4 application timing parameter (Single and Multiple Frame Response Messages within $P2_{CAN}$) overview

NOTE The Network Layer timing parameters for the multiple frame response are not shown. Network Layer timing requirements for legislated diagnostic messages are specified in ISO 15765-4.

5.2.3.4 ISO 15765-4 — ECU behaviour to a request for supported/non-supported OBD information

Figure 9 shows an example of a typical vehicle OBD configuration.

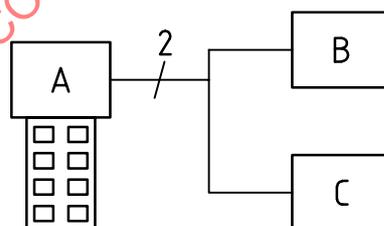

Key

- A External test equipment
- B ECM (Engine Control Module)
- C TCM (Transmission Control Module)

Figure 9 — External test equipment connected to two (2) OBD ECUs

A service shall only be implemented by an ECU if supported with data (e.g. PID/OBD Monitor ID/Test ID/InfoType supported), except for Service \$01 and PID \$00 which shall be supported by all emissions-related ECUs.

Typically, the ECM supports OBD Monitor IDs, which the TCM does not support. In case the external test equipment requests the status of such OBD Monitor ID supported by the ECM, the ECM sends a positive

response message and the TCM does not send a response message (no negative response message allowed). The external test equipment knows that the TCM will not send a positive response message based on the OBD Monitor ID supported information retrieved prior to the latter request.

This shall be implemented to enhance the overall diagnostic communication performance between the external test equipment and the vehicle ECUs (see 5.2.3.3).

5.2.4 Data not available

5.2.4.1 ISO 9141-2, ISO 14230-4, and SAE J1850 — Data not available

There are two conditions for which data is not available. One condition is that the service is not supported, and the other is that the service is supported but data is currently not available.

For SAE J1850 and ISO 9141-2 interfaces, there will be no reject message to a functional request message if the request is not supported by the ECU. This prevents response messages from all ECUs that do not support a service or a specific data value.

For ISO 14230-4 interfaces, there will be a response message to every request message either positive (with data) or negative. In order to avoid unnecessary communication the ECU(s) which does (do) not support a functionally requested PID, TID, or INFOTYPE is permitted to not send a negative response message because another ECU will send a positive response message. Format and possible codes of negative responses are specified in 5.3.4.

Some services are supported by a vehicle, but data may not always be available when requested. For Services \$05 and \$06, if the test has not been run since test results were cleared, or for Service \$02 if freeze frame data has not been stored, or for Service \$09 if the engine is running, valid data will not be available. For these conditions, the manufacturer has the option either to not respond or to respond with data that is invalid (ISO 9141-2 and SAE J1850 only). The functional description for these services discuss the method to determine if the data is valid.

5.2.4.2 ISO 15765-4 — Data not available

There are four (4) conditions for which data is not available:

- **Request message is not supported:** The ECU(s) which does (do) not support the functional request message shall not send any response message.
- **Request message is supported but data is not supported:** The ECU(s) which does (do) support the functional request message but does (do) not support the requested data (e.g. PID, OBD Monitor ID, TID, or INFOTYPE) is (are) not allowed to send a negative response message because another ECU will send a positive response message. If the external test equipment sends a message including multiple PIDs and each emission-related ECU does not support all requested PIDs, then each ECU shall send a positive response message including the supported PID(s) and data values and shall not send a negative response message. If an ECU does not support any of the PIDs requested, it is not allowed to send a negative response message.
- **Request message is supported but data is currently not available:** The ECU(s) which does (do) support the functional request message but does (do) not currently have the requested data available shall respond with a negative response message with response code \$22 - ConditionsNotCorrect (negative response message format is specified in 5.3.3). For Service \$06 the use of a negative response message including response code \$22 is not permitted. For Services \$04 and \$09 the use of a negative response message including negative response code \$22 is allowed only during conditions specified by OBD regulations.
- **Request message is supported but data is not available within P2 timing:** The behaviour of the ECU(s) and the external test equipment is specified in 5.2.4.3.

For ISO 9141-2 with key bytes \$94 \$94, the response message timing $P2_{K-Line}$ shall be according to table "Definition of ISO 9141-2 application timing parameter values".

5.2.4.3.3 ISO 14230-4 — Data not available within P2 timing

If an ECU(s) supports the functional request message but does not have the requested data available within P2 timing, handling shall be performed as follows:

- a) The ECU(s) shall respond with a negative response message with response code \$78 - RequestCorrectlyReceived-ResponsePending within P2 timing.
- b) ECUs which require more time than $P2_{K-Line}$ to perform the requested action shall repeat the negative response message with response code \$78 prior to expiration of $P2_{K-Line}$ until the positive response message is available.
- c) After all positive response messages have been received or a time out $P2_{K-Line,max}$ has occurred, the external test equipment shall wait until $P3_{K-Line,min}$ is reached to send a new request message.

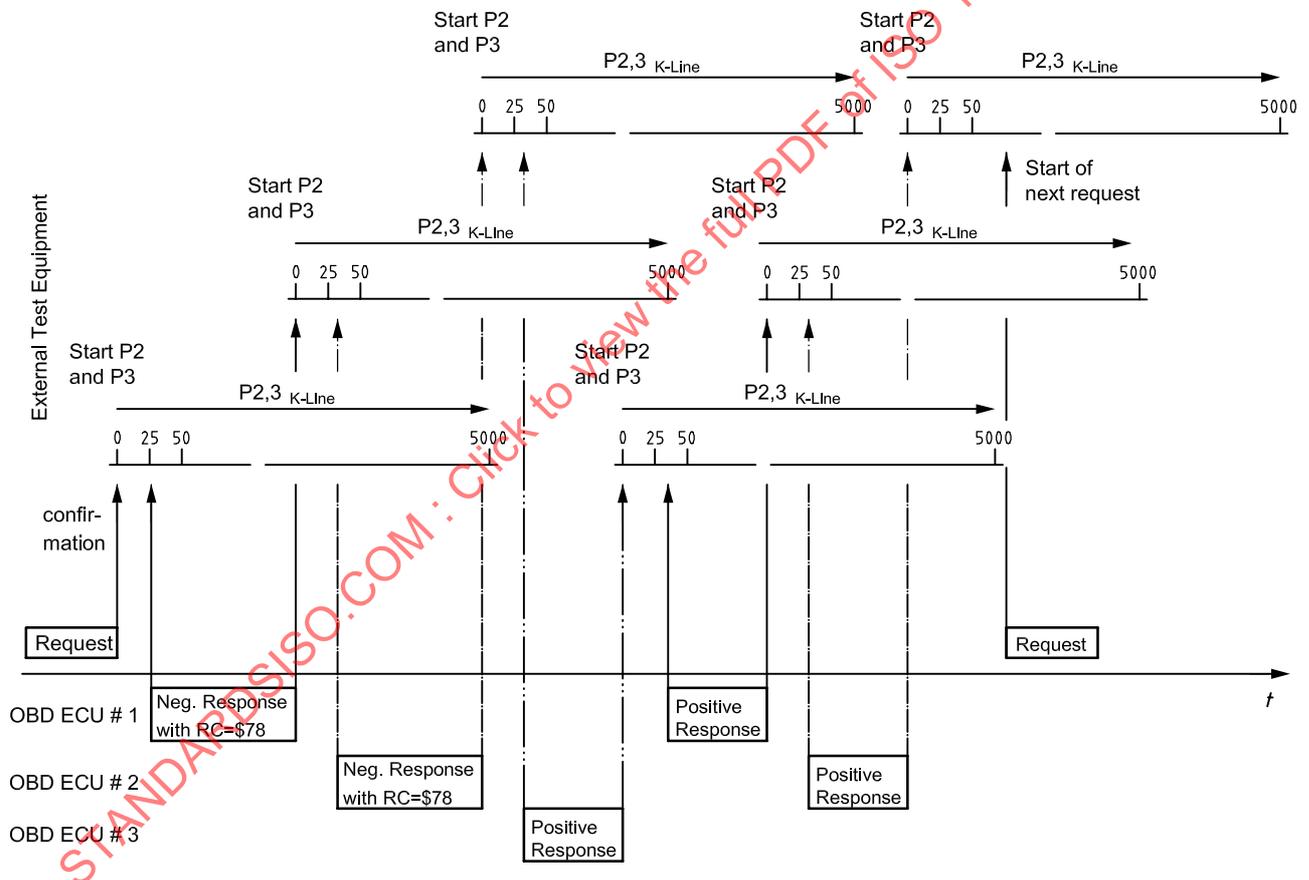


Figure 11 — ISO 14230-4 — Negative response code RC=\$78 handling overview

5.2.4.3.4 SAE J1850 — Data not available within P2 timing

If an ECU(s) supports the functional request message but does not have the requested data available within P2 timing, then a retry message handling routine shall be performed as follows:

- a) If the response message is not received within $P2_{J1850}$, the external test equipment shall stop retrying the request message after one (1) minute from the original request.

- b) The retry message shall be repeated after thirty (30 ± 1) seconds.
- c) The external test equipment shall record if all ECUs have sent the expected number of response messages.

Additional description is included in the functional description of the corresponding service.

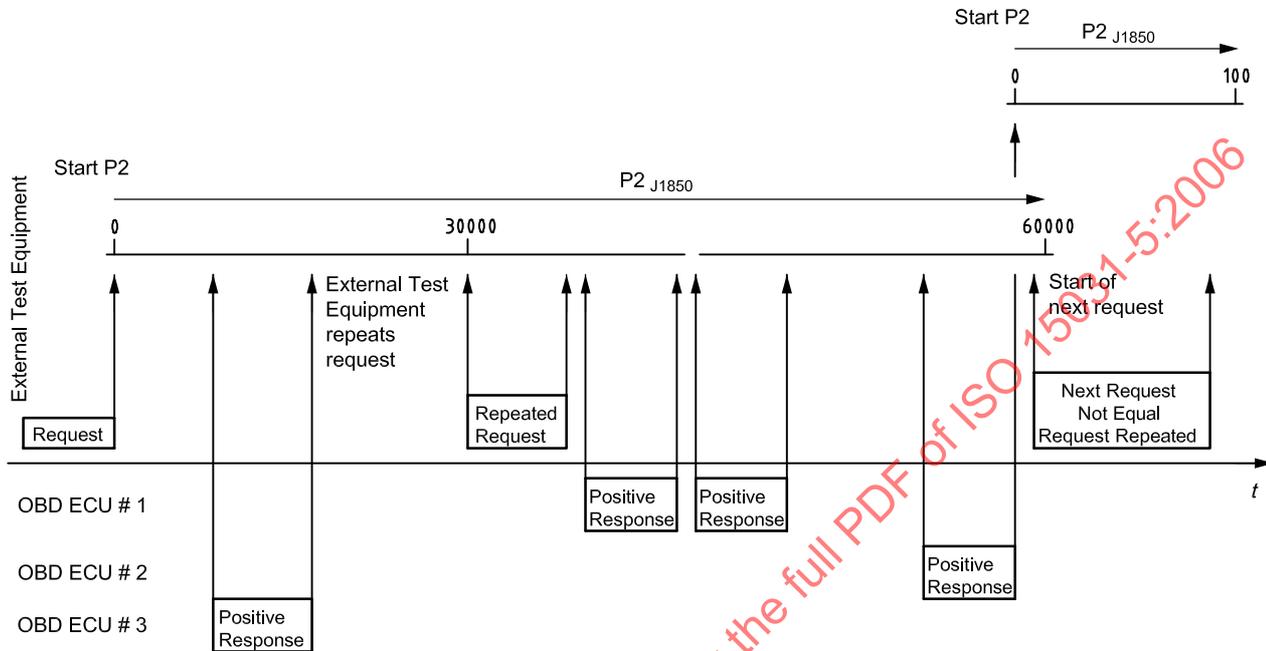


Figure 12 — SAE J1850 — Data not available within P2 timing handling overview

5.2.4.3.5 Data not available test conditions for protocols: ISO 9141-2, ISO 14230-4 and SAE J1850

There are two conditions for which data is not available:

- a) Service is not supported.
- b) Service is supported but data is not available at the time that the request is made.

Table 6 indicates the proper server/ECU response for each protocol as detailed in 5.2.4.1.

Table 6 — Proper response from server/ECU with ISO 9141-2, ISO 14230-4 and SAE J1850 protocol

Condition	ISO 9141-2	SAE J1850	ISO 14230-4
a) Service \$01 not supported	All ECUs must respond to Service \$01 PID \$00 if Service \$01 is supported. If Service \$01 is not supported, no response is allowed.	All ECUs must respond to Service \$01 PID \$00 if Service \$01 is supported. If Service \$01 is not supported, no response is allowed.	All ECUs must respond to Service \$01 PID \$00 if Service \$01 is supported. If Service \$01 is not supported, ECU can either not respond or send a negative response (\$7F, \$01, \$11)
b) Service \$01 unsupported PID requested	No response preferred, positive response is allowed	No response preferred, positive response is allowed	ECU can either not respond or send a negative response (\$7F, \$01, \$12)
c) Service \$01 supported PID requested	Respond within P2 timing	Respond within P2 timing	Respond within P2 timing

Table 6 (continued)

Condition	ISO 9141-2	SAE J1850	ISO 14230-4
d) Service \$02 not supported	The ECU shall not respond	The ECU shall not respond	ECU can either not respond or send a negative response (\$7F \$02, \$11)
e) Service \$02 supported PID requested, no Freeze Frame stored	PID \$02 indicates \$0000, but if PIDs are requested, ECU can either not respond or send invalid data, except if supported PIDs (\$00, \$20, ...) have been requested, then the ECU shall send a response with the supported PID and data bytes	PID \$02 indicates \$0000, but if PIDs are requested, ECU can either not respond or send invalid data, except if supported PIDs (\$00, \$20, ...) have been requested, then the ECU shall send a response with the supported PID and data bytes	PID \$02 indicates \$0000, but if PIDs are requested, ECU can either not respond or send a negative response (\$7F, \$02, \$12), except if supported PIDs (\$00, \$20, ...) have been requested, then the ECU shall send a response with the supported PID and data bytes
f) Service \$02 unsupported PID requested, no Freeze Frame stored	No response preferred, positive response is allowed	No response preferred, positive response is allowed	ECU can either not respond or send a negative response (\$7F \$02, \$12)
g) Service \$02 supported PID requested, Freeze Frame stored	Respond within P2 timing	Respond within P2 timing	Respond within P2 timing
h) Service \$02 unsupported PID requested, Freeze Frame stored	No response preferred, positive response is allowed	No response preferred, positive response is allowed	ECU can either not respond or send a negative response (\$7F \$02, \$12)
i) Service \$03/\$07 not supported	The ECU shall not respond	The ECU shall not respond	ECU can either not respond or send a negative response (\$7F \$03, \$11)
j) Service \$03/\$07 supported, no DTCs stored	No response preferred, positive response indicating no DTCs is allowed	No response preferred, positive response indicating no DTCs is allowed	Positive response indicating no DTCs is required.
k) Service \$03/\$07 supported, DTCs stored	Positive response is required	Positive response is required	Positive response is required
l) Service \$04 not supported	The ECU shall not respond	The ECU shall not respond	ECU can either not respond or send a negative response (\$7F \$04, \$11)
m) Service \$04 supported, conditions not correct	The ECU shall not respond	The ECU shall not respond	Negative response is required (\$7F, \$04, \$22)
n) Service \$04 supported, conditions correct	Positive response is required	Positive response is required	Positive response is required
o) Service \$05/\$06 not supported	The ECU shall not respond	The ECU shall not respond	ECU can either not respond or send a negative response (\$7F \$05/\$06, \$11)
p) Service \$05/\$06 supported TID requested, no stored data available	If TIDs are requested, ECU can either not respond or send invalid data	If TIDs are requested, ECU can either not respond or send invalid data	If TIDs are requested, ECU can either not respond or send invalid data or send negative response (\$7F, \$05/\$06, \$12).
q) Service \$05/\$06 unsupported TID requested, no stored data available	No response preferred, positive response is allowed	No response preferred, positive response is allowed	ECU can either not respond or send a negative response (\$7F \$05/\$06, \$12)
r) Service \$05/\$06 supported TID requested, stored data available	Respond within P2 timing	Respond within P2 timing	Respond within P2 timing
s) Service \$05/\$06 unsupported TID requested, stored data available	No response preferred, positive response is allowed	No response preferred, positive response is allowed	ECU can either not respond or send a negative response (\$7F \$05/\$06, \$12)

Table 6 (continued)

Condition	ISO 9141-2	SAE J1850	ISO 14230-4
t) Service \$08 not supported	The ECU shall not respond	The ECU shall not respond	ECU can either not respond or send a negative response (\$7F \$08, \$11)
u) Service \$08 supported TID requested, conditions correct	Respond within P2 timing	Respond within P2 timing	Respond within P2 timing
v) Service \$08 supported TID requested, conditions not correct	The ECU shall not respond or may respond with a manufacturer-specified value as DATA A, which corresponds to the reason the test cannot be run.	The ECU shall not respond or may respond with a manufacturer-specified value as DATA A, which corresponds to the reason the test cannot be run.	Negative response is required (\$7F, \$08, \$22) or may respond with a manufacturer-specified value as DATA A which corresponds to the reason the test cannot be run.
w) Service \$08 unsupported TID requested	No response preferred, positive response is allowed	No response preferred, positive response is allowed	ECU can either not respond or send a negative response (\$7F \$08, \$12)
x) Service \$09 not supported	The ECU shall not respond	The ECU shall not respond	ECU can either not respond or send a negative response (\$7F \$09, \$11)
y) Service \$09 supported INFOTYPE requested, data available (VIN, CVN, CALID)	Respond within P2 timing	Respond within P2 timing	Respond within P2 timing
z) Service \$09 supported INFOTYPE requested, data not available, conditions correct (CVN)	Respond within 1 minute; do not restart CVN calculation. Test tool sends retry message every 0,055 to 4,0 seconds	Respond within 1 minute; do not restart CVN calculation. Test tool sends retry message after 30 seconds	One or multiple negative response message(s) (\$7F, \$09, \$78) required within P2max (25 – 50 ms) until positive response is sent
aa) Service \$09 supported INFOTYPE requested, data not available, conditions not correct (CVN), prior to 2005 MY only	The ECU shall not respond	The ECU shall not respond	Negative response is required (\$7F, \$09, \$22)
bb) Service \$09 unsupported INFOTYPE requested	No response preferred, positive response is allowed	No response preferred, positive response is allowed	ECU can either not respond or send a negative response (\$7F \$09, \$12)

5.2.4.3.6 ISO 15765-4 - Data not available within P2 timing

The ECU(s) which does (do) support the functional request message but does (do) not have the requested data available within P2 timing, shall perform the following handling:

- a) The ECU(s) shall respond with a negative response message with response code \$78 - RequestCorrectlyReceived-ResponsePending within P2 timing (not allowed for Service \$01 requests).
- b) After correct reception of the negative response message with response code \$78, the P2_{CAN}max parameter timing value shall be set to P2*_{CAN} (5000 ms) by the external test equipment and the ECU which has sent the negative response message.
- c) If another ECU also sends a negative response message with response code \$78, the P2_{CAN}max timing parameter value shall be reset to P2*_{CAN}.
- d) ECUs which require more than P2*_{CAN} to perform the requested action shall repeat the negative response message with response code \$78 prior to expiration of P2*_{CAN} until correct reception of the positive response message.
- e) After all positive response messages have been received or time out, P2*_{CAN}max has occurred.

It is the vehicle manufacturer's responsibility to ensure the network architecture of the vehicle does not cause timing delays that exceed $P2_{CANmax}$ timing when responding to Service \$01 PID(s) request, hence a negative response message with response code \$78 shall not be allowed.

Figure 13 shows the negative response message handling with response code \$78 for the ISO 15765-4 interface.

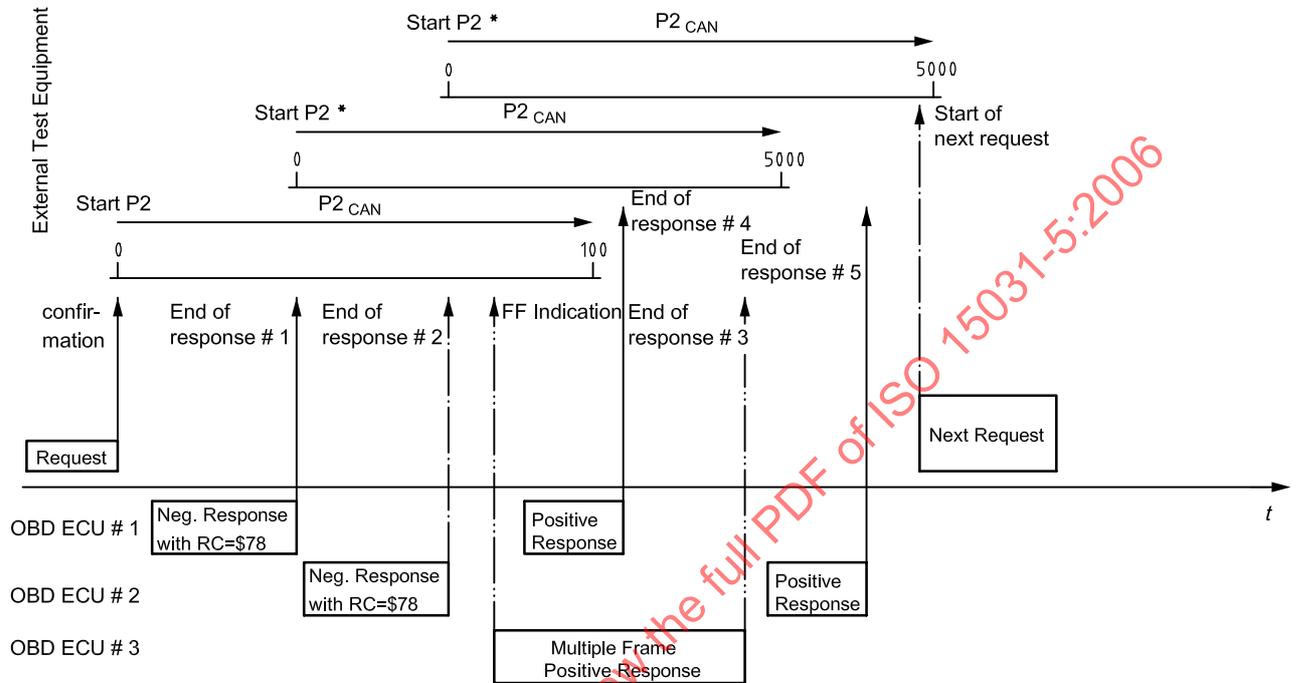


Figure 13 — ISO 15765-4 — Negative response code RC=\$78 handling overview

5.2.4.3.7 Data not available test conditions for protocol: ISO 15765-4 Diagnostics on CAN

There are four conditions for which data is not available:

- Service is not supported.
- Service is supported but data is not supported.
- Service is supported but data is not available at the time that the request is made.
- Service is supported but data is not available within P2 timing.

Table 7 indicates the proper server/ECU response as detailed in 5.2.4.2.

Table 7 — Proper response from server/ECU for ISO 15765-4 protocol

Condition	ISO 15765-4
a) Service \$01 not supported	All ECUs must respond to Service \$01 PID \$00 if Service \$01 is supported. If Service \$01 is not supported, no response is allowed.
b) Service \$01 unsupported PID requested	The ECU shall not respond
c) Service \$01 supported PID requested	Respond within P2 timing (no negative response message with response code \$78 allowed)
d) Service \$02 not supported	The ECU shall not respond
e) Service \$02 supported PID requested, no Freeze Frame stored	PID \$02 indicates \$0000, but if PIDs are requested, ECU must not respond except if supported PIDs (\$00, \$20, ...) have been requested, then the ECU shall send a response with the supported PID and data bytes
f) Service \$02 unsupported PID requested, no Freeze Frame stored	PID \$02 indicates \$0000, but if PIDs are requested, ECU must not respond except for support PIDs \$00, \$20, etc.
g) Service \$02 supported PID requested, Freeze Frame stored	Respond within P2 timing
h) Service \$02 unsupported PID requested, Freeze Frame stored	The ECU shall not respond
i) Service \$03/\$07 not supported	The ECU shall not respond
j) Service \$03/\$07 supported, no DTCs stored	Positive response indicating no DTCs is required
k) Service \$03/\$07 supported, DTCs stored	Positive response including the stored DTCs is required
l) Service \$04 not supported	The ECU shall not respond
m) Service \$04 supported, conditions not correct	Negative response is required (\$7F, \$04, \$22)
n) Service \$04 supported, conditions correct	Positive response message required. Negative response message(s) (\$7F, \$04, \$78) allowed until positive response message available.
o) Service \$06 not supported	The ECU shall not respond
p) Service \$06 supported TID requested, no stored data available	Positive response required, test values, min and max limits must be set to \$00
q) Service \$06 unsupported TID requested, no stored data available	The ECU shall not respond
r) Service \$06 supported TID requested, stored data available	Respond within P2 timing
s) Service \$06 unsupported TID requested, stored data available	The ECU shall not respond
t) Service \$08 not supported	The ECU shall not respond
u) Service \$08 supported TID requested, conditions correct	Respond within P2 timing
v) Service \$08 supported TID requested, conditions not correct	Negative response required (\$7F, \$08, \$22)
w) Service \$08 unsupported TID requested	The ECU shall not respond
x) Service \$09 not supported	The ECU shall not respond
y) Service \$09 supported INFOTYPE requested, data available (VIN, CVN, CALID)	Respond within P2 timing
z) Service \$09 supported INFOTYPE requested, data not available, conditions correct (CVN)	Initial negative response message (\$7F \$09, \$78) required within P2max (50 ms) and consecutive negative response message(s) (\$7F, \$09, \$78) is (are) required within P2max (5,0 seconds) until positive response is sent
aa) Service \$09 supported INFOTYPE requested, data not available, conditions not correct (CVN), prior to 2005 MY only	Negative response required (\$7F, \$09, \$22)
bb) Service \$09 unsupported INFOTYPE requested	The ECU shall not respond

5.2.5 Maximum values

If the data value exceeds the maximum value possible to be sent, the on-board system shall send the maximum value possible (\$FF or \$FFFF). The external test equipment shall display the maximum value or an indication of data too high. This is not normally critical for real-time diagnostics, but for example in the case of a misfire at high vehicle speed with resulting freeze frame data stored, this will be very valuable diagnostic information.

5.2.6 Invalid signals

In distributed network architectures, certain OBD devices may be hardwired to other ECUs or may be independent OBD mechatronic devices, e.g. smart sensor or through a network from another ECU (both referred to as remote OBD devices). When remote OBD devices are not hardwired to the OBD ECU and the data is not received over the data bus from the specific remote OBD device, the primary OBD ECU shall report Service \$01 and Service \$02 data parameters as the minimum or maximum value to indicate that the signal has not been received. A PID which includes this invalid data (no signal) shall either be reported with a minimum value (\$00 or \$0000) or maximum value (\$FF or \$FFFF), e.g. PID \$0D "Vehicle Speed Sensor" = \$FF = 255 km/h, PID \$2F "Fuel Level Input" = \$00 = 0,0 %. The reported value shall be determined by the manufacturer based on system design and network architecture to represent the least likely value to be expected under normal conditions.

5.3 Diagnostic message format

5.3.1 Addressing method

Functional addressing shall be used for all request messages because the external test equipment does not know which system on the vehicle has the information that is needed.

5.3.2 Maximum message length

5.3.2.1 ISO 9141-2, ISO 14230-4, SAE J1850 — Maximum message length

The maximum message length for request and response messages is limited to seven (7) data bytes.

For SAE J1850 and ISO 9141-2 interfaces, each unique diagnostic message specified in this part of ISO 15031 is a fixed length, although not all messages are the same length. For Services \$01 and \$02, message length is determined by parameter identification (PID). Several PIDs e.g. \$06 - \$09 require reading of PIDs \$13 and/or \$1D to determine whether a data byte B is included in the response message. For Service \$05, message length is determined by Test ID. For other services, the message length is determined by the service. This enables the external test equipment to check for proper message length, and to recognize the end of the message without waiting for possible additional data bytes. For ISO 14230-4 interfaces, the message length is always determined by the length information included in the first byte of the header.

5.3.2.2 ISO 15765-4 — Maximum message length

The maximum message length is specified in ISO 15765-2. For request messages, the message length is limited to seven (7) data bytes.

5.3.3 Request/response message format

5.3.3.1 ISO 9141-2, ISO 14230-4, SAE J1850, ISO 15765-4 — Request message format

Table 8 specifies the format of the request message.

Table 8 — Request message format for ISO 9141-2, ISO 14230-4, SAE J1850, ISO 15765-4

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request Service Identifier	M	xx	SIDRQ
#2	service-specific data byte#1	U	xx	—
#3	service-specific data byte#2	U	xx	—
#4	service-specific data byte#3	U	xx	—
#5	service-specific data byte#4	U	xx	—
#6	service-specific data byte#5	U	xx	—
#7	service-specific data byte#6	U	xx	—

The message format defined for some services for the ISO 15765-4 protocol allows for an optional number of data bytes in the request message sent by the external test equipment. If these are included in the request message, support of those optional data bytes becomes mandatory for the server/ECU.

5.3.3.2 ISO 9141-2, ISO 14230-4, SAE J1850 — Positive response message format

Table 9 specifies the format of the positive response message.

Table 9 — Positive response message format for ISO 9141-2, ISO 14230-4, SAE J1850

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Positive Response Service Identifier	M	xx	SIDPR
#2	service-specific data byte#1	U	xx	—
#3	service-specific data byte#2	U	xx	—
#4	service-specific data byte#3	U	xx	—
#5	service-specific data byte#4	U	xx	—
#6	service-specific data byte#5	U	xx	—
#7	service-specific data byte#6	U	xx	—

5.3.3.3 ISO 15765-4 — Positive response message format

Table 10 specifies the format of the positive response message.

Table 10 — Positive response message format for ISO 15765-4

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Positive Response Service Identifier	M	xx	SIDPR
#2	service-specific data byte#1	U	xx	—
#3	service-specific data byte#2	U	xx	—
#4	service-specific data byte#3	U	xx	—
:	:	:	:	:
#n-2	service-specific data byte#m-2	U	xx	—
#n-1	service-specific data byte#m-1	U	xx	—
#n	service-specific data byte#m	U	xx	—

n: this value depends on the response message length
m: this value depends on the response message length - 1

5.3.3.4 ISO 14230-4, ISO 15765-4 — Negative response message format

This subclause includes additions, exceptions, and/or restrictions for the ISO standards which apply.

Table 11 specifies the format of the negative response message.

Table 11 — Negative response message format for ISO 14230-4, ISO 15765-4

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Negative Response Service Identifier	M	7F	SIDNR
#2	Request Service Identifier	M	xx	SIDRQ
#3	ResponseCode	M	xx	RC_

5.3.4 Response code parameter definition

Response codes shall be implemented in an ECU, that supports a service(s) not having valid data available at the time of a request or cannot respond with valid data available within $P2_{K-Line}$ and $P2_{CAN}$ timing.

Table 12 — Negative response code definition

Supported by ISO	Hex Value	Definition of Response Code	Mnemonic
14230-4	10	generalReject This response code indicates that the service is rejected but the server (ECU) does not specify the reason of the rejection.	GR
14230-4	11	serviceNotSupported This response code indicates that the requested action will not be taken because the server (ECU) does not support the requested service.	SNS
14230-4	12	subFunctionNotSupported-InvalidFormat This response code indicates that the requested action will not be taken because the server (ECU) does not support the arguments of the request message or the format of the argument bytes do not match the prescribed format for the specified service.	SFNSIF
14230-4 15765-4	21	busy-RepeatRequest This response code indicates that the server (ECU) is temporarily too busy to perform the requested operation. For ISO 15765-4 protocol the client (external test equipment) shall behave as defined in ISO 15765-4. In a multi-client (more than one external test equipment, e.g. telematic client) environment the diagnostic request message of one client might be blocked temporarily by a negative response message with response code \$21 while another client finishes a diagnostic task. Therefore this negative response code is only allowed to be used during the initialization sequence of the protocol. NOTE If the server (ECU) is able to perform the diagnostic task but needs additional time to finish the task and prepares the response message, the negative response message with response code \$78 are used instead of \$21.	BRR
14230-4 15765-4	22	conditionsNotCorrectOrRequestSequenceError This response code indicates that the requested action will not be taken because the server (ECU) prerequisite conditions are not met. This request may also occur when sequence-sensitive requests are issued in the wrong order.	CNCORSE
14230-4 15765-4	78	requestCorrectlyReceived-ResponsePending This response code indicates that the request message was received correctly, and that any parameters in the request message were valid, but the action to be performed may not be completed yet. This response code can be used to indicate that the request message was properly received and does not need to be re-transmitted, but the server (ECU) is not yet ready to receive another request. The negative response message with this response code may be repeated by the ECU(s) within $P2_{K-Line} = P2_{CAN} = P2_{max}^*$ until the positive response message with the requested data is available.	RCR-RP

5.3.5 Header byte definition of ISO 9141-2, ISO 14230-4, and SAE J1850

The first three (3) bytes of all diagnostic messages are the header bytes.

For SAE J1850 and ISO 9141-2 interfaces, the value of the first header byte is dependant on the bit rate of the data link and the type of message, refer to SAE J1850 and ISO 9141-2. The second header byte has a value that depends on the type of message, either a request or a response.

For ISO 14230-4 interfaces, the value of the first header byte indicates the addressing mode (physical/functional) and the length of the data field. The second header byte is the address of the receiver of the message. The third header byte for all interfaces is the physical address of the sender of the message. The external test equipment has the address \$F1. Other service tools shall use addresses in the range from \$F0 to \$FD. The response to all request messages will be independent of the address of the external test equipment requesting the information. Vehicle manufacturers shall not use the header bytes defined in ISO 15031-5 for any purpose other than emissions-related diagnostic messages. When they are used, they shall conform to this specification.

Table 13 — Diagnostic message format for ISO 9141-2, ISO 14230-4, SAE J1850

Header bytes (Hex)			Data bytes								
Priority/Type	Target address (hex)	Source address (hex)	#1	#2	#3	#4	#5	#6	#7	ERR	RESP
Diagnostic request at 10,4 kbit/s: SAE J1850 and ISO 9141-2											
68	6A	F1	Maximum 7 data bytes							Yes	No
Diagnostic response at 10,4 kbit/s: SAE J1850 and ISO 9141-2											
48	6B	ECU addr	Maximum 7 data bytes							Yes	No
Diagnostic request at 10,4 kbit/s (ISO 14230-4)											
11LL LLLLb	33	F1	Maximum 7 data bytes							Yes	No
Diagnostic response at 10,4 kbit/s (ISO 14230-4)											
10LL LLLLb	F1	ECU addr	Maximum 7 data bytes							Yes	No
Diagnostic request at 41,6 kbit/s (SAE J1850)											
61	6A	F1	Maximum 7 data bytes							Yes	Yes
Diagnostic response at 41,6 kbit/s (SAE J1850)											
41	6B	ECU addr	Maximum 7 data bytes							Yes	Yes

NOTE LL LLLL = Length of data bytes; RESP = In-frame response; ERR = Error Detection.

5.3.6 Header byte definition of ISO 15765-4

Each CAN frame is identified by a CAN Identifier. The size of the identifier is either 11 bit or 29 bit. The CAN identifier shall always be followed by an eight (8) byte CAN frame data field (refer to ISO 15765-4; see section "Data length code (DLC)"). Depending on the message type, up to three (3) bytes (FlowControl) are used for the PCI (Protocol Control Information) prior to the Service Identifier (only included in single frame or first frame) and data bytes of the message.

Table 14 — Diagnostic message format for ISO 15765-4

Header bytes	CAN frame data field							
CAN Identifier (11 or 29 bit)	#1	#2	#3	#4	#5	#6	#7	#8

5.3.7 Data bytes definition of ISO 9141-2, ISO 14230-4, SAE J1850, and ISO 15765-4

For the ISO 9141-2, ISO 14230-4, and the SAE J1850 protocol, the first data byte following the header is the diagnostic service identifier, and the remaining data bytes vary depending on the specific diagnostic service. For the ISO 15765-4 protocol, the first data byte following the CAN Identifier in a single frame and first frame is the PCI (Protocol Control Information, number of bytes varies, depending on frame type), then diagnostic service identifier, and the remaining data bytes vary depending on the specific diagnostic service.

5.3.8 Non-data bytes included in diagnostic messages with SAE J1850

All diagnostic messages use a cyclic redundancy check (CRC) as in SAE J1850 as the error detection (ERR) byte. In-frame response (RSP) is specified as optional in SAE J1850. For messages specified in this part of ISO 15031, the RSP byte is required in all request and response messages at 41,6 kbit/s, and is not allowed for messages at 10,4 kbit/s. The in-frame response byte shall be the node address of the device transmitting the RSP. SAE J1850 specifies additional message elements that may be included in diagnostic messages. Use of these message elements is beyond the scope of this document, but needs to be considered when specifying total diagnostic messages.

5.3.9 Non-data bytes included in diagnostic messages with ISO 9141-2 and ISO 14230-4

Messages will include a checksum, specified in ISO 9141-2 and ISO 14230-4, after the data bytes as the error detection byte (ERR). There is no provision for an in-frame response.

5.3.10 Bit position convention

Some data byte values include descriptions that are based on bit positions within the byte. The convention used is that the most significant bit (MSB) is referred to as "bit 7", and the least significant bit (LSB) is referred to as "bit 0," as shown in Figure 14.

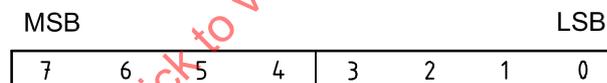


Figure 14 — Bit position within a data byte

5.4 Allowance for expansion and enhanced diagnostic services

This part of ISO 15031 allows for the addition of diagnostic services both as industry standards and manufacturer-specific services. The diagnostic Services \$00 through \$0F are ISO/SAE reserved.

5.5 Definition of PIDs for Services \$01 and \$02

All PIDs are defined in Annex B.

5.6 Format of data to be displayed

Table 15 indicates the type of data and minimum requirements for format of the display.

Table 15 — Format of data to be displayed

Data	Services	Display Format
Device ID – source address of response	all	ISO 9141-2: Hexadecimal (00 to FF) ISO 14230-4: Hexadecimal (00 to FF) SAE J1850: Hexadecimal (00 to FF) ISO 15765-4: Hexadecimal (11 bit or 29 bit CAN Identifier)
Parameter ID (PID)	\$01 & \$02	Hexadecimal (00 to FF) description (see Annex B)
Frame number	\$02	Decimal (0 to 255)
Data values	\$01 & \$02	See Annex B
Diagnostic trouble codes	\$03 & \$07	“P”, “B”, “C” or “U”, plus 4 hexadecimal characters and/or DTC definition - see ISO 15031-6
Test ID	\$05, \$06 & \$08	Hexadecimal (00 to FF)
Test value and test limits	\$05	Engineering units for Test IDs less than \$80 (see Annex C) - Decimal (0 to 255) for test IDs greater than \$80
Test value and test limits	\$06	Decimal (0 to 65535)
Component ID	\$06	Hexadecimal (00 to 7F)
Optional data bytes	\$08	4 bytes, each decimal (0 to 255) (see Annex F)
Vehicle information type	\$09	Hexadecimal (00 to 7F) (see Annex G)
Vehicle information data	\$09	ASCII for information types \$02 and \$04; Hexadecimal for information type \$06; Decimal for information type \$08 (see Annex G)

NOTE ISO 15031-4 specifies further guidelines and examples how to display Service \$01 through \$09 data.

6 Diagnostic service definition for ISO 9141-2, ISO 14230-4, and SAE J1850

6.1 Service \$01 — Request current powertrain diagnostic data

6.1.1 Functional description

The purpose of this service is to allow access to current emission-related data values, including analogue inputs and outputs, digital inputs and outputs, and system status information. The request for information includes a parameter identification (PID) value that indicates to the on-board system the specific information requested. PID specifications, scaling information, and display formats are included in Annex B.

The ECU(s) shall respond to this message by transmitting the requested data value last determined by the system. All data values returned for sensor readings will be actual readings, not default or substitute values used by the system because of a fault with that sensor.

Not all PIDs are applicable or supported by all systems. PID \$00 is a bit-encoded PID that indicates, for each ECU, which PIDs that ECU supports. PID \$00 shall be supported by all ECUs that respond to a Service \$01 request, because the external test equipment that conforms to ISO 15031-4 use the presence of a response message by the vehicle to this request message to determine which protocol is supported for diagnostic communications. Annex A defines how to encode supported PIDs.

IMPORTANT — All emissions-related OBD ECUs which at least support one of the services defined in this part of ISO 15031 shall support Service \$01 and PID \$00. Service \$01 with PID \$00 is defined as the universal “initialization/keep alive/ping” message for all emissions-related OBD ECUs.

6.1.2 Message data bytes

6.1.2.1 Request current powertrain diagnostic data request message definition (read supported PIDs)

Table 16 — Request current powertrain diagnostic data request message (read supported PIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data request SID	M	01	SIDRQ
#2	PID (see Annex A)	M	xx	PID

6.1.2.2 Request current powertrain diagnostic data response message definition (report supported PIDs)

Table 17 — Request current powertrain diagnostic data response message (report supported PIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data response SID	M	41	SIDPR
#2	data record of supported PID = [PIDREC_
	supported PID	M	xx	PID
#3	data A,	M	xx	DATA_A
#4	data B,	M	xx	DATA_B
#5	data C,	M	xx	DATA_C
#6	data D]	M	xx	DATA_D

6.1.2.3 Request current powertrain diagnostic data request message definition (read PID value)

Table 18 — Request current powertrain diagnostic data request message (read PID value)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data request SID	M	01	SIDRQ
#2	PID (see Annex B)	M/C ^a	xx	PID

^a C = Conditional — PID value is one of the supported PIDs of previous response message.

6.1.2.4 Request current powertrain diagnostic data response message definition (report PID value)

Table 19 — Request current powertrain diagnostic data response message (report PID value)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data response SID	M	41	SIDPR
#2	data record of 1 st supported PID = [PID data A, data B, data C, data D]	M	xx	PIDREC_ PID
#3		M	xx	DATA_A
#4		C ^a	xx	DATA_B
#5		C	xx	DATA_C
#6		C	xx	DATA_D

^a C = Conditional — data B - D depend on selected PID value.

The PID, which is included in the request message may be supported by all emission-related ECUs, which shall comply with this specification. Therefore, multiple response messages are sent by the vehicle ECUs.

6.1.3 Parameter definition

6.1.3.1 PIDs supported

Annex A specifies the interpretation of the data record of supported PIDs.

6.1.3.2 PID and data byte descriptions

Annex B specifies standardized emission-related parameters.

6.1.4 Message example

The example below shows how the “Request current powertrain diagnostic data” service shall be implemented.

6.1.4.1 Step #1: Request supported PIDs from vehicle

The external test equipment requests supported PIDs (PID = \$00, \$20) from the vehicle. Refer to Annex A to interpret the data bytes in the response messages.

Table 20 — Request current powertrain diagnostic data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data request SID	01	SIDRQ
#2	PID used to determine PID support for PIDs 01-20	00	PID

Table 21 — Request current powertrain diagnostic data response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID requested	00	PID
#3	Data byte A, representing support for PIDs 01, 03-08	10111111b = \$BF	DATA_A
#4	Data byte B, representing support for PIDs 09, 0B-10	10111111b = \$BF	DATA_B
#5	Data byte C, representing support for PIDs 11, 13, 15	10101000b = \$A8	DATA_C
#6	Data byte D, representing support for PIDs 19, 1C, 20	10010001b = \$91	DATA_D

Table 22 — Request current powertrain diagnostic data response message

Message direction:	ECU#2 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID requested	00	PID
#3	Data byte A, representing support for PID 01	10000000b = \$80	DATA_A
#4	Data byte B, representing support for PID 0D	00001000b = \$08	DATA_B
#5	Data byte C, representing no support for PIDs 11-18	00000000b = \$00	DATA_C
#6	Data byte D, representing no support for PIDs 19-20	00000000b = \$00	DATA_D

Table 23 — Request current powertrain diagnostic data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data request SID	01	SIDRQ
#2	PID requested	20	PID

Table 24 — Request current powertrain diagnostic data response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID requested	20	PID
#3	Data byte A, representing support for PID 21	10000000b = \$80	DATA_A
#4	Data byte B, representing no support for PIDs 29-30	00000000b = \$00	DATA_B
#5	Data byte C, representing no support for PIDs 31-38	00000000b = \$00	DATA_C
#6	Data byte D, representing no support for PIDs 39-40	00000000b = \$00	DATA_D

NOTE ECU #2 does not send a response message because it indicated with the previous response message that it does not support PID \$20.

Now the external test equipment creates an internal list of supported PIDs for each ECU. The ECU #1 (ECM) supports the following PIDs: \$01, \$03 - \$09, \$0B - \$11, \$13, \$15, \$19, \$1C, \$20, \$21. The ECU #2 (TCM) supports the PIDs \$01 and \$0D.

6.1.4.2 Step #2: Request PID from vehicle

The external test equipment requests the following PID from the vehicle:

- PID \$01: Number of emission-related powertrain DTCs and MIL status, PID is supported by ECU #1 (ECM) and ECU #2 (TCM)

Table 25 — Request current powertrain diagnostic data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data request SID	01	SIDRQ
#2	PID: Number of emission-related powertrain DTCs and MIL status	01	PID

Table 26 — Request current powertrain diagnostic data response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID: Number of emission-related powertrain DTCs and MIL status	01	PID
#3	MIL: ON; Number of emission-related powertrain DTCs: 01	81	DATA_A
#4	Misfire -, Fuel system -, Comprehensive monitoring	33	DATA_B
#5	Catalyst -, Heated catalyst -, ..., monitoring supported	FF	DATA_C
#6	Catalyst -, Heated catalyst -, ..., monitoring test complete/not complete	63	DATA_D

Table 27 — Request current powertrain diagnostic data response message

Message direction:	ECU#2 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID: Number of emission-related powertrain DTCs and MIL status	01	PID
#3	MIL: OFF; Number of emission-related powertrain DTCs: 01	01	DATA_A
#4	Comprehensive monitoring: supported, test complete	44	DATA_B
#5	Catalyst -, Heated catalyst -, ..., monitoring supported	00	DATA_C
#6	Catalyst -, Heated catalyst -, ..., monitoring test complete/not complete	00	DATA_D

The external test equipment requests the following PID from the vehicle:

— PID \$19: Bank 2 - Sensor 2, PID is supported by ECU #1 (ECM)

Table 28 — Request current powertrain diagnostic data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data request SID	01	SIDRQ
#2	PID: Oxygen Sensor Output Voltage (B2 - S2) Short Term Fuel Trim (B2 - S2)	19	PID

Table 29 — Request current powertrain diagnostic data response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID: Oxygen Sensor Output Voltage (B2 - S2) Short Term Fuel Trim (B2 - S2)	19	PID
#3	Oxygen Sensor Output Voltage (B2 - S2): 0,8 Volt	A0	DATA_A
#4	Short Term Fuel Trim (B2 - S2): 93,7 %	78	DATA_B

NOTE ECU#2 does not support PID \$19 and therefore does not send a response message.

6.2 Service \$02 — Request powertrain freeze frame data

6.2.1 Functional description

The purpose of this service is to allow access to emission-related data values in a freeze frame. This allows expansion to meet manufacturer-specific requirements not necessarily related to the required freeze frame, and not necessarily containing the same data values as the required freeze frame. The request message includes a parameter identification (PID) value that indicates to the on-board system the specific information

requested. PID specifications, scaling information and display formats for the freeze frame are included in Annex B.

The ECU(s) shall respond to this message by transmitting the requested data value stored by the system. All data values returned for sensor readings will be actual stored readings, not default or substitute values used by the system because of a fault with that sensor.

Not all PIDs are applicable or supported by all systems. PID \$00 is a bit-encoded PID that indicates, for each ECU, which PIDs that ECU supports. Therefore, PID \$00 shall be supported by all ECUs that respond to a Service \$02 request as specified even if the ECU does not have a freeze frame stored at the time of the request.

Annex A defines how to encode supported PIDs.

PID \$02 indicates the DTC that caused the freeze frame data to be stored. If freeze frame data is not stored in the ECU, the system shall report \$00 00 as the DTC. Any data reported when the stored DTC is \$00 00 may not be valid.

The frame number byte shall indicate \$00 for the mandated freeze frame data. Manufacturers may optionally save additional freeze frames and use this service to obtain that data by specifying the freeze frame number in the request message. If a manufacturer uses these additional freeze frames, they will be stored under conditions specified by the manufacturer, and contain data specified by the manufacturer.

6.2.2 Message data bytes

6.2.2.1 Request powertrain freeze frame data request message definition (read supported PIDs)

Table 30 — Request powertrain freeze frame data request message (read supported PIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request powertrain freeze frame data request SID	M	02	SIDRQ
#2	PID (see Annex A)	M	xx	PID
#3	frame #	M	xx	FRNO

6.2.2.2 Request powertrain freeze frame data response message definition (report supported PIDs)

Table 31 — Request powertrain freeze frame data response message (report supported PIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request powertrain freeze frame data response SID	M	42	SIDPR
#2	PID	M	xx	PID
#3	frame #	M	xx	FRNO
#4	data record of supported PIDs = [Data A: supported PIDs, Data B: supported PIDs, Data C: supported PIDs, Data D: supported PIDs]	M	xx	DATAREC_
#5		M	xx	DATA_A
#6		M	xx	DATA_B
#7		M	xx	DATA_C

6.2.2.3 Request powertrain freeze frame data request message definition (read freeze frame PID value)

Table 32 — Request powertrain freeze frame data request message (read freeze frame PID value)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data request SID	M	02	SIDRQ
#2	PID (see Annex B)	M/C ^a	xx	PID
#3	frame #	M	xx	FRNO

^a C = Conditional — PID value shall be one of the supported PIDs of previous response message.

6.2.2.4 Request powertrain freeze frame data response message definition (report freeze frame PID value)

Table 33 — Request powertrain freeze frame data response message (report freeze frame PID value)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request powertrain freeze frame data response SID	M	42	SIDPR
#2	PID	M	xx	PID
#3	frame #	M	xx	FRNO
#3 #4 #5 #6	data record = [Data A, Data B, Data C, Data D]	M C ^a C C	xx xx xx xx	DATA_REC_ DATA_A DATA_B DATA_C DATA_D

^a C = Conditional — data B - D depend on selected PID value.

6.2.3 Parameter definition

6.2.3.1 PIDs supported

Annex A specifies the interpretation of the data record of supported PIDs.

6.2.3.2 PID and data byte descriptions

Annex B specifies standardized emission-related parameters.

6.2.3.3 Frame # description

The frame number identifies the freeze frame, which includes emission-related data values in case an emission-related DTC is detected by the ECU.

6.2.4 Message example

The example below shows how the “Request powertrain freeze frame data” service shall be implemented.

6.2.4.1 Step #1: Request supported powertrain freeze frame PIDs from vehicle

The external test equipment requests all supported powertrain freeze frame PIDs of freeze frame \$00 from the vehicle. Refer to the example of Service \$01 how to request supported PIDs.

As a result of the supported PID request, the external test equipment creates an internal list of supported PIDs for each ECU. ECU #1 (ECM) supports the following PIDs: \$02 - \$09, \$0B - \$0E. ECU #2 (TCM) does not support any PIDs for this service.

6.2.4.2 Step #2: Request PID \$02 “DTC which caused freeze frame to be stored” from vehicle

6.2.4.2.1 Case #1: Freeze frame data are stored in ECU #1

Now the external test equipment requests PID \$02 of freeze frame \$00 from the vehicle. Since the ECU #2 (TCM) does not store a freeze frame data record, only the ECU #1 (ECM) will send a response message.

In this example, the freeze frame data are stored based on a DTC P0130 occurrence. The parameter value of PID \$02 “DTC that caused required freeze frame data storage” is set to the DTC P0130.

Table 34 — Request powertrain freeze frame data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request powertrain freeze frame data request SID	02	SIDRQ
#2	PID: DTC that caused required freeze frame data storage	02	PID
#3	Frame #	00	FRNO

Table 35 — Request powertrain freeze frame data response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request powertrain freeze frame data response SID	42	SIDPR
#2	PID: DTC that caused required freeze frame data storage	02	PID
#3	Frame #: 00	00	FRNO
#4	DTC High Byte of P0130	01	DATA_A
#5	DTC Low Byte of P0130	30	DATA_B

6.2.4.2.2 Case #2: No freeze frame data are stored in any ECU

If no freeze frame data are stored, then the ECU(s) which support this service but do not have any freeze frame stored shall send a response message with the parameter values of DATA_A and DATA_B of PID \$02 “DTC that caused required freeze frame data storage” set to \$0000.

Table 36 — Request powertrain freeze frame data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request powertrain freeze frame data request SID	02	SIDRQ
#2	PID: DTC that caused required freeze frame data storage	02	PID
#3	Frame #: 00	00	FRNO

Table 37 — Request powertrain freeze frame data response message (Service \$02, PID \$02, Frame # \$00)

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request powertrain freeze frame data response SID	42	SIDPR
#2	PID: DTC that caused required freeze frame data storage	02	PID
#3	Frame #: 00	00	FRNO
#4	DTC High Byte: zero value indicates that no freeze frame is stored	00	DATA_A
#5	DTC Low Byte: zero value indicates that no freeze frame is stored	00	DATA_B

NOTE The DTC value reported is \$00 00, therefore no valid freeze frame data are stored for supported PIDs.

6.3 Service \$03 — Request emission-related diagnostic trouble codes

6.3.1 Functional description

The purpose of this service is to enable the external test equipment to obtain “confirmed” emission-related DTCs. This shall be a two-step process for the external test equipment

- Step 1: Send a Service \$01, PID \$01 request to get the number of emission-related DTCs from all ECUs that have this available. Each ECU that has a DTC(s) stored will respond with a message that includes the number of stored codes to be reported. If an ECU that is capable of storing emission-related DTCs does not have stored DTCs, then that ECU shall respond with a message indicating zero (0) DTCs are stored.
- Step 2: Send a Service \$03 request for all emission-related DTCs. Each ECU that has DTCs will respond with one or more messages, each containing up to three (3) DTCs. If no emission-related DTCs are stored in the ECU, then the ECU may not respond to this request.

If additional DTCs are set between the time that the number of DTCs are reported by an ECU, and the DTCs are reported by an ECU, then the number of DTCs reported could exceed the number expected by the external test equipment. In this case, the external test equipment shall repeat this cycle until the number of DTCs reported equals the number expected based on the Service \$01, PID \$01 response.

DTCs are transmitted in two (2) bytes of information for each DTC. The first two (2) bits (high order) of the first (1) byte for each DTC indicate whether the DTC is a Powertrain, Chassis, Body, or Network DTC (refer to ISO 15031-6 for additional interpretation of this structure). The second two (2) bits shall indicate the first (1) digit of the DTC (0 through 3). The second (2) nibble of the first (1) byte and the entire second (2) byte are the next three (3) hexadecimal characters of the actual DTC reported hexadecimal. A powertrain DTC transmitted as \$0143 shall be displayed as P0143 (see Figure 15).

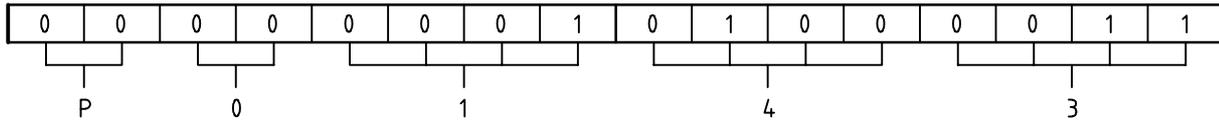


Figure 15 — Diagnostic trouble code encoding example DTC P0143

If less than three (3) DTCs are reported, the response message used to report DTCs shall have their unused bytes set to zero (0) to maintain the required fixed message length for all messages. If there are no DTCs to report, a response message is allowed, but not required for SAE J1850 and ISO 9141-2 interfaces. For ISO 14230-4 interfaces, the ECU will respond with a report containing no DTCs (DTC#1, DTC#2, and DTC#3 shall be all set to \$00).

6.3.2 Message data bytes

6.3.2.1 Request current powertrain diagnostic data request message definition (PID \$01)

Table 38 — Request current powertrain diagnostic data request message (PID \$01)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data request SID	M	01	SIDRQ
#2	PID {Number of emission-related DTCs and MIL status}	M	01	PID

6.3.2.2 Request current powertrain diagnostic data response message definition (PID \$01)

Table 39 — Request current powertrain diagnostic data response message (PID \$01)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data response SID	M	41	SIDPR
#2	PID {Number of emission-related DTCs and MIL status}	M	01	PID
#3	data record = [Data A	M	xx	DATA_REC_ DATA_A
#4	Data B	M	xx	DATA_B
#5	Data C	M	xx	DATA_C
#6	Data D]	M	xx	DATA_D

6.3.2.3 Request emission-related DTC request message definition

Table 40 — Request emission-related DTC request message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request emission-related DTC request SID	M	03	SIDRQ

6.3.2.4 Request emission-related DTC response message definition

Table 41 — Request emission-related DTC response message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request emission-related DTC response SID	M	43	SIDPR
#2	DTC#1 (High Byte)	M/C ^a	xx	DTC1HI
#3	DTC#1 (Low Byte)	M/C	xx	DTC1LO
#4	DTC#2 (High Byte)	M/C	xx	DTC2HI
#5	DTC#2 (Low Byte)	M/C	xx	DTC2LO
#6	DTC#3 (High Byte)	M/C	xx	DTC3HI
#7	DTC#3 (Low Byte)	M/C	xx	DTC3LO

^a C = Conditional — DTC#1, DTC#2, and DTC#3 are always present. If no valid DTC number is included the DTC values shall contain \$00.

6.3.3 Parameter definition

This service does not support any parameters.

6.3.4 Message example

The example below shows how the “Request emission-related DTCs” service shall be implemented. The external test equipment requests emission-related DTCs from the vehicle. The vehicle supports the ISO 14230-4 protocol. The ECU#1 (ECM) has six (6) DTCs stored, the ECU #2 (TCM) has one (1) DTC stored, and the ECU #3 (ABS/Traction Control) has no DTC stored.

- ECU #1 (ECM): P0143, P0196, P0234, P02CD, P0357, P0A24
- ECU #2 (TCM): P0443
- ECU #3 (ABS/Traction Control): no DTC stored (response message is optional for ISO 9141-2 and SAE J1850)

The external test equipment requests the following PID from the vehicle:

- PID \$01: Number of emission-related DTCs and MIL status, PID is supported by ECU #1 (ECM), ECU #2 (TCM), and ECU #3 (ABS/Traction Control)

Table 42 — Request current powertrain diagnostic data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data request SID	01	SIDRQ
#2	PID: Number of emission-related DTCs and MIL status	01	PID

Table 43 — Request current powertrain diagnostic data response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID: Number of emission-related DTCs and MIL status	01	PID
#3	MIL: ON; Number of emission-related DTCs: 06	86	DATA_A
#4	Misfire -, Fuel system -, Comprehensive monitoring	33	DATA_B
#5	Catalyst -, Heated catalyst -, ..., monitoring supported	FF	DATA_C
#6	Catalyst -, Heated catalyst -, ..., monitoring test complete/not complete	63	DATA_D

Table 44 — Request current powertrain diagnostic data response message

Message direction:	ECU#2 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID: Number of emission-related DTCs and MIL status	01	PID
#3	MIL: OFF; Number of emission-related DTCs: 01	01	DATA_A
#4	Comprehensive monitoring: supported, test complete	44	DATA_B
#5	Catalyst -, Heated catalyst -, ..., monitoring supported	00	DATA_C
#6	Catalyst -, Heated catalyst -, ..., monitoring test complete/not complete	00	DATA_D

Table 45 — Request current powertrain diagnostic data response message

Message direction:	ECU#3 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID: Number of emission-related DTCs and MIL status	01	PID
#3	MIL: OFF; Number of emission-related DTCs: 00	00	DATA_A
#4	Comprehensive monitoring: supported, test complete	00	DATA_B
#5	Catalyst -, Heated catalyst -, ..., monitoring supported	00	DATA_C
#6	Catalyst -, Heated catalyst -, ..., monitoring test complete/not complete	00	DATA_D

The external test equipment requests emission-related DTCs because ECU #1 has six (6) DTCs stored, ECU #2 has one (1) DTC stored, and ECU #3 has no (0) DTC stored.

Table 46 — Request emission-related diagnostic trouble codes request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request emission-related DTC request SID	03	SIDRQ

Table 47 — Request emission-related diagnostic trouble codes response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request emission-related DTC response SID	43	SIDPR
#2	DTC#1 High Byte of P0143	01	DTC1HI
#3	DTC#1 Low Byte of P0143	43	DTC1LO
#4	DTC#2 High Byte of P0196	01	DTC2HI
#5	DTC#2 Low Byte of P0196	96	DTC2LO
#6	DTC#3 High Byte of P0234	02	DTC3HI
#7	DTC#3 Low Byte of P0234	34	DTC3LO

Table 48 — Request emission-related diagnostic trouble codes response message

Message direction:	ECU #2 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request emission-related DTC response SID	43	SIDPR
#2	DTC#1 High Byte of P0443	04	DTC1HI
#3	DTC#1 Low Byte of P0443	43	DTC1LO
#4	DTC#2 High Byte: 00	00	DTC2HI
#5	DTC#2 Low Byte: 00	00	DTC2LO
#6	DTC#3 High Byte: 00	00	DTC3HI
#7	DTC#3 Low Byte: 00	00	DTC3LO

Table 49 — Request emission-related diagnostic trouble codes response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request emission-related DTC response SID	43	SIDPR
#2	DTC#1 High Byte of P02CD	02	DTC1HI
#3	DTC#1 Low Byte of P02CD	CD	DTC1LO
#4	DTC#2 High Byte of P0357	03	DTC2HI
#5	DTC#2 Low Byte of P0357	57	DTC2LO
#6	DTC#3 High Byte of P0A24	0A	DTC3HI
#7	DTC#3 Low Byte of P0A24	24	DTC3LO

Table 50 — Request emission-related diagnostic trouble codes response message

Message direction:	ECU #3 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request emission-related DTC response SID	43	SIDPR
#2	DTC#1 High Byte: 00	00	DTC1HI
#3	DTC#1 Low Byte: 00	00	DTC1LO
#4	DTC#2 High Byte: 00	00	DTC2HI
#5	DTC#2 Low Byte: 00	00	DTC2LO
#6	DTC#3 High Byte: 00	00	DTC3HI
#7	DTC#3 Low Byte: 00	00	DTC3LO

NOTE For ISO 9141-2 and SAE J1850 protocols, the ECU #3 response message is optional because there is no DTC stored. If ISO 14230-4 protocol is supported by the vehicle, ECU #3 shall send a positive response message with no DTCs.

6.4 Service \$04 — Clear/reset emission-related diagnostic information

6.4.1 Functional description

The purpose of this service is to provide a means for the external test equipment to command ECUs to clear all emission-related diagnostic information. This includes:

- MIL and number of diagnostic trouble codes (can be read with Service \$01, PID \$01)
- Clear the I/M (Inspection/Maintenance) readiness bits (Service \$01, PID \$01 and \$41)
- Confirmed diagnostic trouble codes (can be read with Service \$03)
- Pending diagnostic trouble codes (can be read with Service \$07)
- Diagnostic trouble code for freeze frame data (can be read with Service \$02, PID \$02)
- Freeze frame data (can be read with Service \$02)
- Oxygen sensor test data (can be read with Service \$05)
- Status of system monitoring tests (can be read with Service \$01, PID \$01)
- On-board monitoring test results (can be read with Service \$06)
- Distance travelled while MIL is activated (can be read with Service \$01, PID \$21)
- Number of warm-ups since DTCs cleared (can be read with Service \$01, PID \$30)
- Distance travelled since DTCs cleared (can be read with Service \$01, PID \$31)
- Time run by the engine while MIL is activated (can be read with Service \$01, PID \$4D)
- Time since diagnostic trouble codes cleared (can be read with Service \$01, PID \$4E)

Other manufacturer-specific “clearing/resetting” actions may also occur in response to this request message. For safety and/or technical design reasons, some ECUs may not respond to this service under all conditions. All ECUs shall respond to this service request with the ignition ON and with the engine not running. ECUs that cannot perform this operation under other conditions, such as with the engine running, will ignore the request with SAE J1850 and ISO 9141-2 interfaces, or will send a negative response message with ISO 14230-4 interfaces, as described in ISO 14230-4.

6.4.2 Message data bytes

6.4.2.1 Clear/reset emission-related diagnostic information request message definition

Table 51 — Clear/reset emission-related diagnostic information request message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Clear/reset emission-related diagnostic information request SID	M	04	SIDRQ

6.4.2.2 Clear/reset emission-related diagnostic information response message definition

Table 52 — Clear/reset emission-related diagnostic information response message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Clear/reset emission-related diagnostic information response SID	M	44	SIDPR

6.4.3 Parameter definition

This service does not support any parameters.

6.4.4 Message example

This example is based on the example of Service \$03 as described in 7.3.4. The external test equipment commands the vehicle to clear/reset emission-related diagnostic information with the engine running. The ECU #1 (ECM) and ECU #2 (TCM) will send a response message to confirm that all emission-related diagnostic information is cleared. For ISO 9141-2 and SAE J1850 protocols, ECU #3 (ABS/Traction Control) will not send a response message because the conditions to perform the requested action are not met. For ISO 14230-4 protocol, ECU #3 will send a negative response message with response code \$22 - conditionsNotCorrect. In such case the external test equipment shall post a message with "Stop engine and turn ON ignition" and then repeat the Service \$04 command and check for response messages from all emission-related ECUs installed in the vehicle.

Table 53 — Clear/reset emission-related diagnostic information request message

Message direction:		External test equipment → All ECUs		
Message Type:		Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic	
#1	Clear/reset emission-related diagnostic information request SID	04	SIDRQ	

Table 54 — Clear/reset emission-related diagnostic information response message

Message direction:		ECU#1 → External test equipment		
Message Type:		Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic	
#1	Clear/reset emission-related diagnostic information response SID	44	SIDPR	

Table 55 — Clear/reset emission-related diagnostic information response message

Message direction:		ECU#2 → External test equipment	
Message Type:		Response	
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Clear/reset emission-related diagnostic information response SID	44	SIDPR

Table 56 — Negative response message

Message direction:		ECU#3 → External test equipment	
Message Type:		Response	
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Negative Response Service Identifier	7F	SIDNR
#2	Clear/reset emission-related diagnostic information request SID	04	SIDRQ
#3	Negative Response Code: conditionsNotCorrect	22	NR_CNC

For ISO 14230-4 protocol, the conditions of ECU#3 to Clear/reset emission-related diagnostic information are not met. Therefore, ECU #3 sends a negative response message with response code “conditionsNotCorrect”. The external test equipment shall repeat the request after the conditions of the vehicle have changed by the user. Now, all ECUs shall send a positive response message to the external test equipment to confirm successful operation of the Clear/reset emission-related diagnostic information service.

6.5 Service \$05 — Request oxygen sensor monitoring test results

6.5.1 Functional description

The purpose of this service is to allow access to the on-board oxygen sensor monitoring test results. The same information may be obtained by the use of Service \$06.

The request message for test results includes a Test ID value that indicates the information requested. Test value definitions, scaling information, and display formats are included in Annex C.

Many methods may be used to calculate test results for this service by different manufacturers. If data values are to be reported using these messages that are different from those specified, ranges of test values have been assigned that can be used which have standard units of measure. The external test equipment can convert these values and display them in the standard units.

The ECU shall respond to this message by transmitting the requested test data last determined by the system. The latest test results are to be retained, even over multiple ignition OFF cycles, until replaced by more recent test results. Test results are requested by Test ID.

Not all test values are applicable or supported by all vehicles. An optional feature of this service is for the ECU to indicate which Test IDs are supported. Test ID \$00 is a bit-encoded value that indicates support for Test IDs from \$01 to \$20. Test ID \$20 indicates support for Test IDs \$21 through \$40, etc. This is the same concept as used for PID support in Services \$01 and \$02 as specified in Annex A. If Test ID \$00 is not supported, then the ECU does not use this feature to indicate Test ID support.

6.5.2 Message data bytes

6.5.2.1 Request oxygen sensor monitoring test results request message definition (read supported TIDs)

Table 57 — Request oxygen sensor monitoring test results request message (read supported TIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request oxygen sensor monitoring test results request SID	M	05	SIDRQ
#2	Test ID (see Annex A)	M	xx	TID
#3	O2 Sensor #	M	xx	O2SNO

6.5.2.2 Request oxygen sensor monitoring test results response message definition (report supported TIDs)

Table 58 — Request oxygen sensor monitoring test results response message (report supported TIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request oxygen sensor monitoring test results response SID	M	45	SIDPR
#2	Test ID	M	xx	TID
#3	O2 Sensor #	M	xx	O2SNO
#4	data record of supported Test IDs = [Data A: supported Test IDs, Data B: supported Test IDs, Data C: supported Test IDs, Data D: supported Test IDs]	M	xx	DATA_A
#5		M	xx	DATA_B
#6		M	xx	DATA_C
#7		M	xx	DATA_D

6.5.2.3 Request oxygen sensor monitoring test results request message definition (read TID values)

Table 59 — Request oxygen sensor monitoring test results request message (read TID values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request oxygen sensor monitoring test results request SID	M	05	SIDRQ
#2	Test ID	M	xx	TID
#3	O2 Sensor #	M	xx	O2SNO

6.5.2.4 Request oxygen sensor monitoring test results response message definition (report TID values)

Table 60 — Request oxygen sensor monitoring test results response message (report TID values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request oxygen sensor monitoring test results response SID	M	45	SIDPR
#2	TEST ID	M	xx	TID
#3	O2 Sensor #	M	xx	O2SNO
#4	data record of Test ID = [Test Value Minimum Limit Maximum Limit]	M	xx	TESTVAL
#5		C ^a	xx	MINLIMIT
#6		C	xx	MAXLIMIT

^a C = Conditional — if the supported Test ID is a constant (\$01 - \$04), the parameters Minimum and Maximum Limit shall not be included.

6.5.3 Parameter definition

6.5.3.1 Test IDs supported

The Test IDs supported is the same concept as used for PID support in Services \$01 and \$02 as specified in Annex A.

6.5.3.2 Test ID and data byte descriptions

Annex C specifies standardized and vehicle manufacturer specific Test ID ranges.

6.5.3.3 Oxygen sensor location definition

The oxygen sensor location value used in the request message shall indicate the oxygen sensor location as defined by PID \$13 or \$1D as specified in Annex B.

Table 61 — Oxygen sensor location description

Oxygen sensor location (one, and only one bit can be set to a 1)		
Bit	Sensor location ^a	Alternative sensor location ^b
0	Bank 1 - Sensor 1	Bank 1 - Sensor 1
1	Bank 1 - Sensor 2	Bank 1 - Sensor 2
2	Bank 1 - Sensor 3	Bank 2 - Sensor 1
3	Bank 1 - Sensor 4	Bank 2 - Sensor 2
4	Bank 2 - Sensor 1	Bank 3 - Sensor 1
5	Bank 2 - Sensor 2	Bank 3 - Sensor 2
6	Bank 2 - Sensor 3	Bank 4 - Sensor 1
7	Bank 2 - Sensor 4	Bank 4 - Sensor 2

^a If Service \$01 PID \$13 supported.

^b If Service \$01 PID \$1D supported.

6.5.3.4 Test result description

Table 62 — Test Result description

Hex	# of bytes	Description
00 - FF	1	The Test Result parameter includes either a constant or a calculated value depending on the Test ID.


6.5.3.5 Minimum and Maximum Test Limit description

Table 63 defines Minimum and Maximum Test Limit. The Test Limit value is either a minimum or a maximum value to which the test results are compared. The Test Limit is a one-byte unsigned numeric value (0 - 255).

Table 63 — Minimum and Maximum Test Limit description

Test Limit	# of bytes	Description
Minimum	1	The minimum test limit (only for calculated test result) is the minimum value to which the test result is compared.
Maximum	1	The maximum test limit (only for calculated test result) is the maximum value to which the test result is compared.

For results of latest mandated on-board oxygen sensor monitoring test, see Figure 16.

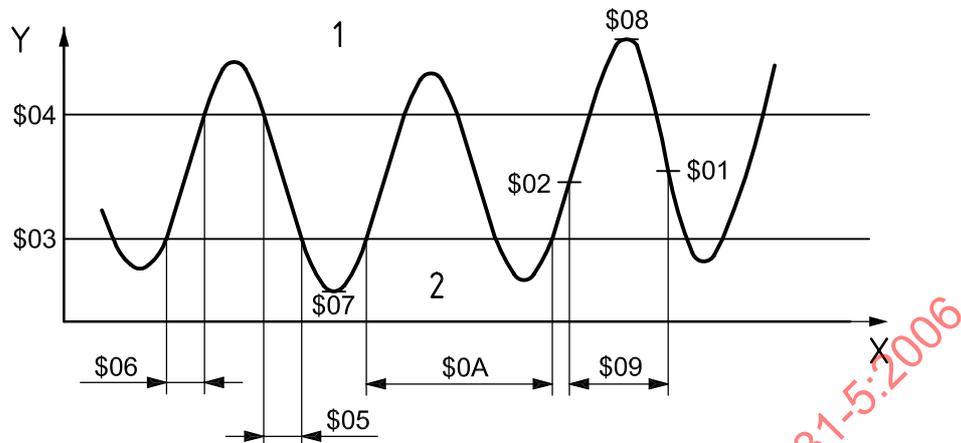

Key

- 1 Rich
- 2 Lean

Figure 16 — Test ID value example

6.5.4 Message example

The example below shows how the “Request oxygen sensor monitoring test results” service shall be implemented.

6.5.4.1 Step #1: Request oxygen sensor monitoring test results (request for supported Test IDs) from vehicle

The external test equipment requests all supported Test IDs from the vehicle. Refer to the example of Service \$01 for how to request supported PIDs (same concept is used for supported TIDs). PID \$13 is supported by ECU #1. This is important information for the external test equipment in order to identify the correct O2 Sensor location.

As a result of the supported TID request, the external test equipment creates an internal list of supported TIDs for each ECU: The ECU #1 (ECM) supports Test IDs \$01 - \$06, \$70, \$71 and \$81. The ECU #2 (TCM) does not support any Test IDs.

6.5.4.2 Step #2: Request oxygen sensor monitoring test results from vehicle

The external test equipment sends two (2) “Request oxygen sensor monitoring test results” request messages to the vehicle. The two (2) request messages include the following Test IDs:

- 1st request message: Test IDs \$01
- 2nd request message: Test IDs \$05

NOTE In general, the external test equipment should read the test status of Service \$01 PID \$01 prior to execute Service \$05 with Test Id \$01 and \$05 to verify, whether the tests are supported and completed. The test values reported may be invalid if the test is not completed.

Table 64 — Request oxygen sensor monitoring test results request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request oxygen sensor monitoring test results request SID	05	SIDRQ
#2	TID: Rich to lean sensor threshold voltage (constant)	01	TID
#3	O2 Sensor #: Bank 1 - Sensor 1	01	O2SNO

Table 65 — Request oxygen sensor monitoring test results response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request oxygen sensor monitoring test results response SID	45	SIDPR
#2	TID: Rich to lean sensor threshold voltage (constant)	01	TID
#3	O2 Sensor #: Bank 1 - Sensor 1	01	O2SNO
#4	Test Limit: 450 mV	5A	TESTVAL

NOTE ECU#2 does not support any Test IDs and therefore does not send a response message.

Table 66 — Request oxygen sensor monitoring test results request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request oxygen sensor monitoring test results request SID	05	SIDRQ
#2	TID: Rich to lean sensor switch time (calculated)	05	TID
#3	O2 Sensor #: Bank 1 - Sensor 1	01	O2SNO

Table 67 — Request oxygen sensor monitoring test results response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request oxygen sensor monitoring test results response SID	45	SIDPR
#2	TID: Rich to lean sensor switch time (calculated)	05	TID
#3	O2 Sensor #: Bank 1 - Sensor 1	01	O2SNO
#4	Test Limit: 72 ms (milliseconds)	12	TESTVAL
#5	Minimum Limit: 0 ms	00	MINLIMIT
#6	Maximum Limit: 100 ms	19	MAXLIMIT

6.6 Service \$06 — Request on-board monitoring test results for specific monitored systems

6.6.1 Functional description

The purpose of this service is to allow access to the results of on-board diagnostic monitoring tests for specific components/systems. Examples are catalyst monitoring and the evaporative system monitoring.

The vehicle manufacturer is responsible for assigning Test IDs and Component IDs for tests of different systems and components. The latest valid test results are to be retained, even over multiple ignition OFF cycles, until replaced by more recent test results. Test results are requested by Test ID. Test results are reported only for supported combinations of test limit type and component ID, and are reported as positive (unsigned) values. Only one test limit is included in a response message, but that limit could be either a minimum or a maximum limit. If both a minimum and maximum test limit are to be reported, then two (2) response messages will be transmitted, in any order. The most significant bit of the “test limit type/component ID” byte will be used to indicate the test limit type.

An optional feature of this service is for the ECU to indicate which Test IDs are supported. Test ID \$00 is a bit-encoded value that indicates support for Test IDs from \$01 to \$20. Test ID \$20 indicates support for Test IDs \$21 through \$40, etc. This is the same concept as used for PID support in Services \$01 and \$02 as specified in Annex A. If Test ID \$00 is not supported, then the ECU does not use this feature to indicate Test ID support.

This service can be used as an alternative to Service \$05 to report oxygen sensor test results.

A unique method must be utilized for displaying data for monitors that have multiple tests. Many OBD monitors have multiple tests that are done in either a serial or parallel manner. If a monitor uses multiple Test ID/Component ID combinations that may not all complete at the same time, the following method shall be used to update the stored test results at the time of monitor completion:

After the monitor completes, update all Test ID/Component ID combinations (or “test results”) that were utilized by the monitor with appropriate passing or failing results. If a test result (or “Test ID/Component ID”) was not utilized during this monitoring event, set the Test Values and Minimum and Maximum Test Limits to their initial values (test not completed). Test results from the previously completed monitoring events shall not be mixed with test results from the current completed monitoring event.

In some cases, test results (or “Test ID/Component ID combinations”) will be displayed as being incomplete even though the monitor (as indicated by PID \$41) was successfully completed and either passed or failed. In other cases, some Test IDs will show passing results while others will show failing results after the monitor (as indicated by PID \$41) was successfully completed and failed. Note that OBD-II regulations prohibit a passing monitor from showing any failing test results. If an initial serial test indicates a failure and a subsequent re-test of the system indicates a passing result, the test that was utilized to make the passing determination should be displayed, while the failing test that was utilized to make the initial determination should be reset to its initial values (test not completed).

As an example of a serial monitor, an evaporative system monitor can fail for a large evaporative system leak and never continue to test for small leaks or very small leaks. In this case, the Component ID for the large leak would show a failing result, while the small leak test and the very small leak test would show incomplete. As an example of the parallel monitor, a purge valve flow monitor can pass by having a large rich lambda shift, a large lean lambda shift or a large engine rpm increase. If the purge valve is activated and a large rich lambda shift occurs, the Component ID for the rich lambda shift would show a passing result while the other two Component IDs would show incomplete. Since some Component IDs for a completed monitor will show incomplete, PID \$41 must be used to determine monitor completion status.

6.6.2 Message data bytes

6.6.2.1 Request on-board monitoring test results for specific monitored systems request message definition (read supported TIDs)

Table 68 — Request on-board monitoring test results for specific monitored systems request message (read supported TIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems request SID	M	06	SIDRQ
#2	Test ID (see Annex A)	M	xx	TID

6.6.2.2 Request on-board monitoring test results for specific monitored systems response message definition (report supported TIDs)

Table 69 — Request on-board monitoring test results for specific monitored systems response message (report supported TIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems response SID	M	46	SIDPR
#2	Test ID	M	xx	TID
#3	FillerByte	M	FF	FB
#4	data record of supported Test IDs = [Data A: supported Test IDs, Data B: supported Test IDs, Data C: supported Test IDs, Data D: supported Test IDs]	M	xx	DATAREC_
#5		M	xx	DATA_A
#6		M	xx	DATA_B
#7		M	xx	DATA_C

6.6.2.3 Request on-board monitoring test results for specific monitored systems request message definition (read test results)

Table 70 — Request on-board monitoring test results for specific monitored systems request message (read test results)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems request SID	M	06	SIDRQ
#2	Test ID (request test results)	M	xx	TID

6.6.2.4 Request on-board monitoring test results for specific monitored systems response message definition (report test results)

Table 71 — Request on-board monitoring test results for specific monitored systems response message (report test results)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems response SID	M	46	SIDPR
#2	Test ID (report test results)	M	xx	TID
#3	Test Limit Type & Component ID	M	xx	TLTCID
#4	data record of Test ID = [M	xx	TIDREC_
#5	Test Value (High Byte)	M	xx	TVHI
#6	Test Value (Low Byte)	M	xx	TVLO
#7	Test Limit (High Byte)	C ^a	xx	TLHI
	Test Limit (Low Byte)]	C	xx	TLLO

^a C = Conditional — if Test Limit is either a Minimum or a Maximum Limit depends on the parameter Test Limit Type & Component ID value (bit 7).

6.6.3 Parameter definition

6.6.3.1 Test IDs supported

The Test IDs supported is the same concept as used for PID support in Services \$01 and \$02 as specified in Annex A.

6.6.3.2 Test ID and data byte descriptions

Annex C specifies standardized and vehicle manufacturer specific Test ID ranges, which are permitted to be supported in this service.

NOTE For ISO 9141-2, SAE J1850 and ISO 14230-4 protocols that Annex C is recommended but not required. This is for backward compatibility and only applies to Test ID range \$01 – \$1F.

6.6.3.3 Test Limit Type and Component ID description

The Test Limit Type and Component ID is a one (1) byte parameter and is defined in the table below.

Table 72 — Test Limit Type and Component ID description

Parameter Name	Bit	Description
Component ID	0 - 6	Component ID - manufacturer specified - necessary when multiple components or systems are present on the vehicle and have the same definition of Test ID. If the same test is performed on more than one component, multiple test results shall be reported for that Test ID. For example, a test for bank 1 catalyst can be the same as a test for a bank 2 catalyst, or a test for a pre-catalyst oxygen sensor can be the same as a test for a post-catalyst oxygen sensor. In either case, a request for a single Test ID would result in two test results being reported with different Component IDs.
Test Limit Type	7	Most Significant Bit (MSB) indicates type of test limit, where: 0 - test limit is maximum value - test fails if test value is greater than this value; and 1 - test limit is minimum value - test fails if test value is less than this value.

6.6.3.4 Test Result description

The Test Result represents the test result and is defined in the table below.

Table 73 — Test Result description

Parameter Name	# of bytes	Description
Test Result	2 (High and Low Byte)	Test result - this value shall be less than or equal to the test limit if MSB of Test Limit Type and Component ID byte is "0", and shall be greater than or equal to the test limit if MSB of Test Limit Type and Component ID byte is "1". The Test Value is a two-byte unsigned numeric value (0 - 65535).

6.6.3.5 Test Limit description

The Test Limit is defined in the table below.

Table 74 — Test Limit description

Parameter Name	# of bytes	Description
Test Limit	2 (High and Low Byte)	The Test Limit value is either a minimum or a maximum value to which the test results are compared. The Test Limit is a two-byte unsigned numeric value (0 - 65535).

6.6.4 Message example

The example below shows how the "Request on-board monitoring test results for specific monitored systems" service shall be implemented.

6.6.4.1 Step #1: Request on-board monitoring test results for specific monitored systems (request for supported Test IDs)

The external test equipment requests all supported Test IDs from the vehicle. Refer to the example of Service \$01 how to request supported PIDs (same concept is used for supported TIDs).

As a result of the supported TID request, the external test equipment creates an internal list of supported TIDs for each ECU. The ECU #1 (ECM) supports Test ID \$02. The ECU #2 (TCM) does not support any Test IDs.

6.6.4.2 Step #2: Request on-board monitoring test results for specific monitored systems

The external test equipment sends a "Request on-board monitoring test results for specific monitored systems" request message with one (1) supported Test ID to the vehicle. The response messages indicate which Component IDs are supported. The request message includes the following Test ID:

Test ID \$02 - Lean to rich sensor threshold voltage (constant), (supported Component IDs: \$04, \$16).

NOTE In general, the external test equipment should read the test status of Service \$01 PID \$01 prior to execute Service \$06 with Test ID \$01 and \$06 to verify whether the tests are supported and completed. The test values reported may be invalid if the test is not completed.

Table 75 — Request on-board monitoring test results for specific monitored systems request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems request SID	06	SIDRQ
#2	TID Lean to rich sensor threshold voltage (constant)	02	TID

Table 76 — Request on-board monitoring test results for specific monitored systems response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems response SID	46	SIDPR
#2	TID Lean to rich sensor threshold voltage (constant)	02	TID
#3	Test Limit Type: test limit is minimum value; Component ID: 04	84	TLTCID
#4	Test Value High Byte: test fails if test value is less than test limit	00	TVHI
#5	Test Value Low Byte: test fails if test value is less than test limit	10	TVLO
#6	Minimum Test Limit High Byte	00	TLHI
#7	Minimum Test Limit Low Byte	00	TLLO

NOTE ECU#2 does not support any Test IDs and therefore does not send a response message.

Table 77 — Request on-board monitoring test results for specific monitored systems response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems response SID	46	SIDPR
#2	TID Lean to rich sensor threshold voltage (constant)	02	TID
#3	Test Limit Type: test limit is maximum value; Component ID: 16	16	TLTCID
#4	Test Value High Byte: test fails if test value is greater than test limit	00	TVHI
#5	Test Value Low Byte: test fails if test value is greater than test limit	32	TVLO
#6	Maximum Test Limit High Byte	00	TLHI
#7	Maximum Test Limit Low Byte	20	TLLO

NOTE The above example shows that the test in ECU #1 for Test ID 02 and Component ID 04 passed and that the test in ECU #1 for Test ID 02 and Component ID 16 failed.

6.7 Service \$07 - Request emission-related diagnostic trouble codes detected during current or last completed driving cycle

6.7.1 Functional description

The purpose of this service is to enable the external test equipment to obtain “pending” diagnostic trouble codes detected during current or last completed driving cycle for emission-related components/systems. Service \$07 is required for all DTCs and is independent of Service \$03. The intended use of this data is to assist the service technician after a vehicle repair, and after clearing diagnostic information, by reporting test results after a single driving cycle. If the test failed during the driving cycle, the DTC associated with that test will be reported. Test results reported by this service do not necessarily indicate a faulty component/system. If test results indicate a failure after additional driving, then the MIL will be illuminated and a DTC will be set and reported with Service \$03, indicating a faulty component/system. This service can always be used to request the results of the latest test, independent of the setting of a DTC.

Test results for these components/systems are reported in the same format as the DTCs in Service \$03 - refer to the functional description for Service \$03.

If less than three (3) DTC values are reported for failed tests, the response messages used to report the test results shall be filled with \$00 to fill seven (7) data bytes. This maintains the required fixed message length for all messages.

If there are no test failures to report, responses are permitted but not required for SAE J1850 and ISO 9141-2 interfaces. For ISO 14230-4 interfaces, the ECU will respond with a report containing no codes (all DTC values shall contain \$00).

6.7.2 Message data bytes

6.7.2.1 Request emission-related diagnostic trouble codes detected during current or last completed driving cycle request message definition

Table 78 — Request emission-related diagnostic trouble codes detected during current or last completed driving cycle request message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request emission-related diagnostic trouble codes detected during current or last completed driving cycle request SID	M	07	SIDRQ

6.7.2.2 Request emission-related diagnostic trouble codes detected during current or last completed driving cycle response message definition

Table 79 — Request emission-related diagnostic trouble codes detected during current or last completed driving cycle response message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request emission-related diagnostic trouble codes detected during current or last completed driving cycle response SID	M	47	SIDPR
#2	DTC#1 (High Byte)	M/C ^a	xx	DTC1HI
#3	DTC#1 (Low Byte)	M/C	xx	DTC1LO
#4	DTC#2 (High Byte)	M/C	xx	DTC2HI
#5	DTC#2 (Low Byte)	M/C	xx	DTC2LO
#6	DTC#3 (High Byte)	M/C	xx	DTC3HI
#7	DTC#3 (Low Byte)	M/C	xx	DTC3LO

^a C = Conditional — DTC#1, DTC#2, and DTC#3 are always present. If no valid DTC number is included the DTC values shall contain \$00.

6.7.3 Parameter definition

This service does not support any parameters.

6.7.4 Message example

Refer to message example of Service \$03.

6.8 Service \$08 — Request control of on-board system, test or component

6.8.1 Functional description

The purpose of this service is to enable the external test equipment to control the operation of an on-board system, test or component.

The data bytes will be specified, if necessary, for each Test ID in Annex F, and will be unique for each Test ID. If any data bytes are unused for any test, they shall be filled with \$00 to maintain a fixed message length.

Possible uses for these data bytes in the request message are

- Turn on-board system/test/component ON;
- Turn on-board system/test/component OFF; and
- Cycle on-board system/test/component for 'n' seconds.

Possible uses for these data bytes in the response message are

- Report system status; and
- Report test results.

An optional feature of this service is for the ECU to indicate which Test IDs are supported. Test ID \$00 is a bit-encoded value that indicates support for Test IDs from \$01 to \$20. Test ID \$20 indicates support for Test IDs \$21 through \$40, etc. This is the same concept as used for PID support in Services \$01 and \$02 as specified in Annex A. If Test ID \$00 is not supported, then the ECU does not use this feature to indicate Test ID support.

6.8.2 Message data bytes

6.8.2.1 Request control of on-board device request message definition (read supported TIDs)

Table 80 — Request control of on-board device request message (read supported TIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request control of on-board device request SID	M	08	SIDRQ
#2	Test ID (see Annex A)	M	xx	TID
#3	data record of Test ID = [Data A, Data B, Data C, Data D, Data E]	M	00	TIDREC_ DATA_A
#4		M	00	DATA_B
#5		M	00	DATA_C
#6		M	00	DATA_D
#7		M	00	DATA_E

6.8.2.2 Request control of on-board device response message definition (report supported TIDs)

Table 81 — Request control of on-board device response message (report supported TIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request control of on-board device response SID	M	48	SIDPR
#2	Test ID	M	xx	TID
#3	FillerByte	M	00	FB
#4	data record of supported Test IDs = [Data A: supported Test IDs, Data B: supported Test IDs, Data C: supported Test IDs, Data D: supported Test IDs]	M	xx	TIDREC_ DATA_A
#5		M	xx	DATA_B
#6		M	xx	DATA_C
#7		M	xx	DATA_D

6.8.2.3 Request control of on-board device request message definition (read TID values)

Table 82 — Request control of on-board device request message (read TID values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request control of on-board device request SID	M	08	SIDRQ
#2	Test ID (request Test ID values)	M	xx	TID
#3	data record of Test ID = [Data A, Data B, Data C, Data D, Data E]	M/C ^a	xx	TIDREC_ DATA_A
#4		M/C	xx	DATA_B
#5		M/C	xx	DATA_C
#6		M/C	xx	DATA_D
#7		M/C	xx	DATA_E

^a C = Conditional — Data A - E shall be filled with \$00 if unused.

6.8.2.4 Request control of on-board device response message definition (report TID values)

Table 83 — Request control of on-board device response message (report TID values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request control of on-board device response SID	M	48	SIDPR
#2	Test ID (report Test ID values)	M	xx	TID
#3	data record of Test ID = [Data A, Data B, Data C, Data D, Data E]	M/C ^a	xx	TIDREC_ DATA_A
#4		M/C	xx	DATA_B
#5		M/C	xx	DATA_C
#6		M/C	xx	DATA_D
#7		M/C	xx	DATA_E

^a C = Conditional — Data A - E shall be filled with \$00 if unused.

6.8.3 Parameter definition

6.8.3.1 Test IDs supported

Refer to Annex A.

6.8.3.2 Test ID and data byte descriptions

Refer to Annex F.

6.8.4 Message example

The example below shows how “Request control of on-board system, test or component” service shall be implemented.

6.8.4.1 Step #1: Request control of on-board system, test or component (request for supported Test IDs)

The external test equipment requests all supported Test IDs from the vehicle. Refer to the example of Service \$01 how to request supported Test IDs (same concept is used for supported TIDs).

As a result of the supported TID request, the external test equipment creates an internal list of supported PIDs for each ECU. The ECU #1 (ECM) supports Test ID \$01. The ECU #2 (TCM) does not support any Test IDs and therefore does not send a response message.

6.8.4.2 Step #2: Request control of on-board device (Service \$08, Test ID \$01)

The external test equipment sends a “Request control of on-board device” message with one (1) supported Test ID \$01 to the vehicle.

Table 84 — Request control of on-board device request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request control of on-board device request SID	08	SIDRQ
#2	TID: Evaporative system leak test	01	TID
#3	Data A: 00	00	DATA_A
#4	Data B: 00	00	DATA_B
#5	Data C: 00	00	DATA_C
#6	Data D: 00	00	DATA_D
#7	Data E: 00	00	DATA_E

Table 85 — Request control of on-board device response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request control of on-board device response SID	48	SIDPR
#2	TID: Evaporative system leak test	01	TID
#3	Data A: 00	00	DATA_A
#4	Data B: 00	00	DATA_B
#5	Data C: 00	00	DATA_C
#6	Data D: 00	00	DATA_D
#7	Data E: 00	00	DATA_E

NOTE ECU#2 does not support the Test ID and therefore does not send a response message.

6.9 Service \$09 — Request vehicle information

6.9.1 Functional description

The purpose of this service is to enable the external test equipment to request vehicle-specific vehicle information such as Vehicle Identification Number (VIN) and Calibration IDs. Some of this information may be required by regulations and some may be desirable to be reported in a standard format if supported by the vehicle manufacturer. INFOTYPES are defined in Annex G.

An optional feature of this service is for the ECU to indicate which INFOTYPES are supported (support of INFOTYPE \$00 is required for ISO 9141-2). INFOTYPE \$00 is a bit-encoded value that indicates support for INFOTYPES from \$01 to \$20. INFOTYPE \$20 indicates support for INFOTYPES \$21 through \$40, etc. This is the same concept as used for PID support in Services \$01 and \$02 as specified in Annex A. If PID (Parameter ID)/TID (Test ID)/INFOTYPE \$00 is not supported, then the ECU does not use this feature to indicate PID (Parameter ID)/TID (Test ID)/INFOTYPE support.

The external test equipment shall maintain a list of ECUs, which support the INFOTYPES not equal to \$00 in order to justify, whether it expects a response message from this ECU or not. For request messages with INFOTYPES not equal to \$00, the positive response messages may not be sent by the ECU(s) within the P2max timing window as specified in 5.2.2. This applies to the following protocols:

- a) ISO 9141-2: If the positive response message is not received within P2_{K-Line}, the external test equipment shall stop retrying the request message after one (1) minute from the original request. The retry message shall be sent at least every four (4) seconds. The retry message keeps the bus alive and prevents the external test equipment from having to re-initialize the bus (P3_{K-Line} time out). The ECU shall not re-initialize the Service \$09 internal routine (see 5.2.4.3.2).
- b) SAE J1850: If the response message is not received within thirty (30) seconds, the external test equipment shall re-send (retry) the request message. The ECU shall not re-initiate the Service \$09 internal routine, but send the positive response message if not already sent. In order to achieve a maximum time out of one (1) minute, the external test equipment shall perform no more than one (1) retry (see 5.2.4.3.4).

If INFOTYPE \$02 (VIN) is indicated as supported, the ECU shall respond within P2max timing even if the VIN is missing or incomplete. For example, a development ECU may respond with \$FF characters for VIN because the VIN has not been programmed.

6.9.2 Message data bytes

6.9.2.1 Request vehicle information request message definition (read supported InfoType)

Table 86 — Request vehicle information request message (read supported InfoType)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request vehicle information request SID	M	09	SIDRQ
#2	InfoType (see Annex A)	M	xx	INFTYP

6.9.2.2 Request vehicle information response message definition (report supported InfoType)

Table 87 — Request vehicle information response message (report supported InfoType)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request vehicle information response SID	M	49	SIDPR
#2	InfoType	M	xx	INFTYP_
#3	MessageCount	M	xx	MC_
#4	data record of InfoType = [Data A: supported InfoTypes, Data B: supported InfoTypes, Data C: supported InfoTypes, Data D: supported InfoTypes]	M	xx	DATAREC_
#5		M	xx	DATA_A
#6		M	xx	DATA_C
#7		M	xx	DATA_D

6.9.2.3 Request vehicle information request message definition (read InfoType values)

Table 88 — Request vehicle information request message (read InfoType values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request vehicle information request SID	M	09	SIDRQ
#2	InfoType	M	xx	INFTYP_

6.9.2.4 Request vehicle information response message definition (report InfoType values)

Table 89 — Request vehicle information response message (report InfoType values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request vehicle information response SID	M	49	SIDPR
#2	InfoType	M	xx	INFTYP_
#3	MessageCount	M	xx	MC_
#4	data record of InfoType = [Data A, Data B, Data C, Data D]	M/C ^a	xx	DATA_A
#5		M/C	xx	DATA_B
#6		M/C	xx	DATA_C
#7		M/C	xx	DATA_D

^a C = Conditional — data A - D is only present if the requested InfoType equals an even number.

6.9.3 Parameter definition

6.9.3.1 Vehicle information types supported

Refer to Annex A.

6.9.3.2 Vehicle information types and data byte descriptions

Refer to Annex G.

6.9.3.3 MessageCount description

The MessageCount parameter has two (2) definitions depending on the InfoType parameter value:

- Odd InfoType parameter values (1, 3, 5, etc.): In such a case, the MessageCount parameter includes a value which represents the number of response messages to be sent by the server (ECU) to report the Data A .. D referenced by the corresponding next higher even InfoType parameter value. The MessageCount parameter value is a “static value”.
- Even InfoType parameter values (2, 4, 6, etc.): In such a case the MessageCount parameter includes a value which represents a dynamic counter starting with the value of 1 and incremented by 1 in the following response messages (assuming error-free transmission of the response message). The MessageCount parameter value is a “dynamic incremented value” (increments by 1). The last response message shall include an incremented MessageCount value, which matches the reported MessageCount parameter value previously reported by the server (ECU) with the odd InfoType (even InfoType – 1).

Refer to Annex G.

6.9.4 Message example

The example below shows how the “Request vehicle information” service shall be implemented.

6.9.4.1 Step #1: Request vehicle information (request supported InfoType) from vehicle

The external test equipment requests all supported InfoTypes from the vehicle. Refer to the example of Service \$01 for how to request supported PIDs (same concept is used for supported InfoTypes). As a result of the supported InfoType request, the external test equipment creates an internal list of supported InfoTypes for each ECU: The ECU #1 (ECM) supports the following InfoTypes: \$01, \$02, \$03, \$04, \$05, \$06, \$07, and \$08. Since there is only one ECU, which meets emission-related legislative requirements, no response messages from another ECU will occur.

6.9.4.2 Step #2: Request InfoTypes from vehicle

Now the external test equipment requests the following InfoType:

- InfoType \$01: MC_VIN = 5 response messages; supported by ECU#1

Table 90 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: MessageCount VIN	01	INFTYP

Table 91 — Request vehicle information response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: MessageCount VIN	01	INFTYP
#3	MessageCount VIN = 5 response messages	05	MC_VIN

Now the external test equipment requests the following InfoType:

— InfoType \$02: VIN = [1G1JC5444R7252367] supported by ECU#1.

Table 92 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: VIN	02	INFTYP

Table 93 — Request vehicle information response message (1)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: VIN	02	INFTYP
#3	MessageCount VIN = 1 st response message	01	MC_VIN
#4	Data A: Fill byte	00	DATA_A
#5	Data B: Fill byte	00	DATA_B
#6	Data C: Fill byte	00	DATA_C
#7	Data D: '1'	31	DATA_D

Table 94 — Request vehicle information response message (2)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: VIN	02	INFTYP
#3	MessageCount VIN = 2 nd response message	02	MC_VIN
#4	Data A: 'G'	47	DATA_A
#5	Data B: '1'	31	DATA_B
#6	Data C: 'J'	4A	DATA_C
#7	Data D: 'C'	43	DATA_D

Table 95 — Request vehicle information response message (3)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: VIN	02	INFTYP
#3	MessageCount VIN = 3 rd response message	03	MC_VIN
#4	Data A: '5'	35	DATA_A
#5	Data B: '4'	34	DATA_B
#6	Data C: '4'	34	DATA_C
#7	Data D: '4'	34	DATA_D

Table 96 — Request vehicle information response message (4)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: VIN	02	INFTYP
#3	MessageCount VIN = 4 th response message	04	MC_VIN
#4	Data A: 'R'	52	DATA_A
#5	Data B: '7'	37	DATA_B
#6	Data C: '2'	32	DATA_C
#7	Data D: '5'	35	DATA_D

Table 97 — Request vehicle information response message (5)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: VIN	02	INFTYP
#3	MessageCount VIN = 5 th response message	05	MC_VIN
#4	Data A: '2'	32	DATA_A
#5	Data B: '3'	33	DATA_B
#6	Data C: '6'	36	DATA_C
#7	Data D: '7'	37	DATA_D

Now the external test equipment requests the following InfoType:

— InfoType \$03: MessageCount Calibration ID = \$08; supported by ECU#1

Table 98 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: MessageCount Calibration ID	03	INFTYP

Table 99 — Request vehicle information response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: MessageCount Calibration ID	03	INFTYP
#3	MessageCount Calibration ID = 8 response messages	08	MC_CALID

Now the external test equipment requests the following InfoType:

- InfoType \$04: CALID#1 = [JMB*36761500]; supported by ECU#1;
- InfoType \$04: CALID#2 = [JMB*47872611]; supported by ECU#1;

Table 100 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: Calibration ID	04	INFTYP

Table 101 — Request vehicle information response message (1)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration ID	04	INFTYP
#3	MessageCount Calibration ID#1 = 1 st response message	01	MC_CALID
#4	Data A: 'J'	4A	DATA_A
#5	Data B: 'M'	4D	DATA_B
#6	Data C: 'B'	42	DATA_C
#7	Data D: '**'	2A	DATA_D

Table 102 — Request vehicle information response message (2)

Message direction:		ECU#1 → External test equipment	
Message Type:		Response	
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration ID	04	INFTYP
#3	MessageCount Calibration ID#1 = 2 nd response message	02	MC_CALID
#4	Data A: '3'	33	DATA_A
#5	Data B: '6'	36	DATA_B
#6	Data C: '7'	37	DATA_C
#7	Data D: '6'	36	DATA_D

Table 103 — Request vehicle information response message (3)

Message direction:		ECU#1 → External test equipment	
Message Type:		Response	
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration ID	04	INFTYP
#3	MessageCount Calibration ID#1 = 3 rd response message	03	MC_CALID
#4	Data A: '1'	31	DATA_A
#5	Data B: '5'	35	DATA_B
#6	Data C: '0'	30	DATA_C
#7	Data D: '0'	30	DATA_D

Table 104 — Request vehicle information response message (4)

Message direction:		ECU#1 → External test equipment	
Message Type:		Response	
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration ID	04	INFTYP
#3	MessageCount Calibration ID#1 = 4 th response message	04	MC_CALID
#4	Data A: Fill byte	00	DATA_A
#5	Data B: Fill byte	00	DATA_B
#6	Data C: Fill byte	00	DATA_C
#7	Data D: Fill byte	00	DATA_D

Table 105 — Request vehicle information response message (5)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration ID	04	INFTYP
#3	MessageCount Calibration ID#2 = 5 th response message	05	MC_CALID
#4	Data A: 'J'	4A	DATA_A
#5	Data B: 'M'	4D	DATA_B
#6	Data C: 'B'	42	DATA_C
#7	Data D: '*'	2A	DATA_D

Table 106 — Request vehicle information response message (6)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration ID	04	INFTYP
#3	MessageCount Calibration ID#2 = 6 th response message	06	MC_CALID
#4	Data A: '4'	34	DATA_A
#5	Data B: '7'	37	DATA_B
#6	Data C: '8'	38	DATA_C
#7	Data D: '7'	37	DATA_D

Table 107 — Request vehicle information response message (7)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration ID	04	INFTYP
#3	MessageCount Calibration ID#2 = 7 th response message	07	MC_CALID
#4	Data A: '2'	32	DATA_A
#5	Data B: '6'	36	DATA_B
#6	Data C: '1'	31	DATA_C
#7	Data D: '1'	31	DATA_D

Table 108 — Request vehicle information response message (8)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration ID	04	INFTYP
#3	MessageCount Calibration ID#2 = 8 th response message	08	MC_CALID
#4	Data A: Fill byte	00	DATA_A
#5	Data B: Fill byte	00	DATA_B
#6	Data C: Fill byte	00	DATA_C
#7	Data D: Fill byte	00	DATA_D

Now the external test equipment requests the following InfoType:

- InfoType \$05: MessageCount Calibration Verification Number = \$02; supported by ECU#1

Table 109 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: MessageCount Calibration Verification Number	05	INFTYP

Table 110 — Request vehicle information response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: MessageCount Calibration Verification Number	05	INFTYP
#3	MessageCount Calibration Verification Number = 2 response messages	02	MC_CVN

Now the external test equipment requests the following InfoType:

- InfoType \$06: CVN#1 = [17 91 BC 82]; supported by ECU#1
- InfoType \$06: CVN#2 = [16 E0 62 BE]; supported by ECU#1

Table 111 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: Calibration Verification Number	06	INFTYP

Table 112 — Request vehicle information response message (1)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration Verification Number	06	INFTYP
#3	MessageCount Calibration Verification Number = 1 st response message	01	MC_CVN
#4	Data A: 17	17	DATA_A
#5	Data B: 91	91	DATA_B
#6	Data C: BC	BC	DATA_C
#7	Data D: 82	82	DATA_D

NOTE Depending on which protocol the vehicle supports the following situations may occur:

- If the vehicle supports ISO 9141-2, the external test equipment may need to repeat the request message multiple times before the ECU(s) send a response message.
- If the vehicle supports SAE J1850, the external test equipment may need to repeat the request message before the ECU(s) send a response message.
- If the vehicle supports ISO 14230-4, the ECU(s) may send a negative response message with response code \$22 - conditionsNotCorrect if e.g. the engine is running. After the vehicle conditions have been adjusted to meet this service request, the external test equipment shall repeat the request message and the ECU(s) shall send a positive response message.

Table 113 — Request vehicle information response message (2)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration Verification Number	06	INFTYP
#3	MessageCount Calibration Verification Number = 2 nd response message	02	MC_CVN
#4	Data A: 16	16	DATA_A
#5	Data B: E0	E0	DATA_B
#6	Data C: 62	62	DATA_C
#7	Data D: BE	BE	DATA_D

Now the external test equipment requests the following InfoType:

- InfoType \$07: MessageCount In-use Performance Tracking = \$08; supported by ECU#1.

Table 114 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: MessageCount In-use Performance Tracking	07	INFTYP

Table 115 — Request vehicle information response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: MessageCount In-use Performance Tracking	07	INFTYP
#3	MessageCount In-use Performance Tracking = 8 response messages	08	MC_IPT

Now the external test equipment requests the following InfoType:

- InfoType \$08: MC_IPT = 8 response messages; supported by ECU#1.

Table 116 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: In-use Performance Tracking	08	INFTYP

Table 117 — Request vehicle information response message (1)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: In-use Performance Tracking	08	INFTYP
#3	MessageCount In-use Performance Tracking = 1 st response message	01	MC_IPT
#4	OBDCOND_A: 1024 counts	04	OBDCOND_A
#5	OBDCOND_B: 1024 counts	00	OBDCOND_B
#6	IGNCYCCNTR_A: 3337 counts	0D	IGNCYCCNTR_A
#7	IGNCYCCNTR_B: 3337 counts	09	IGNCYCCNTR_B

Table 118 — Request vehicle information response message (2)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: In-use Performance Tracking	08	INF TYP
#3	MessageCount In-use Performance Tracking = 2 nd response message	02	MC_IPT
#4	CATCOMP1_A: 824 counts	03	CATCOMP1_A
#5	CATCOMP1_B: 824 counts	38	CATCOMP1_B
#6	CATCOND1_A: 945 counts	03	CATCOND1_A
#7	CATCOND1_B: 945 counts	B1	CATCOND1_B

Table 119 — Request vehicle information response message (3)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: In-use Performance Tracking	08	INF TYP
#3	MessageCount In-use Performance Tracking = 3 rd response message	03	MC_IPT
#4	CATCOMP2_A: 711 counts	02	CATCOMP2_A
#5	CATCOMP2_B: 711 counts	C7	CATCOMP2_B
#6	CATCOND2_A: 945 counts	03	CATCOND2_A
#7	CATCOND2_B: 945 counts	B1	CATCOND2_B

Table 120 — Request vehicle information response message (4)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: In-use Performance Tracking	08	INF TYP
#3	MessageCount In-use Performance Tracking = 4 th response message	04	MC_IPT
#4	O2SCOMP1_A: 737 counts	02	O2SCOMP1_A
#5	O2SCOMP1_B: 737 counts	E1	O2SCOMP1_B
#6	O2SCOND1_A: 924 counts	03	O2SCOND1_A
#7	O2SCOND1_B: 924 counts	9C	O2SCOND1_B

Table 121 — Request vehicle information response message (5)

Message direction:		ECU#1 → External test equipment	
Message Type:		Response	
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: In-use Performance Tracking	08	INFTYP
#3	MessageCount In-use Performance Tracking = 5 th response message	05	MC_IPT
#4	O2SCOMP2_A: 724 counts	02	O2SCOMP2_A
#5	O2SCOMP2_B: 724 counts	D4	O2SCOMP2_B
#6	O2SCOND2_A: 833 counts	03	O2SCOND2_A
#7	O2SCOND2_B: 833 counts	41	O2SCOND2_B

Table 122 — Request vehicle information response message (6)

Message direction:		ECU#1 → External test equipment	
Message Type:		Response	
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: In-use Performance Tracking	08	INFTYP
#3	MessageCount In-use Performance Tracking = 6 th response message	06	MC_IPT
#4	EGRCOMP_A: 997 counts	03	EGRCOMP_A
#5	EGRCOMP_B: 997 counts	E5	EGRCOMP_B
#6	EGRCOND_A: 1010 counts	03	EGRCOND_A
#7	EGRCOND_B: 1010 counts	F2	EGRCOND_B

Table 123 — Request vehicle information response message (7)

Message direction:		ECU#1 → External test equipment	
Message Type:		Response	
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: In-use Performance Tracking	08	INFTYP
#3	MessageCount In-use Performance Tracking = 7 th response message	07	MC_IPT
#4	AIRCOMP_A: 937 counts	03	AIRCOMP_A
#5	AIRCOMP_B: 937 counts	A9	AIRCOMP_B
#6	AIRCOND_A: 973 counts	03	AIRCOND_A
#7	AIRCOND_B: 973 counts	CD	AIRCOND_B

Table 124 — Request vehicle information response message (8)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: In-use Performance Tracking	08	INF TYP
#3	MessageCount In-use Performance Tracking = 8 th response message	08	MC_IPT
#4	EVAPCOMP_A: 68 counts	00	EVAPCOMP_A
#5	EVAPCOMP_B: 68 counts	44	EVAPCOMP_B
#6	EVAPCOND_A: 97 counts	00	EVAPCOND_A
#7	EVAPCOND_B: 97 counts	61	EVAPCOND_B

7 Diagnostic service definition for ISO 15765-4

7.1 Service \$01 — Request current powertrain diagnostic data

7.1.1 Functional description

The purpose of this service is to allow access to current emission-related data values, including analogue inputs and outputs, digital inputs and outputs, and system status information. The request for information includes a parameter identification (PID) value that indicates to the on-board system the specific information requested. PID specifications, scaling information and display formats are included in Annex B.

The ECU(s) shall respond to this message by transmitting the requested data value last determined by the system. All data values returned for sensor readings shall be actual readings, not default or substitute values used by the system because of a fault with that sensor.

Not all PIDs are applicable or supported by all systems. PID \$00 is a bit-encoded value that indicates for each ECU which PIDs are supported. PID \$00 indicates support for PIDs from \$01 to \$20. PID \$20 indicates support for PIDs \$21 through \$40, etc. This is the same concept for PIDs/OBD Monitor IDs/TIDs/InfoTypes support in Services \$01, \$02, \$06, \$08, \$09. PID \$00 is required for those ECUs that respond to a corresponding Service \$01 request message as specified in Annex A.

IMPORTANT — All emissions-related OBD ECUs which at least support one of the services defined in this document shall support Service \$01 and PID \$00. Service \$01 with PID \$00 is defined as the universal “initialization/keep alive/ping” message for all emissions-related OBD ECUs.

The request message may contain up to six (6) PIDs. An external test equipment is not allowed to request a combination of PIDs supported and PIDs, which report data values. The ECU shall support requests for up to six (6) PIDs. The request message may contain the same PID multiple times. The ECU shall treat each PID as a separate parameter and respond with data for each PID (data returned may be different for the same PID) as often as requested.

The order of the PIDs in the response message is not required to match the order in the request message.

7.1.2 Message data bytes

7.1.2.1 Request current powertrain diagnostic data request message definition (read supported PIDs)

Table 125 — Request current powertrain diagnostic data request message (read supported PIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data request SID	M	01	SIDRQ
#2	PID#1 (PIDs supported: see Annex A)	M	xx	PID
#3	PID#2 (PIDs supported: see Annex A)	U ^a	xx	PID
#4	PID#3 (PIDs supported: see Annex A)	U	xx	PID
#5	PID#4 (PIDs supported: see Annex A)	U	xx	PID
#6	PID#5 (PIDs supported: see Annex A)	U	xx	PID
#7	PID#6 (PIDs supported: see Annex A)	U	xx	PID

^a U = User Optional — PID may be included to avoid multiple PID supported request messages.

To request PIDs supported range from \$C1 - \$FF another request message with PID#1 = \$C0 and PID#2 = \$E0 shall be sent to the vehicle.

7.1.2.2 Request current powertrain diagnostic data response message definition (report supported PIDs)

ECU(s) shall respond to all supported ranges if requested. A range is defined as a block of 32 PIDs (e.g. range #1: PID \$01-\$20). The ECU shall not respond to unsupported PID ranges unless subsequent ranges have a supported PID(s).

Table 126 — Request current powertrain diagnostic data response message (report supported PIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data response SID	M	41	SIDPR
#2	data record of supported PIDs = [M	xx	PIDREC_ PID
#3	1 st supported PID	M	xx	DATA_A
#4	Data A: supported PIDs,	M	xx	DATA_B
#5	Data B: supported PIDs,	M	xx	DATA_C
#6	Data C: supported PIDs,	M	xx	DATA_D
#6	Data D: supported PIDs]	M	xx	DATA_D
:	:	:	:	:
#n-4	data record of supported PIDs = [C1 ^a	xx	PIDREC_ PID
#n-3	m th supported PID	C2 ^b	xx	DATA_A
#n-2	Data A: supported PIDs,	C2	xx	DATA_B
#n-1	Data B: supported PIDs,	C2	xx	DATA_C
#n	Data C: supported PIDs,	C2	xx	DATA_D
#n	Data D: supported PIDs]	C2	xx	DATA_D

^a C1 = Conditional — PID value shall be the same value as included in the request message if supported by the ECU.
^b C2 = Conditional — value indicates PIDs supported; range of supported PIDs depends on selected PID value (see C1).

The response message shall only include the PID(s) and Data A - D which are supported by the ECU. If the request message includes (a) PID value(s) which are not supported by the ECU, those shall not be included in the response message.

7.1.2.3 Request current powertrain diagnostic data request message definition (read PID values)

Table 127 — Request current powertrain diagnostic data request message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data request SID	M	01	SIDRQ
#2	PID#1 (see Annex B)	M	xx	PID
#3	PID#2 (see Annex B)	U ^a	xx	PID
#4	PID#3 (see Annex B)	U	xx	PID
#5	PID#4 (see Annex B)	U	xx	PID
#6	PID#5 (see Annex B)	U	xx	PID
#7	PID#6 (see Annex B)	U	xx	PID

^a U = User Optional — the parameter may be present or not.

7.1.2.4 Request current powertrain diagnostic data response message definition (report PID values)

Table 128 — Request current powertrain diagnostic data response message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request current powertrain diagnostic data response SID	M	41	SIDPR
#2	data record of 1 st supported PID = [PID#1 data A, data B, data C, data D]	M	xx	PIDREC_ PID
#3		M	xx	DATA_A
#4		C1 ^a	xx	DATA_B
#5		C1	xx	DATA_C
#6		C1	xx	DATA_D
:	:	:	:	:
#n-4	data record of m th supported PID = [PID#m data A, data B, data C, data D]	C2 ^b	xx	PIDREC_ PID
#n-3		C2	xx	DATA_A
#n-2		C3 ^c	xx	DATA_B
#n-1		C3	xx	DATA_C
#n		C3	xx	DATA_D

^a C1 = Conditional — “data B - D” depend on selected PID value.
^b C2 = Conditional — parameter is only present if supported by the ECU.
^c C3 = Conditional — parameters and values for “data B - D” depend on selected PID number and are only included if PID is supported by the ECU.

Not all PIDs which are included in the request message may be supported by all emission-related ECUs, which shall comply with this specification. Therefore, each vehicle ECU, which supports at least one (1) PID, shall send a response message including the PID(s) with data.

7.1.3 Parameter definition

7.1.3.1 PIDs supported

Annex A specifies the interpretation of the data record of supported PIDs.

7.1.3.2 PID and data byte descriptions

Annex B specifies standardized emission-related parameters.

7.1.4 Message example

The example below shows how the “Request current powertrain diagnostic data” service shall be implemented.

7.1.4.1 Step #1: Request supported PIDs from vehicle

The external test equipment requests supported PIDs (\$00, \$20, \$40, \$60, \$80, \$A0) from the vehicle. Refer to Annex A to interpret the data bytes in the response messages.

ECU(s) shall respond to all supported ranges if requested. A range is defined as a block of 32 PIDs (e.g. range #1: PID \$01-\$20). The ECU shall not respond to unsupported PID ranges unless subsequent ranges have a supported PID(s).

Table 129 — Request current powertrain diagnostic data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (All PID values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data request SID	01	SIDRQ
#2	PID used to determine PID support for PIDs 01-20	00	PID
#3	PID used to determine PID support for PIDs 21-40	20	PID
#4	PID used to determine PID support for PIDs 41-60	40	PID
#5	PID used to determine PID support for PIDs 61-80	60	PID
#6	PID used to determine PID support for PIDs 81-A0	80	PID
#7	PID used to determine PID support for PIDs A1-C0	A0	PID

Table 130 — ECU#1 response: Request current powertrain diagnostic data response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (All PID values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID requested	00	PID
#3	Data byte A, representing support for PIDs 01, 03-08	10111111b = \$BF	DATA_A
#4	Data byte B, representing support for PIDs 09, 0B-10	10111111b = \$BF	DATA_B
#5	Data byte C, representing support for PIDs 11, 13, 15	10101000b = \$A8	DATA_C
#6	Data byte D, representing support for PIDs 19, 1C, 20	10010001b = \$91	DATA_D
#7	PID requested	20	PID
#8	Data byte A, representing support for PID 21	10000000b = \$80	DATA_A
#9	Data byte B, representing no support for PIDs 29-30	00000000b = \$00	DATA_B
#10	Data byte C, representing no support for PIDs 31-38	00000000b = \$00	DATA_C
#11	Data byte D, representing no support for PIDs 39-40	00000000b = \$00	DATA_D

Table 131 — ECU#2 response: Request current powertrain diagnostic data response message

Message direction:	ECU#2 → External test equipment		
Message Type:	Response		
Data Byte	Description (All PID values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID requested	00	PID
#3	Data byte A, representing support for PID 01	10000000b = \$80	DATA_A
#4	Data byte B, representing support for PID 0D	00001000b = \$08	DATA_B
#5	Data byte C, representing no support for PIDs 11-18	00000000b = \$00	DATA_C
#6	Data byte D, representing no support for PIDs 19-20	00000000b = \$00	DATA_D

Now the external test equipment creates an internal list of supported PIDs for each ECU. The ECU #1 (ECM) supports the following PIDs: \$01, \$03 - \$09, \$0B - \$11, \$13, \$15, \$19, \$1C, \$20, \$21.

The ECU #2 (TCM) supports the following PIDs: \$01 and \$0D.

7.1.4.2 Step #2: Request multiple PIDs from vehicle

Now the external test equipment requests a combination of a maximum of six (6) PIDs in one request message to gain best performance of displaying current data.

- PID \$15: Bank 1 - Sensor 2, PID is supported by ECU #1;
- PID \$01: Number of emission-related DTCs and MIL status, PID is supported by ECU #1 and #2;
- PID \$05: Engine coolant temperature, PID is supported by ECU #1;
- PID \$03: Fuel system 1 status, PID is supported by ECU #1;
- PID \$0C: Engine speed, PID is supported by ECU #1; and
- PID \$0D: Vehicle speed, PID is supported by ECU #2.

Table 132 — Request current powertrain diagnostic data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (All PID values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data request SID	01	SIDRQ
#2	PID: Bank 1 - Sensor 2	15	PID(15)
#3	PID: Number of emission-related DTCs and MIL status	01	PID(01)
#4	PID: Engine coolant temperature	05	PID(05)
#5	PID: Fuel system 1 status	03	PID(03)
#6	PID: Engine speed	0C	PID(0C)
#7	PID: Vehicle speed	0D	PID(0D)

Table 133 — ECU#1 response: Request current powertrain diagnostic data response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (All PID values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID: Engine coolant temperature	05	PID(05)
#3	Data byte A	6E	DATA(A)
#4	PID: Number of emission-related DTCs and MIL status	01	PID(01)
#5	MIL: ON; Number of emission-related DTCs: 03	83	DATA(A)
#6	Misfire -, Fuel system -, Comprehensive monitoring	33	DATA(B)
#7	Catalyst -, Heated catalyst -, ..., monitoring supported	FF	DATA(C)
#8	Catalyst -, Heated catalyst -, ..., monitoring test complete/not complete	63	DATA(D)
#9	PID: Bank 1 - Sensor 2	15	PID(15)
#10	Bank 2 - Sensor 2: 0,8 Volt	A0	DATA(A)
#11	Bank 2 - Sensor 2: 93,7 %	78	DATA(B)
#12	PID: Engine speed	0C	PID(0C)
#13	Data byte A: 667 rpm	0A	DATA(A)
#14	Data byte B: 667 rpm	6B	DATA(B)
#15	PID: Fuel system 1 status	03	PID(03)
#16	Data byte A: Closed loop - using oxygen sensor(s) as feedback for fuel control	02	DATA(A)
#17	Data byte B	00	DATA(B)

Table 134 — ECU#2 response: Request current powertrain diagnostic data response message

Message direction:	ECU#2 → External test equipment		
Message Type:	Response		
Data Byte	Description (All PID values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request current powertrain diagnostic data response SID	41	SIDPR
#2	PID: Vehicle speed	0D	PID(0D)
#3	Data byte A	23	DATA(A)
#4	PID: Number of emission-related DTCs and MIL status	01	PID(01)
#5	MIL: OFF; Number of emission-related DTCs: 01	01	DATA(A)
#6	Comprehensive monitoring: supported, test complete	44	DATA(B)
#7	Catalyst -, Heated catalyst -, ..., monitoring supported	00	DATA(C)
#8	Catalyst -, Heated catalyst -, ..., monitoring test complete/not complete	00	DATA(D)

7.2 Service \$02 — Request powertrain freeze frame data

7.2.1 Functional description

The purpose of this service is to allow access to emission-related data values in a freeze frame. This allows expansion to meet manufacturer-specific requirements not necessarily related to the required freeze frame, and not necessarily containing the same data values as the required freeze frame. The request message includes a parameter identification (PID) value that indicates to the on-board system the specific information requested. PID specifications, scaling information and display formats for the freeze frame are included in Annex B.

The ECU(s) shall respond to this message by transmitting the requested data value stored by the system. All data values returned for sensor readings shall be actual stored readings, not default or substitute values used by the system because of a fault with that sensor.

Service \$02 PID \$02 indicates the DTC that caused the freeze frame data to be stored. If freeze frame data is not stored in the ECU, the system shall report \$00 00 as the DTC.

The frame number byte shall indicate \$00 for the freeze frame data. Manufacturers may optionally save additional freeze frames and use this service to obtain that data by specifying the freeze frame number in the request message. If a manufacturer uses these additional freeze frames, they shall be stored under conditions specified by the manufacturer, and contain data specified by the manufacturer.

Not all PIDs are applicable or supported by all systems. PID \$00 is a bit-encoded value that indicates for each ECU which PIDs are supported. PID \$00 indicates support for PIDs from \$01 to \$20. PID \$20 indicates support for PIDs \$21 through \$40, etc. This is the same concept for PIDs/TIDs/InfoTypes support in Services \$01, \$02, \$06, \$08, \$09. PID \$00 is required for those ECUs that respond to a corresponding Service \$02 request message as specified in Annex A.

The order of the PIDs in the response message is not required to match the order in the request message.

The request message may contain up to three (3) PIDs. An external test equipment shall not request a combination of PIDs supported and PIDs, which report data values. The ECU shall support requests for up to three (3) PIDs. The request message may contain the same PID multiple times. The ECU shall treat each PID as a separate parameter and respond with data for each PID as often as requested.

7.2.2 Message data bytes

7.2.2.1 Request powertrain freeze frame data request message definition (read supported PIDs)

Table 135 — Request powertrain freeze frame data request message (read supported PIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request powertrain freeze frame data request SID	M	02	SIDRQ
#2	PID#1 (PIDs supported: Annex A)	M	xx	PID
#3	frame #	M	xx	FRNO_
#4	PID#2 (PIDs supported: Annex A)	U ^a	xx	PID
#5	frame #	U/C ^b	xx	FRNO_
#6	PID#3 (PIDs supported: Annex A)	U	xx	PID
#7	frame #	U/C	xx	FRNO_

^a U = User Optional — PID may be included to reduce multiple PID supported request messages.
^b C = Conditional — parameter is only included if preceding PID# is included.

To request PIDs supported range from \$61 - \$FF, multiple request messages with PIDs = \$60, \$80, \$A0, \$C0 and \$E0 shall be sent to the vehicle.

7.2.2.2 Request powertrain freeze frame data response message definition (report supported PIDs)

ECU(s) must respond to all supported ranges if requested. A range is defined as a block of 32 PIDs (e.g. range #1: PID \$01-\$20). The ECU shall not respond to unsupported PID ranges unless subsequent ranges have a supported PID(s).

Table 136 — Request powertrain freeze frame data response message (report supported PIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request powertrain freeze frame data response SID	M	42	SIDPR
#2	1 st supported PID	M	00	PID
#3	frame #	M	xx	FRNO_
#4	data record of supported PIDs = [Data A: supported PIDs, Data B: supported PIDs, Data C: supported PIDs, Data D: supported PIDs]	M	xx	DATAREC
#5		M	xx	DATA_A
#6		M	xx	DATA_C
#7		M	xx	DATA_D
:	:	:	:	:
#n-5	m th supported PID	C1 ^a	xx	PID
#n-4	frame #	C1	xx	FRNO_
#n-3	data record of supported PIDs = [Data A: supported PIDs, Data B: supported PIDs, Data C: supported PIDs, Data D: supported PIDs]	C2 ^b	xx	DATAREC
#n-2		C2	xx	DATA_A
#n-1		C2	xx	DATA_C
#n		C2	xx	DATA_D

^a C1 = Conditional — PID value shall be the same value as included in the request message if supported by the ECU.
^b C2 = Conditional — value indicates PIDs supported; range of supported PIDs depends on selected PID value (see C1).

The response message shall only include the PID(s) and Data A - D which are supported by the ECU. If the request message includes (a) PID value(s) which are not supported by the ECU, those shall not be included in the response message.

7.2.2.3 Request powertrain freeze frame data request message definition (read freeze frame PID values)

Table 137 — Request powertrain freeze frame data request message (read freeze frame PID values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request powertrain freeze frame data request SID	M	02	SIDRQ
#2	PID#1 (see Annex B)	M	xx	PID
#3	frame #	M	xx	FRNO
#4	PID#2 (see Annex B)	U ^a	xx	PID
#5	frame #	C1 ^b	xx	FRNO
#6	PID#3 (see Annex B)	U	xx	PID
#7	frame #	C1	xx	FRNO

^a U = User Optional — the parameter may be present or not.
^b C1 = Conditional — parameter is only present if preceding PID# is present.

7.2.2.4 Request powertrain freeze frame data response message definition (report freeze frame PID values)

Table 138 — Request powertrain freeze frame data response message (report freeze frame PID values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request powertrain freeze frame data response SID	M	42	SIDPR
#2	1 st supported PID	M	xx	PID_
#3	frame #	M	xx	FRNO_
#4 #5 #6 #7	data record of 1 st supported PID = [data A, data B, data C, data D]	M C1 ^a C1 C1	xx xx xx xx	DATA_A DATA_B DATA_C DATA_D
:	:	:	:	:
#2	m th supported PID	C2 ^b	xx	PID_
#3	frame #	C2	xx	FRNO_
#4 #5 #6 #7	data record of m th supported PID = [data A, data B, data C, data D]	C3 ^c C4 ^d C4 C4	xx xx xx xx	DATA_A DATA_B DATA_C DATA_D

^a C1 = Conditional — “data B - D” depend on selected PID.
^b C2 = Conditional — parameter shall be the same value as included in the request message and only present if supported.
^c C3 = Conditional — data A shall be included if preceding PID is supported.
^d C4 = Conditional — parameters and values for “data B - D” depend on selected PID number.

7.2.3 Parameter definition

7.2.3.1 PIDs supported

Annex A specifies the interpretation of the data record of supported PIDs.

7.2.3.2 PID and data byte descriptions

Annex B specifies standardized emission-related parameters.

7.2.3.3 Frame # description

The frame number identifies the freeze frame, which includes emission-related data values in case an emission-related DTC is detected by the ECU.

7.2.4 Message example

The example below shows how the “Request powertrain freeze frame data” service shall be implemented.

7.2.4.1 Step #1: Request supported powertrain freeze frame PIDs from vehicle

The external test equipment requests all supported powertrain freeze frame PIDs of freeze frame \$00 from the vehicle. Refer to the example of Service \$01 for how to request supported PIDs.

As a result of the supported PID request, the external test equipment creates an internal list of supported PIDs for each ECU: ECU #1 (ECM) supports the following PIDs: \$02 - \$09, \$0B - \$0E, ECU #2 (TCM) does not support any PIDs for this service.

7.2.4.2 Step #2: Request PID \$02 “DTC which caused freeze frame to be stored” from vehicle

Case #1: Freeze frame data are stored in ECU #1.

Now the external test equipment requests PID \$02 of freeze frame \$00 from the vehicle. Since the ECU #2 (TCM) doesn't store a freeze frame data record only, the ECU #1 (ECM) will send a response message. In this example, the freeze frame data are stored based on a DTC P0130 occurrence. The parameter value of PID \$02 “DTC that caused required freeze frame data storage” is set to the DTC P0130.

Table 139 — Request powertrain freeze frame data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request powertrain freeze frame data request SID	02	SIDRQ
#2	PID: DTC that caused required freeze frame data storage	02	PID
#3	Frame #	00	FRNO

Table 140 — Request powertrain freeze frame data response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request powertrain freeze frame data response SID	42	SIDRQ
#2	PID: DTC that caused required freeze frame data storage	02	PID
#3	Frame #	00	FRNO
#4	DTC High Byte of P0130	01	DATA_A
#5	DTC Low Byte of P0130	30	DATA_B

NOTE ECU#2 does not store freeze frame data and therefore does not send a response message.

Now the external test equipment requests the parameter value of PID \$0C "Engine Speed", PID \$05 "Engine coolant temperature", and PID \$04 "Load" stored in the freeze frame.

Table 141 — Request powertrain freeze frame data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request powertrain freeze frame data request SID	02	SIDRQ
#2	PID: Engine Speed	0C	PID
#3	Frame #	00	FRNO
#4	PID: Engine coolant temperature	05	PID
#5	Frame #	00	FRNO
#4	PID: Load	04	PID
#5	Frame #	00	FRNO

Table 142 — Request powertrain freeze frame data response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request powertrain freeze frame data response SID	42	SIDRQ
#2	PID: Engine Speed	0C	PID
#3	Frame #	00	FRNO
#4	High Byte: Engine Speed: 2080 rpm	20	DATA_A
#5	Low Byte: Engine Speed: 2080 rpm	80	DATA_B
#6	PID: Load	04	PID
#7	Frame #	00	FRNO
#8	Load: 50,2 %	80	DATA_A
#9	PID: Engine coolant temperature	05	PID
#10	Frame #	00	FRNO
#11	Engine coolant temperature: 0 °C	28	DATA_A

Case #2: No freeze frame data are stored in any ECU:

If no freeze frame data are stored, then the parameter value of PID \$02 “DTC that caused required freeze frame data storage” is set to \$00 00. If the external test equipment requests a PID excluding \$00, \$02, \$20, \$40, etc., the ECU shall not send a response message.

Table 143 — Request powertrain freeze frame data request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request powertrain freeze frame data request SID	02	SIDRQ
#2	PID: Number of emission-related DTCs and MIL status	01	PID
#3	Frame #	00	FRNO
#4	PID: DTC that caused required freeze frame data storage	02	PID
#5	Frame #	00	FRNO

Table 144 — Request powertrain freeze frame data response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request powertrain freeze frame data response SID	42	SIDRQ
#2	PID: DTC that caused required freeze frame data storage	02	PID
#3	Frame #	00	FRNO
#4	DTC High Byte of P0000 {no freeze frame data stored}	00	DATA_A
#5	DTC Low Byte of P0000 {no freeze frame data stored}	00	DATA_B

7.3 Service \$03 — Request emission-related diagnostic trouble codes

7.3.1 Functional description

The purpose of this service is to enable the external test equipment to obtain “confirmed” emission-related DTCs.

Send a Service \$03 request for all emission-related DTCs. Each ECU that has DTCs shall respond with one (1) message containing all emission-related DTCs. If an ECU does not have emission-related DTCs, then it shall respond with a message indicating no DTCs are stored by setting the parameter # of DTC to \$00.

DTCs are transmitted in two (2) bytes of information for each DTC. The first two (2) bits (high order) of the first (1) byte for each DTC indicate whether the DTC is a Powertrain, Chassis, Body, or Network DTC (refer to ISO 15031-6 for additional interpretation of this structure). The second two (2) bits shall indicate the first digit of the DTC (0 through 3). The second (2) nibble of the first (1) byte and the entire second (2) byte are the next three (3) hexadecimal characters of the actual DTC reported as hexadecimal. A Powertrain DTC transmitted as \$0143 shall be displayed as P0143.

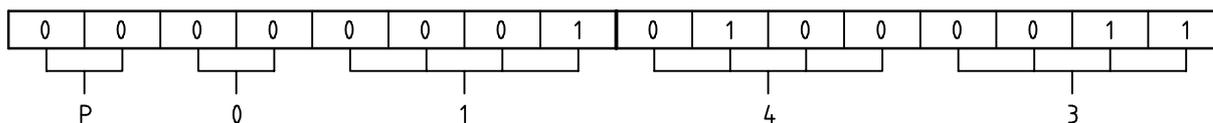


Figure 17 — Diagnostic trouble code encoding example DTC P0143

7.3.2 Message data bytes

7.3.2.1 Request emission-related DTC request message definition

Table 145 — Request emission-related DTC request message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request emission-related DTC request SID	M	03	SIDRQ

7.3.2.2 Request emission-related DTC response message definition

Table 146 — Request emission-related DTC response message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request emission-related DTC response SID	M	43	SIDPR
#2	# of DTC = [no emission-related DTCs stored emission-related DTCs stored]	M	xx = [00, 01 - FF	#OFDTC
#3	DTC#1 (High Byte)	C ^a	xx	DTC1HI
#4	DTC#1 (Low Byte)	C	xx	DTC1LO
:	:	:	xx	
#n-1	DTC#m (High Byte)	C	xx	DTCmHI
#n	DTC#m (Low Byte)	C	xx	DTCmLO

^a C = Conditional — DTC#1 - DTC#m are only included if # of DTC parameter value ≠ \$00.

7.3.3 Parameter definition

7.3.3.1 # of DTC parameter description

The # of DTC parameter reports the emission-related DTC(s) currently (at the time of the request message processing) stored in the ECU(s).

7.3.4 Message example

The example below shows how the “Request emission-related DTCs” service shall be implemented. The external test equipment requests emission-related DTCs from the vehicle. The ECU#1 (ECM) has six (6) DTCs stored, the ECU #2 (TCM) has one (1) DTC stored, and the ECU #3 (ABS/Traction Control) has no DTC stored.

- ECU #1 (ECM): P0143, P0196, P0234, P02CD, P0357, P0A24
- ECU #2 (TCM): P0443
- ECU #3 (ABS/Traction Control): no emission-related DTC stored

Table 147 — Request emission-related diagnostic trouble codes request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request emission-related DTCs request SID	03	SIDRQ

Table 148 — Request emission-related diagnostic trouble codes response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request emission-related DTCs response SID	43	SIDPR
#2	# of DTC {number of emission-related DTCs stored in this ECU}	06	#OFDTC
#3	DTC High Byte of P0143	01	DTC1HI
#4	DTC Low Byte of P0143	43	DTC1LO
#5	DTC High Byte of P0196	01	DTC2HI
#6	DTC Low Byte of P0196	96	DTC2LO
#7	DTC High Byte of P0234	02	DTC3HI
#8	DTC Low Byte of P0234	34	DTC3LO
#9	DTC High Byte of P02CD	02	DTC4HI
#10	DTC Low Byte of P02CD	CD	DTC4LO
#11	DTC High Byte of P0357	03	DTC5HI
#12	DTC Low Byte of P0357	57	DTC5LO
#13	DTC High Byte of P0A24	0A	DTC6HI
#14	DTC Low Byte of P0A24	24	DTC6LO

Table 149 — Request emission-related diagnostic trouble codes response message

Message direction:	ECU #3 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request emission-related DTCs response SID	43	SIDPR
#2	# of DTC {number of emission-related DTCs stored in this ECU}	00	#OFDTC

Table 150 — Request emission-related diagnostic trouble codes response message

Message direction:	ECU #2 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request emission-related DTCs response SID	43	SIDPR
#2	# of DTC {number of emission-related DTCs stored in this ECU}	01	#OFDTC
#3	DTC High Byte of P0443	04	DTC1HI
#4	DTC Low Byte of P0443	43	DTC1LO

7.4 Service \$04 — Clear/reset emission-related diagnostic information

7.4.1 Functional description

The purpose of this service is to provide a means for the external test equipment to command ECUs to clear all emission-related diagnostic information. This includes:

- MIL and number of diagnostic trouble codes (can be read with Service \$01, PID \$01);
- Clear the I/M (Inspection/Maintenance) readiness bits (Service \$01, PID \$01 and \$41);
- Confirmed diagnostic trouble codes (can be read with Service \$03);
- Pending diagnostic trouble codes (can be read with Service \$07);
- Diagnostic trouble code for freeze frame data (can be read with Service \$02, PID \$02);
- Freeze frame data (can be read with Service \$02);
- Status of system monitoring tests (can be read with Service \$01, PID \$01);
- On-board monitoring test results (can be read with Service \$06);
- Distance travelled while MIL is activated (can be read with Service \$01, PID \$21);
- Number of warm-ups since DTCs cleared (can be read with Service \$01, PID \$30);
- Distance travelled since DTCs cleared (can be read with Service \$01, PID \$31);
- Time run by the engine while MIL is activated (can be read with Service \$01, PID \$4D);
- Time since diagnostic trouble codes cleared (can be read with Service \$01, PID \$4E);
- Reset misfire counts of standardized Test ID \$0B to zero (can be read with Service \$06).

Other manufacturer-specific “clearing/resetting” actions may also occur in response to this request message. All ECUs shall respond to this request message with ignition ON and with the engine not running.

For safety and/or technical design reasons, ECUs that can not perform this operation under other conditions, such as with the engine running, shall send a negative response message with response code \$22 - conditionsNotCorrect.

7.4.2 Message data bytes

7.4.2.1 Clear/reset emission-related diagnostic information request message definition

Table 151 — Clear/reset emission-related diagnostic information request message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Clear/reset emission-related diagnostic information request SID	M	04	SIDRQ

7.4.2.2 Clear/reset emission-related diagnostic information response message definition

Table 152 — Clear/reset emission-related diagnostic information response message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Clear/reset emission-related diagnostic information response SID	M	44	SIDPR

7.4.3 Parameter definition

This service does not support any parameters.

7.4.4 Message example

The example below shows how the “Clear/reset emission-related diagnostic information” service shall be implemented if ignition is ON and with the engine not running.

The external test equipment commands the vehicle to “Clear/reset emission-related diagnostic information”.

Table 153 — Clear/reset emission-related diagnostic information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Clear/reset emission-related diagnostic information request SID	04	SIDRQ

Table 154 — Clear/reset emission-related diagnostic information response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Clear/reset emission-related diagnostic information response SID	44	SIDPR

Table 155 — Clear/reset emission-related diagnostic information response message

Message direction:	ECU#2 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Clear/reset emission-related diagnostic information response SID	44	SIDPR

Table 156 — Negative response message

Message direction:	ECU#3 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Negative Response Service Identifier	7F	SIDNR
#2	Clear/reset emission-related diagnostic information request SID	04	SIDRQ
#3	Negative Response Code: conditionsNotCorrect	22	NR_CNC

7.5 Service \$05 — Request oxygen sensor monitoring test results

Service \$05 is not supported for CAN. The functionality of Service \$05 is implemented in Service \$06.

7.6 Service \$06 — Request on-board monitoring test results for specific monitored systems

7.6.1 Functional description

The purpose of this service is to allow access to the results for on-board diagnostic monitoring tests of specific components/systems that are continuously monitored (e.g. misfire monitoring) and non-continuously monitored (e.g. catalyst system).

The request message for test values includes an On-Board Diagnostic Monitor ID (see Annex D) that indicates the information requested. Unit and Scaling information is included in Annex E.

The vehicle manufacturer is responsible for assigning “Manufacturer Defined Test IDs” for different tests of a monitored system. The latest valid test values (results) are to be retained, even over multiple ignition OFF cycles, until replaced by more recent test values (results). Test values (results) are requested by On-Board Diagnostic Monitor ID. Test values (results) are always reported with the Minimum and Maximum Test Limits. The Unit and Scaling ID included in the response message defines the scaling and unit to be used by the external test equipment to display the test values (results), Minimum Test Limit, and Maximum Test Limit information.

If an On-Board Diagnostic Monitor has not been completed at least once since Clear/reset emission-related diagnostic information or battery disconnect, then the parameters Test Value (Results), Minimum Test Limit, and Maximum Test Limit shall be set to zero (\$0000) values.

Not all On-Board Diagnostic Monitor IDs are applicable or supported by all systems. On-Board Diagnostic Monitor ID \$00 is a bit-encoded value that indicates for each ECU which On-Board Diagnostic Monitor IDs are supported. On-Board Diagnostic Monitor ID \$00 indicates support for On-Board Diagnostic Monitor IDs from \$01 to \$20. On-Board Diagnostic Monitor ID \$20 indicates support for On-Board Diagnostic Monitor IDs \$21 through \$40, etc. This is the same concept for PIDs/TIDs/InfoTypes support in Services \$01, \$02, \$06, \$08, and \$09. On-Board Diagnostic Monitor ID \$00 is required for those ECUs that respond to a corresponding Service \$06 request message as specified in Annex A.

The request message including supported On-Board Diagnostic Monitor IDs may contain up to six (6) OBDMIDs. A request message including an On-Board Diagnostic Monitor ID, which reports test values shall only contain one (1) OBDMID. An external test equipment shall not request a combination of OBDMIDs supported and a single OBDMID, which report test values. The ECU shall support requests for up to six (6) supported OBDMIDs and only one (1) OBDMID which reports test values.

A unique method must be utilized for displaying data for monitors that have multiple tests. Many OBD monitors have multiple tests that are done in either a serial or parallel manner. If a monitor uses multiple OBD Monitor ID/Test ID combinations that may not all complete at the same time, the following method shall be used to update the stored test results at the time of monitor completion:

After the monitor completes, update all Monitor ID/Test ID combinations (or “test results”) that were utilized by the monitor with appropriate passing or failing results. If a test result (or “Monitor ID/Test ID”) was not utilized during this monitoring event, set the Test Values and Minimum and Maximum Test Limits to their initial values (\$0000, test not completed). Test results from the previously completed monitoring events shall not be mixed with test results from the current completed monitoring event.

In some cases, test results (or “Monitor ID/Test ID combinations”) will be displayed as being incomplete even though the monitor (as indicated by PID \$41) was successfully completed and either passed or failed. In other cases, some Test IDs will show passing results while others will show failing results after the monitor (as indicated by PID \$41) was successfully completed and failed. Note that OBD-II regulations prohibit a passing monitor from showing any failing test results. If an initial, serial test indicates a failure and a subsequent re-test of the system indicates a passing result, the test that was utilized to make the passing determination should be displayed, while the failing test that was utilized to make the initial determination should be reset to its initial values (\$0000, test not completed).

As an example of a serial monitor, an evaporative system monitor can fail for a large evaporative system leak and never continue to test for small leaks or very small leaks. In this case, the Test ID for the large leak would show a failing result, while the small leak test and the very small leak test would show incomplete. As an example of the parallel monitor, a purge valve flow monitor can pass by having a large rich lambda shift, a large lean lambda shift or a large engine rpm increase. If the purge valve is activated and a large rich lambda shift occurs, the Test ID for the rich lambda shift would show a passing result while the other two Test IDs would show incomplete. Since some Test IDs for a completed monitor will show incomplete, PID \$41 must be used to determine monitor completion status.

7.6.2 Message data bytes

7.6.2.1 Request on-board monitoring test results for specific monitored systems request message definition (read supported OBDMIDs)

Table 157 — Request on-board monitoring test results for specific monitored systems request message (read supported OBDMIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems request SID	M	06	SIDRQ
#2	On-Board Diagnostic Monitor ID (OBDMIDs supported: Annex A)	M	xx	OBDMID
#3	On-Board Diagnostic Monitor ID (OBDMIDs supported: Annex A)	U ^a	xx	OBDMID
#4	On-Board Diagnostic Monitor ID (OBDMIDs supported: Annex A)	U	xx	OBDMID
#5	On-Board Diagnostic Monitor ID (OBDMIDs supported: Annex A)	U	xx	OBDMID
#6	On-Board Diagnostic Monitor ID (OBDMIDs supported: Annex A)	U	xx	OBDMID
#7	On-Board Diagnostic Monitor ID (OBDMIDs supported: Annex A)	U	xx	OBDMID

^a U = User Optional — OBDMID may be included to avoid multiple OBDMID supported request messages.

To request OBDMIDs supported range from \$C1 - \$FF another request message with OBDMID#1 = \$C0 and OBDMID#2 = \$E0 shall be sent to the vehicle

7.6.2.2 Request on-board monitoring test results for specific monitored systems response message definition (report supported OBDMIDs)

ECU(s) must respond to all supported ranges if requested. A range is defined as a block of 32 OBDMIDs (e.g. range #1: OBDMID \$01-\$20). The ECU shall not respond to unsupported OBDMID ranges unless subsequent ranges have a supported OBDMID(s).

Table 158 — Request on-board monitoring test results for specific monitored systems response message (report supported OBDMIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems response SID	M	46	SIDPR
#2	data record of supported OBDMID = [1 st supported OBDMID Data A: supported OBDMIDs, Data B: supported OBDMIDs, Data C: supported OBDMIDs, Data D: supported OBDMIDs]	M	xx	OBDMIDREC
#3		M	xx	OBDMID
#4		M	xx	DATA_A
#5		M	xx	DATA_B
#6		M	xx	DATA_C
:	:	:	:	:
#n-4	data record of supported OBDMID = [m th supported OBDMID Data A: supported OBDMIDs, Data B: supported OBDMIDs, Data C: supported OBDMIDs, Data D: supported OBDMIDs]	C1 ^a	xx	OBDMIDREC
#n-3		C2 ^b	xx	OBDMID
#n-2		C2	xx	DATA_A
#n-1		C2	xx	DATA_B
#n		C2	xx	DATA_C

^a C1 = Conditional — OBDMID value shall be the same value as included in the request message if supported by the ECU.

^b C2 = Conditional — Value indicates OBDMIDs supported; range of supported OBDMIDs depends on selected OBDMID value (see C1).

The response message shall only include the OBDMID(s) and Data A-D, which are supported by the ECU. If the request message includes (a) OBDMID value(s) which are not supported by the ECU, those shall not be included in the response message.

7.6.2.3 Request on-board monitoring test results for specific monitored systems request message definition (read OBDMID test values)

Table 159 — Request on-board monitoring test results for specific monitored systems request message (read OBDMID test values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems request SID	M	06	SIDRQ
#2	On-Board Diagnostic Monitor ID	M	xx	OBDMID

7.6.2.4 Request on-board monitoring test results for specific monitored systems response message definition (report OBDMID test values)

Table 160 — Request on-board monitoring test results for specific monitored systems response message (report OBDMID test values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems response SID	M	46	SIDPR
#2	data record of supported OBDMID = [OBDMIDREC
#3	On-Board Diagnostic Monitor ID	M	xx	OBDMID
#4	Std./Manuf. Defined TID#1	M	xx	S/MDTID
#5	Unit And Scaling ID#1	M	xx	UASID
#6	Test Value (High Byte)#1	M	xx	TVHI
#7	Test Value (Low Byte)#1	M	xx	TVLO
#8	Min. Test Limit (High Byte)#1	M	xx	MINTLHI
#9	Min. Test Limit (Low Byte)#1	M	xx	MINTLLO
#10	Max. Test Limit (High Byte)#1	M	xx	MAXTLHI
	Max. Test Limit (Low Byte)#1]			MAXTLLO
:	:		:	:
#n-8	data record of supported OBDMID = [OBDMIDREC
#n-7	On-Board Diagnostic Monitor ID	C1 ^a	xx	OBDMID
#n-6	Std./Manuf. Defined TID#m	C2 ^b	xx	S/MDTID
#n-5	Unit And Scaling ID#m	C2	xx	UASID
#n-4	Test Value (High Byte)#m	C2	xx	TVHI
#n-3	Test Value (Low Byte)#m	C2	xx	TVLO
#n-2	Min. Test Limit (High Byte)#m	C2	xx	MINTLHI
#n-1	Min. Test Limit (Low Byte)#m	C2	xx	MINTLLO
#n	Max. Test Limit (High Byte)#m	C2	xx	MAXTLHI
	Max. Test Limit (Low Byte)#m]	C2	xx	MAXTLLO

^a C1 = Conditional — Parameter is only present if more than one (1) Manufacturer Defined TID is supported by the ECU for the requested Monitor ID.

^b C2 = Conditional — Parameter and value depend on selected Manufacturer Defined TID number and are only included if the Manufacturer Defined TID is supported by the ECU. The value shall be zero (\$00) in case the On-Board Diagnostic Monitor has not been completed at least once since Clear/reset emission-related diagnostic information or battery disconnect.

7.6.3 Parameter definition

7.6.3.1 On-Board Diagnostic Monitor IDs supported

The On-Board Diagnostic Monitor IDs supported is the same concept as used for PID support in Services \$01 and \$02 as specified in Annex A.

7.6.3.2 On-Board Diagnostic Monitor ID description

The On-Board Diagnostic Monitor ID is a one (1) byte parameter and is defined in Annex D. An On-Board Diagnostic Monitor may have more than one (1) monitor test (Test ID).

NOTE The On-Board Diagnostic Monitor ID is similar to the Test ID parameter specified in Service \$06 in 6.6.3.1.

7.6.3.3 Standardized and Manufacturer Defined Test ID description

The Standardized and Manufacturer Defined Test ID is a one (1) byte parameter. For example, the On-Board Diagnostic Monitor “Oxygen Sensor Monitor Bank 1 - Sensor 1” or the On-Board Diagnostic Misfire Monitor may use some of the following Standardized Test IDs.

The table below specifies the range of identifiers.


Table 161 — Standardized Test ID description

Range (Hex)	Description
00	ISO/SAE reserved
01	Rich to lean sensor threshold voltage (constant)
02	Lean to rich sensor threshold voltage (constant)
03	Low sensor voltage for switch time calculation (constant)
04	High sensor voltage for switch time calculation (constant)
05	Rich to lean sensor switch time (calculated)
06	Lean to rich sensor switch time (calculated)
07	Minimum sensor voltage for test cycle (calculated)
08	Maximum sensor voltage for test cycle (calculated)
09	Time between sensor transitions (calculated)
0A	Sensor period (calculated)
0B	<p>EWMA (Exponential Weighted Moving Average) misfire counts for last ten (10) driving cycles (calculated, rounded to an integer value)</p> <p>General EWMA calculation: $0,1 * (\text{current misfire counts}) + 0,9 * (\text{previous misfire counts average})$</p> <p>Initial value for (previous misfire counts average) = 0</p> <p>NOTE Internal ECU calculation registers with precision higher than one count must be used and retained to calculate the contents of registers \$0B and \$0C to prevent rounding errors. If this is not done, these registers will never count back down to zero after misfire stops. The calculations must be done using the high-precision registers, then rounded to the nearest integer value to be output as register \$0B and \$0C.</p> <p>$\text{High_Precision_EWMA_Misfire_Counts}_{\text{current}} = \text{Rounded} [(0,1) * \text{High_Precision_Misfire_Counts}_{\text{current}} + (0,9) * \text{High_Precision_EWMA_Misfire_Counts}_{\text{previous}}]$</p> <p>Where: Rounded means rounded to the nearest integer. The high-precision values are never reported, they are only used for internal calculations.</p> <p>This TEST ID shall be reported with OBD Monitor IDs \$A2 – \$AD (refer to Annex D) and the Scaling ID \$24 (refer to Annex E).</p>
0C	Misfire counts for last/current driving cycles (calculated, rounded to an integer value)
0D - 7F	Reserved for future standardization

Table 162 — Manufacturer Defined Test ID description

Range (Hex)	Description
80 - FE	Manufacturer Defined Test ID range — This parameter is an identifier for the test performed within the On-Board Diagnostic Monitor.
FF	ISO/SAE reserved

Results of latest mandated on-board oxygen sensor monitoring tests, see Figure 18.

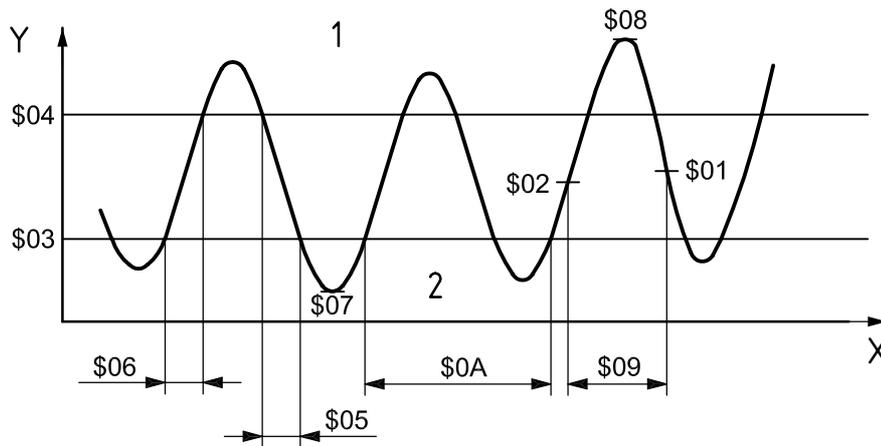

- Key**
- 1 rich
 - 2 lean

Figure 18 — Standardized Test ID value example

7.6.3.4 Example for Use of Standardized Test IDs for Misfire Monitor

OBd regulations may require reporting the number of misfires detected during the current driving cycle (Test ID \$0C) and the average number of misfires detected during the last ten (10) driving cycles (Test ID \$0B) for each cylinder. Therefore, for a 4-cylinder engine, eight (8) pieces of data must be reported for both Test IDs. The purpose of the misfire data is to help a service technician identify which cylinders are currently misfiring (\$0C) and identify which cylinders have been consistently misfiring in the past ten (10) driving cycles (\$0B). The actual misfire counts will depend on how the vehicle was driven, how long it was driven, etc. Misfire counts for cylinders shall only be compared relative to each other. If some cylinders have many more misfires than other cylinders, the technician should probably begin his troubleshooting with the cylinders that have the highest misfire counts.

The \$0B registers contain the EWMA (Exponential Weighted Moving Average) values for misfire counted during the last ten (10) driving cycles. The EWMA values should only be re-calculated once per driving cycle. This calculation can be done every power-up, or every power-down sequence if the ECU stays alive after the ignition key is turned off. The EWMA value uses the misfire counts collected during the last/current driving cycle. The value of the \$0C counters, after the driving cycle ends, is the number of misfires counted during the current/last driving cycle. The software shall take the contents of the \$0B register (this is the previous average) multiply by 0,9 and add the contents of the \$0C register (this is the current counts) multiplied by 0,1. This becomes the new EWMA value.

The internal ECU calculation registers with precision higher than one count shall be used and retained to calculate the contents of registers \$0B and \$0C to prevent rounding errors. If this is not done, these registers will never count back down to zero after misfire stops. The calculations shall be done using the high-precision registers, then rounded to the nearest integer value to be output as register \$0B and \$0C. The last row of Table 163 shows the high-precision internal calculation.

The Test ID \$0C counters shall count misfires for each cylinder and save them in Keep Alive or Non-Volatile Memory. They should update continuously, in 200 or 1000 revolution increments, as a minimum. When the engine starts, the \$0C misfire counters shall be reset to zero. Prior to engine start-up, the last value from the previous driving cycle shall be retained and displayed until the engine starts so that a service technician can see how many misfires occurred the last time the vehicle was driven.

If a vehicle has constant misfire in one or more cylinders, the service technician can watch the Test ID \$0C counters count-up as he drives the vehicle, up to a maximum of 65,535 misfires. If the technician is driving and watching the \$0C counters, he would be seeing misfire counts for the “current” driving cycle. If he turns off the ignition key, he has just ended the current driving cycle. If he then turns the key back on, but does not start the engine, the \$0C counters will contain the number of misfires that occurred during the “last” driving cycle. If

the technician now starts the engine, the \$0C counters will be reset to zero and the software starts counting misfires all over again.

There are no minimum or maximum misfire monitor threshold limits for misfire counts. Test IDs \$0B and \$0C just accumulate the number of misfires that occurred. These counts should accumulate with or without a misfire DTC. If there was a little misfire, but not enough to store a DTC, Test ID \$0B and \$0C values for each cylinder should still show the number of misfires that occurred. The minimum test limit value should be 0; the maximum test limit value should be 65,535 so there will never be a “fail” result.

For this example, the vehicle PCM or ECM does not stay alive after shutdown so EWMA values are updated every power-up:

Table 163 — Misfire Test ID \$0B and \$0C example

Misfire counts	Cyl #1 Counts	Cyl #1 EWMA	Cyl #2 Counts	Cyl #2 EWMA	Cyl#3 Counts	Cyl#3 EWMA	Cyl#4 Counts	Cyl#4 EWMA
Monitor ID / Test ID	A2 / 0C	A2 / 0B	A3 / 0C	A3 / 0B	A4 / 0C	A4 / 0B	A5 / 0C	A5 / 0C
key on, drive cycle 1	0	0	0	0	0	0	0	0
start engine	0	0	0	0	0	0	0	0
drive with misfire	200	0	1	0	500	0	9	0
key off	200	0	1	0	500	0	9	0
key on, drive cycle 2	200	20	1	0	500	50	9	1
start engine	0	20	0	0	0	50	0	1
drive with misfire	1 000	20	4	0	3 000	50	12	1
key off	1 000	20	4	0	3 000	50	12	1
key on, drive cycle 3	1 000	118	4	0	3 000	345	12	2
start engine	0	118	0	0	0	345	0	2
drive with misfire	1 000	118	4	0	3 000	345	12	2
key off	1 000	118	4	0	3 000	345	12	2
key on, drive cycle 4	1 000	206	4	0	3 000	611	12	3
start engine	0	206	0	0	0	611	0	3
drive with misfire	1 000	206	4	0	3 000	611	12	3
key off	1 000	206	4	0	3 000	611	12	3
key on, drive cycle 5	1 000	286	4	0	3 000	849	12	4
start engine	0	286	0	0	0	849	0	4
drive with misfire	1 000	286	4	0	3 000	849	12	4
key off	1 000	285	4	0	3 000	849	12	4
key on, drive cycle 6	1 000	357	4	0	3 000	1 065	12	5
start engine	0	357	0	0	0	1 065	0	5
drive with misfire	1 000	357	4	0	3 000	1 065	12	5
key off	1 000	357	4	0	3 000	1 065	12	5
key on, drive cycle 12	1 000	692	4	0	3 000	2 074	12	8
start engine	0	692	0	0	0	2 074	0	8
drive with misfire	1 000	692	4	0	3 000	2 074	12	8
key off	1 000	692 (692,456)	4	0 (0,444)	3 000	2 074 (2 074,259)	12	8 (8,130)

7.6.3.5 Unit and Scaling ID definition

The Unit and Scaling ID is a one (1) byte identifier to reference the scaling and unit to be used by the external test equipment to calculate and display the test values (results), Minimum Test Limit, and the Maximum Test Limit for the Standardized and Manufacturer Defined Test ID requested. All standardized Unit And Scaling IDs are specified in “Annex E” of this part of ISO 15031.

7.6.3.6 Test Value (result) description

The Test Value represents the test result and is defined in the table below.

Table 164 — Test Value description

Parameter name	# of bytes	Description
Test Value	2 (High and Low Byte)	Test Value (Result) — This value shall be calculated and displayed by the external test equipment based on the Unit and Scaling ID included in the response message. The Test Value shall be within the Minimum and Maximum Test Limit to indicate a “Pass” result.

7.6.3.7 Minimum Test Limit description

The Minimum Test Limit parameter is defined in Table 165.

Table 165 — Minimum Test Limit description

Parameter name	# of bytes	Description
Minimum Test Limit	2 (High and Low Byte)	<p>The Minimum Test Limit shall be calculated and displayed by the external test equipment based on the Unit and Scaling ID included in the response message. The Unit and Scaling IDs are specified in Annex E of this part of ISO 15031. The Minimum Test Limit shall be the minimum value for the monitor identified by the On-Board Diagnostic Monitor ID. For the Standardized Test IDs that are constant values, the Minimum Test Limit shall be the same value as reported for the Test Value.</p> <p>The following conditions apply</p> <ul style="list-style-type: none"> — if the Test Value is less than the Minimum Test Value results in a “Fail” condition; — if the Test Value equals the Minimum Test Value results in a “Pass” condition; — if the Test Value is greater than the Minimum Test Value results in a “Pass” condition.

7.6.3.8 Maximum Test Limit description

The Maximum Test Limit parameter is defined in Table 166 below.

Table 166 — Maximum Test Limit description

Parameter name	# of bytes	Description
Maximum Test Limit	2 (High and Low Byte)	<p>The Maximum Test Limit shall be calculated and displayed by the external test equipment based on the Unit and Scaling ID included in the response message. The Unit and Scaling IDs are specified in Annex E of this part of ISO 15031. The Maximum Test Limit shall be the maximum value for the monitor identified by the On-Board Diagnostic Monitor ID. For the Standardized Test IDs, that are constant values, the Maximum Test Limit shall be the same value as reported for the Test Value.</p> <p>The following conditions apply</p> <ul style="list-style-type: none"> — if the Test Value is less than the Maximum Test Value results in a “Pass” condition; — if the Test Value equals the Maximum Test Value results in a “Pass” condition; — if the Test Value is greater than the Maximum Test Value results in a “Fail” condition.

7.6.4 Message example

The example below shows how the “Request on-board monitoring test results for specific monitored systems” service shall be implemented.

7.6.4.1 Step #1: Request on-board monitoring test results for specific monitored systems (request for supported OBDMIDs)

The external test equipment requests all supported OBDMIDs from the vehicle. Refer to the example of Service \$01 how to request supported PIDs (same concept is used for supported OBDMIDs).

As a result of the supported OBDMID request, the external test equipment creates an internal list of supported OBDMIDs for each ECU: The ECU #1 (ECM) supports OBDMIDs \$01, \$05, \$10, and \$21. The ECU #2 (TCM) does not support any OBDMIDs.

7.6.4.2 Step #2: Request current powertrain diagnostic data (Service \$01, PID \$01)

Prior to requesting OBD Monitor test results, the external test equipment shall evaluate if the monitor is complete. The status of the monitor is included in the response message of Service \$01, PID \$01 data byte B-D (see Annex B).

7.6.4.3 Step #3: Request on-board monitoring test results for specific monitored systems

The external test equipment sends a “Request on-board monitoring test results for specific monitored systems” message with one supported OBDMID in the request message to the vehicle. In this example, the request message includes the following OBDMID:

— request message: OBDMID \$01 - Oxygen Sensor Monitor Bank 1 - Sensor 1

Table 167 — Request oxygen sensor monitoring test results request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems request SID	06	SIDRQ
#2	OBDMID: 01 - Oxygen Sensor Monitor Bank 1 - Sensor 1	01	OBDMID

Table 168 — Request oxygen sensor monitoring test results response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems response SID	46	SIDPRQ
#2	OBDMID: 01 - Oxygen Sensor Monitor Bank 1 - Sensor 1	01	OBDMID
#3	Standardized Test ID: 01 - Rich to lean sensor threshold voltage (constant)	01	STID
#4	Unit And Scaling ID: Voltage	0A	UASID
#5	Test Value High Byte:	0B	TESTVAL
#6	Test Value Low Byte: 0,365 V	B0	TESTVAL
#7	Minimum Test Limit High Byte:	0B	MINLIMIT
#8	Minimum Test Limit Low Byte: 0,365 V	B0	MINLIMIT
#9	Maximum Test Limit High Byte:	0B	MAXLIMIT
#10	Maximum Test Limit Low Byte: 0,365 V	B0	MAXLIMIT
#11	OBDMID: 01 - Oxygen Sensor Monitor Bank 1 - Sensor 1	01	OBDMID
#12	Standardized Test ID: 05 - Rich to lean sensor switch time (calculated)	05	STID
#13	Unit And Scaling ID: Time	10	UASID
#14	Test Value High Byte	00	TESTVAL
#15	Test Value Low Byte: 0,072 s (0 min, 0 s)	48	TESTVAL
#16	Minimum Test Limit High Byte	00	MINLIMIT
#17	Minimum Test Limit Low Byte: 0,000 s (0 min, 0 s)	00	MINLIMIT
#18	Maximum Test Limit High Byte	00	MAXLIMIT
#19	Maximum Test Limit Low Byte: 0,100 s (0 min, 0 s)	64	MAXLIMIT
#20	OBDMID: 01 - Oxygen Sensor Monitor Bank 1 - Sensor 1	01	OBDMID
#21	Manufacturer Defined Test ID: 133 (The name of this Test ID shall be documented in the vehicle Service Information.)	85	MDTID
#22	Unit And Scaling ID: Counts	24	UASID
#23	Test Value High Byte	00	TESTVAL
#24	Test Value Low Byte: 150 counts	96	TESTVAL
#25	Minimum Test Limit High Byte	00	MINLIMIT
#26	Minimum Test Limit Low Byte: 75 counts	4B	MINLIMIT
#27	Maximum Test Limit High Byte	FF	MAXLIMIT
#28	Maximum Test Limit Low Byte: 65535 counts	FF	MAXLIMIT

NOTE ECU#2 does not support any Test IDs and therefore does not send a response message.

7.6.4.4 Request on-board monitoring test results for specific monitored systems

In this example, the requested monitor has not been completed once. The request message includes the following OBDMID: request message: OBDMID \$21 - Catalyst Monitor Bank 1.

Table 169 — Request Catalyst Monitor Bank 1 monitoring test results request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems request SID	06	SIDRQ
#2	OBDMID: 21 - Catalyst Monitor Bank 1	21	OBDMID

Table 170 — Request Catalyst Monitor Bank 1 monitoring test results response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request on-board monitoring test results for specific monitored systems response SID	46	SIDPRQ
#2	OBDMID: 21 - Catalyst Monitor Bank 1	21	OBDMID
#3	Manufacturer Defined Test ID: 135	87	MDTID
#4	Unit And Scaling ID: Percent	2E	UASID
#5	Test Value High Byte: Monitor not completed at least once since erasure	00	TESTVAL
#6	Test Value Low Byte: 0,00 %	00	TESTVAL
#7	Minimum Test Limit High Byte	00	MINLIMIT
#8	Minimum Test Limit Low Byte: 0,00 %	00	MINLIMIT
#9	Maximum Test Limit High Byte	00	MAXLIMIT
#10	Maximum Test Limit Low Byte: 0,00%	00	MAXLIMIT

NOTE ECU#2 does not support any Test IDs and therefore does not send a response message.

7.7 Service \$07 — Request emission-related diagnostic trouble codes detected during current or last completed driving cycle

7.7.1 Functional description

The purpose of this service is to enable the external test equipment to obtain “pending” diagnostic trouble codes detected during current or last completed driving cycle for emission-related components/systems. Service \$07 is required for all DTCs and is independent of Service \$03. The intended use of this data is to assist the service technician after a vehicle repair, and after clearing diagnostic information, by reporting test results after a single driving cycle. If the test failed during the driving cycle, the DTC associated with that test shall be reported. Test results reported by this service do not necessarily indicate a faulty component/system. If test results indicate a failure after additional driving, then the MIL will be illuminated and a DTC will be set and reported with Service \$03, indicating a faulty component/system. This service can always be used to request the results of the latest test, independent of the setting of a DTC.

Test results for these components/systems shall be reported in the same format as the DTCs in Service \$03 - refer to the functional description for Service \$03.

7.7.2 Message data bytes

7.7.2.1 Request emission-related diagnostic trouble codes detected during current or last completed driving cycle request message definition

Table 171 — Request emission-related diagnostic trouble codes detected during current or last completed driving cycle request message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request emission-related diagnostic trouble codes detected during current or last completed driving cycle request SID	M	07	SIDRQ

7.7.2.2 Request emission-related diagnostic trouble codes detected during current or last completed driving cycle response message definition

Table 172 — Request emission-related diagnostic trouble codes detected during current or last completed driving cycle response message

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request emission-related diagnostic trouble codes detected during current or last completed driving cycle response SID	M	47	SIDPR
#2	# of DTC = [no emission-related DTCs # of emission-related DTCs]	M	00 01 - FF	#OFDTC
#3 #4	DTC#1 (High Byte) DTC#1 (Low Byte)	C ^a C	xx xx	DTC1HI DTC1LO
:	:	:	xx	
#n-1 #n	DTC#m (High Byte) DTC#m (Low Byte)	C C	xx xx	DTCmHI DTCmLO

^a C = Conditional — DTC#1 - DTC#m are only included if # of DTC parameter value ≠ \$00.

7.7.3 Parameter definition

This service does not support any parameters.

7.7.4 Message example

Refer to message example of Service \$03.

7.8 Service \$08 — Request control of on-board system, test or component

7.8.1 Functional description

The purpose of this service is to enable the external test equipment to control the operation of an on-board system, test or component.

The data bytes will be specified, if necessary, for each Test ID in Annex F, and will be unique for each Test ID.

Possible uses for these data bytes in the request message are

- Turn on-board system/test/component ON;
- Turn on-board system/test/component OFF; and
- Cycle on-board system/test/component for 'n' seconds.

Possible uses for these data bytes in the response message are

- Report system status; and
- Report test results.

Not all TIDs are applicable or supported by all systems. TID \$00 is a bit-encoded value that indicates for each ECU which TIDs are supported. TID \$00 indicates support for TIDs from \$01 to \$20. TID \$20 indicates support for TIDs \$21 through \$40, etc. This is the same concept for PIDs/TIDs/InfoTypes support in Services \$01, \$02, \$06, \$08, \$09. TID \$00 is required for those ECUs that respond to a corresponding Service \$08 request message as specified in Annex A.

The order of the TIDs in the response message is not required to match the order in the request message.

The request message including supported Test IDs may contain up to six (6) Test IDs. A request message including a Test ID with optional data shall only contain one (1) Test ID. An external test equipment is not allowed to request a combination of Test IDs supported and a single Test ID with optional data. The ECU shall support requests for up to six (6) supported Test IDs and only one (1) Test ID with optional data.

7.8.2 Message data bytes

7.8.2.1 Request control of on-board device request message definition (read supported TIDs)

Table 173 — Request control of on-board device request message (read supported TIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request control of on-board device request SID	M	08	SIDRQ
#2	TID#1 (Test IDs supported: Annex A)	M	xx	TID
#3	TID#2 (Test IDs supported: Annex A)	U	xx	TID
#4	TID#3 (Test IDs supported: Annex A)	U	xx	TID
#5	TID#4 (Test IDs supported: Annex A)	U	xx	TID
#6	TID#5 (Test IDs supported: Annex A)	U	xx	TID
#7	TID#6 (Test IDs supported: Annex A)	U	xx	TID

U = User Optional — TID may be included to avoid multiple TID supported request messages

To request TIDs supported range from \$C1 - \$FF, another request message with TID#1 = \$C0 and TID#2 = \$E0 shall be sent to the vehicle.

7.8.2.2 Request control of on-board device response message definition (report supported TIDs)

ECU(s) must respond to all supported ranges if requested. A range is defined as a block of 32 TIDs (e.g. range #1: TID \$01-\$20). The ECU shall not respond to unsupported TID ranges unless subsequent ranges have a supported TID(s).

Table 174 — Request control of on-board device response message (report supported TIDs)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request control of on-board device response message SID	M	48	SIDPR
#2	data record of supported TIDs = [1 st supported TID Data A: supported TIDs, Data B: supported TIDs, Data C: supported TIDs, Data D: supported TIDs]	M	xx	TIDREC_ TID
#3		M	xx	DATA_A
#4		M	xx	DATA_B
#5		M	xx	DATA_C
#6		M	xx	DATA_D
:	:	:	:	:
#n-4	data record of supported TIDs = [m th supported TID Data A: supported TIDs, Data B: supported TIDs, Data C: supported TIDs, Data D: supported TIDs]	C1 ^a	xx	TIDREC_ TID
#n-3		C2 ^b	xx	DATA_A
#n-2		C2	xx	DATA_B
#n-1		C2	xx	DATA_C
#n		C2	xx	DATA_D

^a C1 = Conditional — TID value shall be the same value as included in the request message if supported by the ECU.

^b C2 = Conditional — Value indicates TIDs supported; range of supported TIDs depends on selected TID value (see C1).

The response message shall only include the TID(s) and Data A - D which are supported by the ECU. If the request message includes (a) TID value(s) which are not supported by the ECU, those shall not be included in the response message.

7.8.2.3 Request control of on-board system request message definition (read TID values)

Table 175 — Request control of on-board device request message (read TID values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request control of on-board device request SID	M	08	SIDRQ
#2	data record of Test ID = [Test ID (request Test ID values) Data A, Data B, Data C, Data D, Data E]	M/C1 ^a	xx	TIDREC TID
#3		C2 ^b	xx	DATA_A
#4		C2	xx	DATA_B
#5		C2	xx	DATA_C
#6		C2	xx	DATA_D
#7		C2	xx	DATA_E

^a C1 = Conditional — Test ID value shall be one of the supported Test IDs of previous response message.

^b C2 = Conditional — Presence and values of Data A - E parameter depend on Test ID.

7.8.2.4 Request control of on-board device response message definition (report TID values)

Table 176 — Request control of on-board device response message (report TID values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request control of on-board device response SID	M	48	SIDPR
#2	data record of Test ID = [Test ID (report Test ID values)	M/C1 ^a	xx	TIDREC TID
#3	Data A,	C2 ^b	xx	DATA_A
#4	Data B,	C2	xx	DATA_B
#5	Data C,	C2	xx	DATA_C
#6	Data D,	C2	xx	DATA_D
#7	Data E]	C2	xx	DATA_E
^a C1 = Conditional — Test ID value shall be the same value as included in the request message. ^b C2 = Conditional — Presence and values of Data A - E parameter depend on Test ID.				

7.8.3 Parameter definition

7.8.3.1 Test IDs supported

Refer to Annex A.

7.8.3.2 Test ID description

Refer to Annex F.

7.8.4 Message example

The example below shows how “Request control of on-board system, test or component” service shall be implemented.

7.8.4.1 Step #1: Request control of on-board system, test or component (request for supported Test IDs)

The external test equipment requests all supported Test IDs from the vehicle. Refer to the example of Service \$01 for how to request supported Test IDs (same concept is used for supported TIDs).

As a result of the supported TID request, the external test equipment creates an internal list of supported PIDs for each ECU: The ECU #1 (ECM) supports Test ID \$01. The ECU #2 (TCM) does not support any Test IDs and therefore does not send a response message.

7.8.4.2 Step #2: Request control of on-board device (Service \$08, Test ID \$01)

The external test equipment sends a “Request control of on-board device” message with one (1) supported Test ID \$01 to the vehicle.

Table 177 — Request control of on-board device request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request control of on-board device request SID	08	SIDRQ
#2	Test ID: 01 - Evaporative system leak test	01	TID

Table 178 — Request control of on-board device response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request control of on-board device response SID	48	SIDPR
#2	Test ID: 01 - Evaporative system leak test	01	TID

In the following example, the conditions of the system are not proper to run the Evaporative system leak test. Therefore, the ECM (ECU #1) responds with a negative response message with response code \$22 - conditionsNotCorrect. The TCM (ECU #2) does not respond because it previously reported that it does not support the Evaporative system leak test.

Table 179 — Request control of on-board device request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request control of on-board device request SID	08	SIDRQ
#2	Test ID: 01 - Evaporative system leak test	01	TID

Table 180 — Negative response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Negative Response Service Identifier	7F	SIDNR
#2	Request control of on-board device request SID	08	SIDRQ
#3	Negative Response Code: conditionsNotCorrect	22	NR_CNC

7.9 Service \$09 — Request vehicle information

7.9.1 Functional description

The purpose of this service is to enable the external test equipment to request vehicle-specific vehicle information such as Vehicle Identification Number (VIN) and Calibration IDs. Some of this information may be required by regulations and some may be desirable to be reported in a standard format if supported by the vehicle manufacturer. INFOTYPES are defined in Annex G.

Not all Infotypes are applicable or supported by all systems. Infotype \$00 is a bit-encoded value that indicates for each ECU which Infotypes are supported. Infotype \$00 indicates support for Infotypes from \$01 to \$20. Infotype \$20 indicates support for Infotypes \$21 through \$40, etc. This is the same concept for PIDs/TIDs/Infotypes support in Services \$01, \$02, \$06, \$08, \$09. Infotype \$00 is required for those ECUs that respond to a corresponding Service \$09 request message as specified in Annex A.

The request message including supported InfoTypes may contain up to six (6) Infotypes. A request message including an InfoType, which reports vehicle information shall only contain one (1) Infotype. An external test equipment shall not request a combination of Infotypes supported and a single Infotype, which reports vehicle

information. The ECU shall support requests for up to six (6) supported Infotypes and only one (1) Infotype which reports vehicle information.

If INFOTYPE \$02 (VIN) is indicated as supported, the ECU shall respond within P2max timing even if the VIN is missing or incomplete. For example, a development ECU may respond with \$FF characters for VIN because the VIN has not been programmed.

7.9.2 Message data bytes

7.9.2.1 Request vehicle information request message definition (request supported InfoType)

Table 181 — Request vehicle information request message (request supported InfoType)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request vehicle information request SID	M	09	SIDRQ
#2	InfoType#1 (InfoTypes supported: Annex A)	M	xx	INFTYP
#3	InfoType#2 (InfoTypes supported: Annex A)	U ^a	xx	INFTYP
#4	InfoType#3 (InfoTypes supported: Annex A)	U	xx	INFTYP
#5	InfoType#4 (InfoTypes supported: Annex A)	U	xx	INFTYP
#6	InfoType#5 (InfoTypes supported: Annex A)	U	xx	INFTYP
#7	InfoType#6 (InfoTypes supported: Annex A)	U	xx	INFTYP

^a U = User Optional — InfoType may be included to avoid multiple InfoType supported request messages.

To request InfoTypes supported range from \$C1 - \$FF, another request message with InfoType#1 = \$C0 and InfoType#2 = \$E0 shall be sent to the vehicle.

7.9.2.2 Request vehicle information response message definition (report supported InfoType)

ECU(s) shall respond to all supported ranges if requested. A range is defined as a block of 32 InfoTypes (e.g. range #1: InfoType \$01-\$20). The ECU shall not respond to unsupported InfoType ranges unless subsequent ranges have a supported InfoType(s).

Table 182 — Request vehicle information response message (report supported InfoType)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request vehicle information response SID	M	49	SIDPR
#2	data record of supported InfoTypes = [1 st supported InfoType Data A: supported InfoTypes, Data B: supported InfoTypes, Data C: supported InfoTypes, Data D: supported InfoTypes]	M	xx	INFTYPREC
#3		M	xx	INFTYP
#4		M	xx	DATA_A
#5		M	xx	DATA_B
#6		M	xx	DATA_C
:	:	:	:	:
#n-4	data record of supported InfoTypes = [m th supported InfoType Data A: supported InfoTypes, Data B: supported InfoTypes, Data C: supported InfoTypes, Data D: supported InfoTypes]	C1 ^a	xx	INFTYPREC
#n-3		C2 ^b	xx	INFTYP
#n-2		C2	xx	DATA_A
#n-1		C2	xx	DATA_B
#n		C2	xx	DATA_C

^a C1 = Conditional — INFOTYPE value shall be the same value as included in the request message if supported by the ECU.
^b C2 = Conditional — Value indicates INFOTYPES supported; range of supported INFOTYPES depends on selected INFOTYPE value (see C1).

The response message shall only include the INFOTYPES and Data A - D, which are supported by the ECU. If the request message includes (an) INFOTYPE value(s), which are not supported by the ECU, those shall not be included in the response message.

7.9.2.3 Request vehicle information request message definition (read InfoType values)

Table 183 — Request vehicle information request message (read InfoType values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request vehicle information request SID	M	09	SIDRQ
#2	InfoType (read InfoType values)	M	xx	INFTYP

7.9.2.4 Request vehicle information response message definition (report InfoType values)

Table 184 — Request vehicle information response message (report InfoType values)

Data Byte	Parameter Name	Cvt	Hex Value	Mnemonic
#1	Request vehicle information response SID	M	49	SIDPR
#2	data record of InfoType = [M/C1 ^a	xx	INFTYPREC
#3	InfoType (report InfoType values)	M	xx	INFTYP
#4	NOOfDataItems	M	xx	NODI
#5	data #1,	M	xx	DATA_#1
#5	data #2,	C2 ^b	xx	DATA_#2
:	:	C2	xx	:
#m	data #m]	C2	xx	DATA_#m

^a C1 = Conditional — InfoType value shall be the same value as included in the request message.

^b C2 = Conditional — Data #1 - #m depend on selected InfoType value.

7.9.3 Parameter definition

7.9.3.1 Vehicle information types supported

Refer to Annex A.

7.9.3.2 Vehicle information type description

Refer to Annex G.

7.9.3.3 Number of data items data byte description

This parameter defines the number of data items included in the response message which are identified and belong to the InfoType reported.

EXAMPLE A request message with the InfoType for CVN (Calibration Verification Number) may cause the ECU to send a response message that contains multiple CVNs. The amount of CVNs is included in the “Number of data items” parameter.

For InfoType \$08, In-use Performance Tracking, there are 16 data items specified in Annex G. Therefore, the parameter number of data items shall have a value of 16₁₀ in a response message containing InfoType \$08.

7.9.4 Message example

The example below shows how the “Request vehicle information” service shall be implemented.

7.9.4.1 Step #1: Request vehicle information (request supported InfoType) from vehicle

The external test equipment requests all supported InfoTypes (InfoType#1 = \$00) from the vehicle. The ECU #1 (ECM) and the ECU #2 (TCM) send a response message with InfoTypes supported information for InfoTypes \$01 - \$20.

Now the external test equipment creates an internal list of supported InfoTypes for each ECU. The ECU #1 (ECM) supports the following InfoTypes: \$02, \$04, \$06, and \$08. The ECU #2 (TCM) supports InfoTypes \$04 and \$06.

7.9.4.2 Step #2: Request InfoTypes from vehicle

Now the external test equipment requests a combination of three (3) InfoTypes:

- InfoType \$02: VIN = [1G1JC5444R7252367] supported by ECU #1;
- InfoType \$04: Cal. ID#1 = [JMB*36761500] supported by ECU #1;
- InfoType \$04: Cal. ID#2 = [JMB*4787261111] supported by ECU #1;
- InfoType \$06: Cal. CVN#1 = [1791BC82] supported by ECU #1;
- InfoType \$06: Cal. CVN#2 = [16E062BE] supported by ECU #1;
- InfoType \$08: IPT = [0400D09 ... 00440061] supported by ECU #1;
- InfoType \$04: Cal. ID = [JMA*431299110000] supported by ECU #2; and
- InfoType \$06: Cal. CVN = [98123476] supported by ECU #2.

Table 185 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType \$02 - VIN (Vehicle Identification Number)	02	INFTYP

Table 186 — Request vehicle information response message

Message direction:	ECU #1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: 02 - VIN (Vehicle Information Number)	02	INFTYP
#3	Number of data items: 01	01	NODI
#4	1 st ASCII character of VIN: '1'	31	VIN
#5	2 nd ASCII character of VIN: 'G'	47	VIN
#6	3 rd ASCII character of VIN: '1'	31	VIN
#7	4 th ASCII character of VIN: 'J'	4A	VIN
#8	5 th ASCII character of VIN: 'C'	43	VIN
#9	6 th ASCII character of VIN: '5'	35	VIN
#10	7 th ASCII character of VIN: '4'	34	VIN
#11	8 th ASCII character of VIN: '4'	34	VIN
#12	9 th ASCII character of VIN: '4'	34	VIN
#13	10 th ASCII character of VIN: 'R'	52	VIN
#14	11 th ASCII character of VIN: '7'	37	VIN
#15	12 th ASCII character of VIN: '2'	32	VIN
#16	13 th ASCII character of VIN: '5'	35	VIN
#17	14 th ASCII character of VIN: '2'	32	VIN
#18	15 th ASCII character of VIN: '3'	33	VIN
#19	16 th ASCII character of VIN: '6'	36	VIN
#20	17 th ASCII character of VIN: '7'	37	VIN

Now the external test equipment requests the following InfoType:

- InfoType \$04: CALID#1 = [JMB*36761500] and CALID#2 =[JMB*4787261111]; supported by ECU#1.

Table 187 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: Calibration ID	04	INFTYP

Table 188 — Request vehicle information response message (1st)

Message direction:		ECU#1 → External test equipment	
Message Type:		Response	
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration ID	04	INFTYP
#3	Number of data items: 02	02	NODI
#4	Data A: 'J'	4A	DATA_A
#5	Data B: 'M'	4D	DATA_B
#6	Data C: 'B'	42	DATA_C
#7	Data D: '*'	2A	DATA_D
#8	Data E: '3'	33	DATA_E
#9	Data F: '6'	36	DATA_F
#10	Data G: '7'	37	DATA_G
#11	Data H: '6'	36	DATA_H
#12	Data I: '1'	31	DATA_I
#13	Data J: '5'	35	DATA_J
#14	Data K: '0'	30	DATA_K
#15	Data L: '0'	30	DATA_L
#16	Data M: Fill byte	00	DATA_M
#17	Data N: Fill byte	00	DATA_N
#18	Data O: Fill byte	00	DATA_O
#19	Data P: Fill byte	00	DATA_P
#20	Data A: 'J'	4A	DATA_A
#21	Data B: 'M'	4D	DATA_B
#22	Data C: 'B'	42	DATA_C
#23	Data D: '*'	2A	DATA_D
#24	Data E: '4'	34	DATA_E
#25	Data F: '7'	37	DATA_F
#26	Data G: '8'	38	DATA_G
#27	Data H: '7'	37	DATA_H
#28	Data I: '2'	32	DATA_I
#29	Data J: '6'	36	DATA_J
#30	Data K: '1'	31	DATA_K
#31	Data L: '1'	31	DATA_L
#32	Data M: '1'	31	DATA_M
#33	Data N: '1'	31	DATA_N
#34	Data O: Fill byte	00	DATA_O
#35	Data P: Fill byte	00	DATA_P

NOTE The same response message with different data byte content will be sent by ECU #2 in this example.

In the following example, the ECUs need more time than $P2_{CAN}$ to calculate the Calibration Verification Number(s). Therefore, both ECUs respond with negative response messages with response code \$78 - RequestCorrectlyReceived-ResponsePending as long as the positive response message is not ready in the ECU.

Now the external test equipment requests the following InfoType:

- InfoType \$06: CVN#1 = [17 91 BC 82] and CVN#2 = [16 E0 62 BE]; supported by ECU#1; and
- InfoType \$06: CVN = [98 12 34 76]; supported by ECU#2.

Table 189 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: Calibration Verification Number	06	INFTYP

Table 190 — Negative response message

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Negative Response Service Identifier	7F	SIDNR
#2	Request vehicle information request SID	09	SIDRQ
#3	Negative Response Code: RequestCorrectlyReceived-ResponsePending	78	NR_RCR_RP

Table 191 — Negative response message

Message direction:	ECU#2 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Negative Response Service Identifier	7F	SIDNR
#2	Request vehicle information request SID	09	SIDRQ
#3	Negative Response Code: RequestCorrectlyReceived-ResponsePending	78	NR_RCR_RP

Table 192 — Request vehicle information response message (1st)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration Verification Number	06	INFTYP
#3	Number of data items: 02	02	NODI
#4	Data A: 17	17	DATA_A
#5	Data B: 91	91	DATA_B
#6	Data C: BC	BC	DATA_C
#7	Data D: 82	82	DATA_D
#8	Data E: 16	16	DATA_E
#9	Data F: E0	E0	DATA_F
#10	Data G: 62	62	DATA_G
#11	Data H: BE	BE	DATA_H

Table 193 — Request vehicle information response message (1st)

Message direction:	ECU#2 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: Calibration Verification Number	06	INFTYP
#3	Number of data items: 01	01	NODI
#4	Data A: 98	98	DATA_A
#5	Data B: 12	12	DATA_B
#6	Data C: 34	34	DATA_C
#7	Data D: 76	76	DATA_D

Now the external test equipment requests the following InfoType:

— InfoType \$08: IPT; supported by ECU#1.

Table 194 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: In-use Performance Tracking	08	INFTYP

Table 195 — Request vehicle information response message (1)

Message direction:		ECU#1 → External test equipment	
Message Type:		Response	
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: In-use Performance Tracking	08	INFTYP
#3	Number of data items: 16	10	NODI
#4	OBDCOND_A: 1024 counts	04	OBDCOND_A
#5	OBDCOND_B: 1024 counts	00	OBDCOND_B
#6	IGNCYCCNTR_A: 3337 counts	0D	IGNCYCCNTR_A
#7	IGNCYCCNTR_B: 3337 counts	09	IGNCYCCNTR_B
#8	CATCOMP1_A: 824 counts	03	CATCOMP1_A
#9	CATCOMP1_B: 824 counts	38	CATCOMP1_B
#10	CATCOND1_A: 945 counts	03	CATCOND1_A
#11	CATCOND1_B: 945 counts	B1	CATCOND1_B
#12	CATCOMP2_A: 711 counts	02	CATCOMP2_A
#13	CATCOMP2_B: 711 counts	C7	CATCOMP2_B
#14	CATCOND2_A: 945 counts	03	CATCOND2_A
#15	CATCOND2_B: 945 counts	B1	CATCOND2_B
#16	O2SCOMP1_A: 737 counts	02	O2SCOMP1_A
#17	O2SCOMP1_B: 737 counts	E1	O2SCOMP1_B
#18	O2SCOND1_A: 924 counts	03	O2SCOND1_A
#19	O2SCOND1_B: 924 counts	9C	O2SCOND1_B
#20	O2SCOMP2_A: 724 counts	02	O2SCOMP2_A
#21	O2SCOMP2_B: 724 counts	D4	O2SCOMP2_B
#22	O2SCOND2_A: 833 counts	03	O2SCOND2_A
#23	O2SCOND2_B: 833 counts	41	O2SCOND2_B
#24	EGRCOMP_A: 997 counts	03	EGRCOMP_A
#25	EGRCOMP_B: 997 counts	E5	EGRCOMP_B
#26	EGRCOND_A: 1010 counts	03	EGRCOND_A
#27	EGRCOND_B: 1010 counts	F2	EGRCOND_B
#28	AIRCOMP_A: 937 counts	03	AIRCOMP_A
#29	AIRCOMP_B: 937 counts	A9	AIRCOMP_B
#30	AIRCOND_A: 973 counts	03	AIRCOND_A
#31	AIRCOND_B: 973 counts	CD	AIRCOND_B
#32	EVAPCOMP_A: 68 counts	00	EVAPCOMP_A
#33	EVAPCOMP_B: 68 counts	44	EVAPCOMP_B
#34	EVAPCOND_A: 97 counts	00	EVAPCOND_A
#35	EVAPCOND_B: 97 counts	61	EVAPCOND_B

Now the external test equipment requests the following InfoType:

- InfoType \$0A: ECUNAME; supported by ECU#1; The name of the ECU is: "ECM-Engine Control".

Table 196 — Request vehicle information request message

Message direction:	External test equipment → All ECUs		
Message Type:	Request		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information request SID	09	SIDRQ
#2	InfoType: ECU's/module's acronym and text name	0A	INFTYP

Table 197 — Request vehicle information response message (1)

Message direction:	ECU#1 → External test equipment		
Message Type:	Response		
Data Byte	Description (all values are in hexadecimal)	Byte Value (Hex)	Mnemonic
#1	Request vehicle information response SID	49	SIDPR
#2	InfoType: ECU's/module's acronym and text name	0A	INFTYP
#3	Number of data items: 01	01	NODI
#4	Data A: 'E'	45	ECUNAME_A
#5	Data B: 'C'	43	ECUNAME_B
#6	Data C: 'M'	4D	ECUNAME_C
#7	Data D: filler byte	00	ECUNAME_D
#8	Data E: '-' delimiter	2D	ECUNAME_E
#9	Data F: 'E'	45	ECUNAME_F
#10	Data G: 'n'	6E	ECUNAME_G
#11	Data H: 'g'	67	ECUNAME_H
#12	Data I: 'i'	69	ECUNAME_I
#13	Data J: 'n'	6E	ECUNAME_J
#14	Data K: 'e'	65	ECUNAME_K
#15	Data L: ' ' (space)	20	ECUNAME_L
#16	Data M: 'C'	43	ECUNAME_M
#17	Data N: 'o'	6F	ECUNAME_N
#18	Data O: 'n'	6E	ECUNAME_O
#19	Data P: 't'	74	ECUNAME_P
#20	Data Q: 'r'	72	ECUNAME_Q
#21	Data R: 'o'	6F	ECUNAME_R
#22	Data S: 'l'	6C	ECUNAME_S
#23	Data T: filler byte	00	ECUNAME_T

Annex A
(normative)

PID (Parameter ID)/OBDMID (On-Board Monitor ID)/TID (Test ID)/INFOTYPE supported definition

This annex specifies standardized hex values to be used in the request message for Services \$01, \$02, \$05, \$06, \$08, and \$09 to retrieve supported PIDs, OBDMIDs, TIDs, and INFOTYPES.

Table A.1 — Supported PID/OBDMID/TID/INFOTYPE definition

Supported PID/OBDMID/TID/INFOTYPE (hex)	Scaling/bit Number of data bytes = 4 Data A - D or B - E: bit evaluation PID/OBDMID/TID/INFOTYPE supported (Hex)			External test equipment SI (Metric) / English display
00	Data A bit 7 Data A bit 6 : Data D bit 0	01 02 : 20	0 = not supported 1 = supported	ISO 15031-4 specifies the behaviour of the external test equipment for how to interpret the data received to identify supported PIDs/OBDMIDs/TIDs/INFOTYPES for each ECU. The ECU shall not respond to unsupported PID/TID/MID/InfoTypes ranges unless subsequent ranges have a supported PID(s)/MID(s)/TID(s)/InfoType(s).
20	Data A bit 7 Data A bit 6 : Data D bit 0	21 22 : 40	0 = not supported 1 = supported	
40	Data A bit 7 Data A bit 6 : Data D bit 0	41 42 : 60	0 = not supported 1 = supported	
60	Data A bit 7 Data A bit 6 : Data D bit 0	61 62 : 80	0 = not supported 1 = supported	
80	Data A bit 7 Data A bit 6 : Data D bit 0	81 82 : A0	0 = not supported 1 = supported	
A0	Data A bit 7 Data A bit 6 : Data D bit 0	A1 A2 : C0	0 = not supported 1 = supported	
C0	Data A bit 7 Data A bit 6 : Data D bit 0	C1 C2 : E0	0 = not supported 1 = supported	
E0	Data A bit 7 Data A bit 6 : Data D bit 1 Data D bit 0	E1 E2 : FF ISO/SAE reserved (set to 0)	0 = not supported 1 = supported	

Annex B (normative)

PIDs (Parameter ID) for Services \$01 and \$02 scaling and definition

B.1 Nomenclature

This Annex uses the following nomenclature for numbering and units for the U.S., European notation, and External Test Equipment display. Table B.1 includes an example.

Table B.1 — Numbering and units for the U.S. notation, European notation and External Test Equipment display

Annex example	U.S. notation	European notation	External Test Equipment display
4750,75 min ⁻¹	4750,75 min ⁻¹	4750,75 min ⁻¹	4750,75 min ⁻¹

B.2 Signals received via distributed networks

In distributed network architectures, certain OBD devices may be hardwired to other ECUs or be independent OBD mechatronic devices, e.g. smart sensor, or through a network from another ECU (both referred to as remote OBD devices). When remote OBD devices are not hardwired to the OBD ECU and the data is *not* received over the data bus from the specific remote OBD device, the following applies:

- The primary OBD ECU shall report Service \$01 and Service \$02 data parameters as the minimum or maximum value to indicate that the signal has not been received. A PID which includes this invalid data (no signal) shall either be reported with a minimum value (\$00 or \$0000) or maximum value (\$FF or \$FFFF), e.g. PID \$0D “Vehicle Speed Sensor” = \$FF = 255 km/h, PID \$2F “Fuel Level Input” = \$00 = 0,0 %. The reported value shall be determined by the manufacturer based on system design and network architecture to represent the least likely value to be expected under normal conditions.
- The OBD ECU is required to store a network communication DTC after appropriate filtering, if the ECU detects that any remote OBD signal is missing. It shall set a DTC for “Lost Communication with ‘X’ Control Module”.

The network communication DTCs shall be obtained from ISO 15031-6.

B.3 PID definitions

Table B.2 — PID \$01 definition

PID (hex)	Description	Data byte	Scaling/bit	External test equipment SI (Metric) / English display
01	Monitor status since DTCs cleared			
	The bits in this PID shall report two pieces of information for each monitor: — monitor status since DTCs were last cleared, saved in NVRAM or Keep Alive RAM; and — monitors supported on this vehicle.			
	Number of emission-related DTCs and MIL status	A (bit)	byte 1 of 4	DTC and MIL status:
	# of DTCs stored in this ECU	0-6	hex to decimal	DTC_CNT: xxd
	Malfunction Indicator Lamp (MIL) Status	7	0 = MIL OFF; 1 = MIL ON	MIL: OFF or ON
	The MIL status shall indicate "OFF" during the key-on, engine-off bulb check unless the MIL has also been commanded "ON" for a detected malfunction. The status should reflect whether there is any confirmed DTC(s) stored that are illuminating the MIL. It should not reflect the status of the MIL, which could be on for a function check, flashing I/M readiness or flashing for misfire.			
	Supported tests which are continuous	B (bit)	byte 2 of 4 (Low Nibble)	Support status of continuous monitors:
	Misfire monitoring supported	0	0 = monitor not supported (NO) 1 = monitor supported (YES)	MIS_SUP: NO or YES
	Misfire monitoring shall be supported on both spark-ignition and compression-ignition vehicles if the vehicle utilizes a misfire monitor.			
	Fuel system monitoring supported	1	0 = monitor not supported (NO) 1 = monitor supported (YES)	FUEL_SUP: NO or YES
	Fuel system monitoring shall be supported on vehicles that utilize oxygen sensors for closed loop fuel feedback control, and utilize a fuel system monitor, typically spark-ignition engines.			
	Comprehensive component monitoring supported	2	0 = monitor not supported (NO) 1 = monitor supported (YES)	CCM_SUP: NO or YES
	Comprehensive component monitoring shall be supported on spark-ignition and compression-ignition vehicles that utilize comprehensive component monitoring.			
	ISO/SAE reserved (bit shall be reported as '0')	3		—
	Status of continuous monitoring tests since DTC cleared:	B (bit)	byte 2 of 4 (High Nibble)	Completion status of continuous monitors since DTC cleared:
	Misfire monitoring ready	4	0 = monitor complete, or not applicable (YES) 1 = monitor not complete (NO)	MIS_RDY: YES or NO

Table B.2 (continued)

PID (hex)	Description	Data byte	Scaling/bit	External test equipment SI (Metric) / English display
	Misfire monitoring shall always indicate complete for spark-ignition engines. Misfire monitoring shall indicate complete for compression-ignition engines after the misfire evaluation is complete.			
	Fuel system monitoring ready	5	0 = monitor complete, or not applicable (YES) 1 = monitor not complete (NO)	FUEL_RDY: YES or NO
	Fuel system monitoring shall always indicate complete for both spark-ignition and compression-ignition engines.			
	Comprehensive component monitoring ready	6	0 = monitor complete, or not applicable (YES) 1 = monitor not complete (NO)	CCM_RDY: YES or NO
	Comprehensive component monitoring shall always indicate complete on both spark-ignition and compression-ignition engines.			
	NOTE It can be assumed that by the time any non-continuous monitors are complete, continuous comprehensive component monitoring will also be complete. Bit 6 is allowed to always indicate "complete" on spark-ignition vehicles that support other non-continuous monitors.			
	ISO/SAE reserved (bit shall be reported as "0")	7		—
	Supported tests run at least once per trip	C (bit)	byte 3 of 4	Support status of non-continuous monitors:
	Catalyst monitoring supported	0	0 = monitor not supported (NO) 1 = monitor supported (YES)	CAT_SUP: NO or YES
	Heated catalyst monitoring supported	1		HCAT_SUP: NO or YES
	Evaporative system monitoring supported	2		EVAP_SUP: NO or YES
	Secondary air system monitoring supported	3		AIR_SUP: NO or YES
	A/C system refrigerant monitoring supported	4		ACRF_SUP: NO or YES
	Oxygen sensor monitoring supported	5		O2S_SUP: NO or YES
	Oxygen sensor heater monitoring supported	6		HTR_SUP: NO or YES
	EGR system monitoring supported	7		EGR_SUP: NO or YES
	Status of tests run at least once per trip	D (bit)	byte 4 of 4	Completion status of non-continuous monitors since DTCs cleared:
	Catalyst monitoring ready	0	0 = monitor complete, or not applicable (YES) 1 = monitor not complete (NO)	CAT_RDY: YES or NO
	Heated catalyst monitoring ready	1		HCAT_RDY: YES or NO
	Evaporative system monitoring ready	2		EVAP_RDY: YES or NO
	Secondary air system monitoring ready	3		AIR_RDY: YES or NO
	A/C system refrigerant monitoring ready	4		ACRF_RDY: YES or NO
	Oxygen sensor monitoring ready	5		O2S_RDY: YES or NO
	Oxygen sensor heater monitoring ready	6		HTR_RDY: YES or NO
	EGR system monitoring ready	7		EGR_RDY: YES or NO

Table B.3 — PID \$02 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling	External test equipment SI (Metric) / English display
02	DTC that caused required freeze frame data storage (\$0000 indicates no freeze frame data)	A, B	00 00	FF FF	Hexadecimal e.g. P01AB (DTCs defined in ISO 15031-§6)	DTCFRZF: Pxxxx, Cxxxx, Bxxxx, Uxxxx

Table B.4 — PID \$03 definition

PID (hex)	Description	Data Byte	Scaling/bit	External test equipment SI (Metric)/English display
03	Fuel system 1 status:	A (bit)	byte 1 of 2	FUELSYS1:
	(Unused bits shall be reported as '0'; no more than one bit at a time can be set to a '1' of that bank.)	0	1 = Open loop - has not yet satisfied conditions to go closed loop	OL
		1	1 = Closed loop - using oxygen sensor(s) as feedback for fuel control	CL
		2	1 = Open loop due to driving conditions (e.g. power enrichment, deceleration enleanment)	OL-Drive
		3	1 = Open loop - due to detected system fault	OL-Fault
		4	1 = Closed loop, but fault with at least one oxygen sensor - may be using single oxygen sensor for fuel control	CL-Fault
		5-7	ISO/SAE reserved (bits shall be reported as '0')	—
NOTE Fuel systems do not normally refer to injector banks. Fuel systems are intended to represent completely different fuel systems that can independently enter and exit closed-loop fuel. Banks of injectors on a V-engine are generally not independent and share the same closed-loop enablement criteria. If the engine is off and the ignition is on, all bits in Data Byte A and Data Byte B shall be reported as '0'.				
03	Fuel system 2 status:	B (bit)	byte 2 of 2	FUELSYS2:
	(Unused bits shall be reported as '0'; no more than one bit at a time can be set to a '1' of that bank.)	0	1 = Open loop - has not yet satisfied conditions to go closed loop	OL
		1	1 = Closed loop - using oxygen sensor(s) as feedback for fuel control	CL
		2	1 = Open loop due to driving conditions (e.g. power enrichment, deceleration enleanment)	OL-Drive
		3	1 = Open loop - due to detected system fault	OL-Fault
		4	1 = Closed loop, but fault with at least one oxygen sensor - may be using single oxygen sensor for fuel control	CL-Fault
		5-7	ISO/SAE reserved (bits shall be reported as '0')	—

Table B.5 — PID \$04 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
04	Calculated LOAD Value	A	0 %	100 %	100/255 %	LOAD_PCT: xxx.x %

The OBD regulations previously defined CLV as

(current airflow / peak airflow @ sea level) * (BARO @ sea level / BARO) * 100 %.

Various manufacturers have implemented this calculation in a variety of ways. The following definition, although a little more restrictive, will standardize and improve the accuracy of the calculation.

LOAD_PCT = [current airflow] / [(peak airflow at WOT@STP as a function of rpm) * (BARO/29,92) * SQRT(298/(AAT+273))]

— Where: STP = Standard Temperature and Pressure = 25 °C, 29,92 in Hg BARO, SQRT = square root;

— WOT = wide open throttle, AAT = Ambient Air Temperature and is in °C

NOTE At engine off and ignition on the LOAD_PCT = 0 %.

Characteristics of LOAD_PCT:

- Reaches 100 % at WOT at any altitude, temperature or rpm for both naturally aspirated and boosted engines, if no spark retard due to knock-control (dependant on load, fuel and temperature). Also, for boosted engines the altitude does not affect the load as long as the turbo could deliver the right amount of air.
- Indicates percent of peak available torque during normal, fault-free conditions.
- Linearly correlated with engine vacuum.
- Often used to schedule power enrichment.
- Compression-ignition engines (diesels) shall support this PID using fuel-flow in place of airflow for the above calculations.

Both spark-ignition and compression-ignition engines shall support PID \$04. See PID \$43 for an additional definition of engine LOAD.

Table B.6 — PID \$05 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
05	Engine Coolant Temperature	A	- 40 °C	+215 °C	1 °C with - 40 °C offset	ECT: xxx °C (xxx °F)
ECT shall display engine coolant temperature derived from an engine coolant temperature sensor or a cylinder head temperature sensor. Many diesels do not use either sensor and may substitute Engine Oil Temperature instead.						

Table B.7 — PID \$06 definition

PID (hex)	Description	Data byte	Min. value	Max. Value	Scaling/bit	External test equipment SI (Metric) / English display
06	Short Term Fuel Trim - Bank 1 (use if only 1 fuel trim value)	A	-100 % (lean)	+99,22 % (rich)	100/128 % (0 % at 128)	SHRTFT1: xxx.x %
	Short Term Fuel Trim - Bank 3	B				SHRTFT3: xxx.x %
<p>Short Term Fuel Trim Bank 1/3 shall indicate the correction being utilized by the closed-loop fuel algorithm. If the fuel system is in open loop, SHRTFT1/3 shall report 0 % correction.</p> <p>Data B shall only be included in the response to a PID \$06 request if PID \$1D (Location of Oxygen Sensors) indicates an oxygen sensor is present in Bank 3. The external test equipment can determine length of the response message based on the data content of PID \$13 or \$1D. In no case shall an ECU send an unsupported data byte A if data byte B is supported. See examples in the description of PID \$09.</p>						

Table B.8 — PID \$07 definition

PID (hex)	Description	Data byte	Min. value	Max. Value	Scaling/bit	External test equipment SI (Metric) / English display
07	Long Term Fuel Trim – Bank 1 (use if only 1 fuel trim value)	A	-100 % (lean)	+99,22 % (rich)	100/128 % (0 % at 128)	LONGFT1: xxx.x %
	Long Term Fuel Trim – Bank 3	B				LONGFT3: xxx.x %
<p>Fuel trim correction for Bank 1/3 stored in Non-volatile RAM or Keep-alive RAM. LONGFT shall indicate the correction being utilized by the fuel control algorithm at the time the data is requested, in both open-loop and closed-loop fuel control. If no correction is utilized in open-loop fuel, LONGFT shall report 0 % correction. If long-term fuel trim is not utilized at all by the fuel control algorithm, the PID shall not be supported.</p> <p>Data B shall only be included in the response to a PID \$07 request if PID \$1D (Location of Oxygen Sensors) indicates an oxygen sensor is present in Bank 3. The external test equipment can determine length of the response message based on the data content of PID \$13 or \$1D. In no case shall an ECU send an unsupported data byte A if data byte B is supported. See examples in the description of PID \$09.</p>						

Table B.9 — PID \$08 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
08	Short Term Fuel Trim - Bank 2 (use if only 1 fuel trim value)	A	-100 % (lean)	+99,22 % (rich)	100/128 % (0 % at 128)	SHRTFT2: xxx.x %
	Short Term Fuel Trim - Bank 4	B				SHRTFT4: xxx.x %
<p>Short Term Fuel Trim Bank 2/4 shall indicate the correction being utilized by the closed-loop fuel algorithm. If the fuel system is in open-loop, SHRTFT2/4 shall report 0 % correction.</p> <p>Data B shall only be included in the response to a PID \$08 request if PID \$1D (Location of Oxygen Sensors) indicates an oxygen sensor is present in Bank 4. The external test equipment can determine length of the response message based on the data content of PID \$13 or \$1D. In no case shall an ECU send an unsupported data byte A if data byte B is supported. See examples in the description of PID \$09.</p>						

Table B.10 — PID \$09 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
09	Long Term Fuel Trim – Bank 2 (use if only 1 fuel trim value)	A	–100 % (lean)	+99,22 % (rich)	100/128 % (0 % at 128)	LONGFT2: xxx.x %
	Long Term Fuel Trim - Bank 4	B				LONGFT4: xxx.x %
<p>Fuel trim correction for Bank 2/4 stored in Non-volatile RAM or Keep-alive RAM. LONGFT shall indicate the correction being utilized by the fuel control algorithm at the time the data is requested, in both open-loop and closed-loop fuel control. If no correction is utilized in open-loop fuel, LONGFT shall report 0 % correction. If long-term fuel trim is not utilized at all by the fuel control algorithm, the PID shall not be supported.</p> <p>Data B shall only be included in the response to a PID \$09 request if PID \$1D (Location of Oxygen Sensors) indicates an oxygen sensor is present in Bank 4. The external test equipment can determine length of the response message based on the data content of PID \$13 or \$1D if data byte B is supported.</p>						

For vehicles with one (1) Engine ECU, the ECU indicates the support of PIDs \$06, \$07, \$13, and many more PIDs. The data of PID \$13 is \$03 (0000011b). This indicates support of O2S11 and O2S12. Based on this information, only data A of PID \$06 Short Term Fuel Trim - Bank 1 and PID \$07 Long Term Fuel Trim - Bank 1 shall be reported upon an external test equipment request.

For vehicles with two (2) Engine ECUs, ECU#1 supports O2S11, O2S12, O2S31, and O2S32. The exhaust banks 1 and 3 are located at cylinder bank 1 or 1 and 3. The ECU#1 indicates the support of PIDs \$06, \$07, \$1D, and many more PIDs. The data of PID \$1D is \$33 (00110011b). This indicates support of O2S11, O2S12, O2S31, and O2S32.

Based on above information the following data bytes shall be reported:

- data A of PID \$06 Short Term Fuel Trim - Bank 1;
- data B of PID \$06 Short Term Fuel Trim - Bank 3;
- data A of PID \$07 Long Term Fuel Trim - Bank 1; and
- data B of PID \$07 Long Term Fuel Trim - Bank 3.

ECU#2 supports O2S21, O2S22, O2S41 and O2S42. The exhaust banks 2 and 4 are located at cylinder bank 2 or 2 and 4. The ECU#2 indicates the support of PIDs \$08, \$09, \$1D, and many more PIDs. The data of PID \$1D is \$33 (11001100b). This indicates support of O2S21, O2S22, O2S41, and O2S42.

Based on above information the following data bytes shall be reported:

- data A of PID \$08 Short Term Fuel Trim - Bank 2;
- data B of PID \$08 Short Term Fuel Trim - Bank 4;
- data A of PID \$09 Long Term Fuel Trim - Bank 2; and
- data B of PID \$09 Long Term Fuel Trim - Bank 4.

In no case shall an ECU send an unsupported data byte A if data byte B is supported.

For vehicles with one (1) Engine ECU, the ECU indicates the support of PIDs \$06, \$07, \$08, \$09, \$1D, and many more PIDs. The data of PID \$1D is \$0F (00001111b). This indicates support of O2S11, O2S12, O2S21, and O2S22. Based on this information, only data A of PID \$06 Short Term Fuel Trim - Bank 1 and PID \$07 Long Term Fuel Trim - Bank 1 and data A of PID \$08 of Short Term Fuel Trim - Bank 2 and PID \$09 Long Term Fuel Trim - Bank 2 shall be reported upon an external test equipment request.

For vehicles with two (2) Engine ECUs and exhaust banks 1 + 2 connected to cylinder bank 1 and exhaust banks 3 + 4 connected to cylinder bank 2, which is the opposite side of cylinder bank 1, ECU#1 supports

O2S11, O2S12, O2S21, and O2S22. Also PID \$06, \$07, \$08, \$09, \$1D and many more PIDs are supported. The data of PID \$1D is \$0F (00001111b).

Based on above information the following data bytes shall be reported:

- data A of PID \$06 of Short Term Fuel Trim - Bank 1 and data A of PID \$07 of Long Term Fuel Trim - Bank 1;
- data B of PID \$06 of Short Term Fuel Trim - Bank 3 and data B of PID \$07 of Long Term Fuel Trim - Bank 3 (data B value shall be communicated through network from ECU#2);
- data A of PID \$08 of Short Term Fuel Trim - Bank 2 and data A of PID \$09 of Long Term Fuel Trim - Bank 2; and
- data B of PID \$08 of Short Term Fuel Trim - Bank 4 and data B of PID \$09 of Long Term Fuel Trim - Bank 4. (Data A value shall be communicated through network from ECU#2.)

ECU#2 supports O2S31, O2S32, O2S41 and O2S42. Also PIDs \$06, \$07, \$08, \$09, \$1D and many more PIDs are supported. The data of PID \$1D is \$F0 (11110000b).

Based on above information the following data bytes shall be reported:

- data A of PID \$06 of Short Term Fuel Trim - Bank 1 and data A of PID \$07 of Long Term Fuel Trim - Bank 1 (data A value shall be communicated through network from ECU#1);
- data B of PID \$06 of Short Term Fuel Trim - Bank 3 and data B of PID \$07 of Long Term Fuel Trim - Bank 3;
- data A of PID \$08 of Short Term Fuel Trim - Bank 2 and data A of PID \$09 of Long Term Fuel Trim - Bank 2 (data A value shall be communicated through network from ECU#1);
- data B of PID \$08 of Short Term Fuel Trim - Bank 4 and data B of PID \$09 of Long Term Fuel Trim - Bank 4.

Table B.11 — PID \$0A definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
0A	Fuel Rail Pressure (gauge)	A	0 kPa (gauge)	765 kPa (gauge)	3 kPa per bit (gauge)	FRP: xxx kPa (xx.x psi)
FRP shall display fuel rail pressure at the engine when the reading is referenced to atmosphere (gauge pressure). For systems supporting a fuel pressure sensor, one of the following 3 PIDs is required: \$0A, \$22, or \$23. Support for more than one of these PIDs is not allowed.						

Table B.12 — PID \$0B definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
0B	Intake Manifold Absolute Pressure	A	0 kPa (absolute)	255 kPa (absolute)	1 kPa per bit (absolute)	MAP: xxxx.x kPa (xxx.x inHg)
MAP shall display manifold pressure derived from a Manifold Absolute Pressure sensor, if a sensor is utilized. If a vehicle uses both a MAP and MAF sensor, both the MAP and MAF PIDs shall be supported. If PID \$4F is not supported for this ECU, or if PID \$4F is supported and includes \$00 for Intake Manifold Absolute Pressure, the external test equipment shall use the scaling values included in this table for those values. If PID \$4F is supported for this ECU, the external test equipment shall calculate scaling and range for this PID as explained in the PID \$4F Data D definition.						

Table B.13 — PID \$0C definition

PID (hex)	Description	Data byte	Min. value	Max. Value	Scaling/bit	External test equipment SI (Metric) / English display
0C	Engine RPM	A, B	0 min ⁻¹	16383,75 min ⁻¹	1/4 rpm per bit	RPM: xxxxx min ⁻¹
Engine RPM shall display revolutions per minute of the engine crankshaft.						

Table B.14 — PID \$0D definition

PID (hex)	Description	Data byte	Min. value	Max. Value	Scaling/bit	External test equipment SI (Metric) / English display
0D	Vehicle Speed Sensor	A	0 km/h	255 km/h	1 km/h per bit	VSS: xxx km/h (xxx mph)
VSS shall display vehicle road speed, if utilized by the control module strategy. Vehicle speed may be derived from a vehicle speed sensor, calculated by the PCM using other speed sensors, or obtained from the vehicle serial data communication bus.						

Table B.15 — PID \$0E definition

PID (hex)	Description	Data byte	Min. value	Max. Value	Scaling/bit	External test equipment SI (Metric) / English display
0E	Ignition Timing Advance for #1 Cylinder	A	- 64°	63,5°	1/2° with 0° at 128	SPARKADV: xx.x °
Ignition timing spark advance for #1 cylinder (not including mechanical advance).						

Table B.16 — PID \$0F definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
0F	Intake Air Temperature	A	- 40 °C	+215 °C	1 °C with - 40 °C offset	IAT: xxx °C (xxx °F)
IAT shall display intake manifold air temperature, if utilized by the control module strategy. IAT may be obtained directly from a sensor, or may be inferred by the control strategy using other sensor inputs.						

Table B.17 — PID \$10 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
10	Air Flow Rate from Mass Air Flow Sensor	A, B	0 g/s	655,35 g/s	0,01 g/s (1/100)	MAF: xxxx.xx g/s (xxxx.x lb/min)
MAF shall display the airflow rate as measured by a vehicle that utilizes a MAF sensor or an equivalent source. If the engine is off and the ignition is on, the actual sensor value reading shall be reported. If the actual sensor reading can not be reported, the MAF value shall be reported as 0,00 g/s.						
If PID \$50 is not supported for this ECU, or if PID \$50 is supported and includes \$00 for Air Flow Rate from Mass Air Flow Sensor, the external test equipment shall use the scaling values included in this table for those values. If PID \$50 is supported for this ECU, the external test equipment shall calculate scaling and range for this PID as explained in the PID \$50 Data A definition.						

Table B.18 — PID \$11 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
11	Absolute Throttle Position	A	0 %	100 %	100/255 %	TP: xxx.x %
<p>Absolute throttle position (not “relative” or “learned” throttle position) shall be displayed as a normalized value, scaled from 0 to 100 %. For example, if a 0 to 5,0 volt sensor is used (uses a 5,0 volt reference voltage), and the closed throttle position is at 1,0 volts, TP shall display $(1,0 / 5,0) = 20 \%$ at closed throttle and 50 % at 2,5 volts. Throttle position at idle will usually indicate greater than 0 %, and throttle position at wide open throttle will usually indicate less than 100 %.</p> <p>For systems where the output is proportional to the input voltage, this value is the percent of maximum input reference voltage. For systems where the output is inversely proportional to the input voltage, this value is 100 % minus the percent of maximum input reference voltage.</p> <p>A single throttle plate could have up to three throttle position sensors, A, B and C. There are no provisions for more than one throttle in this part of ISO 15031. This PID shall be used to report the sensors that are on the primary throttle.</p> <p>NOTE See PID \$45 for a definition of Relative Throttle Position.</p>						

Table B.19 — PID \$12 definition

PID (hex)	Description	Data byte	Scaling/bit	External test equipment SI (Metric)/English display
12	Commanded Secondary Air Status	A (bit)	byte 1 of 1	AIR_STAT:
	(If supported, one, and only one bit at a time can be set to a 1.)	0	1 = upstream of first catalytic converter	AIR_STAT: UPS
		1	1 = downstream of first catalytic converter inlet	AIR_STAT: DNS
		2	1 = atmosphere / off	AIR_STAT: OFF
		3-7	ISO/SAE reserved (Bits shall be reported as '0'.)	—

Table B.20 — PID \$13 definition

PID (hex)	Description	Data byte	Scaling/bit	External test equipment SI (Metric) / English display
13	Location of Oxygen Sensors	A (bit)	byte 1 of 1	O2SLOC:
	(Where sensor 1 is closest to the engine. Each bit indicates the presence or absence of an oxygen sensor at the following location.)	0	1 = Bank 1 - Sensor 1 present at that location	O2S11
		1	1 = Bank 1 - Sensor 2 present at that location	O2S12
		2	1 = Bank 1 - Sensor 3 present at that location	O2S13
		3	1 = Bank 1 - Sensor 4 present at that location	O2S14
		4	1 = Bank 2 - Sensor 1 present at that location	O2S21
		5	1 = Bank 2 - Sensor 2 present at that location	O2S22
		6	1 = Bank 2 - Sensor 3 present at that location	O2S23
		7	1 = Bank 2 - Sensor 4 present at that location	O2S24

PID \$13 shall only be supported by a given vehicle if PID \$1D is not supported. In no case shall a vehicle support both PIDs.

Table B.21 — PID \$14 - \$1B definition

PID (hex)	Description Use if PID \$13 is supported!	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display	
14	Bank 1 – Sensor 1		These PIDs shall be used for a conventional, 0 to 1 volt oxygen sensor. Any sensor with a different full scale value shall be normalized to provide nominal full scale at \$C8 (200 decimal). Wide-range/linear oxygen sensors shall use PIDs \$24 to \$2B or PIDs \$34 to \$3B.				
15	Bank 1 – Sensor 2						
16	Bank 1 – Sensor 3						
17	Bank 1 – Sensor 4						
18	Bank 2 – Sensor 1						
19	Bank 2 – Sensor 2						
1A	Bank 2 – Sensor 3						
1B	Bank 2 – Sensor 4						
	Oxygen Sensor Output Voltage (Bx-Sy)	A	0 V	1,275 V	0,005 V	O2Sxy: x.xxx V	
	Short Term Fuel Trim (Bx-Sy) (associated with this sensor \$FF if this sensor is not used in the calculation)	B	- 100,00 % (lean)	99,22 % (rich)	100/128 % (0 % at 128)	SHRTFTxy: xxx.x %	

The PIDs listed in the table above only apply if PID \$13 is used to define the oxygen sensor location.

Table B.22 — PID \$14 - \$1B definition

PID (hex)	Description Use if PID \$1D is supported!	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display	
14	Bank 1 – Sensor 1		These PIDs shall be used for a conventional, 0 to 1 volt oxygen sensor. Any sensor with a different full scale value shall be normalized to provide nominal full scale at \$C8 (200 decimal). Wide-range/linear oxygen sensors shall use PIDs \$24 to \$2B or PIDs \$34 to \$3B.				
15	Bank 1 – Sensor 2						
16	Bank 2 – Sensor 1						
17	Bank 2 – Sensor 2						
18	Bank 3 – Sensor 1						
19	Bank 3 – Sensor 2						
1A	Bank 4 – Sensor 1						
1B	Bank 4 – Sensor 2						
	Oxygen Sensor Output Voltage (Bx-Sy)	A	0 V	1,275 V	0,005 V	O2Sxy: x.xxx V	
	Short Term Fuel Trim (Bx-Sy) (associated with this sensor \$FF if this sensor is not used in the calculation)	B	- 100,00 % (lean)	99,22 % (rich)	100/128 % (0 % at 128)	SHRTFTxy: xxx.x %	

The PIDs listed in the table above only apply if PID \$1D is used to define the oxygen sensor location.

Table B.23 — PID \$1C definition

PID (hex)	Description	Data byte	Scaling	External test equipment SI (Metric) / English display
1C	OBD requirements to which vehicle is designed	A (hex)	byte 1 of 1 (State Encoded Variable)	OBDSUP:
	OBD II (California ARB)	01		OBD II
	OBD (Federal EPA)	02		OBD
	OBD and OBD II	03		OBD and OBD II
	OBD I	04		OBD I
	Not OBD compliant	05		NO OBD
	EOBD	06		EOBD
	EOBD and OBD II	07		EOBD and OBD II
	EOBD and OBD	08		EOBD and OBD
	EOBD, OBD and OBD II	09		EOBD, OBD and OBD II
	JOB D	0A		JOB D
	JOB D and OBD II	0B		JOB D and OBD II
	JOB D and EOBD	0C		JOB D and EOBD
	JOB D, EOBD, and OBD II	0D		JOB D, EOBD, and OBD II
	Heavy Duty Vehicles (EURO IV) B1	0E		EURO IV B1
	Heavy Duty Vehicles (EURO V) B2	0F		EURO V B2
	Heavy Duty Vehicles (EURO EEC) C (gas engines)	10		EURO C
	Engine Manufacturer Diagnostics (EMD)	11		EMD
	ISO/SAE reserved	12 - FA		—
	ISO/SAE - Not available for assignment	FB - FF		SAE J1939 special meaning

Table B.24 — PID \$1D definition

PID (hex)	Description	Data byte	Scaling/bit	External test equipment SI (Metric) / English display
1D	Location of oxygen sensors	A (bit)	byte 1 of 1	O2SLOC:
	(Where sensor 1 is closest to the engine. Each bit indicates the presence or absence of an oxygen sensor at the following location.)	0	1 = Bank 1 - Sensor 1 present at that location	O2S11
		1	1 = Bank 1 - Sensor 2 present at that location	O2S12
		2	1 = Bank 2 - Sensor 1 present at that location	O2S21
		3	1 = Bank 2 - Sensor 2 present at that location	O2S22
		4	1 = Bank 3 - Sensor 1 present at that location	O2S31
		5	1 = Bank 3 - Sensor 2 present at that location	O2S32
		6	1 = Bank 4 - Sensor 1 present at that location	O2S41
		7	1 = Bank 4 - Sensor 2 present at that location	O2S42

PID \$1D shall only be supported by a given vehicle if PID \$13 is not supported. In no case shall a vehicle support both PIDs.

Table B.25 — PID \$1E definition

PID (hex)	Description	Data byte	Scaling/bit	External test equipment SI (Metric) / English display
1E	Auxiliary Input Status	A (bit)	byte 1 of 1	Auxiliary Input Status
	Power Take Off (PTO) Status	0 1-7	0 = PTO not active (OFF); 1 = PTO active (ON). ISO/SAE reserved (Bits shall be reported as '0'.)	PTO_STAT: OFF or ON —

Table B.26 — PID \$1F definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
1F	Time Since Engine Start	A, B	0 sec.	65,535 sec.	1 second per count	RUNTM: xxxxx sec.
RUNTM shall increment while the engine is running. It shall freeze if the engine stalls. RUNTM shall be reset to zero during every control module power-up and when entering the key-on, engine off position. RUNTM is limited to 65,535 seconds and shall not wrap around to zero.						

Table B.27 — PID \$21 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
21	Distance Travelled While MIL is Activated	A, B	0 km	65535 km	1 km per count	MIL_DIST: xxxxx km (xxxxx miles)
Conditions for "Distance travelled" counter: <ul style="list-style-type: none"> — reset to \$0000 when MIL state changes from deactivated to activated by this ECU; — accumulate counts in km if MIL is activated (ON); — do not change value while MIL is not activated (OFF); — reset to \$0000 if diagnostic information is cleared either by service \$04 or at least 40 warm-up cycles without MIL activated; — do not wrap to \$0000 if value is \$FFFF. 						

Table B.28 — PID \$22 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
22	Fuel Rail Pressure relative to manifold vacuum	A, B	0 kPa	5177,27 kPa	0,079 kPa (5178/65535) per bit unsigned, 1 kPa = 0,1450377 PSI	FRP: xxxx.x kPa (xxx.x PSI)
<p>FRP shall display fuel rail pressure at the engine when the reading is referenced to manifold vacuum (relative pressure).</p> <p>For systems supporting a fuel pressure sensor, one of the following three PIDs shall be used: \$0A, \$22, or \$23. There shall be no support for more than one of these PIDs.</p>						

Table B.29 — PID \$23 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
23	Fuel Rail Pressure	A, B	0 kPa	655350 kPa	10 kPa per bit unsigned, 1 kPa = 0,1450377 PSI	FRP: xxxxxx kPa (xxxxx.x PSI)
<p>FRP shall display fuel rail pressure at the engine when the reading is referenced to atmosphere (gage pressure). Diesel fuel pressure and gasoline direct injection systems have a higher pressure range than FRP PID \$0A.</p> <p>For systems supporting a fuel pressure sensor, one of the following three PIDs shall be used: \$0A, \$22, or \$23. There shall be no support for more than one of these PIDs.</p>						

Table B.30 — PID \$24 - \$2B definition

PID (hex)	Description Use if PID \$13 is supported!	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display	
24	Bank 1 – Sensor 1 (wide range O2S)		<p>PIDs \$24 to \$2B shall be used for linear or wide-ratio Oxygen Sensors when equivalence ratio and voltage are displayed.</p> <p>If PID \$4F is not supported for this ECU, or if PID \$4F is supported and includes \$00 for either Equivalence Ratio or Maximum Oxygen Sensor Voltage, the external test equipment shall use the scaling values included in this table for those values. If PID \$4F is supported for this ECU, the external test equipment shall calculate scaling and range for these PIDs as explained in the PID \$4F definition.</p>				
25	Bank 1 – Sensor 2 (wide range O2S)						
26	Bank 1 – Sensor 3 (wide range O2S)						
27	Bank 1 – Sensor 4 (wide range O2S)						
28	Bank 2 – Sensor 1 (wide range O2S)						
29	Bank 2 – Sensor 2 (wide range O2S)						
2A	Bank 2 – Sensor 3 (wide range O2S)						
2B	Bank 2 – Sensor 4 (wide range O2S)						
	Equivalence Ratio (lambda) (Bx-Sy)	A, B	0	1,999	0,0000305 (2/65535)	EQ_RATxy: xxx.xxx	
	Oxygen Sensor Voltage (Bx-Sy)	C, D	0 V	7,999 V	0,000122 V (8/65535)	O2Sxy: xxx.xxx V	

The PIDs listed in the table above only apply if PID \$13 is used to define the oxygen sensor location.

Table B.31 — PID \$24 - \$2B definition

PID (hex)	Description Use if PID \$1D is supported!	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
24	Bank 1 - Sensor 1 (wide range O2S)		PIDs \$24 to \$2B shall be used for linear or wide-ratio Oxygen Sensors when equivalence ratio and voltage are displayed. If PID \$4F is not supported for this ECU, or if PID \$4F is supported and includes \$00 for either Equivalence Ratio or Maximum Oxygen Sensor Voltage, the external test equipment shall use the scaling values included in this table for those values. If PID \$4F is supported for this ECU, the external test equipment shall calculate scaling and range for these PIDs as explained in the PID \$4F definition.			
25	Bank 1 - Sensor 2 (wide range O2S)					
26	Bank 2 - Sensor 1 (wide range O2S)					
27	Bank 2 - Sensor 2 (wide range O2S)					
28	Bank 3 - Sensor 1 (wide range O2S)					
29	Bank 3 - Sensor 2 (wide range O2S)					
2A	Bank 4 - Sensor 1 (wide range O2S)					
2B	Bank 4 - Sensor 2 (wide range O2S)					
	Equivalence Ratio (lambda) (Bx-Sy)	A, B	0	1,999	0,0000305 (2/65535)	EQ_RATIO: xxx.xxx
	Oxygen Sensor Voltage (Bx-Sy)	C, D	0 V	7,999 V	0,000122 V (8/65535)	O2Sxy: xxx.xxx V

The PIDs listed in the table above only apply if PID \$1D is used to define the oxygen sensor location.

Table B.32 — PID \$2C definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
2C	Commanded EGR	A	0 % (no flow)	100 % (max. flow)	100/255 %	EGR_PCT: xxx.x %
	<p>Commanded EGR displayed as a percent. EGR_PCT shall be normalized to the maximum EGR commanded output control parameter. EGR systems use a variety of methods to control the amount of EGR delivered to the engine.</p> <p>If an on/off solenoid is used – EGR_PCT shall display 0 % when the EGR is commanded off, 100 % when the EGR system is commanded on.</p> <p>If a vacuum solenoid is duty cycled, the EGR duty cycle from 0 to 100 % shall be displayed.</p> <p>If a linear or stepper motor valve is used, the fully closed position shall be displayed as 0 %, the fully open position shall be displayed as 100 %. Intermediate positions shall be displayed as a percent of the full-open position. For example, a stepper-motor EGR valve that moves from 0 to 128 counts shall display 0 % at zero counts, 100 % at 128 counts and 50 % at 64 counts.</p> <p>Any other actuation method shall be normalized to display 0 % when no EGR is commanded and 100 % at the maximum commanded EGR position.</p>					

Table B.33 — PID \$2D definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
2D	EGR Error = ((EGR actual – EGR commanded) / EGR commanded) * 100 %	A	– 100 % (less than commanded)	+99,22 % (more than commanded)	100/128 % (0 % at 128)	EGR_ERR: xxx.x %
	<p>EGR error is a percent of commanded EGR. Often, EGR valve control outputs are not in the same engineering units as the EGR feedback input sensors. For example, an EGR valve can be controlled using a duty-cycled vacuum solenoid; however, the feedback input sensor is a position sensor. This makes it impossible to display “actual” versus “commanded” in the same engineering units. EGR error solved this problem by displaying a normalized (non-dimensional) EGR system feedback parameter. EGR error is defined to be</p> $((\text{EGR actual} - \text{EGR commanded}) / \text{EGR commanded}) * 100 \%$ <p>For example, if 10 % EGR is commanded and 5 % is delivered to the engine, the EGR_ERR is $((5 \% - 10 \%) / 10 \%) * 100 \% = -50 \%$ error.</p> <p>EGR_ERR may be computed using various control parameters such as position, steps, counts, etc. All EGR systems must react to quickly changing conditions in the engine; therefore, EGR_ERR will generally show errors during transient conditions. Under steady condition, the error will be minimized (not necessarily zero, however) if the EGR system is under control.</p> <p>If the control system does not use closed loop control, EGR_ERR shall not be supported.</p> <p>When commanded EGR is 0 %, EGR error is technically undefined. In this case EGR error should be set to 0 % when actual EGR = 0 % or EGR error should be set to 99,2 % when actual EGR > 0 %.</p>					

Table B.34 — PID \$2E definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
2E	Commanded Evaporative Purge	A	0 % no flow	100 % max. flow	100/255 %	EVAP_PCT: xxx.x %
	<p>Commanded evaporative purge control valve displayed as a percent. EVAP_PCT shall be normalized to the maximum EVAP purge commanded output control parameter.</p> <p>If an on/off solenoid is used, EVAP_PCT shall display 0 % when purge is commanded off, 100 % when purge is commanded on.</p> <p>If a vacuum solenoid is duty-cycled, the EVAP purge valve duty cycle from 0 to 100 % shall be displayed.</p> <p>If a linear or stepper motor valve is used, the fully closed position shall be displayed as 0 %, and the fully open position shall be displayed as 100 %. Intermediate positions shall be displayed as a percent of the full-open position. For example, a stepper-motor EVAP purge valve that moves from 0 to 128 counts shall display 0 % at 0 counts, 100 % at 128 counts and 50 % at 64 counts.</p> <p>Any other actuation method shall be normalized to display 0 % when no purge is commanded and 100 % at the maximum commanded purge position/flow.</p>					

Table B.35 — PID \$2F definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
2F	Fuel Level Input	A	0 % no fuel	100 % max. fuel capacity	100/255 %	FLI: xxx.x %
<p>FLI shall indicate nominal fuel tank liquid fill capacity as a percent of maximum, if utilized by the control module for OBD monitoring. FLI may be obtained directly from a sensor, may be obtained indirectly via the vehicle serial data communication bus, or may be inferred by the control strategy using other sensor inputs. Vehicles that use gaseous fuels shall display the percent of useable fuel capacity. If there are two tanks in a bi-fuel car, one for each fuel type, the Fuel Level Input reported shall be from the tank, which contains the fuel type the engine is running on.</p>						

Table B.36 — PID \$30 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
30	Number of warm-ups since diagnostic trouble codes cleared	A	0	255	1 warm-up per count	WARM_UPS: xxx
<p>Number of OBD warm-up cycles since all DTCs were cleared (via an external test equipment or possibly, a battery disconnect). A warm-up is defined in the OBD regulations to be sufficient vehicle operation such that coolant temperature rises by at least 22 °C (40 °F) from engine starting and reaches a minimum temperature of 70 °C (160 °F) (60 °C (140 °F) for diesels). This PID is not associated with any particular DTC. It is simply an indication for I/M, of the last time an external test equipment was used to clear DTCs. If greater than 255 warm-ups have occurred, WARM_UPS shall remain at 255 and not wrap to zero.</p>						

Table B.37 — PID \$31 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
31	Distance since diagnostic trouble codes cleared	A, B	0 km	65,535 km	1 km per count	CLR_DIST: xxxxx km (xxxxx miles)
<p>This is distance accumulated since DTCs were cleared (via an external test equipment or possibly, a battery disconnect). This PID is not associated with any particular DTC. It is simply an indication for I/M (Inspection/Maintenance), of the last time an external test equipment was used to clear DTCs. If greater than 65,535 km have occurred, CLR_DIST shall remain at 65,535 km and not wrap to zero.</p>						

Table B.38 — PID \$32 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
32	Evap System Vapour Pressure	A, B	(\$8000) -8192 Pa (-32,8878 inH ₂ O)	(\$7FFF) 8191.75 Pa, (32,8868 in H ₂ O)	0,25 Pa (1/4) per bit signed	EVAP_VP: xxx.x Pa (xx.xxx in H ₂ O)
<p>This is evaporative system vapour pressure, if utilized by the control module. The pressure signal is normally obtained from a sensor located in the fuel tank (FTP – Fuel Tank Pressure) or a sensor in an evaporative system vapour line. If a wider pressure range is required, PID \$54 scaling allows for a wider pressure range than PID \$32.</p> <p>For systems supporting Evap System Vapour Pressure, one of the following two PIDs shall be used: \$32 or \$54. There shall be support for no more than one of these PIDs.</p>						

Table B.39 — PID \$33 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
33	Barometric Pressure	A	0 kPa (absolute)	255 kPa (absolute)	1 kPa per bit (absolute)	BARO: xxx kPa (xx.x inHg)
<p>Barometric pressure utilized by the control module. BARO is normally obtained from a dedicated BARO sensor, from a MAP sensor at key-on and during certain modes of driving, or inferred from a MAF sensor and other inputs during certain modes of driving. The control module shall report BARO from whatever source it is derived from.</p> <p>NOTE 1 Some weather services report local BARO values adjusted to sea level. In these cases, the reported value may not match the displayed value on the external test equipment.</p> <p>NOTE 2 If BARO is inferred while driving and stored in non-volatile RAM or Keep-alive RAM, BARO may not be accurate after a battery disconnect or total memory clear.</p>						

Table B.40 — PID \$34 - \$3B definition

PID (hex)	Description Use if PID \$13 is supported!	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display	
34	Bank 1 – Sensor 1 (wide range O2S)		<p>PIDs \$34 to \$3B shall be used for linear or wide-ratio Oxygen Sensors when equivalence ratio and current are displayed.</p> <p>If PID \$4F is not supported for this ECU, or if PID \$4F is supported and includes \$00 for either Equivalence Ratio or Maximum Oxygen Sensor Current, the external test equipment shall use the scaling values included in this table for those values. If PID \$4F is supported for this ECU, the external test equipment shall calculate scaling and range for these PIDs as explained in the PID \$4F definition.</p>				
35	Bank 1 – Sensor 2 (wide range O2S)						
36	Bank 1 – Sensor 3 (wide range O2S)						
37	Bank 1 – Sensor 4 (wide range O2S)						
38	Bank 2 – Sensor 1 (wide range O2S)						
39	Bank 2 – Sensor 2 (wide range O2S)						
3A	Bank 2 – Sensor 3 (wide range O2S)						
3B	Bank 2 – Sensor 4 (wide range O2S)						
	Equivalence Ratio (lambda) (Bx-Sy)	A, B	0	1,999	0,0000305 (2/65535)	EQ_RATxy: xxx.xxx	
	Oxygen Sensor Current (Bx-Sy)	C, D	- 128 mA	127,99 6 mA	0,00390625 mA (128/32768) (\$8000 = 0 mA)	O2Sxy: xxx.xx mA	

The PIDs listed in the table above only apply if PID \$13 is used to define the oxygen sensor location.

Table B.41 — PID \$34 - \$3B definition

PID (hex)	Description Use if PID \$1D is supported!	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display	
34	Bank 1 – Sensor 1 (wide range O2S)		PIDs \$34 to \$3B shall be used for linear or wide-ratio Oxygen Sensors when equivalence ratio and current are displayed. If PID \$4F is not supported for this ECU, or if PID \$4F is supported and includes \$00 for either Equivalence Ratio or Maximum Oxygen Sensor Current, the external test equipment shall use the scaling values included in this table for those values. If PID \$4F is supported for this ECU, the external test equipment shall calculate scaling and range for these PIDs as explained in the PID \$4F definition.				
35	Bank 1 – Sensor 2 (wide range O2S)						
36	Bank 2 – Sensor 1 (wide range O2S)						
37	Bank 2 – Sensor 2 (wide range O2S)						
38	Bank 3 – Sensor 1 (wide range O2S)						
39	Bank 3 – Sensor 2 (wide range O2S)						
3A	Bank 4 – Sensor 1 (wide range O2S)						
3B	Bank 4 – Sensor 2 (wide range O2S)						
	Equivalence Ratio (lambda) (Bx-Sy)	A, B	0	1,999	0,0000305 (2/65535)	EQ_RATxy: xxx.xxx	
	Oxygen Sensor Current (Bx-Sy)	C, D	- 128 mA	127,996 mA	0,00390625 mA (128/32768) (\$8000 = 0 mA)	O2Sxy: xxx.xx mA	

The PIDs listed in the table above only apply if PID \$1D is used to define the oxygen sensor location.

Table B.42 — PID \$3C definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
3C	Catalyst Temperature Bank 1, Sensor 1	A, B	- 40 °C	+ 6513,5 °C	0,1 °C / bit with - 40 °C offset	CATEMP11: xxxx °C (xxxx °F)
CATEMP11 shall display catalyst substrate temperature for a bank 1 catalyst, if utilized by the control module strategy for OBD monitoring, or the Bank 1, Sensor 1 catalyst temperature sensor. CATEMP11 may be obtained directly from a sensor, or may be inferred by the control strategy using other sensor inputs.						

Table B.43 — PID \$3D definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
3D	Catalyst Temperature Bank 2, Sensor 1	A, B	- 40 °C	+ 6513,5 °C	0,1 °C / bit with - 40 °C offset	CATEMP21: xxxx °C (xxxx °F)
CATEMP21 shall display catalyst substrate temperature for a bank 2 catalyst, if utilized by the control module strategy for OBD monitoring, or the Bank 2, Sensor 1 catalyst temperature sensor. CATEMP21 may be obtained directly from a sensor, or may be inferred by the control strategy using other sensor inputs.						

Table B.44 — PID \$3E definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
3E	Catalyst Temperature Bank 1, Sensor 2	A, B	- 40 °C	+ 6513,5 °C	0,1 °C / bit with - 40 °C offset	CATEMP12: xxxx °C (xxxx °F)
<p>CATEMP12 shall display catalyst substrate temperature for an additional bank 1 catalyst, if utilized by the control module strategy for OBD monitoring, or the Bank 1, Sensor 2 catalyst temperature sensor. CATEMP12 may be obtained directly from a sensor, or may be inferred by the control strategy using other sensor inputs.</p>						

Table B.45 — PID \$3F definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
3F	Catalyst Temperature Bank 2, Sensor 2	A, B	- 40 °C	+ 6513,5 °C	0,1 °C / bit with - 40 °C offset	CATEMP22: xxxx °C (xxxx °F)
<p>CATEMP22 shall display catalyst substrate temperature for an additional bank 2 catalyst, if utilized by the control module strategy for OBD monitoring, or the Bank 2, Sensor 2 catalyst temperature sensor. CATEMP22 may be obtained directly from a sensor, or may be inferred by the control strategy using other sensor inputs.</p>						

STANDARDSISO.COM : Click to view the full PDF of ISO 15031-5:2006

Table B.46 — PID \$41 definition

PID (hex)	Description	Data byte	Scaling/bit	External test equipment SI (Metric) / English display
41	Monitor status this driving cycle			
	<p>The bit in this PID shall report two pieces of information for each monitor:</p> <p>1) Monitor enable status for the current driving cycle. This bit shall indicate when a monitor is disabled in a manner such that there is no easy way for the driver to operate the vehicle to allow the monitor to run. Typical examples are</p> <ul style="list-style-type: none"> — engine-off soak not long enough (e.g., cold start temperature conditions not satisfied); — monitor maximum time limit or number of attempts/aborts exceeded; — ambient air temperature too low or too high; — BARO too low (high altitude). <p>The monitor shall not indicate “disabled” for operator-controlled conditions such as rpm, load, throttle position. The monitor shall not indicate “disabled” from key-on because minimum time limit has not been exceeded or engine warm-up conditions have not been met, since these conditions will eventually be met as the vehicle continues to be driven.</p> <p>If the operator drives the vehicle to a different altitude or ambient air temperature conditions, monitor status may change from enabled to disabled. The monitor shall not change from disable to enable if the conditions change back. This could result in a monitor showing “disabled” but eventually showing “complete”.</p> <p>2) Monitor completion status for the current driving/monitoring cycle. Status shall be reset to “not complete” upon starting a new monitoring cycle. Note that some monitoring cycles can include various engine-operating conditions; other monitoring cycles begin after the ignition key is turned off. Some status bits on a given vehicle can utilize engine-running monitoring cycles while others can utilize engine-off monitoring cycles. Resetting the bits to “not complete” upon starting the engine will accommodate most engine-running and engine-off monitoring cycles; however, manufacturers are free to define their own monitoring cycles.</p> <p>PID \$41 bits shall be utilized for all non-continuous monitors which are supported, and change completion status in PID \$01. If a non-continuous monitor is not supported or always shows “complete”, the corresponding PID \$41 bits shall indicate disabled and complete. PID \$41 bits may be utilized at the vehicle manufacturer’s discretion for all continuous monitors which are supported, with the exception of data byte B bit 2 which shall always show CCM (Comprehensive Component Monitoring) as enabled for spark-ignition and compression-ignition engines.</p>			
		A (bit)	byte 1 of 4	
	Reserved – shall be reported as \$00	0-7		—
	Enable status of continuous monitors this monitoring cycle:	B (bit)	byte 2 of 4 (Low Nibble)	Enable status of continuous monitors this monitoring cycle: NO means disabled for rest of this monitoring cycle or not supported in PID \$01; YES means enabled for this monitoring cycle.
	Misfire monitoring enabled	0	0 = monitor disabled for rest of this monitoring cycle or not supported (NO) 1 = monitor enabled for this monitoring cycle (YES)	MIS_ENA: NO or YES
	Fuel system monitoring enabled	1		FUEL_ENA: NO or YES
	Comprehensive component monitoring enabled	2		CCM_ENA: NO or YES
	ISO/SAE reserved (Bit shall be reported as ‘0’.)	3		
	Completion status of continuous monitors this monitoring cycle:	B (bit)	byte 2 of 4 (High Nibble)	Completion status of continuous monitors this monitoring cycle:

Table B.46 (continued)

PID (hex)	Description	Data byte	Scaling/bit	External test equipment SI (Metric) / English display
	Misfire monitoring completed Fuel system monitoring completed Comprehensive component monitoring completed ISO/SAE reserved (Bit shall be reported as '0'.)	4 5 6 7	See PID \$01 to determine which monitors are supported. 0 = monitor complete this monitoring cycle, or not supported (YES) 1 = monitor not complete this monitoring cycle (NO)	MIS_CMPL: YES or NO FUELCMPL: YES or NO CCM_CMPL: YES or NO
	Enable status of non-continuous monitors this monitoring cycle:	C (bit)	byte 3 of 4	Enable status of non-continuous monitors this monitoring cycle:
	Catalyst monitoring Heated catalyst monitoring Evaporative system monitoring Secondary air system monitoring A/C system refrigerant monitoring Oxygen sensor monitoring Oxygen sensor heater monitoring EGR system monitoring	0 1 2 3 4 5 6 7	0 = monitor disabled for rest of this monitoring cycle (NO) 1 = monitor enabled for this monitoring cycle (YES)	CAT_ENA: NO or YES HCAT_ENA: NO or YES EVAP_ENA: NO or YES AIR_ENA: NO or YES ACRF_ENA: NO or YES O2S_ENA: NO or YES HTR_ENA: NO or YES EGR_ENA: NO or YES
	Completion status of non-continuous monitors this monitoring cycle:	D (bit)	byte 4 of 4	Completion status of non-continuous monitors this monitoring cycle:
	Catalyst monitoring completed Heated catalyst monitoring completed Evaporative system monitoring completed Secondary air system monitoring completed A/C system refrigerant monitoring completed Oxygen sensor monitoring completed Oxygen sensor heater monitoring completed EGR system monitoring completed	0 1 2 3 4 5 6 7	See PID \$01 to determine which monitors are supported. 0 = monitor complete this monitoring cycle, or not supported (YES) 1 = monitor not complete this monitoring cycle (NO)	CAT_CMPL: YES or NO HCATCMPL: YES or NO EVAPCMPL: YES or NO AIR_CMPL: YES or NO ACRFCMPL: YES or NO O2S_CMPL: YES or NO HTR_CMPL: YES or NO EGR_CMPL: YES or NO

Table B.47 — PID \$42 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
42	Control module voltage	A, B	0 V	65,535 V	0,001 V (1/1000) per bit	VPWR: xx.xx V
<p>VPWR – power input to the control module. VPWR is normally battery voltage, less any voltage drop in the circuit between the battery and the control module.</p> <p>NOTE 42-volts vehicles may utilize multiple voltages for different systems on the vehicle. VPWR represents the voltage at the control module; it may be significantly different than battery voltage.</p>						

Table B.48 — PID \$43 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
43	Absolute Load Value	A, B	0 %	25700 %	100/255 %	LOAD_ABS: xxxxx.x %
<p>The absolute load value has some different characteristics than the LOAD_PCT defined in PID 04. This definition, although restrictive, will standardize the calculation. LOAD_ABS is the normalized value of air mass per intake stroke displayed as a percent:</p> $\text{LOAD_ABS} = [\text{air mass (g / intake stroke)}] / [1,184 \text{ (g / litre)} * \text{cylinder displacement (litres / intake stroke)}]$ <p>NOTE At engine off and ignition on the LOAD_ABS = 0 %.</p> <p>Derivation:</p> <ul style="list-style-type: none"> — air mass (g / intake stroke) = [total engine air mass (g/sec)] / [rpm (revs/min)* (1 min / 60 sec) * (1/2 # of cylinders (intake strokes / rev))]; — LOAD_ABS = [air mass (g)/intake stroke] / [maximum air mass (g)/intake stroke at WOT@STP at 100 % volumetric efficiency] * 100 %. <p>Where:</p> <ul style="list-style-type: none"> — STP = Standard Temperature and Pressure = 25 °C, 29,92 in Hg (101,3 kPa) BARO, WOT = wide open throttle. — The quantity (maximum air mass (g)/intake stroke at WOT@STP at 100 % volumetric efficiency) is a constant for a given cylinder swept volume. The constant is 1,184 (g/litre) * cylinder displacement (litres/intake stroke) based on air density at STP. <p>Characteristics of LOAD_ABS:</p> <ul style="list-style-type: none"> — ranges from 0 % to approximately 95 % for naturally aspirated engines, 0 % to 400 % for boosted engines; — linearly correlated with engine indicated and brake torque; — often used to schedule spark and EGR rates; — peak value of LOAD_ABS correlates with volumetric efficiency at WOT; — indicates the pumping efficiency of the engine for diagnostic purposes. <p>Spark-ignition engine are required to support PID \$43. Compression-ignition (diesel) engines are not required to support this PID.</p> <p>See PID \$04 for an additional definition of engine LOAD.</p>						

Table B.49 — PID \$44 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
44	Commanded Equivalence Ratio	A, B	0	1,999	0,0000305 (2/65535)	EQ_RAT: xxx.xxx
	<p>Fuel systems that utilize conventional oxygen sensor shall display the inverse of the commanded open loop equivalence ratio (also known as lambda) while the fuel control system is in open loop. EQ_RAT shall indicate 1,000 while in closed-loop fuel.</p> <p>NOTE Lambda is the inverse of F/A equivalence ratio.</p> <p>Fuel systems that utilize wide-range/linear oxygen sensors shall display the inverse of the commanded equivalence ratio (lambda) in both open-loop and closed-loop operation.</p> <p>To obtain the actual A/F ratio being commanded, multiply the stoichiometric A/F ratio by the inverse of the equivalence ratio (lambda). For example, for gasoline, stoichiometric is a ratio of 14,64:1. If the fuel control system was commanding an 0,95 EQ_RAT, the commanded A/F ratio to the engine would be $14,64 * 0,95 = 13,9$ A/F.</p> <p>If PID \$4F is not supported for this ECU, or if PID \$4F is supported and includes \$00 for Equivalence Ratio, the external test equipment shall use the scaling value included in this table. If PID \$4F is supported for this ECU, the external test equipment shall calculate scaling for this PID as explained in the PID \$4F definition.</p>					

Table B.50 — PID \$45 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
45	Relative Throttle Position	A	0 %	100 %	100/255 %	TP_R: xxx.x %
	<p>Relative or "learned" throttle position shall be displayed as a normalized value, scaled from 0 to 100 %. TP_R should display a value of 0 % at the "learned" closed-throttle position. For example, if a 0 to 5,0 volt sensor is used (uses a 5,0 volt reference voltage), and the closed-throttle position is at 1,0 volts, TP shall display $(1,0 - 1,0 / 5,0) = 0$ % at closed throttle and 30 % at 2,5 volts. Because of the closed-throttle offset, wide-open throttle will usually indicate substantially less than 100 %.</p> <p>For systems where the output is proportional to the input voltage, this value is the percent of maximum input reference voltage. For systems where the output is inversely proportional to the input voltage, this value is 100 % minus the percent of maximum input reference voltage. See PID \$11 for a definition of Absolute Throttle Position.</p>					

Table B.51 — PID \$46 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
46	Ambient air temperature (same scaling as IAT - \$0F)	A	- 40 °C	+ 215 °C	1 °C with - 40 °C offset	AAT: xxx °C / xxx °F
	<p>AAT shall display ambient air temperature, if utilized by the control module strategy for OBD monitoring. AAT may be obtained directly from a sensor, may be obtained indirectly via the vehicle serial data communication bus, or may be inferred by the control strategy using other sensor inputs.</p>					

Table B.52 — PID \$47 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
47	Absolute Throttle Position B	A	0 %	100 %	100/255 %	TP_B: xxx.x %
	<p>Absolute throttle position B, if utilized by the control module, (not “relative” or “learned” throttle position) shall be displayed as a normalized value, scaled from 0 to 100 %. For example, if a 0 to 5,0 volt sensor is used (uses a 5,0 volt reference voltage), and the closed-throttle position is at 1,0 volts, TP_B shall display $(1,0 / 5,0) = 20 \%$ at closed throttle and 50 % at 2,5 volts. Throttle position at idle will usually indicate greater than 0 %, and throttle position at wide-open throttle will usually indicate less than 100 %.</p> <p>For systems where the output is proportional to the input voltage, this value is the percent of maximum input reference voltage. For systems where the output is inversely proportional to the input voltage, this value is 100 % minus the percent of maximum input reference voltage.</p> <p>A single throttle plate could have up to three throttle position sensors, A, B and C. There are no provisions for more than one throttle in this part of ISO 15031. This PID shall be used to report the sensors that are on the primary throttle.</p>					

Table B.53 — PID \$48 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
48	Absolute Throttle Position C	A	0 %	100 %	100/255 %	TP_C: xxx.x %
	<p>Absolute throttle position C, if utilized by the control module, (not “relative” or “learned” throttle position) shall be displayed as a normalized value, scaled from 0 to 100 %. For example, if a 0 to 5,0 volt sensor is used (uses a 5,0 volt reference voltage), and the closed-throttle position is at 1,0 volts, TP_C shall display $(1,0 / 5,0) = 20 \%$ at closed throttle and 50 % at 2,5 volts. Throttle position at idle will usually indicate greater than 0 %, and throttle position at wide-open throttle will usually indicate less than 100 %.</p> <p>For systems where the output is proportional to the input voltage, this value is the percent of maximum input reference voltage. For systems where the output is inversely proportional to the input voltage, this value is 100 % minus the percent of maximum input reference voltage.</p> <p>A single throttle plate could have up to three throttle position sensors, A, B and C. There are no provisions for more than one throttle in this part of ISO 15031. This PID shall be used to report the sensors that are on the primary throttle.</p>					

Table B.54 — PID \$49 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
49	Accelerator Pedal Position D	A	0 %	100 %	100/255 %	APP_D: xxx.x %
	<p>Accelerator Pedal Position D, if utilized by the control module, (not “relative” or “learned” pedal position) shall be displayed as a normalized value, scaled from 0 to 100 %. For example, if a 0 to 5,0 volt sensor is used (uses a 5,0 volt reference voltage), and the closed-pedal position is 1,0 volt, APP_D shall display $(1,0 / 5,0) = 20 \%$ at closed pedal and 50 % at 2,5 volts. Pedal position at idle will usually indicate greater than 0 %, and pedal position at wide-open pedal will usually indicate less than 100 %.</p> <p>For systems where the output is proportional to the input voltage, this value is the percent of maximum input reference voltage. For systems where the output is inversely proportional to the input voltage, this value is 100 % minus the percent of maximum input reference voltage.</p> <p>The designation “D” shall match the diagnostic trouble code defined in ISO 15031-6. If additional DTCs are defined, those should match this PID designation. Pedal sensor designations are D, E and F.</p>					

Table B.55 — PID \$4A definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
4A	Accelerator Pedal Position E	A	0 %	100 %	100/255 %	APP_E: xxx.x %
	<p>Accelerator Pedal Position E, if utilized by the control module, (not “relative” or “learned” pedal position) shall be displayed as a normalized value, scaled from 0 to 100 %. For example, if a 0 to 5,0 volt sensor is used (uses a 5,0 volt reference voltage), and the closed-pedal position is 1,0 volt, APP_E shall display $(1,0 / 5,0) = 20 \%$ at closed pedal and 50 % at 2,5 volts. Pedal position at idle will usually indicate greater than 0 %, and pedal position at wide-open pedal will usually indicate less than 100 %.</p> <p>For systems where the output is proportional to the input voltage, this value is the percent of maximum input reference voltage. For systems where the output is inversely proportional to the input voltage, this value is 100 % minus the percent of maximum input reference voltage.</p> <p>The designation “E” shall match the diagnostic trouble code defined in ISO 15031-6. If additional DTCs are defined, those should match this PID designation. Pedal sensor designations are D, E and F.</p>					

Table B.56 — PID \$4B definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
4B	Accelerator Pedal Position F	A	0 %	100 %	100/255 %	APP_F: xxx.x %
	<p>Accelerator Pedal Position F, if utilized by the control module, (not “relative” or “learned” pedal position) shall be displayed as a normalized value, scaled from 0 to 100 %. For example, if a 0 to 5,0 volt sensor is used (uses a 5,0 volt reference voltage), and the closed-pedal position is 1,0 volt, APP_F shall display $(1,0 / 5,0) = 20 \%$ at closed pedal and 50 % at 2,5 volts. Pedal position at idle will usually indicate greater than 0 %, and pedal position at wide-open pedal will usually indicate less than 100 %.</p> <p>For systems where the output is proportional to the input voltage, this value is the percent of maximum input reference voltage. For systems where the output is inversely proportional to the input voltage, this value is 100 % minus the percent of maximum input reference voltage.</p> <p>The designation “F” shall match the diagnostic trouble code defined in ISO 15031-6. If additional DTCs are defined, those should match this PID designation. Pedal sensor designations are D, E and F.</p>					

Table B.57 — PID \$4C definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
4C	Commanded Throttle Actuator Control	A	0 % (closed throttle)	100 % (wide-open throttle)	100/255 %	TAC_PCT: xxx.x %
	<p>Commanded TAC displayed as a percent. TAC_PCT shall be normalized to the maximum TAC commanded output control parameter. TAC systems use a variety of methods to control the amount of throttle opening:</p> <ol style="list-style-type: none"> 1) If a linear or stepper motor is used, the fully closed throttle position shall be displayed as 0 %, and the fully open throttle position shall be displayed as 100 %. Intermediate positions shall be displayed as a percent of the full-open throttle position. For example, a stepper-motor TAC that moves the throttle from 0 to 128 counts shall display 0 % at 0 counts, 100 % at 128 counts and 50 % at 64 counts. 2) Any other actuation method shall be normalized to display 0 % when the throttle is commanded closed and 100 % when the throttle is commanded open. 					

Table B.58 — PID \$4D definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
4D	Time run by the engine while MIL is activated	A, B	0 min	65 535 min	1 min per count	MIL_TIME: xxxx hrs, xx min
	Conditions for “Time run by the engine while MIL is activated” counter: <ul style="list-style-type: none"> — reset to \$0000 when MIL state changes from deactivated to activated by this ECU; — accumulate counts in minutes if MIL is activated (ON); — do not change value while MIL is not activated (OFF); — reset to \$0000 if diagnostic information is cleared either by service \$04 or at least 40 warm-up cycles without MIL activated; — do not wrap to \$0000 if value is \$FFFF. 					

Table B.59 — PID \$4E definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
4E	Time since diagnostic trouble codes cleared	A, B	0 min	65 535 min	1 min per count	CLR_TIME: xxxx hrs, xx min
	Time accumulated since DTCs were cleared (via an external test equipment or possibly a battery disconnect). This PID is not associated with any particular DTC. It is simply an indication for I/M (Inspection/Maintenance), of the last time an external test equipment was used to clear DTCs. If greater than 65 535 min have occurred, CLR_TIME shall remain at 65 535 min and not wrap to zero.					

Table B.60 — PID \$4F definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
4F	Maximum value for Equivalence Ratio	A	0	255	1	These values are not intended for display to the service technician.
	These values shall be used by the external test equipment to calculate scaling factors for linear or wide-ratio oxygen sensor data reported with PIDs \$24 to \$2B, PIDs \$34 to \$3B, and PID \$44.					
	Data A shall be used by the external test equipment to calculate the scaling per bit of PIDs \$24 to \$2B, PIDs \$34 to \$3B, and PID \$44. If Data A is reported as \$00, the external test equipment shall use the “Maximum value for Equivalence Ratio” included in the original PID definition (1,999 / 65535 = 0,0000305 per bit). If the value reported in Data A of PID \$4F is greater than \$00, that value shall be divided by 65535 to calculate the scaling per bit to use to display Equivalence Ratio. (Data A contains the new maximum value for PIDs \$24 to \$2B, PIDs \$34 to \$3B and PID \$44.)					
	The following is an example to calculate PID \$24 with PID \$4F supported and including a non-zero value. In this example, a manufacturer needs a range of equivalence ratio larger than 0 to 1,999. The manufacturer needs a range of 0 to 4 and sets Data A = 4.					
	EXAMPLE EQ_RAT11(PID24) = DATA_A_B(PID24) * (DATA_A(PID4F) / 65535) New scaling per bit for PID \$24 = DATA_A(PID4F) / 65535 = 4 ₍₁₀₎ / 65535 ₍₁₀₎ = 0,0000610 per bit DATA_A_B(PID24) = \$7D00 = 32000 ₁₀ = value reported by vehicle ECU EQ_RAT11 _{PID24} = 32000 * (4 / 65535) = 1,953					

Table B.60 (continued)

PID (hex)	Description External Test Equipment Configuration Information #1	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
	Maximum value for Oxygen Sensor Voltage	B	0 V	255 V	1 V	These values are not intended for display to the service technician.
<p>Data B shall be used by the external test equipment to calculate the scaling per bit of PIDs \$24 to \$2B. If Data B is reported as \$00, the external test equipment shall use the "Maximum value for Oxygen Sensor Voltage" included in the original PID definition (7,999 V / 65535 bits = 0,000122 V per bit). If the value reported in Data B of PID \$4F is greater than \$00, that value shall be divided by 65535 to calculate the scaling per bit to use to display Oxygen Sensor Voltage. If PIDs \$34 to \$3B are supported by this ECU, this value shall be reported as \$00.</p> <p>The following is an example to calculate PID \$24 with PID \$4F supported and including a non-zero value. In this example, a manufacturer needs a range of voltage larger than 0 to 7,999 V. The manufacturer needs a range of 0 to 16 V and sets Data A = 16.</p> <p>EXAMPLE $O2S11_{(PID24)} = DATA_C_D_{(PID24)} * (DATA_B_{(PID4F)} * 1 V / 65535)$ New scaling per bit for PID \$24 = $DATA_B_{(PID4F)} * 1 V / 65535 = 16_{(10)} * 1 V / 65535_{(10)} = 0,000244 V$ per bit $DATA_C_D_{(PID24)} = \\$9C40 = 40000_{10} =$ value reported by vehicle ECU $O2S11_{(PID24)} = 40000 * (16 V / 65535) = 9,766 V$</p>						
	Maximum value for Oxygen Sensor Current	C	0 mA	255 mA	1 mA	These values are not intended for display to the service technician.
<p>Data C shall be used by the external test equipment to calculate the scaling per bit of PIDs \$34 to \$3B. If Data C is reported as \$00, the external test equipment shall use the "Maximum value for Oxygen Sensor Current" included in the original PID definition (128 mA / 32768 bits = 0,00390625 mA per bit). If the value reported in Data C of PID \$4F is greater than \$00, that value shall be divided by 32768 (oxygen sensor current is a signed value) to calculate the scaling per bit to use to display Oxygen Sensor Current. If PIDs \$24 to \$2B are supported by this ECU, this value shall be reported as \$00.</p> <p>The following is an example to calculate PID \$24 with PID \$4F supported and including a non-zero value. In this example, a manufacturer doesn't need a range of -128 to 127,996 milliamps and wishes to increase the resolution. The manufacturer only needs a range of -64 to +64 mA and sets Data A = 64 mA.</p> <p>EXAMPLE $O2S11_{(PID34)} = DATA_C_D_{(PID34)} * (DATA_C_{(PID4F)} * 1 mA / 32768)$ New scaling per bit for PID \$34 = $DATA_C_{(PID4F)} * 1 mA / 32768 = 64_{(10)} mA / 32768_{(10)} = 0,001953 mA$ per bit $DATA_C_D_{(PID34)} = \\$9C40 = -25536_{(10)} =$ negative value reported by vehicle ECU $O2S11_{(PID34)} = -25536 * (64 mA / 32768) = -49,875 mA$</p>						
	Maximum value for Intake Manifold Absolute Pressure	D	0 kPa	2550 kPa	10 kPa	These values are not intended for display to the service technician.
<p>Data D shall be used by the external test equipment to calculate the scaling per bit of PID \$0B. If Data D is reported as \$00, the external test equipment shall use the "Intake Manifold Absolute Pressure" included in the original PID definition (255 kPa / 255 bits = 1 kPa per bit). If the value reported in Data D of PID \$4F is greater than \$00, that value shall be multiplied by 10 kPa per bit and then divided by 255 to calculate the scaling per bit to use to display Intake Manifold Absolute Pressure.</p> <p>The following is an example to calculate PID \$0B with PID \$4F supported and including a non-zero value. In this example, a manufacturer needs a range of pressure larger than 0 to 255 kPa. The manufacturer needs a range of 0 to 765 kPa and sets Data A = 77, the closest value possible to 76,5.</p> <p>EXAMPLE $MAP_{(PID0B)} = DATA_A_{(PID0B)} * (DATA_D_{(PID4F)} * 10 kPa per bit / 255)$ New scaling per bit for PID \$0B = $DATA_D_{(PID4F)} * 10 kPa / 255 = 77_{(10)} * 10 kPa / 255 = 3,0196 kPa$ per bit. $DATA_A_{(PID0B)} = \\$7F = 127_{(10)} =$ value reported by vehicle ECU */ $MAP_{(PID0B)} = 127 * (770 kPa / 255) = 383,5 kPa$</p>						

Table B.61 — PID \$50 definition

PID (hex)	Description External Test Equipment Configuration Information #2	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
50	Maximum value for Air Flow Rate from Mass Air Flow Sensor	A	0 g/s	2550 g/s	10 g/s	These values are not intended for display to the service technician.
	<p>Data A shall be used by the external test equipment to calculate the scaling per bit of PID \$10. If Data A is reported as \$00, the external test equipment shall use the "Air Flow Rate from Mass Air Flow Sensor" included in the original PID definition (655,35 g/s / 65535 bits = 0,01 g/s per bit). If the value reported in Data A of PID \$50 is greater than \$00, that value shall be multiplied by 10 g/s and then divided by 65 535 to calculate the scaling per bit to use to display Air Flow Rate from Mass Air Flow Sensor.</p> <p>The following is an example to calculate PID \$10 with PID \$50 supported and including a non-zero value. In this example, a manufacturer needs a range of air flow rate larger than 0 to 655,35 g/s. The manufacturer needs a range of 0 to 1000 g/s and sets Data A = 100,</p> <p>EXAMPLE $MAF_{(PID10)} = DATA_A_B_{(PID10)} * (DATA_A_{(PID50)} * 10 \text{ g/s} / 65535)$ New scaling per bit for PID \$10 = $DATA_A_{(PID50)} * 10 \text{ g/s} / 65535 =$ $100_{(10)} * 10 \text{ g/s} / 65535 = 0,01526 \text{ g/s per bit}$ $DATA_A_B_{(PID10)} = \\$E290 = 58000_{(10)} = \text{value reported by vehicle ECU} *$ $MAF_{(PID10)} = 58000 * (1000 \text{ g/s} / 65535) = 885,02 \text{ g/s}$</p>					
	Reserved for future expansion – report as \$00	B				These values are not intended for display to the service technician.
	Reserved for future expansion – report as \$00	C				These values are not intended for display to the service technician.
	Reserved for future expansion – report as \$00	D				These values are not intended for display to the service technician.

Table B.62 — PID \$51 definition

PID (hex)	Description	Data byte	Scaling	External test equipment SI (Metric) / English display
51	Type of fuel currently being utilized by the vehicle	A (hex)	byte 1 of 1 (State Encoded Variable)	FUEL_TYP
		01	Gasoline/petrol	GAS
		02	Methanol	METH
		03	Ethanol	ETH
		04	Diesel	DSL
		05	Liquefied Petroleum Gas (LPG)	LPG
		06	Compressed Natural Gas (CNG)	CNG
		07	Propane	PROP
		08	Battery/electric	ELEC
		09	Bi-fuel vehicle using gasoline	BI_GAS
		0A	Bi-fuel vehicle using methanol	BI_METH
		0B	Bi-fuel vehicle using ethanol	BI_ETH
		0C	Bi-fuel vehicle using LPG	BI_LPG
		0D	Bi-fuel vehicle using CNG	BI_CNG
		0E	Bi-fuel vehicle using propane	BI_PROP
		0F	Bi-fuel vehicle using battery	BI_ELEC
		10 – FF	ISO/SAE reserved	—

EXAMPLE If a vehicle has less than 10 % ethanol in the gasoline/petrol, then the external test equipment shall display state \$09. In such a case, the system would be using gasoline/petrol (fuel) tables and OBD thresholds. PID \$52 should either artificially display 0 % or some number 10 % or less if the system has such resolution. If the ethanol in the gasoline/petrol is above 10 %, then the external test equipment shall display state \$0B. PID \$52 shall report the calculated ethanol/alcohol percentage.

Table B.63 — PID \$52 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
52	Alcohol Fuel Percentage	A	0 % no alcohol	100 % max. alcohol	100/255 %	ALCH_PCT: xxx.x %
	ALCH_PCT shall indicate the percentage of alcohol contained in ethanol or methanol fuels, if utilized. For example, ethanol fuel (E85) normally contains 85 % ethanol, in which case ALCH_PCT shall display 85,0 %. Alcohol percentage can be determined using a sensor or can be inferred by the fuel control software.					

Table B.64 — PID \$53 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
53	Absolute Evap System Vapour Pressure	A, B	0 kPa (0,00 inH ₂ O)	327,675 kPa (1315.49 inH ₂ O)	0,005 kPa (1/200), unsigned	EVAP_VPA: xxx.xxx kPa (xxxx.xx inH ₂ O)
<p>Absolute evaporative system vapour pressure, if utilized by the control module. The pressure signal is normally obtained from a sensor located in the fuel tank (FTP – Fuel Tank Pressure) or a sensor in an evaporative system vapour line.</p>						

Table B.65 — PID \$54 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
54	Evap System Vapour Pressure	A, B	– 32767 Pa	32768 Pa (131,55 inH ₂ O)	1 Pa, signed	EVAP_VP: xxxxx Pa (xxx.xx inH ₂ O)
<p>Evaporative system vapour pressure, if utilized by the control module. The pressure signal is normally obtained from a sensor located in the fuel tank (FTP – Fuel Tank Pressure) or a sensor in an evaporative system vapour line. PID \$54 scaling allows for a wider pressure range than PID \$32.</p> <p>For systems supporting Evap System Vapour Pressure, one of the following 2 PIDs is required: \$32, or \$54. Support for more than one of these PIDs is not allowed.</p>						

Table B.66 — PID \$55 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
55	Short Term Secondary O2 Sensor Fuel Trim – Bank 1 (use if only 1 fuel trim value)	A	– 100 % (lean)	+ 99,22 % (rich)	100/128 % (0 % at 128)	STSO2FT1: xxx.x % STSO2FT3: xxx.x %
	Short Term Secondary O2 Sensor Fuel Trim – Bank 3	B				
<p>Short Term Secondary O2 Sensor Fuel Trim Bank 1/3 shall indicate the correction being utilized by the closed-loop fuel algorithm. If the fuel system is in open loop, STSO2FT shall report 0 % correction.</p> <p>Data B shall only be included in the response to a PID \$55 request if PID \$1D (Location of Oxygen Sensors) indicates an oxygen sensor is present in Bank 3. The external test equipment can determine length of the response message based on the data content of PID \$13 or \$1D. See examples in the description of PID \$09.</p>						

Table B.67 — PID \$56 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
56	Long Term Secondary O2 Sensor Fuel Trim – Bank 1 (use if only 1 fuel trim value)	A	– 100 % (lean)	+ 99,22 % (rich)	100/128 % (0 % at 128)	LGSO2FT1: xxx.x % LGSO2FT3: xxx.x %
	Long Term Secondary O2 Sensor Fuel Trim – Bank 3	B				
<p>Secondary O2 Sensor Fuel trim correction for Bank 1/3 stored in Non-volatile RAM or Keep-alive RAM. LGSO2FT shall indicate the correction being utilized by the fuel control algorithm at the time the data is requested, in both open-loop and closed-loop fuel control. If no correction is utilized in open-loop fuel, LGSO2FT shall report 0 % correction. If secondary O2 sensor long-term fuel trim is not utilized at all by the fuel control algorithm, the PID shall not be supported.</p> <p>Data B shall only be included in the response to a PID \$56 request if PID \$1D (Location of Oxygen Sensors) indicates an oxygen sensor is present in Bank 3. The external test equipment can determine length of the response message based on the data content of PID \$13 or \$1D. See examples in the description of PID \$09.</p>						

Table B.68 — PID \$57 definition

PID (hex)	Description	Data byte	Min. value	Max. Value	Scaling/bit	External test equipment SI (Metric) / English display
57	Short Term Secondary O2 Sensor Fuel Trim - Bank 2 (use if only 1 fuel trim value)	A	– 100 % (lean)	+ 99,22 % (rich)	100/128 % (0 % at 128)	STSO2FT2: xxx.x % STSO2FT4: xxx.x %
	Short Term Secondary O2 Sensor Fuel Trim - Bank 4	B				
<p>Short Term Secondary O2 Sensor Fuel Trim Bank 2/4 shall indicate the correction being utilized by the closed-loop fuel algorithm. If the fuel system is in open loop, STSO2FT shall report 0 % correction.</p> <p>Data B shall only be included in the response to a PID \$57 request if PID \$1D (Location of Oxygen Sensors) indicates an oxygen sensor is present in Bank 4. The external test equipment can determine length of the response message based on the data content of PID \$13 or \$1D. See examples in the description of PID \$09.</p>						

Table B.69 — PID \$58 definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
58	Long Term Secondary O2 Sensor Fuel Trim – Bank 2 (use if only 1 fuel trim value)	A	– 100 % (lean)	+ 99,22 % (rich)	100/128 % (0 % at 128)	LGSO2FT2: xxx.x % LGSO2FT4: xxx.x %
	Long Term Secondary O2 Sensor Fuel Trim - Bank 4	B				
<p>Secondary Sensor Fuel trim correction for Bank 2/4 stored in Non-volatile RAM or Keep-alive RAM. LGSO2FT shall indicate the correction being utilized by the fuel control algorithm at the time the data is requested, in both open-loop and closed-loop fuel control. If no correction is utilized in open-loop fuel, LGSO2FT shall report 0 % correction. If post O2 sensor long-term fuel trim is not utilized at all by the fuel control algorithm, the PID shall not be supported.</p> <p>Data B shall only be included in the response to a PID \$58 request if PID \$1D (Location of Oxygen Sensors) indicates an oxygen sensor is present in Bank 4. The external test equipment can determine length of the response message based on the data content of PID \$13 or \$1D. See examples in the description of PID \$09.</p>						

Table B.70 — PID \$59 definition

PID (hex)	Description	Data byte	Min. value	Max. Value	Scaling/bit	External test equipment SI (Metric) / English display
59	Fuel Rail Pressure (absolute)	A, B	0 kPa	655350 kPa	10 kPa per bit unsigned, 1 kPa = 0,1450377 PSI	FRP: xxxxxx kPa (xxxxx.x PSI)
<p>FRP shall display fuel rail pressure at the engine when the reading is absolute. Diesel fuel-pressure and gasoline direct-injection systems have a higher pressure range than FRP PID \$0A.</p> <p>For systems supporting a fuel pressure sensor, one of the following 4 PIDs shall be used: \$0A, \$22, \$23 or \$59. There shall be no support for more than one of these PIDs.</p>						

Table B.71 — PID \$5A definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
5A	Relative Accelerator Pedal Position	A	0 %	100 %	100/255 %	APP_R: xxx.x %
<p>Relative or "learned" pedal position shall be displayed as a normalized value, scaled from 0 to 100 %. APP_R should display a value of 0 % at the "learned" closed-pedal position. For example, if a 0 to 5,0 volt sensor is used (uses a 5,0 volt reference voltage), and the closed-pedal position is at 1,0 volts, APP_R shall display $(1,0 - 1,0 / 5,0) = 0,0$ % at closed pedal and 30,0 % at 2,5 volts. Because of the closed-pedal offset, wide-open pedal will usually indicate substantially less than 100,0 %. In many cases, APP_R will be the average of multiple pedal sensor values.</p> <p>For systems where the output is proportional to the input voltage, this value is the percent of maximum input reference voltage. For systems where the output is inversely proportional to the input voltage, this value is 100,0 % minus the percent of maximum input reference voltage. See PID \$49 for a definition of Absolute Pedal Position.</p>						

Table B.72 — PID \$5A - \$FF definition

PID (hex)	Description	Data byte	Min. value	Max. value	Scaling/bit	External test equipment SI (Metric) / English display
5B - FF	ISO/SAE reserved	—	—	—	—	—