



**International
Standard**

ISO 8611-1

**Pallets for materials handling —
Flat pallets —**

**Part 1:
Test methods**

*Palettes pour la manutention — Palettes plates —
Partie 1: Méthodes d'essai*

**Fourth edition
2025-02**

STANDARDSISO.COM : Click to view the full PDF of ISO 8611-1:2025

STANDARDSISO.COM : Click to view the full PDF of ISO 8611-1:2025



COPYRIGHT PROTECTED DOCUMENT

© ISO 2025

All rights reserved. Unless otherwise specified, or required in the context of its implementation, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
CP 401 • Ch. de Blandonnet 8
CH-1214 Vernier, Geneva
Phone: +41 22 749 01 11
Email: copyright@iso.org
Website: www.iso.org

Published in Switzerland

Contents

	Page
Foreword.....	v
Introduction.....	vi
1 Scope	1
2 Normative references	1
3 Terms and definitions	1
4 Measurements	3
5 Precision and accuracy of tests and apparatus	3
6 Test load	3
7 List of tests	3
8 Tests	4
8.1 Test 1 — Bending tests.....	4
8.1.1 Purpose.....	4
8.1.2 Procedure.....	5
8.1.3 Measurements.....	6
8.2 Test 2 — Forklifting tests.....	7
8.2.1 Purpose.....	7
8.2.2 Procedure.....	7
8.2.3 Measurement.....	8
8.3 Test 3 — Compression tests for blocks or stringers.....	9
8.3.1 Purpose.....	9
8.3.2 Procedure.....	9
8.3.3 Measurement.....	10
8.4 Test 4 — Stacking test.....	11
8.4.1 Purpose.....	11
8.4.2 Procedure.....	12
8.4.3 Measurement.....	12
8.5 Test 5 — Bottom deck bending tests.....	12
8.5.1 Purpose.....	12
8.5.2 Procedure.....	12
8.5.3 Measurement.....	13
8.6 Test 6 — Wing pallet bending tests.....	14
8.6.1 Purpose.....	14
8.6.2 Procedure.....	14
8.6.3 Measurements.....	15
8.7 Test 7 — Airbag bending tests.....	15
8.7.1 Purpose.....	15
8.7.2 Procedure.....	15
8.7.3 Measurement.....	18
8.8 Test 8 — Static shear test.....	18
8.8.1 Purpose.....	18
8.8.2 Procedure.....	18
8.8.3 Measurement.....	19
8.9 Test 9 — Corner drop test.....	20
8.9.1 Purpose.....	20
8.9.2 Procedure.....	20
8.9.3 Measurement.....	20
8.10 Test 10 — Shear impact tests.....	21
8.10.1 General.....	21
8.10.2 Purpose.....	21
8.10.3 Procedure.....	21
8.10.4 Measurement.....	21
8.11 Test 11 — Top deck edge impact test.....	22

ISO 8611-1:2025(en)

8.11.1	Purpose.....	22
8.11.2	Procedure.....	22
8.11.3	Measurement.....	23
8.12	Test 12 — Block impact test.....	23
8.12.1	Purpose.....	23
8.12.2	Procedure.....	24
8.12.3	Measurement.....	24
8.13	Test 13 — Static coefficient of friction test.....	25
8.13.1	Purpose.....	25
8.13.2	Procedure.....	25
8.13.3	Measurement.....	26
8.14	Test 14 — Slip angle test.....	26
8.14.1	Purpose.....	26
8.14.2	Procedure.....	26
8.14.3	Measurement.....	26
9	Test report.....	27
9.1	General information — All materials.....	27
9.2	Information for wooden and wood-based composite pallets.....	28
9.3	Information for plastics pallets.....	28
9.4	Information for pallets made of other materials.....	28
	Bibliography.....	29

STANDARDSISO.COM : Click to view the full PDF of ISO 8611-1:2025

Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular, the different approval criteria needed for the different types of ISO document should be noted. This document was drafted in accordance with the editorial rules of the ISO/IEC Directives, Part 2 (see www.iso.org/directives).

ISO draws attention to the possibility that the implementation of this document may involve the use of (a) patent(s). ISO takes no position concerning the evidence, validity or applicability of any claimed patent rights in respect thereof. As of the date of publication of this document, ISO had not received notice of (a) patent(s) which may be required to implement this document. However, implementers are cautioned that this may not represent the latest information, which may be obtained from the patent database available at www.iso.org/patents. ISO shall not be held responsible for identifying any or all such patent rights.

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation of the voluntary nature of standards, the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the World Trade Organization (WTO) principles in the Technical Barriers to Trade (TBT), see www.iso.org/iso/foreword.html.

This document was prepared by Technical Committee ISO/TC 51, *Pallets for unit load method of materials handling*, in collaboration with the European Committee for Standardization (CEN) Technical Committee CEN/TC 261, *Packaging*, in accordance with the Agreement on technical cooperation between ISO and CEN (Vienna Agreement).

This fourth edition cancels and replaces the third edition (ISO 8611-1:2021), which has been technically revised.

The main changes are as follows:

- the requirement for a specific bending angle in Test 2 was removed, so the angle in [Figure 2](#) was adjusted accordingly;
- keys in [Figure 2](#) was corrected because there was an error in the symbols displayed on the Key of [Figure 2](#).

A list of all parts in the ISO 8611 series can be found on the ISO website.

Any feedback or questions on this document should be directed to the user's national standards body. A complete listing of these bodies can be found at www.iso.org/members.html.

Introduction

The forces to which pallets are exposed during use vary significantly. The test procedures described in this document are approximate simulations of pallet use. These tests help the pallet designer to establish an initial acceptable balance between the cost and the performance of a pallet design. It is intended that all results of tests performed using this protocol be confirmed and verified using field trials before publication of performance or the commercial implementation of a new pallet design.

The nominal load, determined according to this test protocol, does not represent a payload and cannot be verified using field trials. The nominal load is a minimum payload level for use in determining maximum working load according to the procedures in ISO 8611-3. The maximum working load can be verified for a specified payload and intended use, using field trials. It is intended that the publication of the maximum working load include a description of the payload and the intended modes of use of the pallet.

It is essential to exercise care when comparing the results of tests with historic experience using existing pallet designs. User expectations of pallet performance vary. Some require greater and some accept lower levels of performance. Users are accepting different levels of risk when using pallets. Because of the varied performance expectations of pallet users, it is possible that the results of tests do not always reflect the user's perception of pallet performance in use.

It is possible that the nominal load does not reflect users' perception of pallet performance because the nominal load does not represent a payload. It is intended that maximum working loads be used to compare with the historic performance of existing pallet designs.

Regarding the use of the ISO 8611 series:

- this document describes the test methods;
- ISO 8611-2 describes the performance requirements and selection of tests;
- ISO 8611-3 describes tests for determining maximum working loads for known payloads.

This document and ISO 8611-2 are recommended to be used in determining nominal load. The nominal load is the lowest safe load value for the specified support conditions, independent of the type of load (excluding concentrated loads).

This document, ISO 8611-2 and ISO 8611-3 are recommended to be used in determining maximum working loads for known payloads.

The nominal load for the intended use is established by the selection of tests in this document; and the performance requirement is established from criteria in ISO 8611-2.

The following three types of intended use with specified support conditions are defined:

- handling of loaded pallets with racking and stacking;
- handling of loaded pallets without racking;
- handling of loaded pallets without racking or stacking.

To determine the maximum working load through testing given in ISO 8611-3, the deflection under the known payload cannot exceed the limiting deflection (see ISO 8611-3:2011, 4.2, 4.3 and 4.4) established in this document and ISO 8611-2. The maximum working load is the greatest payload that a pallet can be permitted to carry in a specific loading and support condition.

Guidance is given in ISO 8611-3:2011, Annex A as to the general effect on performance of different load types and stabilization methods. These can only give guidance as to the likely result from tests with the known payload.

Other tests for durability evaluation are specified in this document.

Pallets for materials handling — Flat pallets —

Part 1: Test methods

1 Scope

This document specifies the test methods available for evaluating new flat pallets for materials handling.

The test methods are split into groups for

- nominal load testing,
- maximum working load testing, and
- durability comparison testing.

This document does not apply to pallets with a fixed superstructure or a rigid, self-supporting container that can be mechanically attached to the pallet and which contributes to the strength of the pallet.

NOTE Specific tests for determining load capacity do not replace the value of conducting field tests on specific pallet designs.

2 Normative references

The following documents are referred to in the text in such a way that some or all of their content constitutes requirements of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 445, *Pallets for materials handling — Vocabulary*

ISO 2244, *Packaging — Complete, filled transport packages and unit loads — Horizontal impact tests*

ISO 8611-2, *Pallets for materials handling — Flat pallets — Part 2: Performance requirements and selection of tests*

ISO 12777-1, *Methods of test for pallet joints — Part 1: Determination of bending resistance of pallet nails, other dowel-type fasteners and staples*

EN 13183-2, *Moisture content of a piece of sawn timber — Part 2: Estimation by electrical resistance method*

3 Terms and definitions

For the purposes of this document, the terms and definitions given in ISO 445 and the following apply.

ISO and IEC maintain terminology databases for use in standardization at the following addresses:

- ISO Online browsing platform: available at <https://www.iso.org/obp>
- IEC Electropedia: available at <https://www.electropedia.org/>

3.1

breakage of one of the components

fracture of a structural element which significantly affects the strength, *stiffness* (3.9) or functionality of a pallet

3.2

concentrated load

load concentrated over an area of less than 50 % of the pallet top deck

3.3

maximum working load

greatest *payload* (3.5) that a pallet is permitted to carry in a specific loading and support condition

Note 1 to entry: This varies according to the type, distribution, arrangement and means of stabilization of the load and the system of support, and can be lower or higher than the *nominal load* (3.4) (see ISO 8611-2 and ISO 8611-3).

3.4

nominal load

R

lowest *test load* (3.10) value for the specified support conditions, independent of the type of load (excluding *concentrated loads* (3.2))

Note 1 to entry: "Specified support conditions" refers to the range of conditions of use in ISO 8611-2:2025, 7.1.

Note 2 to entry: Nominal load does not represent an actual *payload* (3.5) on a pallet in use. The nominal load is used for comparing the performance of different pallets.

3.5

payload

Q

load carried by the pallet in use

Note 1 to entry: This can be above, identical to or below the *nominal load* (3.4).

3.6

platen

solid, rigid surface on a test machine used for applying a load to test a sample pallet

3.7

racking

storage of unit loads in drive-in or beam racks with free, unsupported spans

3.8

stacking

placing of pallets with unit loads one upon the other without recourse to intermediate shelves or *racking* (3.7)

3.9

stiffness

relative deformation of a pallet or component under load

Note 1 to entry: High stiffness means small displacement, deflection or deformation for a given load.

3.10

test load

P

load applicators, the load board or load box and the applied load itself including the datum load (1,5 % ± 0,5 % of the *ultimate load* (3.11))

3.11

ultimate load

U

load at which compression, displacement or deflection is no longer contained, resulting in the destruction of the specimen or *breaking of one component* (3.1), or when displacement, deformation or deflection becomes excessive

Note 1 to entry: See ISO 8611-2:2025, Table 1.

4 Measurements

Pallets selected for testing shall be measured to ensure that materials, construction and dimensions conform to their associated written specification.

The mass and the material of each pallet shall be determined and recorded at the time of testing.

The moisture content of wooden pallets shall be measured and recorded in accordance with EN 13183-2 at the time of testing.

The recorded deflection at each location in the test is the deflection at the end of the full test load period (or relaxation period) minus the deflection after positioning the datum load. The average of the maximum deflections recorded for each replicate shall be reported and used for further analysis.

[Clause 9](#) gives further details on what should be recorded during testing and in the written report.

5 Precision and accuracy of tests and apparatus

The test apparatus shall satisfy the following requirements:

- a) in the design of the test equipment, the tolerances on all dimensions shall be ± 2 %;
- b) the accuracy of measuring equipment for tests shall be $\pm 0,5$ mm;
- c) the accuracy of positioning of every component, excluding the test load, shall be ± 2 mm; measurement gauges shall be positioned to ± 4 mm;
- d) the accuracy of positioning of the centre of application of test load (where used) shall be ± 10 mm;
- e) the total mass of the test load applied shall be within ± 3 % of the prescribed value.

No part of any test rig shall distort an amount greater than ± 3 mm when under maximum test load. Distortion of the test rig shall be taken into account in measuring deflections of the pallet.

NOTE 1 Using heavy duty steel box sections in the construction of fixtures in tests 1 and 6 (see [Table 1](#)) normally results in central distortions approaching the 3 mm given limit.

The inclined plane apparatus shall be constructed as specified in ISO 2244 and shall permit inclined travel distance to change by 250 mm increments from 250 mm to 1 250 mm, each increment to within ± 5 mm.

NOTE 2 Experience suggests that the interlaboratory test precision for conducting tests 1a and 7a is 16,7 %; and 19,8 % when conducting tests 1b and 7b.

6 Test load

A general value for the test load is not fixed. The test load for each test shall be determined in accordance with ISO 8611-2.

The test load shall be applied with a testing machine, hydraulic or air pressure, or with dead load and shall increase continuously or in steps to the failure (for determination of ultimate load) or up to the fixed value (for qualification tests).

7 List of tests

[Table 1](#) provides a matrix of the tests (in this document) that shall be performed on flat pallets. Tests numbered 1, 2, 3, 4, 5, 6 and 7 shall be performed with new pallets. Tests 1, 2, 4, 5, 6 and 7 may be carried out on one test sample (first stiffness, then strength, when there is a declared nominal load) or on two separate samples.

NOTE The tests are grouped into the three sections shown in [Table 1](#). The selection of tests and evaluation of pallet performance are set out in ISO 8611-2 and ISO 8611-3.

8 Tests

8.1 Test 1 — Bending tests

8.1.1 Purpose

The purpose of these tests is to determine the bending strength (test 1a) and bending stiffness (test 1b) of the pallet in racking situations.

Table 1 — List of tests

Test no.	Test measurement	Characteristic	Handling activity or purpose of the test	(Sub)clause reference
Nominal load tests				Clause 8
1	Bending tests	Pallet length, width	Racking	8.1
1a	Bending strength			8.1.3.1
1b	Bending stiffness			8.1.3.2
2	Forklifting tests	Top deck	Lifting with forklift and pallet trucks	8.2
2a	Bending strength			8.2.3.1
2b	Bending stiffness			8.2.3.2
3	Compression tests for blocks or stringers	Height of blocks, stringers	Any activity that compresses blocks or stringers, including stacking	8.3
3a	Block or stringer strength			8.3.3.1
3b	Block or stringer stiffness			8.3.3.2
4	Stacking tests	Top and bottom deck	Stacking	8.4
4a	Deck strength test			8.4.3.1
4b	Deck stiffness test			8.4.3.2
5	Bottom deck bending tests	Bottom deck	Twin track conveyors and narrow span beam racking	8.5
5a	Bending strength			8.5.3.1
5b	Bending stiffness			8.5.3.2
6	Wing pallet bending tests	Pallet length, width	Lifting with slings	8.6
6a	Bending strength			8.6.3.1
6b	Bending stiffness			8.6.3.2
Maximum working load tests — With payload or airbag				
1	Bending test	Pallet length, width	Racking	8.1
1b	Bending stiffness			8.1.3.2
7	Airbag bending tests	Pallet length, width	Racking	8.7
7a	Bending strength			8.7.3.1
7b	Bending stiffness			8.7.3.2
2	Forklifting tests	Top deck	Lifting with forklift and pallet trucks	8.2
2b	Bending stiffness			8.2.3.2
4	Stacking tests	Top and bottom deck	Stacking	8.4
4b	Deck stiffness test			8.4.3.2
5	Bottom deck bending tests	Bottom deck	Twin track conveyors and narrow span beam racking	8.5
5b	Bending stiffness			8.5.3.2
6	Wing pallet bending tests	Pallet length, width	Lifting with slings	8.6
6b	Bending stiffness			8.6.3.2
Durability tests				

Table 1 (continued)


Test no.	Test measurement	Characteristic	Handling activity or purpose of the test	(Sub)clause reference
8	Static shear test	Decks, blocks, stringers	Distortion resistance	8.8
9	Corner drop test	Diagonal rigidity	Resistance to impacts	8.9
10	Shear impact test	Decks, blocks, stringers	Distortion resistance	8.10
11	Top deck edge impact test	Top leading deckboard	Resistance to fork arms	8.11
12	Block impact test	Corner block, stringer	Resistance to fork tip	8.12
13	Static coefficient of friction test	Under deck/fork arms	Slip resistance on fork arms	8.13
14	Slip angle test	Top deck/payload	Slip resistance of loads	8.14

8.1.2 Procedure

8.1.2.1 In order to establish the weakest pallet support dimension, test one pallet across the length of the pallet and then a second pallet across the width of the pallet. There is no requirement for further tests on the stronger dimension unless the result is within 15 % of the weaker.

8.1.2.2 This having been established, place a fresh pallet across its weakest side, top deck uppermost, on pallet supports positioned with their inside edges 75 mm from the outer edges of the pallet. The load applicators shall be positioned at $0,18 L_1$ or $0,18 L_2$, where measured as shown, where L_1 or L_2 is the distance between the pallet supports (see [Figure 1](#)).

STANDARDSISO.COM : Click to view the full text of ISO 8611-1:2025

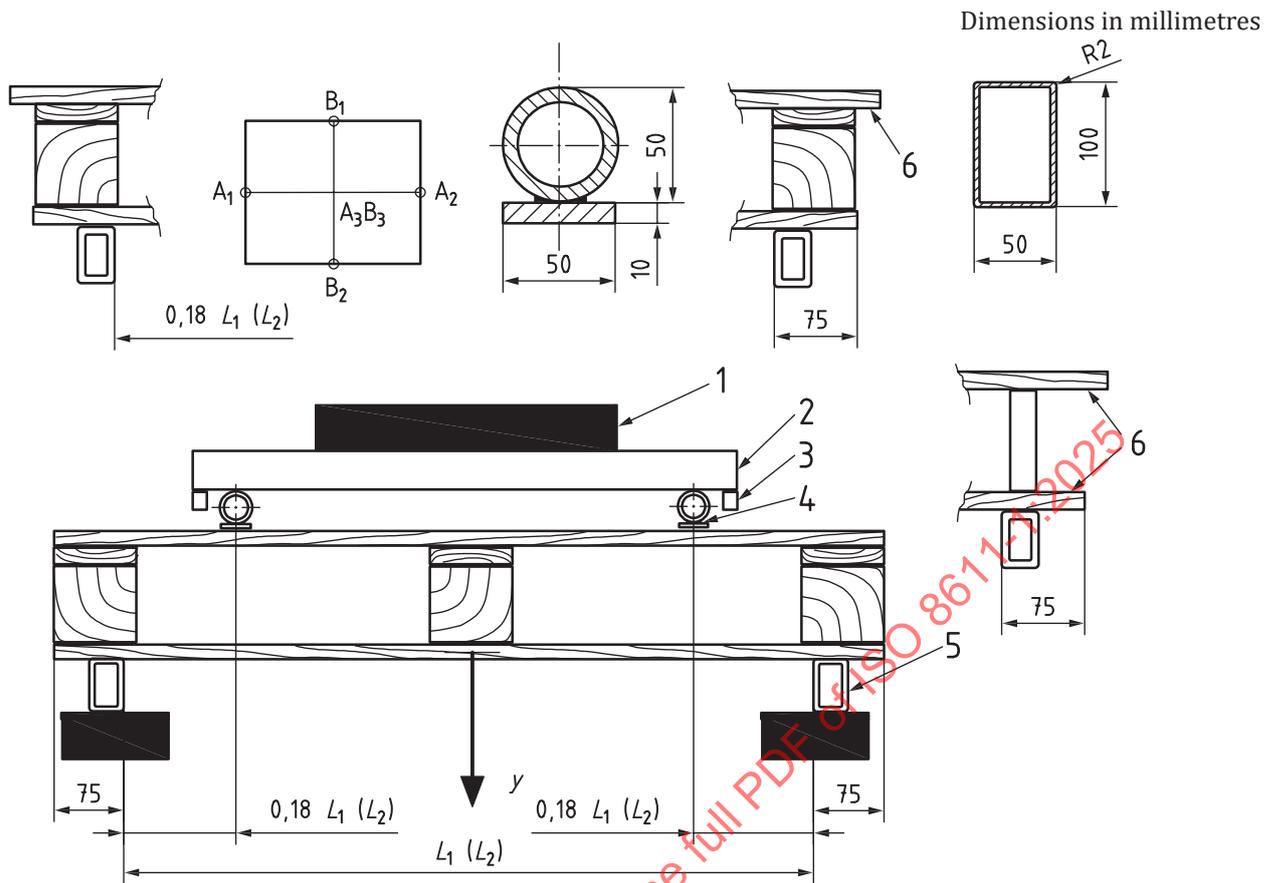

Key

- | | | | |
|---|-----------------|-----|------------|
| 1 | test load | 5 | support |
| 2 | load board | 6 | wing |
| 3 | safety stop | y | deflection |
| 4 | load applicator | | |

Figure 1 — Bending test

8.1.2.3 Load applicators and supports shall be flush with or project beyond the edges of the pallet. Edges shall be relieved with (2 ± 1) mm radii. Where load applicators coincide with gaps between deckboards, in-fill pieces of equal thickness to deckboards with 3 mm to 6 mm overall clearance on each shall be used. Place on the pallet deck, the load applicators and the load board, then apply the rest of the test load.

8.1.3 Measurements

8.1.3.1 Test 1a — Determination of bending strength

Place a load on the load board until breakage of one of the components of the pallet or until reaching an excessive deflection or deformation. Record the ultimate load and choose the minimum load among 3 replicates.

8.1.3.2 Test 1b — Determination of bending stiffness

Apply a datum load of $(1,5 \pm 0,5)$ % of the ultimate load determined in test 1a. Depending on the support location, the deflection, y , shall be measured at points A or B [maximum of y at A_1 (B_1), A_2 (B_2), A_3 (B_3)]

a) after positioning of datum load,

- b) immediately after full test load is applied,
- c) at end of the full test load period, and
- d) after the relaxation period.

8.2 Test 2 — Forklifting tests

8.2.1 Purpose


The limiting condition of use for non-rackable and non-stackable single or double-deck pallets is the bending of the pallet on fork arm supports under the top deck of the pallet.

8.2.2 Procedure

The forklifting test is shown schematically in [Figure 2](#). The test method permits simulation of the forklifting condition of use in each direction of pallet length and width. The supports shall conform to [Figure 2](#). The support, a, distances may be either 570 mm or 690 mm (see [Figure 2](#)). The shorter of the two distances that occur during pallet use shall be used in the test. For pallets greater than 1 219 mm in length or width, footnote a of [Figure 2](#) may be adjusted according to the dimensions of the pallet.

Perform the test in both directions.

STANDARDSISO.COM : Click to view the full PDF of ISO 8611-1:2025

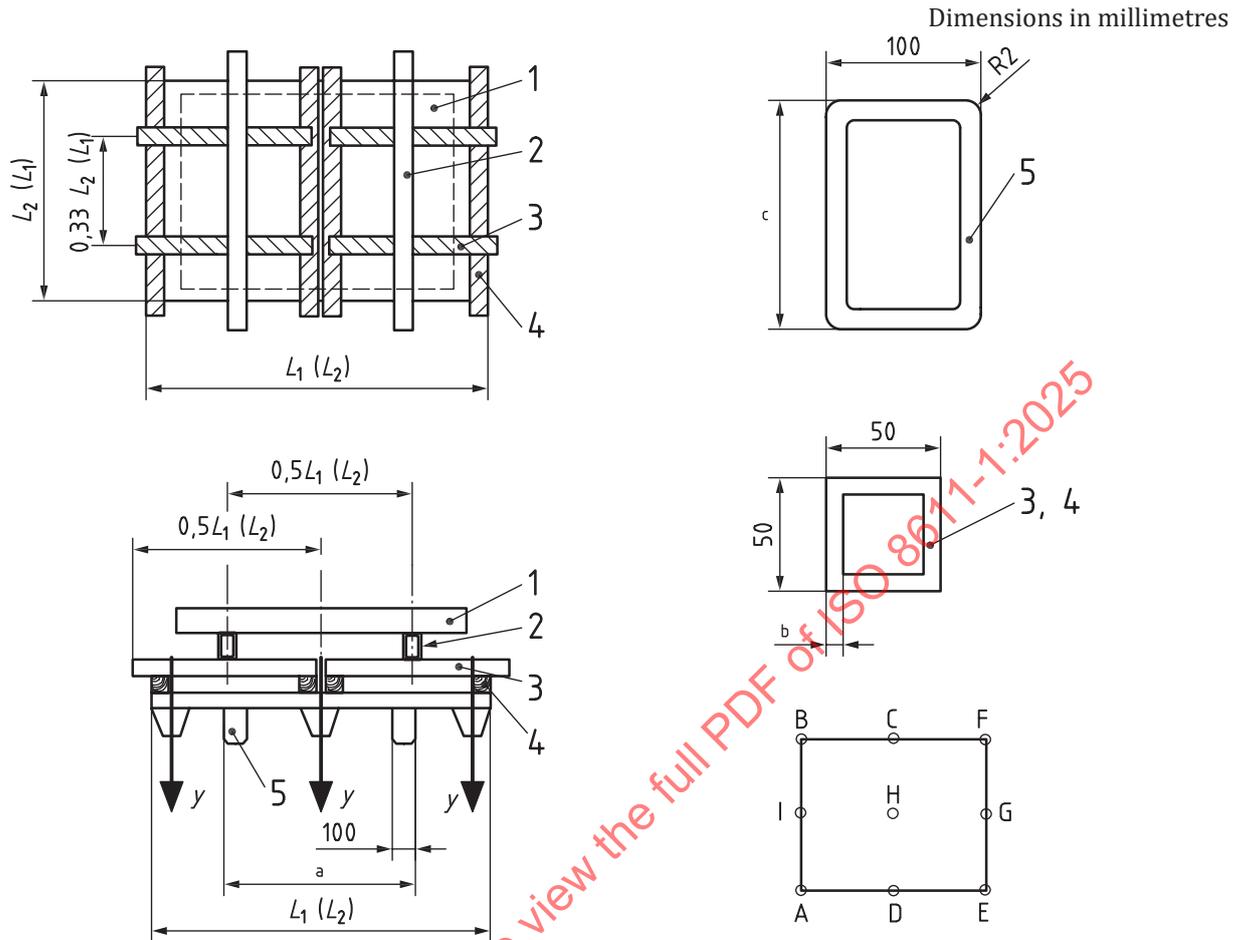

Key

- | | | | |
|--------|-----------------------------------------------------------------------|---|-----------------------------------------------------|
| 1 | test load | y | deflection |
| 2 | load applicator | a | The distance between the supports 570 mm or 690 mm. |
| 3 | steel load bar, 50 mm × 50 mm × L $\left[\geq \frac{L_1}{2} \right]$ | b | Steel load bar thickness ≥ 2 mm. |
| 4 | steel load bar, 50 mm × 50 mm × L $\left[\geq L_1 \right]$ | c | Support length ≤ 200 mm. |
| 5 | support | | |
| A to I | deflection measuring points | | |

Figure 2 — Forklifting test

8.2.3 Measurement

8.2.3.1 Test 2a — Determination of bending strength

Apply the test load until breakage occurs in one of the components of the pallet or until reaching an excessive deflection or deformation. Record the ultimate load and choose the minimum load among 3 replicates.

8.2.3.2 Test 2b — Determination of bending stiffness

Apply a datum load of $(1,5 \pm 0,5)$ % of the ultimate load determined in test 2a. Depending on the support location, the deflection, y , shall be measured simultaneously at the middle of the two ends or sides and at the corners (maximum value of y at points A, B, C, D, E, F, G, H, I, depending on direction of supports)

- a) after positioning of datum load,
- b) immediately after full test load is applied,
- c) at end of the full load period, and
- d) after the relaxation period.

8.3 Test 3 — Compression tests for blocks or stringers

8.3.1 Purpose

The purpose of this test is to determine the compression strength (test 3a) and stiffness (test 3b) of the blocks, stringers or columns of the pallet. Blocks or stringers supporting superstructures or heavy rigid loads shall be tested.

8.3.2 Procedure

Place the pallet in a normal position on a flat, hard, rigid and horizontal surface. Place a rigid load applicator of dimensions (300 ± 5) mm \times (300 ± 5) mm \times (25 ± 5) mm, over a block or a portion of a stringer (as shown in [Figure 3](#)).


Place the test load centrally on to the load applicator, as shown by the arrows in [Figures 3](#) a), b) and c). When the blocks or stringers differ in design, each design shall be tested.

Alternatively, the test may be carried out on several identical corners, blocks or stringers.

8.4 Test 4 — Stacking test

8.4.1 Purpose

The purpose of this test is to determine the ability of the pallet top and bottom decks to withstand the local effects of widely varying payloads on subspans of decks between blocks or stringers in a block stacking situation. For pallets with more than two spans (openings), the load applicators shall be applied to the two openings of greatest span as shown in Figure 4. Where a single span is the largest, the test is not applicable.

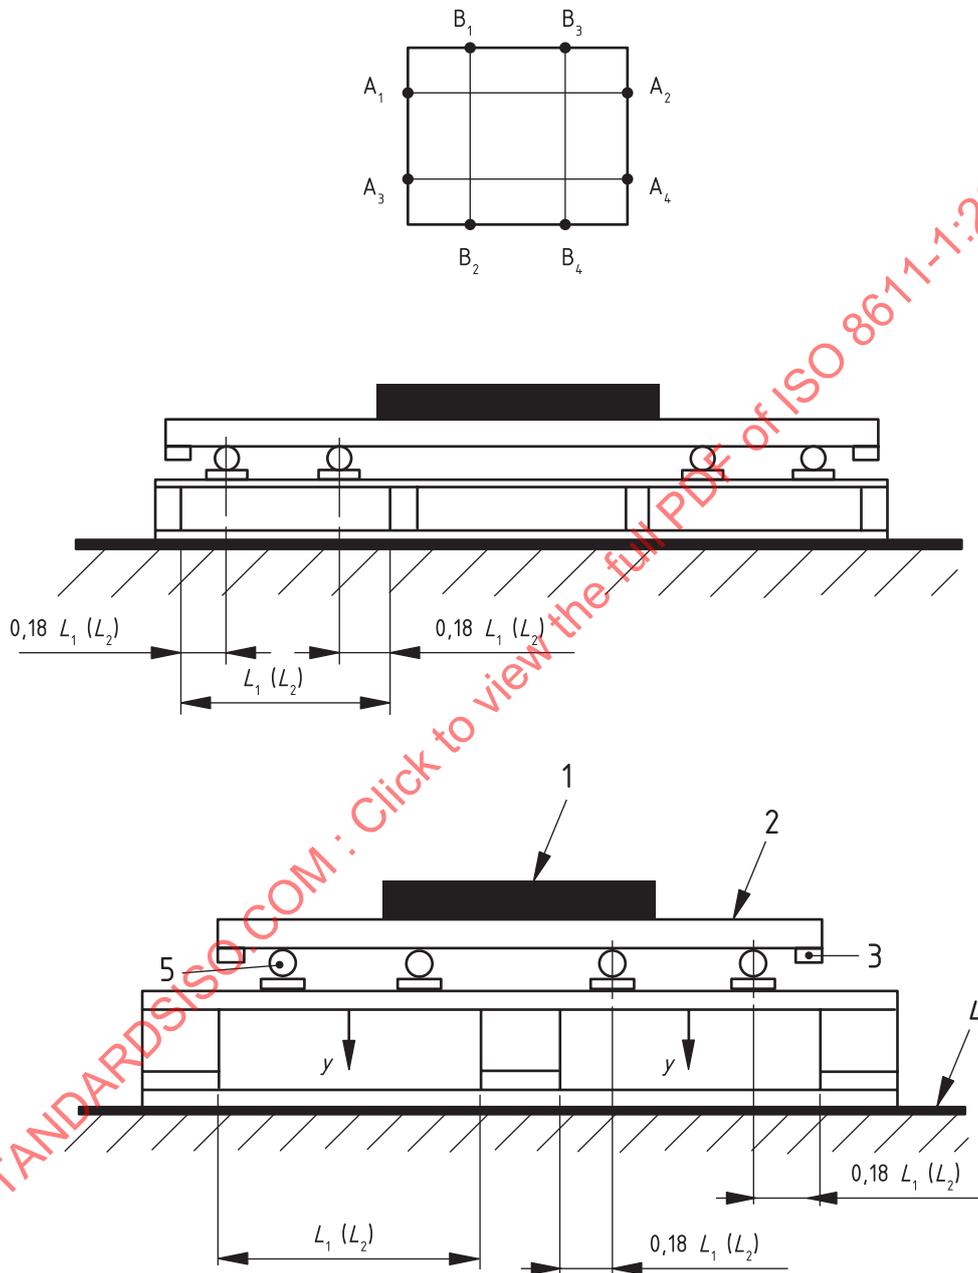

Key

- | | | | |
|---|-------------|---|-----------------|
| 1 | test load | 4 | solid support |
| 2 | load board | 5 | load applicator |
| 3 | safety stop | y | deflection |

Figure 4 — Deck strength and stiffness test

8.4.2 Procedure

Test both the top and bottom decks.

Place the pallet, as shown in [Figure 4](#), on a flat, hard, rigid horizontal surface and place four applicators, as described in [8.1.2](#) and [Figure 1](#), across the top or bottom boards so that the centres of the load applicators are at $0,18 L_1$ or $0,18 L_2$. The load applicators shall project over or be flush with the edge of the pallet deck and shall be symmetrically placed about the centre line of the pallet.

8.4.3 Measurement

8.4.3.1 Test 4a — Deck strength test

Apply the test equipment and then the rest of the test load. If dead weight is used for the test load, it shall be symmetrically built up during loading. If the pallet has bottom boards in both directions the test shall be carried out in both the length and the width dimensions.

Place a load on the load board until breakage occurs or until reaching an excessive deflection or deformation. Record the ultimate load and choose the minimum load among 3 replicates.

8.4.3.2 Test 4b — Deck stiffness test

Support the bottom pallet on a solid surface. Apply a datum load of $(1,5 \pm 0,5) \%$ of the ultimate load determined in test 4a. The deflection, y , shall be measured at points A (maximum of y at A_1, A_2, A_3, A_4) or B (maximum of y at B_1, B_2, B_3, B_4), depending on pallet design and orientation of load applicators.

Measure the maximum local deflection, y ,

- a) after positioning the datum load,
- b) immediately after the full test load is applied,
- c) at the end of the full load period, and
- d) after the relaxation period.

8.5 Test 5 — Bottom deck bending tests



8.5.1 Purpose

The purpose of these tests is to determine the strength and stiffness of the bottom deck between blocks or stringers when handling on twin track conveyors or narrow span beam rack supports.

8.5.2 Procedure

Place the top deck downwards, as shown in [Figure 5](#), on a flat, hard, rigid horizontal surface and place two inverted applicators, as described in [8.1.2](#) and [Figure 1](#), across the bottom boards so that the centres of the load applicators are at a distance of $0,25 L_1$ or $0,25 L_2$ from the inside edge of the outer blocks or stringers. The load applicators shall project over or be flush with the edge of the pallet base and shall be symmetrically placed about the centre line of the pallet.

Apply the test equipment and then the rest of the test load. If dead weight is used for the test load, it shall be symmetrically built up during loading. If the pallet has bottom boards in both directions, the test shall be carried out in both the length and the width dimensions.

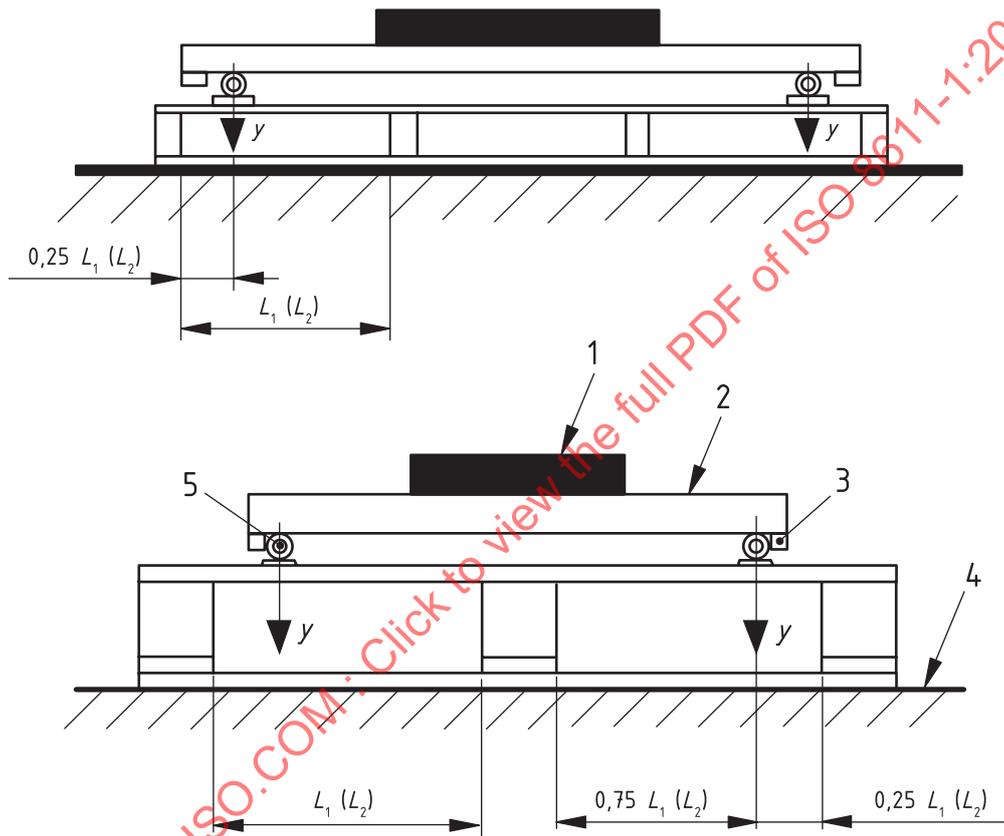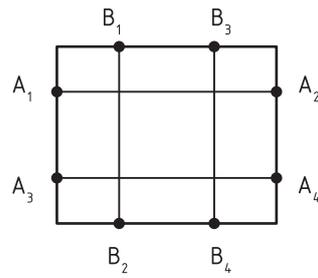

Key

- | | | | |
|---|-------------|---|-----------------|
| 1 | test load | 4 | solid support |
| 2 | load board | 5 | load applicator |
| 3 | safety stop | y | deflection |

Figure 5 — Bottom deck strength and stiffness test

8.5.3 Measurement

8.5.3.1 Test 5a — Determination of bending strength

Place a load on the load board until breakage in one of the bottom boards occurs or until reaching an excessive deflection or deformation. Record the ultimate load and choose the minimum load among 3 replicates.

8.5.3.2 Test 5b — Determination of bending stiffness

Apply a datum load of $(1,5 \pm 0,5)$ % of the ultimate load determined in test 5a. Depending on the orientation of the load applicators, the deflection, y , shall be measured at points A (maximum of y at A_1, A_2, A_3, A_4) or B (maximum of y at B_1, B_2, B_3, B_4)

- a) after positioning of datum load,
- b) immediately after full test load is applied,
- c) at end of the full load period, and
- d) after the relaxation period.


8.6 Test 6 — Wing pallet bending tests

8.6.1 Purpose

The purpose of these tests is to determine the bending strength (test 6a) and the bending stiffness (test 6b) of winged pallet during lifting with slings.

8.6.2 Procedure

Place the wing pallet, top deck uppermost, on four posts 50 mm × 50 mm positioned beneath the wings of the top deck flush with the ends of the pallet. The supports shall be fixed at such a height that a space of at least 50 mm is between the underside of the bottom deck and the ground or test frame. Each load applicator shall be positioned such that the dimension from the inside edge of the support to the centre line of the load applicators shall be $0,18 L_1$ as shown in Figure 6. Place the load board on the load applicators and then apply the rest of the test load.

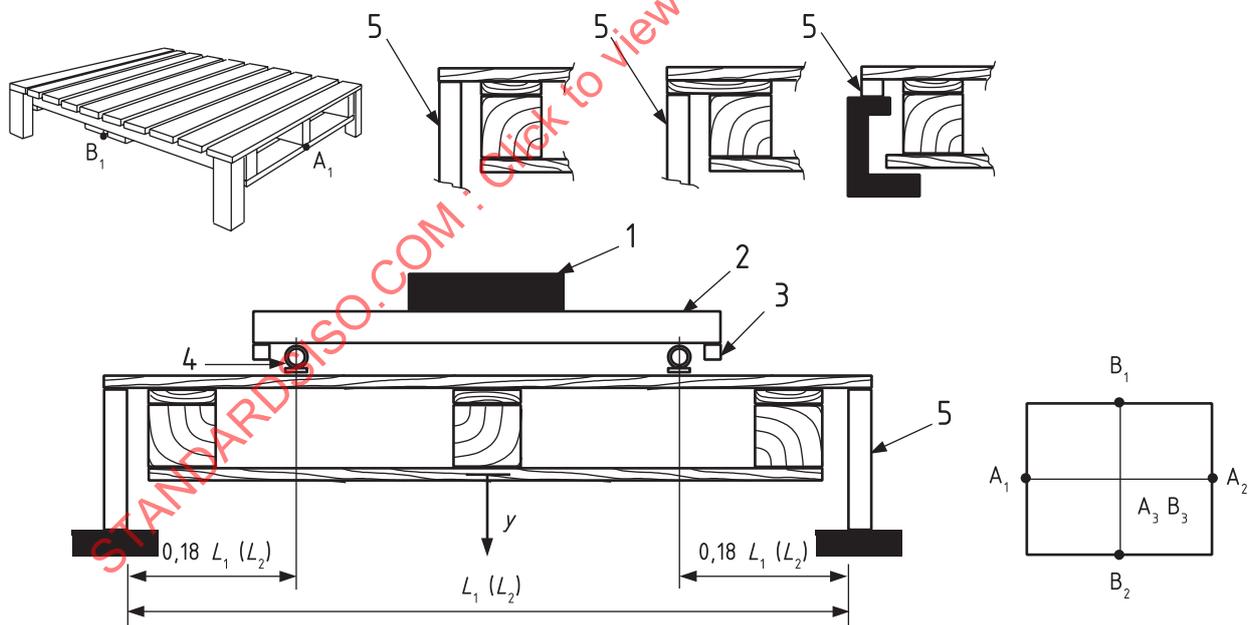

Key

- | | | | |
|---|-------------|-----|-----------------|
| 1 | test load | 4 | load applicator |
| 2 | load board | 5 | support |
| 3 | safety stop | y | deflection |

Figure 6 — Wing pallet bending test

8.6.3 Measurements

8.6.3.1 Test 6a — Determination of bending strength

Place a load on the load board until breakage of one of the components of the pallet or until reaching an excessive deflection or deformation. Record the ultimate load and choose the minimum load among 3 replicates.

8.6.3.2 Test 6b — Determination of bending stiffness

Apply a datum load of $(1,5 \pm 0,5)$ % of the ultimate load determined in test 6a. Depending on the support location, the deflection, y , shall be measured at points A or B [Maximum of y at A_1 (B_1) and A_2 (B_2), A_3 (B_3)]:

- a) after positioning the datum load,
- b) immediately after the full test load is applied,
- c) at end of the full test load period, and
- d) after the relaxation period.

8.7 Test 7 — Airbag bending tests

8.7.1 Purpose


The purpose of this form of bending test is to simulate, as near as is practically feasible, certain load applications as commonly encountered in the field. The load applicator used for this bending test is an analogue for common uniform flexible loads often supported by pallets, such as cased or bagged goods.

This uniform flexible load analogue is used when, under certain circumstances, the primary load applicators, as described in [8.1.2](#), cannot be used, or when the application of simulated uniform loads can aid the pallet designer in selecting the most appropriate pallet for a given use.

8.7.2 Procedure

8.7.2.1 In order to establish the weakest pallet support direction, test one pallet across the length of the pallet and then a second pallet across the width of the pallet. There is no requirement for further tests on the stronger dimension unless the result is within 15 % of the weaker dimension.


8.7.2.2 The load applicator shall be a medium or low-pressure envelope airbag, commonly called a “lifting” or “dunnage” bag, shown in [Figures 7](#) and [8](#). Airbags of this type are specified by size (length and width), containment (maximum working pressure) and stroke (maximum unrestricted expansion in bag height).

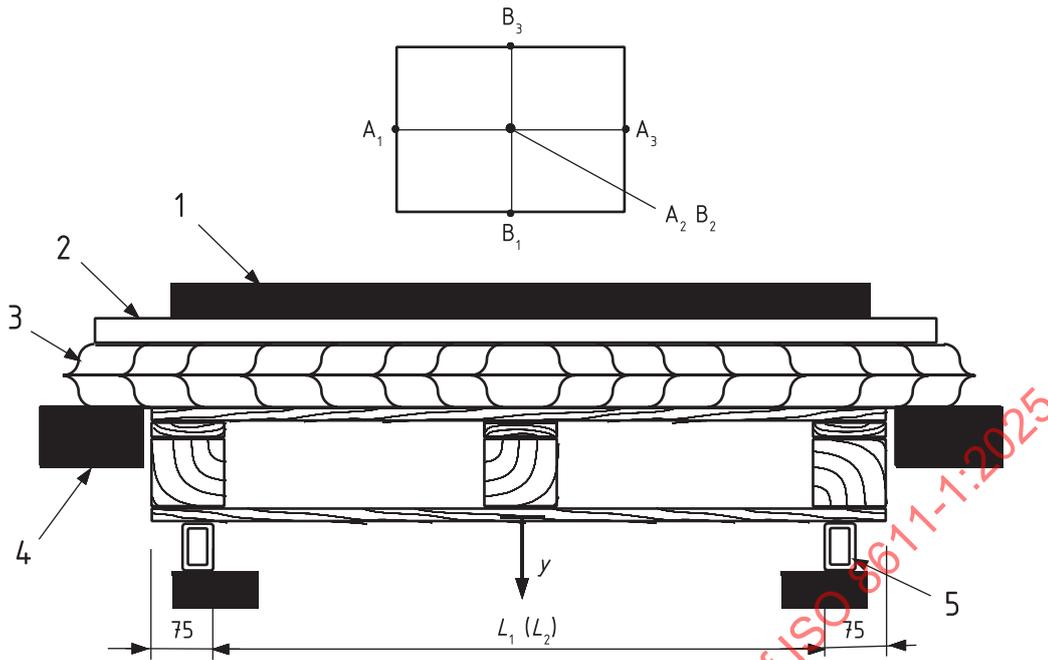

Key

- | | | | |
|---|-------------|-----|---------------------|
| 1 | dead weight | 4 | airbag support beam |
| 2 | load board | 5 | supports |
| 3 | airbag | y | deflection |

Figure 7 — Airbag bending tests using dead weight

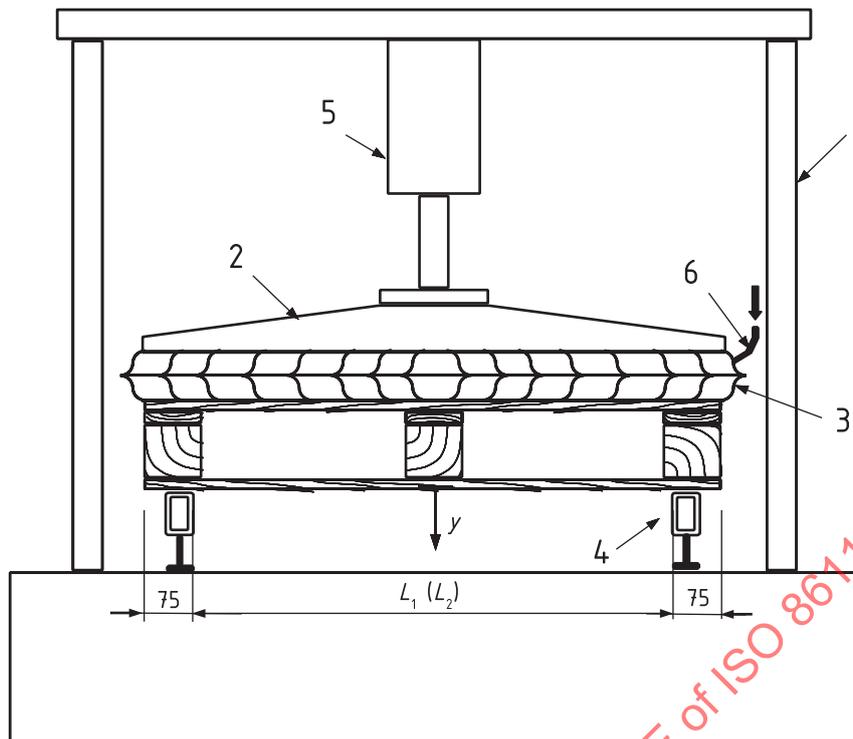**Key**

- | | | | |
|---|----------------|---|-----------------|
| 1 | test rig frame | 5 | load applicator |
| 2 | load platen | 6 | inflation tube |
| 3 | airbag | y | deflection |
| 4 | supports | | |

Figure 8 — Airbag bending tests using test rig

8.7.2.3 The size of a bag shall be such that, when inflated, the bag is in contact with the entire deck of the pallet. This is often possible with bags approximately 150 mm longer and wider than the top deck of the pallet to be tested.

8.7.2.4 Where bag sides overhang the pallet by more than 75 mm on either edge or end, an airbag support beam is necessary to maintain the bag overhang at the same level as the upper pallet deck during testing.

Where the load applied to the pallet is measured above the pallet during the test, the supports shown in [Figure 8](#) shall not be used and the bag should fit the pallet as described in [8.7.2.3](#).

8.7.2.5 The containment or working pressure in the bag shall be adequate to structurally fail all pallets to be tested. Experience indicates that the working pressure shall be at least 0,07 MPa to 0,08 MPa.

8.7.2.6 The stroke or level of expansion in bag height depends on the design of the testing apparatus. Where expansion varies along the centre or edges of the bag, the region of least expansion shall govern bag selection. In order to avoid the influence of bag stiffness on the test data, the bag expansion shall be at least twice that necessary to cause pallet failure. The pallet supports shall be positioned as described in [Figure 1](#) and shall be positioned with their centre lines 75 mm from the outer edges of the pallet.

8.7.2.7 Loading or testing rates shall be controlled by appropriately inflating the restrained airbag or by pressing the inflated airbag on to the upper pallet deck.

8.7.3 Measurement

8.7.3.1 Test 7a — Determination of bending strength

Increase the load until breakage occurs in one of the components of the pallet or until reaching an excessive deflection or deformation. Record the ultimate load and choose the minimum load among 3 replicates.

8.7.3.2 Test 7b — Determination of bending stiffness

Apply a datum load of $(1,5 \pm 0,5)$ % of the ultimate load determined in test 7a. Depending on the support location, the deflection, y , shall be measured at points A (maximum of y at A_1, A_2, A_3) or B (maximum of y at B_1, B_2, B_3)

- a) after positioning of datum load,
- b) immediately after the full test load is applied,
- c) at end of the full load period, and
- d) after the relaxation period.


8.8 Test 8 — Static shear test

8.8.1 Purpose

The purpose of this test is to simulate the approximate forces induced through lateral deck shear.

8.8.2 Procedure

Place the pallet vertically, top deck on the test frame, on a vertically positioned board with the same thickness as the deck boards. The length of the board shall be at least equal to the length or width of the tested pallet (see [Figure 9](#)). The load applicator at C touches the entire pallet length (or width) along the bottom deck. An alternative test method is to apply the same line load using a compression tester at point C; however, whenever this method is used, then the loading point C platen shall be restrained from movement in any plane other than vertical with $L_2 > 150$ mm.

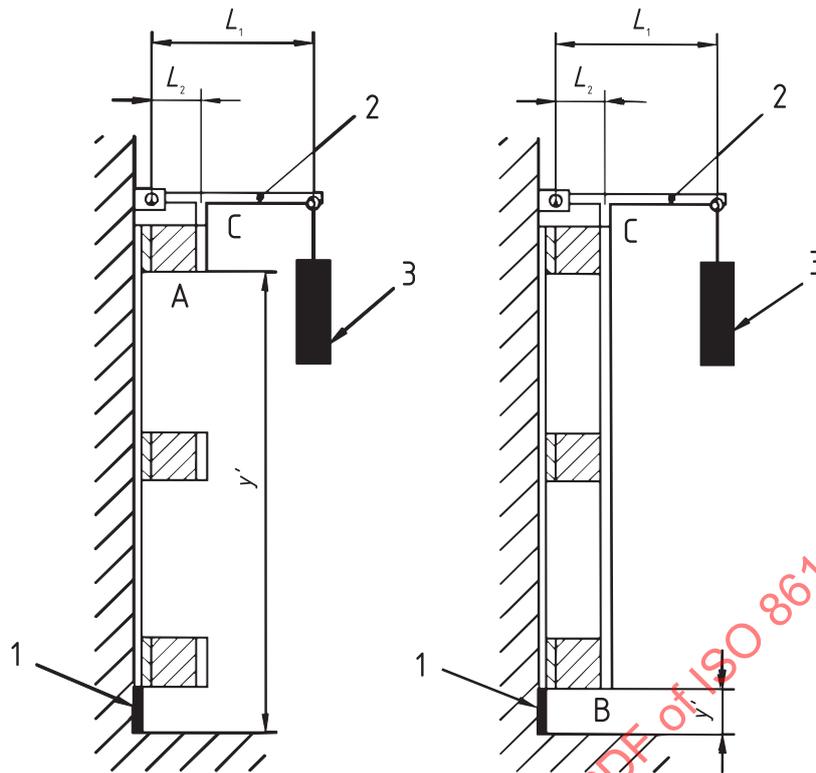

Key

- 1 support
- 2 load applicator
- 3 load W
- y' deflection
- A to C distortion measurement points

Figure 9 — Static shear test

8.8.3 Measurement

The applied test load at C, F , resulting from the application of load, W , gives rise to the vertical distortion which shall be measured at A or B, depending upon whether the pallet has a continuous bottom board. Distortion (change in y') shall be measured after release of load and after a relaxation period, as given by the following [Formula \(1\)](#):

$$F = \frac{L_1 \cdot W}{L_2} \tag{1}$$

where

- F is the applied test load;
- L_1, L_2 is the distance between pallet supports;
- W is the load.

8.9 Test 9 — Corner drop test


8.9.1 Purpose

The purpose of this test is to determine the diagonal rigidity of the top deck of the pallet and its resistance to impact.

8.9.2 Procedure

Mark the two measuring points, A and B, as shown in [Figure 10](#) at approximately 50 mm from the corners of the pallet. While suspending the pallet as shown in [Figure 10](#), drop the pallet freely on to its top deck corner edge from a height, h , on to a hard horizontal impact surface. Whenever possible, carry out the drop three times, always on the same corner and from the same height.

NOTE For asymmetric pallets, it is necessary for the tester to make a judgement as to the orientation of the pallet before dropping.

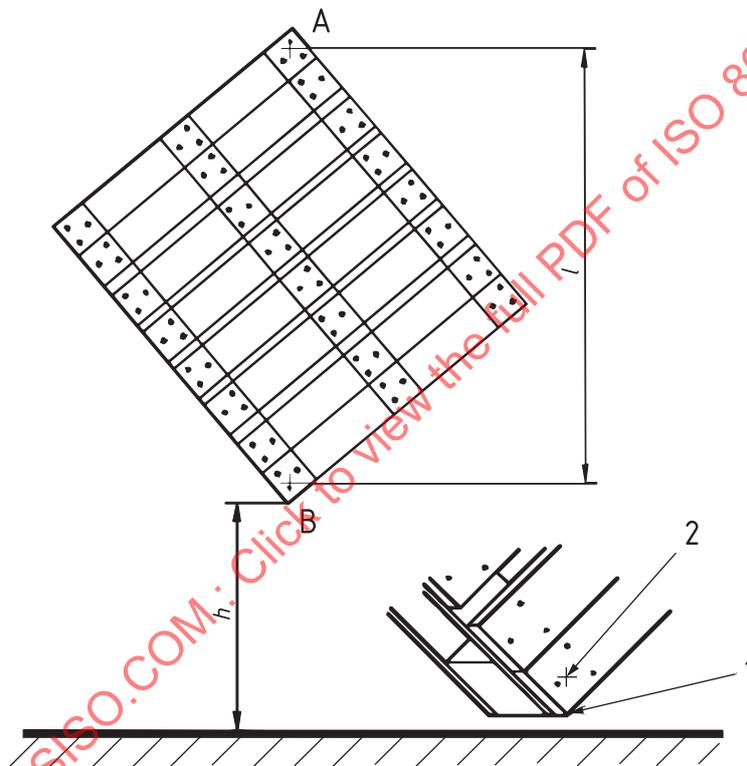

Key

- 1 pallet corner
- 2 measuring point
- h height (fall)
- l length of diagonal

Figure 10 — Corner drop test

8.9.3 Measurement

The length of diagonal, l , shall be measured before the first and after the third drop. Any damage shall be noted.

8.10 Test 10 — Shear impact tests

8.10.1 General

The test load comprises the dead load, a load-spreading sheet and a load box, having a plan size of (600 ± 50) mm \times (800 ± 50) mm. Place the load within the box, which shall be placed in a position dependent upon the individual test requirements described in 8.10.3 and 8.10.4. The detachable supporting edges shall be at least as long as the pallet deck under test. The test load shall not include the mass of the dolly.

For each of the inclined plane tests, before release the dolly is raised a distance, L , up the incline from the point of impact.

Inclined plane tests are potentially hazardous in view of large masses travelling at high speeds. The design of such test rigs shall incorporate special safety features to reduce risks to both operators and observers.

8.10.2 Purpose

The purpose of this test is to determine the resistance to side horizontal impacts of the assembly between the top deck, blocks, stringers, stringer boards and bottom deck.

8.10.3 Procedure

Secure a steel or high-density hardwood beam, (90 ± 10) mm \times (90 ± 10) mm in nominal cross-section and at least as long as the longer dimension of the pallet, to the face of the backstop. The upper edge of the barrier shall be 15 mm above the bottom surface of the pallet (top surface of the dolly) whenever the dolly is in its lowest position (see Figure 11).

Place the pallet on the dolly of the inclined plane testing machine such that when the forward edge of the pallet is resting against the barrier, the dolly is $25 \text{ mm} \pm 5 \text{ mm}$ clear of it.

The test load is distributed over the pallet deck surface with the exception of the leading 100 mm (which are left exposed) by means of a load-spreading sheet. This may conveniently comprise a sheet of strong plywood 18 mm to 25 mm thick, which is cut to cover all but the exposed strip, as shown in Figure 11.

NOTE The load-spreading sheet is often a sheet of plywood, which distributes load such that failures occur at the location of impact. This sheet is often necessary for testing paper pallets.


Attach the load box centrally on the pallet with the rest of the test load such that loading is central to the axis of movement down the rails, but biased towards the higher end of the pallet.

Bring the dolly and the loaded pallet up to a predetermined position on the incline at a distance, L , from the point of impact and release. Repeat as required.

Carry out a similar sequence of impacts along the second horizontal axis of the pallet.

8.10.4 Measurement

The distortion (x' and y') in X and Y planes and any damage shall be noted. The changes shall be recorded at a number of positions along the impacted surface.

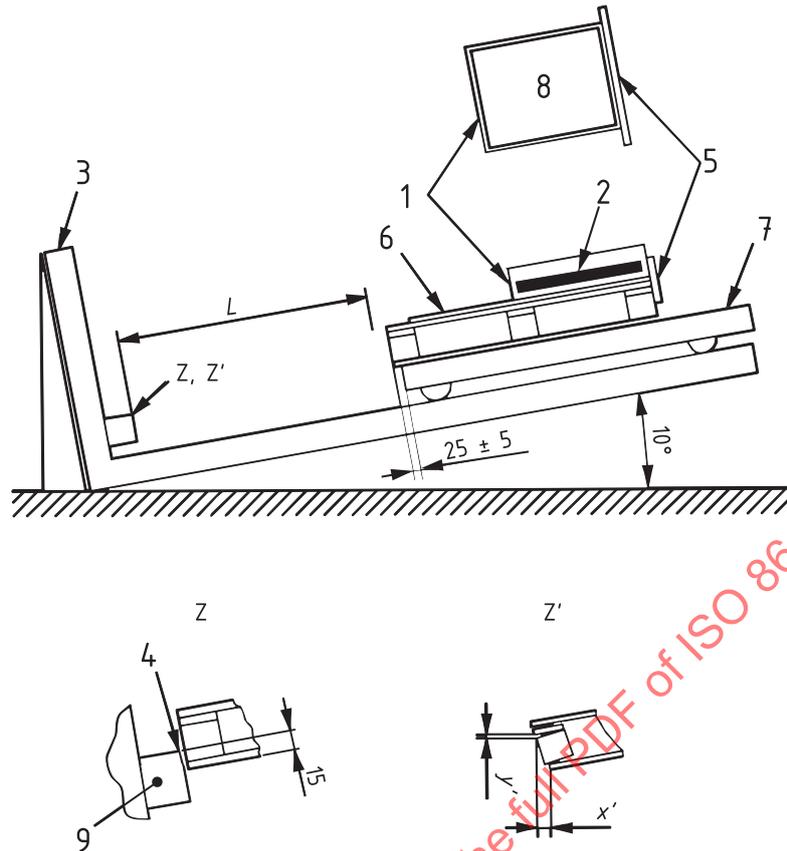

Key

- | | | | |
|---|---------------------------------|------|-----------------------|
| 1 | load box | 7 | dolly |
| 2 | test load | 8 | top view |
| 3 | backstop | 9 | barrier |
| 4 | line of impact 15 mm overlap | x' | distortion in X plane |
| 5 | detachable support for load box | y' | distortion in Y plane |
| 6 | load-spreading sheet | | |

Figure 11 — Shear impact test

8.11 Test 11 — Top deck edge impact test

8.11.1 Purpose

The purpose of this test is to determine the resistance of the top deck edge to side horizontal impacts by the fork arms of a forklift truck.

8.11.2 Procedure

The inclined plane tester described in [8.10.3](#) is used with the impact stops shown in [Figures 12](#) and [13](#).

Place the pallet, the load box and the spreading sheet with the test load on the dolly of the incline testing machine so that when the forward edge of the pallet is resting against the impact stops, the dolly is (25 ± 5) mm clear of it. The load shall be central to the axis of movement.

Align the impact stops with the fork openings of the pallet at a height that allows the leading edge to touch the stop surface of the blade at a point between $200 \text{ mm} \pm 25 \text{ mm}$ from the vertical face of the impact stops