

---

---

**Rubber compounding ingredients —  
Carbon black — Determination of oil  
absorption number (OAN) and oil  
absorption number of compressed  
sample (COAN)**

*Ingrédients de mélange de caoutchouc — Noir de carbone —  
Détermination de l'indice d'absorption d'huile (OAN) et de l'indice  
d'absorption d'huile d'échantillons comprimés (COAN)*

STANDARDSISO.COM : Click to view the full PDF of ISO 4656:2007



**PDF disclaimer**

This PDF file may contain embedded typefaces. In accordance with Adobe's licensing policy, this file may be printed or viewed but shall not be edited unless the typefaces which are embedded are licensed to and installed on the computer performing the editing. In downloading this file, parties accept therein the responsibility of not infringing Adobe's licensing policy. The ISO Central Secretariat accepts no liability in this area.

Adobe is a trademark of Adobe Systems Incorporated.

Details of the software products used to create this PDF file can be found in the General Info relative to the file; the PDF-creation parameters were optimized for printing. Every care has been taken to ensure that the file is suitable for use by ISO member bodies. In the unlikely event that a problem relating to it is found, please inform the Central Secretariat at the address given below.

STANDARDSISO.COM : Click to view the full PDF of ISO 4656:2007



**COPYRIGHT PROTECTED DOCUMENT**

© ISO 2007

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office  
Case postale 56 • CH-1211 Geneva 20  
Tel. + 41 22 749 01 11  
Fax + 41 22 749 09 47  
E-mail [copyright@iso.org](mailto:copyright@iso.org)  
Web [www.iso.org](http://www.iso.org)

Published in Switzerland

## Contents

Page

Foreword.....	iv
<b>1</b> <b>Scope</b> .....	<b>1</b>
<b>2</b> <b>Normative references</b> .....	<b>1</b>
<b>3</b> <b>Principle</b> .....	<b>1</b>
<b>4</b> <b>Reagents</b> .....	<b>2</b>
<b>5</b> <b>Apparatus</b> .....	<b>2</b>
<b>6</b> <b>Sample preparation</b> .....	<b>3</b>
<b>7</b> <b>Conditions of test</b> .....	<b>3</b>
<b>8</b> <b>Procedure</b> .....	<b>3</b>
<b>9</b> <b>Expression of results</b> .....	<b>5</b>
<b>10</b> <b>Precision and bias</b> .....	<b>5</b>
<b>11</b> <b>Test report</b> .....	<b>7</b>
<b>Annex A</b> (normative) <b>Preparation of compressed test portions</b> .....	<b>8</b>
<b>Annex B</b> (normative) <b>Checking and adjustment of torque and hydraulic damping</b> .....	<b>13</b>
<b>Annex C</b> (normative) <b>Checking of the constant-rate burette</b> .....	<b>15</b>

STANDARDSISO.COM : Click to view the full PDF of ISO 4656:2007

## Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 4656 was prepared by Technical Committee ISO/TC 45, *Rubber and rubber products*, Subcommittee SC 3, *Raw materials (including latex) for use in the rubber industry*.

This edition of ISO 4656 cancels and replaces ISO 4656-1:1992 and ISO 4656-2:1991, as well as ISO 6894:1991. The scope of the method has been widened to allow the use of paraffin oil in addition to dibutyl phthalate. New equipment has been added and a number of other, minor, changes have been made.

STANDARDSISO.COM : Click to view the full PDF of ISO 4656:2007

# Rubber compounding ingredients — Carbon black — Determination of oil absorption number (OAN) and oil absorption number of compressed sample (COAN)

**WARNING** — Persons using this International Standard should be familiar with normal laboratory practice. This standard does not purport to address all of the safety problems, if any, associated with its use. It is the responsibility of the user to establish appropriate safety and health practices and to ensure compliance with any national regulatory conditions.

## 1 Scope

Oil absorption number (OAN) is a measure of the ability of a carbon black to absorb liquids. This property is a function of the structure of the carbon black. Either dibutyl phthalate (DBP) or paraffin oil is acceptable for use with standard pelleted grades, including N-series carbon blacks found in ASTM D 1765, although OAN testing using paraffin oil on some speciality blacks and powder blacks may result in unacceptable differences as compared to OAN testing using DBP oil. While studies have shown the two oils to give comparable precision, paraffin oil offers the advantage of being non-hazardous.

This International Standard specifies a method using an absorptometer for the determination of the oil absorption number of carbon black for use in the rubber industry.

The same method is used for the determination of the oil absorption number of compressed samples of carbon black. The procedure for the preparation of the compressed samples is described in Annex A.

## 2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 1126, *Rubber compounding ingredients — Carbon black — Determination of loss on heating*

ISO/TR 9272:2005, *Rubber and rubber products — Determination of precision for test method standards*

ASTM D 1765, *Standard Classification System for Carbon Blacks Used in Rubber Products*

ASTM D 4821, *Standard Guide for Carbon Black — Validation of Test Method Precision and Bias*

## 3 Principle

Oil is added to a test portion of the carbon black which is kept in motion by means of rotating blades. As the liquid is added, the mixture changes from a free-flowing powder to a semi-plastic mass. The end-point for the determination is reached when the torque resulting from this change in viscous properties attains either a preset value or a defined percentage of the maximum torque, calculated from the recorded torque curve.

## 4 Reagents

4.1 **Dibutyl phthalate**,  $\rho_{25} = 1,042 \text{ Mg/m}^3$  to  $1,047 \text{ Mg/m}^3$ ;

or

4.2 **Paraffin oil**, having a kinematic viscosity of  $10 \text{ mm}^2/\text{s}$  to  $34 \text{ mm}^2/\text{s}$  ( $10 \text{ cSt}$  to  $34 \text{ cSt}$ ) at  $40 \text{ }^\circ\text{C}$ .

4.3 **Standard reference blacks (SRBs)**.<sup>1)</sup>

## 5 Apparatus

5.1 **Absorptometer**<sup>2)</sup>, consisting of the elements given in 5.2 to 5.5.

Two different basic kinds of absorptometer are in use:

- a) electronic models (types C, E and DABS), equipped with a load cell and a digital torque indicator;
- b) mechanical models (types A and B), which are older models based on springs and mechanical torque indicators.

Even though the mechanical instruments are no longer commercially available, they may still be used.

5.2 **Mixing chamber**, stainless steel.

Other chamber materials, such as soft- or hard-anodized aluminium, are acceptable provided they give an acceptable reading for SRB-F after calibration (see 8.2.9). The surface finish of the mixing chamber is critical for the maintenance of proper calibration, and the mixing chamber shall not be modified to achieve calibration.

NOTE It is recommended that new replacement chambers be pre-polished for 16 h to minimize the effects of chamber surface changes on calibration during their initial use.

5.3 **Motor-driven rotors**, which fit into the mixing chamber (5.2) and rotate at a frequency of  $13 \text{ rad/s}$  ( $125 \text{ rpm}$ ).

5.4 **Torque-sensing device**, consisting of a load cell for measuring the torque curve.

Absorptometers of types C and DABS have an integrated data acquisition system for recording the torque curve and calculating the endpoint. A type E absorptometer can be equipped with an external data acquisition system<sup>3)</sup>. Absorptometers of types A and B use a spring and a dashpot having a damper control valve operating a torque limit switch which automatically stops the rotors (5.3) and the burette (5.5) when a preselected torque is reached. Instructions for checking and adjusting the settings are given in Annex B.

---

1) Standard reference blacks are available from Laboratory Standards and Technologies, 227 Somerset Street, Borger, TX 79007, USA, Tel/Fax: + 1 806 273 3006, E-mail: wesb@cableone.net, Web site: [www.carbonstandard.com](http://www.carbonstandard.com). This information is given for the convenience of users of this International Standard and does not constitute an endorsement by ISO of the products produced by this company.

2) Suitable apparatus is available from Brabender GmbH & Co KG, Kulturstr. 51-55, 47055 Duisburg, Germany, Tel: + 49 203 7788-0, Fax: + 49 203 7788-100, E-mail: [brabender@brabender.com](mailto:brabender@brabender.com), Web site: [www.brabender.com](http://www.brabender.com), and from HITEC Luxembourg, 5, rue de l'Église, L-1458 Luxembourg, Tel: + 352 49 84 78, Fax: + 352 40 13 03, E-mail: [info@hitec.lu](mailto:info@hitec.lu), Web site: [www.hitec.lu](http://www.hitec.lu). This information is given for the convenience of users of this International Standard and does not constitute an endorsement by ISO of the apparatus named. Equivalent apparatus may be used if it can be shown to lead to the same results.

3) This apparatus is commercially available from HITEC, Luxembourg, (see Footnote 2). This information is given for the convenience of users of this International Standard and does not constitute an endorsement by ISO of the product named. Equivalent products may be used if they can be shown to lead to the same results.

**5.5 Constant-rate burette**, pre-set to deliver oil at a rate of  $(0,067 \pm 0,000 4) \text{ cm}^3/\text{s}$  [ $(4,0 \pm 0,025) \text{ cm}^3/\text{min}$ ]. Instructions for checking the burette are given in Annex C.

**5.6 Oven**, gravity-convection type, capable of temperature regulation to within  $\pm 1 \text{ }^\circ\text{C}$  at  $125 \text{ }^\circ\text{C}$  and temperature uniformity within  $\pm 5 \text{ }^\circ\text{C}$ .

**5.7 Balance**, accurate to 10 mg.

**5.8 Desiccator**.

**5.9 Spatula**, made from soft material to avoid scratching the mixing chamber.

## 6 Sample preparation

Dry the mass of carbon black specified in 8.3 for 1 h in the oven (5.6) set at  $125 \text{ }^\circ\text{C}$ , using the drying procedure specified in ISO 1126. Allow to cool to ambient temperature in the desiccator (5.8). Keep the dried sample in the desiccator until ready for testing.

## 7 Conditions of test

The test should preferably be carried out at a temperature of  $23 \text{ }^\circ\text{C} \pm 5 \text{ }^\circ\text{C}$ . The temperature of the mixing chamber should be kept below  $30 \text{ }^\circ\text{C}$ .

## 8 Procedure

### 8.1 Checking of the absorptometer and constant-rate burette

Proceed as described in Annexes B and C.

### 8.2 Calibration and normalization of the absorptometer

**8.2.1** Follow the procedure specified in 8.3 and 8.4, using one series of standard reference blacks (SRBs) as indicated in ASTM D 4821. Each standard reference black shall be tested a sufficient number of times to establish firm measured values.

Certain semi-reinforcing carbon blacks, i.e. blacks of the N500, N600 and N700 series and thermal blacks (N900), may fail to give an end-point due to insufficient torque level. Therefore the preferred method for testing soft-grade blacks is to record the torque curve using a pen-writer or a data acquisition system and to read the end-point at 70 % of the maximum of the curve. If this approach is applied, make sure that the calibration is performed in the same way.

**8.2.2** Test the six standard reference blacks in duplicate to establish the average measured value. Additional values are added periodically on a weekly basis. The rolling average of the measured values is computed from the latest four values.

**NOTE** When only highly reinforcing or semi-reinforcing carbon blacks are tested, the calibration can be limited to either the three hard-grade carbon black standards (A, B, C) or the three soft-grade standards (D, E, F).

**8.2.3** Perform a regression analysis using the standard value of the carbon black standard ( $y$ -value) and the rolling average of the measured value ( $x$ -value). It is recommended that separate soft- and hard-black calibration curves be maintained.

8.2.4 Normalize the values of all subsequent determinations as follows:

$$\text{Normalized value} = (\text{measured value} \times \text{slope}) + y\text{-intercept}$$

8.2.5 Alternatively, a table of numbers may be generated, based on the regression equation, to find the correspondence between a measured and calibrated value.

8.2.6 For SRBs that consistently give measured values which are outside the expected variability, the test apparatus shall be recalibrated.

8.2.7 When any absorptometer or calibration changes occur, a new calibration curve shall be initiated as described in 8.2.1.

8.2.8 In most instances, if proper calibration cannot be achieved by following 8.2.2 to 8.2.5, it will be necessary to replace the mixer chamber with one having a better surface finish.

8.2.9 Adjust the torque-limit switch in such a way that the F-grade of the SRB series in use gives a value within its acceptable range [SRB F5:  $(129,5 \pm 1,5) \text{ cm}^3/100 \text{ g}$ ; SRB F6:  $(133,6 \pm 3,3) \text{ cm}^3/100 \text{ g}$ ; SRB F7:  $(129,3 \pm 2,0) \text{ cm}^3/100 \text{ g}$ ]. After calibration, this setting shall not be changed.

8.2.10 Note that, for type C, E and DABS absorptometers:

- the torque-sensing system is preset at 3 s damping;
- if a data acquisition system is used, the values of subsequent determinations are automatically corrected by the software.

8.2.11 For type A and B absorptometers:

- check that the speed selector (if fitted) of the torque-recording instrument is in the correct position;
- it is mandatory to apply the normalization as described in 8.2.2 to 8.2.9 for the calculation of the correct values of the oil absorption number.

### 8.3 Test portion

#### 8.3.1 OAN determinations

Weigh out, to the nearest 20 mg, a mass of dried carbon black in accordance with Table 1.

Table 1 — Mass of test portion

Type of carbon black	Mass of test portion g
N630, N642, N700 series, except N765	25
N800 and N900 series and SRB D7	40
All other types (including N765)	20

With high-bulk-density blacks which do not sufficiently fill the mixing chamber, it may be necessary to use a larger test portion of carbon black, so that enough torque is developed to activate the torque limit switch.

#### 8.3.2 COAN determinations

See Annex A.

## 8.4 Determination

**8.4.1** Transfer the test portion (see 8.3) to the mixing chamber of the absorptometer, calibrated as specified in 8.2.

**8.4.2** Replace the mixing-chamber cover.

**8.4.3** Check the reagent flow by swinging the delivery tube over the waste container and switching on. The burette (5.5) shall deliver an air-free stream of the oil (4.1 or 4.2), and the delivery tube shall be free of air bubbles. Switch off. Re-centre the delivery tube over the mixing chamber and switch to "automatic feed".

**8.4.4** Set the burette counter to zero. If a data acquisition system is used, this is done automatically by the system.

**8.4.5** Press the start button.

**8.4.6** Record the burette counter reading after the instrument has stopped.

**8.4.7** Dismantle the mixing chamber and clean the blades of the rotors (5.3) and the mixing chamber with the spatula (5.9).

NOTE The cleaning process may be simplified by adding some dry black and operating the absorptometer before dismantling while re-filling the burette.

**8.4.8** Re-assemble the mixing chamber.

## 9 Expression of results

The oil absorption number OAN (or COAN, if the sample has been compressed prior to the test) of the carbon black, expressed in cubic centimetres per 100 g, is given by the following equation:

$$\text{OAN (or COAN)} = \frac{V}{m} \times 100$$

where

$V$  is the volume, in cubic centimetres, of oil used (see 8.4.6);

$m$  is the mass, in grams, of the test portion (see 8.3).

Normalize the measured value using the equation in 8.2.4.

## 10 Precision and bias

### 10.1 Precision

**10.1.1** The precision of this test method was determined in accordance with ISO/TR 9272:2005, level 2 method. Refer to ISO/TR 9272:2005 for terminology and other statistical details.

**10.1.2** The precision results give an estimate of the precision to be expected. The precision parameters shall not be used for acceptance/rejection testing of any group of materials without documentation that they are applicable to those particular materials and the specific testing protocols that include this test method.

**10.1.3** A type 1 precision interlaboratory-trials programme was conducted. Both the repeatability and the reproducibility determined represent short-term testing conditions.

For OAN, 16 laboratories tested two carbon blacks twice on each of two different days. Therefore  $p = 16$ ,  $q = 2$  and  $n = 4$ .

For COAN, 15 laboratories tested two carbon blacks twice on each of two different days. Therefore,  $p = 15$ ,  $q = 2$  and  $n = 4$ .

A test result is the value obtained from a single determination. Acceptable difference values were not measured.

**10.1.4** The results of the precision calculations are given in Table 2 (OAN) and Table 3 (COAN), with the materials arranged in descending order of mean oil absorption number. Outliers have been removed. The number of laboratories remaining after outlier deletion is given in Tables 2 and 3.

**Table 2 — Oil absorption number (OAN)**

Material	Number of laboratories	Mean OAN cm <sup>3</sup> /100 g	Within-laboratory			Between laboratories		
			$s_r$	$r$	( $r$ )	$s_R$	$R$	( $R$ )
A (N220)	13	113,6	0,37	1,04	0,92	0,77	2,17	1,91
B (N762)	13	67,5	0,47	1,33	1,97	1,14	3,24	4,79
Average value	13	90,6						
Pooled values			0,42	1,20	1,54	0,98	2,76	3,65

The symbols used are defined as follows:

- $s_r$  is the within-laboratory standard deviation;
- $r$  is the repeatability (in measurement units);
- ( $r$ ) is the repeatability (in percent);
- $s_R$  is the between-laboratory standard deviation;
- $R$  is the reproducibility (in measurement units);
- ( $R$ ) is the reproducibility (in percent).

**Table 3 — Oil absorption number of compressed sample (COAN)**

Material	Number of laboratories	Mean COAN cm <sup>3</sup> /100 g	Within-laboratory			Between laboratories		
			$s_r$	$r$	( $r$ )	$s_R$	$R$	( $R$ )
A (N220)	11	98,0	0,33	0,94	0,96	0,54	1,54	1,57
B (N762)	11	60,0	0,42	1,19	1,99	1,12	3,16	5,27
Average value	11	79,0						
Pooled values			0,38	1,07	1,56	0,88	2,49	3,89

The symbols used are defined as follows:

- $s_r$  is the within-laboratory standard deviation;
- $r$  is the repeatability (in measurement units);
- ( $r$ ) is the repeatability (in percent);
- $s_R$  is the between-laboratory standard deviation;
- $R$  is the reproducibility (in measurement units);
- ( $R$ ) is the reproducibility (in percent).

**10.1.5** The precision for the pooled values of the oil absorption number may be expressed as follows:

a) Repeatability

The repeatability  $r$  has been established as 1,2 cm<sup>3</sup>/100 g for OAN and 1,07 cm<sup>3</sup>/100 g for COAN. Two single test results (or determinations) that differ by more than 1,2 cm<sup>3</sup>/100 g (for OAN) or 1,07 cm<sup>3</sup>/100 g (for COAN) shall be considered suspect and dictate that some appropriate investigative action be taken.

b) Reproducibility

The reproducibility  $R$  has been established as 2,76 cm<sup>3</sup>/100 g for OAN and 2,49 cm<sup>3</sup>/100 g for COAN. Two single test results (or determinations), produced in separate laboratories, that differ by more than 2,76 cm<sup>3</sup>/100 g (for OAN) or 2,49 cm<sup>3</sup>/100 g (for COAN) shall be considered suspect and dictate that some appropriate investigative action be taken.

## 10.2 Bias

In test method terminology, bias is the difference between an average test value and a reference (true) test property value. Reference values do not exist for this test method since the value of the test property is exclusively defined by the test method. Bias, therefore, cannot be determined.

## 11 Test report

The test report shall include the following particulars:

- a) a reference to this International Standard;
- b) all details necessary for the complete identification of the sample;
- c) the drying temperature used (125 °C);
- d) whether the carbon black was compressed before testing (COAN) or not (OAN);
- e) the conditions of test;
- f) the mass of the test portion used;
- g) the method used for the determination of the end-point (fixed torque-limit switch setting or 70 % of maximum torque);
- h) the value of the torque-limit switch setting;
- i) the results obtained from the individual determinations, and their average;
- j) the date of the test.

## Annex A (normative)

### Preparation of compressed test portions

#### A.1 Scope

This annex specifies procedures for the preparation of samples for the determination of the oil absorption number of compressed samples of carbon black for use in the rubber industry.

#### A.2 Principle

A quantity of dry carbon black is compressed four times at a pressure of 165 MPa and then the oil absorption number is determined as described in this International Standard.

#### A.3 Apparatus

**A.3.1 Balance**, accurate to 10 mg.

**A.3.2 Oven**, gravity-convection type, capable of temperature regulation to within  $\pm 1$  °C at 125 °C and temperature uniformity within  $\pm 5$  °C.

**A.3.3 Compression cylinder and piston** (type A or B).

**A.3.4 Hydraulic press**, electrically operated, having sufficient power to force the piston into the cylinder during compression of the sample at a rate of 4,2 mm/s and to attain a final pressure of 165 MPa on the sample.

**A.3.5 Spatula**.

**A.3.6 Steel beaker**.

**A.3.7 Sieve**, 850  $\mu\text{m}$  mesh.

**A.3.8 Brush**, 38 mm stiff bristle.

**A.3.9 Desiccator**.

#### A.4 Sample preparation

Dry an adequate amount of the sample of carbon black for 1 h in the oven (A.3.2) set at 125 °C. Allow to cool to ambient temperature in the desiccator (A.3.9).

## A.5 Procedure

### A.5.1 Procedure using type A compression cylinder (see Figure A.1)

**A.5.1.1** Place the bottom seal plate and the compression cylinder (A.3.3) in the correct position in the hydraulic press (A.3.4). Move the handle of the seal plate to check its position in the support plate. Rotate the cylinder to be certain it fits on the seal plate.


**A.5.1.2** For all grades except SRB D7, weigh out  $25 \text{ g} \pm 0,1 \text{ g}$  of the dried carbon black (see Clause A.4). For SRB D7, weigh out  $45 \text{ g} \pm 0,1 \text{ g}$ .

**A.5.1.3** Pour this sample into the compression cylinder.

**A.5.1.4** Place the piston in the cylinder with the nylon spacer next to the carbon black. Rotate the piston slightly while pressing it by hand into the cylinder as far as possible.

**A.5.1.5** Adjust alignment of the piston, cylinder and power ram to maintain freedom of movement.

Dimensions in millimetres

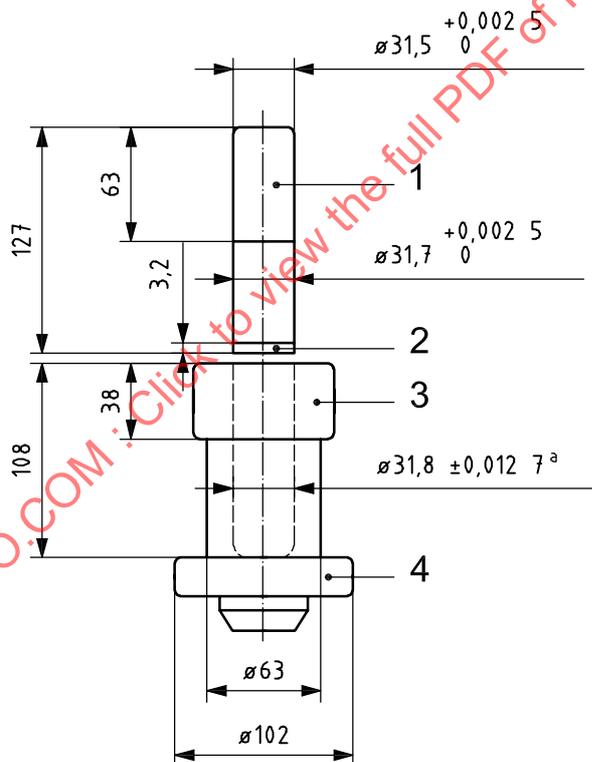

#### Key

- 1 piston
- 2 nylon spacer
- 3 cylinder
- 4 bottom seal plate

<sup>a</sup> Inside diameter (inside finish  $0,304 \text{ 8 } \mu\text{m}$ ).

**Figure A.1 — Essential features of type A compression cylinder and piston**

**A.5.1.6** Compress the black to 165 MPa. Make certain full pressure is applied, hold for 1 s, then release.

NOTE The oil gauge pressure level is dependent on the bore diameter of the hydraulic cylinder and the surface area of the end of the ram. For the ENERPAC RC256<sup>4)</sup> single-acting cylinder, the oil pressure required to compress the black to 165 MPa (24 000 psi) is 5 710 psi and for the double-acting RR308 it is 4 357 psi, giving 131 kN (29 450 lbf) on the piston of 7,916 cm<sup>2</sup> area.

**A.5.1.7** Raise the power ram enough to remove the bottom seal plate. Then lower the ram to press the piston and carbon black through the cylinder into the steel beaker (A.3.6).

**A.5.1.8** Wipe the cylinder, piston and bottom seal plate free of carbon black dust and replace the bottom seal plate and cylinder in the press stand as described in A.5.1.1.

**A.5.1.9** Break up the carbon black with the spatula (A.3.5) so that the largest agglomerate is 0,25 cm wide. Brush the compressed black through the sieve (A.3.7) into the receiver pan and pour the black back into the cylinder. Ensure that no black is lost during this procedure.

**A.5.1.10** Repeat A.5.1.4 to A.5.1.9, compressing the carbon black a total of four times. Retain the black after the fourth compression. If the compressed black is not to be tested within 15 min after compression, store it in the desiccator (A.3.9), or re-dry it for 1 h at 125 °C as specified in Clause A.4 prior to testing.

**A.5.1.11** For all grades except SRB D7, weigh out, to the nearest 0,01 g,  $20 \text{ g} \pm 0,02 \text{ g}$  of the compressed carbon black for use as the test portion. For SRB D7, weigh out  $40 \text{ g} \pm 0,02 \text{ g}$ .

## **A.5.2 Procedure using type B compression cylinder** (see Figure A.2)

**A.5.2.1** For all grades except SRB D7, weigh out  $25 \text{ g} \pm 0,1 \text{ g}$  of the dried carbon black (see Clause A.4). For SRB D7, weigh out  $45 \text{ g} \pm 0,1 \text{ g}$ .

**A.5.2.2** Pour the carbon black into the compression cylinder.

**A.5.2.3** Compress the black to 165 MPa by operating the ram using a downward movement to open the right-hand valve. Press until the gauge located above the apparatus reaches 103 MPa (15 000 psi) and release immediately.

NOTE The oil gauge pressure level is dependent on the base diameter of the hydraulic cylinder and the cross-sectional area of the piston. For this apparatus, 103 MPa (15 000 psi) on the gauge exerts 165 MPa on the piston.

**A.5.2.4** Raise the ram by operating the right-hand valve in an upwards direction. Continue until the ram is approximately 4 cm clear of the cylinder, i.e. level with the top of the conical collar.

**A.5.2.5** Raise the cylinder piston by operating the left-hand valve in an upwards direction. Continue until the compressed sample is clear of the cylinder and is broken by contact with the raised ram. The carbon black will fall into the conical collar.

**A.5.2.6** Break up the carbon black with a spatula, so that the largest agglomerate is 0,25 cm wide. Ensure that no black is lost during this procedure.

**A.5.2.7** Lower the piston and allow the black to fall back into the cylinder. If necessary, brush the inside of the collar with the brush (A.3.8) to return all the black to the cylinder.


**A.5.2.8** Repeat steps A.5.2.3 to A.5.2.7 on a further two occasions.

**A.5.2.9** Remove the collar and repeat step A.5.2.3 once again.

---

4) ENERPAC RC256 and RR308 are the trade names of equipment supplied by ENERPAC. This information is given for the convenience of users of this International Standard and does not constitute an endorsement by ISO of the equipment named. Equivalent equipment may be used if it can be shown to lead to the same results.

Dimensions in millimetres

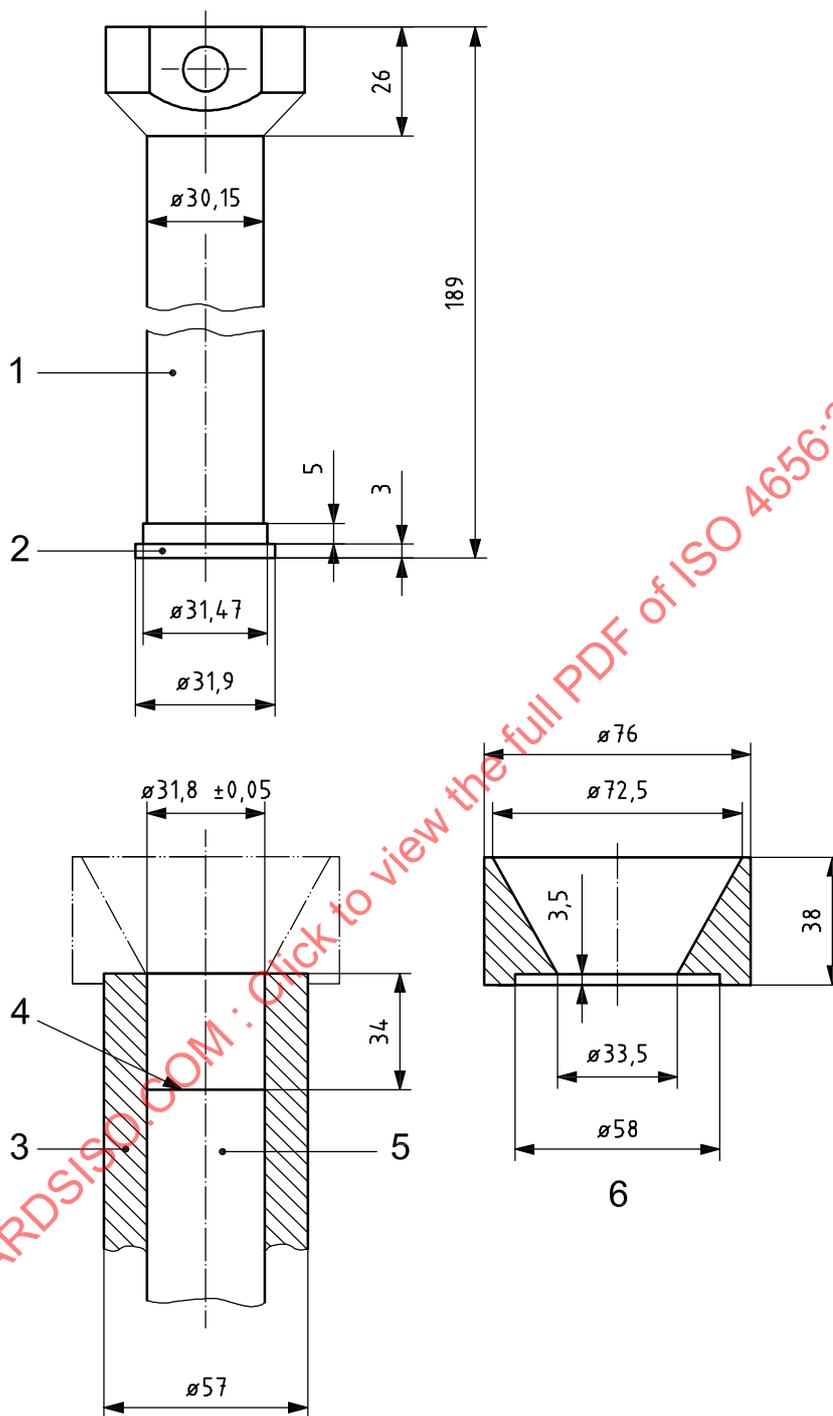

**Key**

- 1 piston
- 2 nylon spacer
- 3 cylinder
- 4 top
- 5 ejection piston
- 6 loading funnel

**Figure A.2 — Essential features of type B compression cylinder and piston**

**A.5.2.10** Raise the ram to its top position using the right-hand valve control.

**A.5.2.11** Push the carbon black out of the cylinder by raising the piston using the left-hand valve control.

**A.5.2.12** Return the piston to its low position by using the left-hand valve control.

**A.5.2.13** Transfer the black to the steel beaker. If the compressed black is not to be tested within 15 min after compression, store it in the desiccator (A.3.9), or re-dry it for 1 h at 125 °C as specified in Clause A.4 prior to testing.

**A.5.2.14** For all grades except SRB D7, weigh out, to the nearest 0,01 g,  $20 \text{ g} \pm 0,02 \text{ g}$  of the compressed carbon black for use as the test portion. For SRB D7, weigh out  $40 \text{ g} \pm 0,02 \text{ g}$ .

## A.6 Additional information

Data on the oil absorption number of a compressed sample of standard reference black are given in ASTM D 4821.

It is important to check results obtained on a standard reference black known to be near to that of the sample, to ensure that the result is within the required range.

STANDARDSISO.COM : Click to view the full PDF of ISO 4656:2007

## Annex B (normative)

### Checking and adjustment of torque and hydraulic damping

#### B.1 Electronic absorptometers — Types C, E and DABS

Electronic absorptometers are calibrated by the manufacturer to give a direct reading of torque in mN·m. This calibration shall not be modified in order to achieve a desired level of torque. If recalibration is necessary, refer to the instrument manufacturer's recommendations.

#### B.2 Mechanical absorptometer — Type A

##### B.2.1 Apparatus

**B.2.1.1 Spring scale**, range 0 N to 150 N.

**B.2.1.2 String**, of length 450 mm, looped at each end.

**B.2.1.3 Torque shaft gauge**.

**B.2.1.4 Stop-watch**.

##### B.2.2 Checking

Secure the loop at one end of the string (B.2.1.2) to the nut protruding from the rear of the differential dynamometer. Wrap the string twice around the dynamometer body in the counter-clockwise direction.

Slip the hook at the bottom of the spring scale (B.2.1.1) into the free loop of the string.

Set the manual/automatic switch to "automatic". Start the absorptometer and set the torque-limit switch to 5.

Apply a constant upward pull to the spring scale until the torque indicator reaches 0 and the instrument shuts off.

Read the force applied by the spring scale.

If the indicated force is between 80 N and 90 N, the setting is satisfactory.

##### B.2.3 Adjustment of the spring

If the instrument has been dismantled since it was manufactured, check the position of the dynamometer coupling collar and the torque shaft mass and relocate if necessary. Do this by fitting the gauge (B.2.1.3) between the dynamometer coupling collar and the spring support block. Adjust by raising or lowering the dynamometer collar as necessary to conform to the dimensions of the gauge. Check for the proper height of the torque shaft by inverting the gauge and placing it on top of the torque shaft and spring support block.

Adjust the height by loosening the dynamometer collar and the stop collar and sliding the torque shaft up or down, as necessary.

If the spring scale reading is too high, this is an indication of excessive friction or improper torque spring adjustment. Check the entire system for insufficient lubrication, worn gears, dry bearings or binding in the