

---

---

**Health and safety in welding and allied  
processes — Sampling of airborne  
particles and gases in the operator's  
breathing zone —**

**Part 1:  
Sampling of airborne particles**

*Hygiène et sécurité en soudage et techniques connexes —  
Échantillonnage des particules en suspension et des gaz dans la zone  
respiratoire des opérateurs —*

*Partie 1: Échantillonnage des particules en suspension*



STANDARDSISO.COM : Click to view the full PDF of ISO 10882-1:2011



**COPYRIGHT PROTECTED DOCUMENT**

© ISO 2011

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office  
Case postale 56 • CH-1211 Geneva 20  
Tel. + 41 22 749 01 11  
Fax + 41 22 749 09 47  
E-mail [copyright@iso.org](mailto:copyright@iso.org)  
Web [www.iso.org](http://www.iso.org)

Published in Switzerland

# Contents

Page

Foreword .....	iv
Introduction.....	v
<b>1</b> <b>Scope</b> .....	<b>1</b>
<b>2</b> <b>Normative references</b> .....	<b>1</b>
<b>3</b> <b>Terms and definitions</b> .....	<b>2</b>
<b>3.1</b> <b>General definitions</b> .....	<b>2</b>
<b>3.2</b> <b>Sampling definitions</b> .....	<b>3</b>
<b>3.3</b> <b>Welding terms</b> .....	<b>5</b>
<b>3.4</b> <b>Statistical terms</b> .....	<b>7</b>
<b>4</b> <b>Principle</b> .....	<b>8</b>
<b>5</b> <b>Requirement</b> .....	<b>9</b>
<b>6</b> <b>Equipment</b> .....	<b>9</b>
<b>6.1</b> <b>Sampling equipment</b> .....	<b>9</b>
<b>6.2</b> <b>Weighing equipment, if required</b> .....	<b>10</b>
<b>7</b> <b>Assessment strategy</b> .....	<b>11</b>
<b>8</b> <b>Measurement strategy</b> .....	<b>11</b>
<b>8.1</b> <b>General</b> .....	<b>11</b>
<b>8.2</b> <b>Personal exposure measurement</b> .....	<b>11</b>
<b>8.3</b> <b>Fixed-point measurements</b> .....	<b>11</b>
<b>8.4</b> <b>Selection of measurement conditions and measurement pattern</b> .....	<b>12</b>
<b>9</b> <b>Procedure</b> .....	<b>13</b>
<b>9.1</b> <b>Preliminary considerations</b> .....	<b>13</b>
<b>9.2</b> <b>Preparation for sampling</b> .....	<b>14</b>
<b>9.3</b> <b>Sampling position</b> .....	<b>15</b>
<b>9.4</b> <b>Sampling</b> .....	<b>15</b>
<b>9.5</b> <b>Transportation</b> .....	<b>16</b>
<b>9.6</b> <b>Analysis</b> .....	<b>16</b>
<b>9.7</b> <b>Expression of results</b> .....	<b>17</b>
<b>10</b> <b>Exposure assessment</b> .....	<b>18</b>
<b>11</b> <b>Recording of sampling data and presentation of results</b> .....	<b>18</b>
<b>Annex A</b> (normative) <b>Gravimetric analysis</b> .....	<b>19</b>
<b>Annex B</b> (informative) <b>Examples of arrangements for mounting samplers behind welder's face shields</b> .....	<b>21</b>
<b>Annex C</b> (informative) <b>An example of a report</b> .....	<b>28</b>
<b>Annex D</b> (informative) <b>Blank report form</b> .....	<b>31</b>
<b>Bibliography</b> .....	<b>34</b>

## Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 10882-1 was prepared by Technical Committee ISO/TC 44, *Welding and allied processes*, Subcommittee SC 9, *Health and safety*.

This second edition cancels and replaces the first edition (ISO 10882-1:2001), which has been technically revised.

ISO 10882 consists of the following parts, under the general title *Health and safety in welding and allied processes — Sampling of airborne particles and gases in the operator's breathing zone*:

- *Part 1: Sampling of airborne particles*
- *Part 2: Sampling of gases*

Requests for official interpretations of any aspect of this part of ISO 10882 should be directed to the Secretariat of ISO/TC 44/SC 9 via your national standards body. A complete listing of these bodies can be found at [www.iso.org](http://www.iso.org).

## Introduction

The health of workers in many industries is at risk through exposure by inhalation to airborne particles generated by welding and allied processes (welding fume) and other airborne particles generated by welding-related operations, e.g. grinding. Industrial hygienists and other public health professionals need to determine the effectiveness of measures taken to control workers' exposure to these harmful substances and this is generally achieved by making personal exposure measurements.

This part of ISO 10882 specifies a sampling method for welding fume and airborne particles generated by welding-related operations for the purpose of making personal exposure measurements in the operator's breathing zone. It is intended to be of benefit to: agencies concerned with health and safety at work, industrial hygienists and other public health professionals, industrial users of welding and allied processes and their workers, and analytical laboratories.

It has been assumed in the drafting of this part of ISO 10882 that the execution of its provisions, and the interpretation of the results obtained, is entrusted to appropriately qualified and experienced people.

STANDARDSISO.COM : Click to view the full PDF of ISO 10882-1:2011

[STANDARDSISO.COM](https://standardsiso.com) : Click to view the full PDF of ISO 10882-1:2017

# Health and safety in welding and allied processes — Sampling of airborne particles and gases in the operator's breathing zone —

## Part 1: Sampling of airborne particles

### 1 Scope

This part of ISO 10882 specifies a procedure for sampling airborne particles in the breathing zone of a person who performs welding and allied processes (the operator). It also provides details of relevant standards that specify required characteristics, performance requirements and test methods for workplace air measurement, and augments guidance provided in EN 689 on assessment strategy and measurement strategy. This part of ISO 10882 also specifies a procedure for making gravimetric measurements of personal exposure to airborne particles generated by welding and allied processes (welding fume) and other airborne particles generated by welding-related operations. Additionally, it provides references to suitable methods of chemical analysis, specified in other standards, to determine personal exposure to specific chemical agents present in welding fume and other airborne particles generated by welding-related operations.

The general background level of airborne particles in the workplace atmosphere influences personal exposure and therefore the role of fixed-point sampling is also considered.

### 2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 15767, *Workplace atmospheres — Controlling and characterizing uncertainty in weighing collected aerosols*

EN 482:2006, *Workplace atmospheres — General requirements for the performance of procedures for the measurement of chemical agents*

EN 689, *Workplace atmospheres — Guidance for the assessment of exposure by inhalation to chemical agents for comparison with limit values and measurement strategy*

EN 13205, *Workplace atmospheres — Assessment of performance of instruments for measurement of airborne particle concentrations*

### 3 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

#### 3.1 General definitions

##### 3.1.1

##### **chemical agent**

any chemical element or compound, on its own or admixed, as it occurs in the natural state or as produced, used or released, including release as waste, by any work activity, whether or not produced intentionally and whether or not placed on the market

[Council Directive 98/24/EC<sup>[19]</sup>, Art. 2 a)]

##### 3.1.2

##### **breathing zone**

space around the nose and mouth from which breath is taken

NOTE Technically the breathing zone corresponds to a hemisphere (generally accepted to be 30 cm in radius) extending in front of the human face, centred on the mid point of a line joining the ears. The base of the hemisphere is a plane through this line, the top of the head and the larynx. This technical description is not applicable when respiratory protective equipment is used.

[EN 1540:—<sup>[15]</sup>]

##### 3.1.3

##### **exposure**

(inhalation) situation in which a chemical (or biological) agent is present in the air that is inhaled by a person

[EN 1540:—<sup>[15]</sup>]

##### 3.1.4

##### **occupational exposure limit value**

limit of the time-weighted average of the concentration of a chemical agent in the air within the breathing zone of a worker in relation to a specified reference period

[Council Directive 98/24/EC<sup>[19]</sup>, Art. 2 d)]

NOTE Limit values are mostly set for reference periods of 8 h, but can also be set for shorter periods or concentration excursions. Limit values for gases and vapours are stated in terms independent of temperature and air pressure variables in millilitres per cubic metre and in terms dependent on those variables in milligrams per cubic metre for a temperature of 20 °C and a pressure of 101,3 kPa. Limit values for airborne particles as well as mixtures of particles and vapours are given in milligrams per cubic metre or multiples of that unit for actual environmental conditions (temperature, pressure) at the workplace. Limit values of fibres are given in number of fibres per cubic metre or number of fibres per cubic centimetre for actual environmental conditions (temperature, pressure) at the workplace.

##### 3.1.5

##### **reference period**

specified period of time for which the occupational exposure limit value of a chemical or biological agent applies

NOTE The reference period is usually 8 h for long term measurements and 15 min for short term measurements.

[EN 1540:—<sup>[15]</sup>]

##### 3.1.6

##### **time-weighted average concentration**

##### **TWA concentration**

concentration of a chemical agent in the atmosphere, averaged over a reference period

[ISO/TR 25901:2007<sup>[12]</sup>]

**3.1.7****total airborne particles**

all particles surrounded by air in a given volume of air

NOTE Because all measuring instruments are size selective to some extent, it is often impossible to measure the total airborne particle concentration.

[ISO 7708:1995<sup>[5]</sup>]

**3.1.8****work pattern**

sequence of activities carried out by the worker during the period under consideration

**3.1.9****workplace**

designated area or areas in which the work activities are carried out

[EN 1540:—<sup>[15]</sup>]

**3.2 Sampling definitions****3.2.1****aerosol sampler**

(airborne) particle sampler

(airborne) particulate sampler

sampler that is used to transport airborne particles to a collection substrate

NOTE 1 The term aerosol sampler is commonly used although it is not in line with the definition of aerosol given in EN 1540:—<sup>[15]</sup>, 2.2.4.

NOTE 2 The transport can be either active or passive.

[EN 1540:—<sup>[15]</sup>]

**3.2.2****(air) sample**

product of the process of air sampling

NOTE An air sample is frequently considered to include the collection substrate(s) as well as the collected chemical and/or biological agents; or sometimes it is considered to be the fractional part of a larger volume of air.

[EN 1540:—<sup>[15]</sup>]

**3.2.3****(air) sampling**

process consisting of the separation of chemical and/or biological agents from air onto a collection substrate, or the withdrawal or isolation of a fractional part of a larger volume of air

[EN 1540:—<sup>[15]</sup>]

**3.2.4****collected sample**

airborne particles collected on the sampling media (e.g. filter, foam or impaction plate) for subsequent analysis

NOTE Sample deposits in other parts of the sampler such as inner walls are only included in the collected sample where the method description includes specific instructions for the recovery of such deposits.

[EN 15051:2006<sup>[17]</sup>]

**3.2.5**

**collection substrate**

sampling substrate

collection medium

sampling medium

medium on which airborne chemical and/or biological agents are collected for subsequent analysis

NOTE Filters, polyurethane foams and sampling cassettes are examples of collection substrates for airborne particles.

[EN 1540:—<sup>[15]</sup>]

**3.2.6**

**inhalable fraction**

mass fraction of total airborne particles which is inhaled through the nose and mouth

NOTE The inhalable fraction depends on the speed and direction of the air movement, on the rate of breathing and other factors.

[ISO 7708:1995<sup>[5]</sup>]

**3.2.7**

**inhalable sampler**

aerosol sampler that is used to collect the inhalable fraction

[EN 1540:—<sup>[15]</sup>]

**3.2.8**

**key component of a welding fume**

component of a welding fume that has the greatest occupational hygienic significance and therefore requires the most stringent control measures to ensure that a welder is not exposed to an excessive level of the substance concerned, i.e. it is the component whose limit value is exceeded at the lowest welding fume concentration

[ISO 15011-4:2006<sup>[6]</sup>]

**3.2.9**

**personal sample**

product of the process of personal sampling

[EN 1540:—<sup>[15]</sup>]

**3.2.10**

**personal sampler**

personal sampling device

sampler, attached to a person, that collects gases, vapours or airborne particles in the breathing zone to determine exposure to chemical and/or biological agents

[EN 1540:—<sup>[15]</sup>]

**3.2.11**

**personal sampling**

process of (air) sampling carried out using a personal sampler

[EN 1540:—<sup>[15]</sup>]

**3.2.12****respirable fraction**

mass fraction of inhaled particles which penetrate to the unciliated airways

[ISO 7708:1995<sup>[5]</sup>]

**3.2.13****respirable sampler**

aerosol sampler that is used to collect the respirable fraction

[EN 1540:—<sup>[15]</sup>]

**3.2.14****sampler****(air) sampler**

device for separating chemical and/or biological agents from the surrounding air

NOTE (Air) samplers are generally designed for a particular purpose, e.g. for sampling gases and vapours or for sampling airborne particles.

**3.2.15****screening measurements of time-weighted average concentration**

measurements performed to obtain basic information on the exposure level in order to decide whether an exposure problem exists and if so, to further investigate it

NOTE 1 Screening measurements of time-weighted average concentration can also be used to determine if exposure is well below or well above the limit value.

NOTE 2 Adapted from EN 482:2006.

**3.2.16****screening measurements of variation of concentration in time/and or space**

measurements performed to provide information on the likely pattern of concentration of chemical agents

NOTE 1 Screening measurements of variation of concentration in time/and or space can be used to identify locations and periods of elevated exposure and to set the duration and frequency of sampling for measurements for comparison with limit values. Emission sources can be located and the effectiveness of ventilation or other technical measures can be estimated.

NOTE 2 Adapted from EN 482:2006.

**3.2.17****worst case measurements**

screening measurements of time-weighted average concentration made to identify work activity during which highest exposure occurs

NOTE Adapted from EN 482:2006.

**3.3 Welding terms****3.3.1****filler material**

welding consumable added during welding to form the weld

[ISO/TR 25901:2007<sup>[12]</sup>]

EXAMPLES Welding rods, wire, stick electrodes.

**3.3.2**

**harness**

assembly that provides a means of maintaining a welder's face shield in position on the head

[EN 175:1997<sup>[13]</sup>]

**3.3.3**

**headband**

that part of the harness to which the welder's face shield is fixed and which surrounds the head, or that part of the welder's goggles or welder's spectacles which secures the goggles or spectacles onto the head

[EN 175:1997<sup>[13]</sup>]

**3.3.4**

**operator**

person who performs welding and allied processes

**3.3.5**

**operator's breathing zone**

restricted breathing zone, behind a face shield

NOTE It is essential to sample as near as possible to the operator's nose and mouth when measuring exposure to welding fume because of the very steep concentration gradients that occur in the immediate vicinity of the plume. Sample behind a welder's face shield, when one is worn, since it is the air in this region that is inhaled.

**3.3.6**

**welder's face shield**

welder's shield worn on the head and in front of the face, usually secured in position by a harness to give protection to the eyes and face when fitted with the appropriate filter(s)

[EN 175:1997<sup>[13]</sup>]

**3.3.7**

**welder's goggles**

device, held in position usually by a headband, enclosing the orbital cavity, into which radiation arising from welding and allied processes can penetrate only through filter(s) and, where provided, filter cover(s)

[EN 175:1997<sup>[13]</sup>]

**3.3.8**

**welder's hand shield**

welder's shield held in the hand to give protection to the eyes and face when fitted with the appropriate filter(s)

[EN 175:1997<sup>[13]</sup>]

**3.3.9**

**welder's shield**

welding protector providing protection of the face, eyes and throat of the operator, being equipped with an appropriate ocular protection filter

[CEN/TR 14599:2005<sup>[16]</sup>]

**3.3.10**

**welder's spectacles**

frame, with lateral protection, holding suitable filters in front of the eyes, to give them protection

NOTE It may usually be held in position with sidearms or a headband fitting.

[EN 175:1997<sup>[13]</sup>]

**3.3.11****welding (and allied processes)**

joining process in which two or more parts are united, producing a continuity in the nature of the workpiece material(s) by means of heat or pressure or both, and with or without the use of filler material

[ISO/TR 25901:2007<sup>[12]</sup>]

NOTE Low-temperature processes such as soldering are excluded.

**3.3.12****welding fume**

airborne particles generated during welding

NOTE Adapted from CEN/TR 14599:2005<sup>[16]</sup>.

**3.3.13****welding protector**

device which provides protection to the wearer against harmful optical radiation and other specific hazards generated by welding and allied processes

NOTE A welding protector may be a welder's shield, welder's goggles or welder's spectacles.

[EN 175:1997<sup>[13]</sup>]

**3.3.14****welding-related operations**

operations other than welding and allied processes carried out by the operator

**3.4 Statistical terms****3.4.1****bias**

difference between the expectation of a test result or measurement result and a true value

NOTE 1 Bias is the total systematic error as contrasted to random error. There may be one or more systematic error components contributing to the bias. A larger systematic difference from the true value is reflected by a larger bias value.

NOTE 2 The bias of a measuring instrument is normally estimated by averaging the error of indication over an appropriate number of repeated measurements. The error of indication is the: "indication of a measuring instrument minus a true value of the corresponding input quantity".

NOTE 3 In practice, the accepted reference value is substituted for the true value.

[ISO 3534-2:2006<sup>[3]</sup>]

**3.4.2****expanded uncertainty**

quantity defining an interval about the result of a measurement that may be expected to encompass a large fraction of the distribution of values that could reasonably be attributed to the measurand

[ISO/IEC Guide 98-3:2008<sup>[1]</sup>]

**3.4.3****measurand**

quantity intended to be measured

[ISO/IEC Guide 99:2007<sup>[2]</sup>]

#### 3.4.4

##### **precision**

closeness of agreement between independent test/measurement results obtained under stipulated conditions

NOTE 1 Precision depends only on the distribution of random errors and does not relate to the true value or the specified value.

NOTE 2 The measure of precision is usually expressed in terms of imprecision and computed as a standard deviation of the test results or measurement results. Less precision is reflected by a larger standard deviation.

NOTE 3 Quantitative measures of precision depend critically on the stipulated conditions. Repeatability conditions and reproducibility conditions are particular sets of extreme stipulated conditions.

[ISO 3534-2:2006<sup>[3]</sup>]

#### 3.4.5

##### **true value**

value which characterizes a quantity or quantitative characteristic perfectly defined in the conditions which exist when that quantity or quantitative characteristic is considered

NOTE The true value of a quantity or quantitative characteristic is a theoretical concept and, in general, cannot be known exactly.

[ISO 3534-2:2006<sup>[3]</sup>]

#### 3.4.6

##### **measurement uncertainty**

uncertainty of measurement

uncertainty

non-negative parameter characterizing the dispersion of the quantity values being attributed to a measurand, based on the information used

NOTE 1 The parameter may be, for example, a standard deviation called standard measurement uncertainty (or a specified multiple of it), or the half-width of an interval, having a stated coverage probability.

NOTE 2 Measurement uncertainty comprises, in general, many components. Some of these may be evaluated by Type A evaluation of measurement uncertainty from the statistical distribution of the quantity values from series of measurements and can be characterized by standard deviations. The other components, which may be evaluated by Type B evaluation of measurement uncertainty, can also be characterized by standard deviations, evaluated from probability density functions based on experience or other information.

[ISO/IEC Guide 99:2007<sup>[2]</sup>]

## 4 Principle

Airborne particles are collected by drawing a known volume of air through a collection substrate, e.g. a filter, mounted in a sampler designed to collect the appropriate fraction of airborne particles. For personal sampling, the sampler is positioned in the operator's breathing zone, which is inside the welder's face shield, when one is worn. In such instances, it is necessary to use a mounting arrangement that enables the sampler to be maintained in position in the operator's breathing zone throughout the sampling period without impeding normal work activity. Exposure to airborne particles from welding and allied processes (welding fume) and airborne particles from welding-related operations can be determined by gravimetric analysis of the sample, if desired. Exposure to specific chemical agents in welding fume and airborne particles from welding-related operations is determined by chemical analysis of the sample.

## 5 Requirement

Procedures used for assessment of personal exposure to welding fume and other airborne particles generated by welding-related operations shall meet the requirements of EN 482.

## 6 Equipment

### 6.1 Sampling equipment

**6.1.1 Samplers**, designed to collect the relevant health-related fraction of airborne particles, as defined in ISO 7708<sup>[5]</sup>, complying with the provisions of EN 13205 over the particle size range relevant for welding fume and airborne particles generated by welding-related operations. See 9.1 for selection of samplers.

NOTE 1 Some inhalable samplers are designed to collect the inhalable fraction of airborne particles on the collection substrate, so that any particulate matter deposited on the internal surfaces of the sampler is not of interest. Other inhalable samplers are designed such that airborne particles which pass through the entry orifice(s) match the inhalable convention, in which case particulate matter deposited on the internal surfaces of the sampler does form part of the sample. (Samplers of this second type generally incorporate a sampling cassette that can be removed from the sampler to enable this material to be easily recovered.) The operating instructions supplied by the manufacturer generally state whether particulate matter deposited on the internal surfaces of the sampler forms part of the sample.

NOTE 2 The performance tests described in EN 13205 are not carried out with samplers mounted behind a welder's face shield. Therefore it cannot be said with certainty that an inhalable sampler that meets the requirements of EN 13205 samples the inhalable fraction of airborne particles with the prescribed performance characteristics when used behind a welder's face shield.

NOTE 3 In general, personal samplers for collection of the inhalable fraction of airborne particles do not exhibit the same size-selective characteristics if used for fixed-point sampling.

**6.1.2 Equipment for mounting samplers in the operator's breathing zone**, in the manner prescribed in 9.3.1.

**6.1.3 Collection substrates**, suitable for use with the samplers (6.1.1), with a collection efficiency of not less than 99,5 % for particles with a 0,3 µm diffusion diameter (see ISO 7708:1995<sup>[5]</sup>, 2.2, Note), and manufactured from a material that is compatible with the sample preparation and analysis method. See Reference [20] for information on collection efficiency of filters.

The collection substrates used in the gravimetric method described shall be fit for purpose, e.g. sufficiently resistant to moisture retention and not excessively friable. See ISO 15767 for further assistance.

If chemical analysis of the sample is to be carried out, the collection substrates shall not be manufactured of a material that can react with the chemical agents to be determined. See ISO 15202-1<sup>[7]</sup> and ISO 16740<sup>[10]</sup> for further assistance.

**6.1.4 Sampling pumps**, with an adjustable flow rate, capable of maintaining the selected flow rate (see 9.2.3) to within ±5 % of the nominal value throughout the sampling period (see 8.4).

For personal sampling, the pumps shall be capable of being worn by the worker without impeding normal work activity.

The pump shall have, as a minimum, the following features:

- an automatic control that keeps the volume flow rate constant in the case of a changing back pressure;
- either a malfunction indicator which, following completion of sampling, indicates that the air flow has been reduced or interrupted during sampling, or an automatic cut-out, which stops the pump if the flow rate is reduced or interrupted;

- a facility for the adjustment of flow rate, such that it can only be actuated with the aid of a tool (e.g. screwdriver) or requires special knowledge for operation (e.g. via software), so as to preclude inadvertent readjustment of the flow rate during use;
- a flow rate pulsation that does not exceed 10 %.

An integral timer is a highly desirable additional feature.

NOTE EN 1232:1997<sup>[14]</sup> requires that the performance of the pumps be such that:

- a flow rate set within the nominal range does not deviate by more than  $\pm 5$  % from the initial value under increasing back pressure;
- within the range of ambient temperatures from 5 °C to 40 °C, the flow rate measured under operating conditions does not deviate by more than  $\pm 5$  % from the flow rate at 20 °C;
- the operating time is at least 2 h, and preferably 8 h;
- the flow rate does not deviate by more than  $\pm 5$  % from the initial value during the operating time.

If the sampling pump is used outside the range of conditions specified in EN 1232:1997<sup>[14]</sup>, appropriate action should be taken to ensure that the performance requirements are met. For instance, at sub-zero temperatures it might be necessary to keep the pump warm by placing it under the worker's clothes.

**6.1.5 Flow meter**, portable, with a measurement uncertainty  $< 2,5$  %.

The calibration of the flow meter shall be checked against a primary standard, i.e. a flow meter whose accuracy is traceable to national standards. If appropriate (see 9.1.4), the atmospheric temperature and pressure at which the calibration of the flow meter is checked shall be recorded.

NOTE See EN 482:2006, Table C.1, for examples of the measurement uncertainty of different flow meters.

**6.1.6 Ancillary equipment.**

**6.1.6.1 Flexible tubing**, of a diameter suitable for making a leakproof connection from the samplers (6.1.1) to the sampling pumps (6.1.4).

**6.1.6.2 Belts or harnesses**, to which the sampling pumps can conveniently be fixed (except where the sampling pumps are small enough to fit in an operator's pockets).

**6.1.6.3 Tweezers**, flat-tipped, for loading and unloading collection substrates into samplers.

**6.1.6.4 Transport cassettes or other suitable containers**, to hold collection substrates while they are conditioned for weighing, if required, and to transport collection substrates to the laboratory.

**6.1.6.5 Thermometer**, 0 °C to 50 °C, graduated in divisions of 1 °C or better, for measurement of atmospheric temperature, if required (see 9.1.4).

For applications at temperatures below freezing, the range of the thermometer shall extend to the appropriate desired range.

**6.1.6.6 Barometer**, suitable for measurement of atmospheric pressure, if required (see 9.1.4).

**6.2 Weighing equipment, if required**

**6.2.1 Analytical balance**, capable of weighing to  $\pm 0,01$  mg, calibrated with masses traceable to national standards. The balance shall be set up and operated according to the manufacturer's instructions and its calibration shall be checked before use.

**6.2.2 Electrostatic charge neutralizer**, for dissipation of electrostatic charge during handling of substrates and weighing. If a radioactive source is used, its recommended useful life shall be observed, and national legislation dealing with maintenance, monitoring and disposal of the source shall be complied with.

## 7 Assessment strategy

EN 689 gives guidance for the assessment of exposure by inhalation to chemical agents in workplace atmospheres. The generalized assessment strategy it describes shall be observed. This could involve:

- a) an initial appraisal of the likelihood of exposure to airborne particles, e.g. by using known information about the process and workplace factors;
- b) a basic survey to provide quantitative information about likely exposure, e.g. by using existing exposure data from comparable processes;
- c) a more detailed survey involving workplace measurements.

## 8 Measurement strategy

### 8.1 General

Refer to EN 689 for generalized guidance on measurement strategy. EN 689 highlights the need to take an approach which makes the most efficient use of resources by making full use of screening measurements and worst case measurements when it is suspected that exposure levels are well below or above the limit values. The following guidelines, specific for measurement of personal exposure to airborne particles generated by welding and allied processes, and welding-related operations, is given to supplement the guidance given in EN 689.

### 8.2 Personal exposure measurement

Personal sampling shall be performed behind a welder's face shield, when worn.

The highest concentration of airborne particles usually occurs in the immediate vicinity of the operator and it is therefore essential that personal exposure measurements be made in the operator's breathing zone.

In order to perform personal sampling behind a welder's face shield, it is necessary to use a mounting arrangement that enables the sampler to be maintained in position in the operator's breathing zone throughout the sampling period without impeding normal work activity.

If the welder's face shield is completely removed during the sampling period (i.e. not simply raised) and the mounting arrangement is such that the sampler does not remain in the breathing zone, the sampler shall be repositioned on the operator's collar.

### 8.3 Fixed-point measurements

Fixed-point measurements may be carried out, if desired.

**NOTE** Fixed-point measurements can be used to characterize the background level of airborne particles in the workplace. They can also be useful for assessment of the exposure of other persons to welding fume and other airborne particles generated by welding-related operations, e.g. persons in adjacent locations or in overhead cranes, and they can give an indication of the efficiency of ventilation.

## 8.4 Selection of measurement conditions and measurement pattern

### 8.4.1 General

The sampling procedure shall be devised to cause the least possible interference with operators and the normal performance of their job and to provide samples that are representative of normal working conditions and compatible with subsequent methods of analysis.

The pattern of measurement shall take into consideration practical issues, such as the frequency and duration of different work activities, and the nature of the measurement task.

Every operator shall be the subject of a separate exposure assessment, although this does not necessarily imply a need to make separate measurements for the operator concerned.

NOTE Personal exposure to airborne particles from welding and allied processes and welding-related operations can be very variable over a work period. The pattern of exposure depends on the nature of the job and its location, the use of hygiene controls, the work technique of the operator and the work pattern. Many of these variables are subject to the control of the operator and sampling strategies designed to assess the exposure of an individual operator, as representative of a group carrying out similar work, are not appropriate.

### 8.4.2 Screening measurements of time-weighted average concentration and worst case measurements

Screening measurements of time-weighted average concentration may be carried out in the initial stages of a survey to obtain clear information about the level and pattern of exposure.

Worst case measurements may also be carried out. If the results of such measurements show that exposure is significantly below limit values, this indicates that there is adequate control and measurements of time-weighted average concentration for comparison with limit values are not necessary.

If results indicate that exposure is significantly above limit values, control measures are inadequate. In such instances, control measures in place shall be reviewed and measurements shall be repeated after improvements have been made.

NOTE The margins above and below limit values that are acceptable depend upon relevant national regulatory requirements and/or practice.

### 8.4.3 Measurements for comparison with limit values and periodic measurements

#### 8.4.3.1 Short-term measurements

When appropriate, measurements for comparison with short-term limit values and associated periodic measurements shall be made over a sampling period equal to the reference period, which is normally 15 min or less (see 9.1.3.1 for estimation of the minimum sampling time).

NOTE In some countries there is a general rule that, where no specific short-term limit value has been set for a chemical agent, short-term exposure has to be kept below some particular multiple of the limit value for the 8 h time-weighted average concentration (e.g. three or four times).

#### 8.4.3.2 Measurements of time-weighted average concentration

Measurements for comparison with limit values are performed to provide accurate and reliable information on, or allow the prediction of, the time-weighted average concentration of a specific chemical agent in the air that could be inhaled (see EN 482).

For making measurements for comparison with a long-term exposure limit, samples shall be collected for the entire working period, if possible, or during a number of representative work episodes (see 9.1.3.1 estimation of the minimum sampling time).

NOTE The best estimate of long-term exposure is obtained by taking a sample for the entire working period, but this is often not practicable (e.g. because of the possibility of overloading the filter).

## 9 Procedure

### 9.1 Preliminary considerations

#### 9.1.1 Selection of exposure metric(s)

Decide whether the samples are to be subject to gravimetric analysis, chemical analysis or both, depending on applicable national limit values and the assessment and measurement strategies (see Clauses 7 and 8). Depending on the outcome of this decision, determine what sampling equipment is required: sampler, collection substrate, etc.

NOTE A significant proportion of the airborne particles to which an operator is exposed can be generated by welding-related operations, as opposed to being welding fume. Hence it is necessary to consider this possibility carefully when deciding whether to use gravimetric analysis in any specific instance and, in particular, whether gravimetric measurements are likely to overestimate exposure to welding fume.

#### 9.1.2 Selection and use of samplers

Select a sampler(s) (6.1.1) designed to collect the relevant health-related fraction(s) of airborne particles, as defined in ISO 7708<sup>[5]</sup>, according to the size fraction(s) that is applicable to the exposure limit(s) for the chemical agent(s) of interest. If more than one size fraction is of interest, collect multiple samples or use a multi-fraction sampler. Exposure limits for airborne particles and individual chemical agents contained therein can apply to more than one particle size fraction. The samplers used shall therefore be selected to meet national requirements. See CEN/TR 15230<sup>[18]</sup> for further guidance.

Preferably, select a sampler(s) manufactured from conducting material, since samplers manufactured in non-conducting material have electrostatic properties that can influence representative sampling.

If chemical analysis is to be carried out, the sampler(s) used shall not be constructed from material that could influence the analytical result.

Use the sampler(s) at its design flow rate, and in accordance with the instructions provided by the manufacturer, so that it collects the intended fraction of airborne particles.

#### 9.1.3 Selection of sampling period

9.1.3.1 Select a sampling period that is appropriate for the measurement task (see 8.4), but ensure that it is long enough to enable the exposure metric (see 9.1.1) to be measured with acceptable uncertainty (see 3.4.6). For example, estimate the minimum sampling time required to ensure that the amount of analyte in the sample is above the lower limit of the working range of the analytical method when it is present in the test atmosphere at an appropriate multiple of its limit value (e.g. 0,1 times for an 8 h time-weighted average limit value or 0,5 times for a short-term limit value) using the following equation:

$$t_{\min} = \frac{m_{\text{lower}}}{q_V k \rho_{\text{LV}}}$$

where

$t_{\min}$  is the minimum sampling time, in minutes;

$m_{\text{lower}}$  is the lower limit of the analytical range, in micrograms;

$q_V$  is design flow rate of the sampler, in litres per minute;

$k$  is the appropriate multiple of the limit value (0,1 times for an 8 h time-weighted average limit value or 0,5 times for a short-term limit value);

$\rho_{LV}$  is the limit value, in milligrams per cubic metre.

NOTE If the minimum sampling time is not short enough for the method to be useful for the intended measurement task, consider the possibility of using a sampler designed to be used at a higher flow rate.

**9.1.3.2** When high concentrations of airborne particles are anticipated, select a sampling period that is not so long as to risk overloading the pre-filter with particulate matter.

#### **9.1.4 Consideration of temperature and pressure effects**

Refer to the manufacturer's literature to determine if the indicated flow rate of the flow meter used is dependent upon temperature and pressure. Consider whether the difference between the atmospheric temperature and pressure at the time of calibration of the flow meter and during sampling is likely to be great enough to justify making a correction to take this into account, e.g. if the error has the potential to be greater than  $\pm 5\%$ . If a correction is necessary, measure and record the atmospheric temperature and pressure throughout the sampling period (see 9.4.1 and 9.4.3) and use these data in conjunction with the atmospheric temperature and pressure at which the calibration of the flow meter (6.1.5) was calibrated to carry out an appropriate correction.

NOTE An example of temperature and pressure correction for the indicated flow rate is given in 9.7.3, for a constant pressure drop, variable area, flow meter.

## **9.2 Preparation for sampling**

### **9.2.1 Cleaning of samplers**

Unless the samplers to be used are of the disposable cassette type, clean the samplers (6.1.1) before use. Disassemble the samplers, soak in detergent solution, rinse thoroughly with water, wipe with absorptive tissue and allow to dry before reassembly. Alternatively, use a laboratory washing machine.

### **9.2.2 Loading collection substrates into samplers**

#### **9.2.2.1 Samplers that collect the relevant health-related fraction(s) of airborne particles on the collection substrate(s)**

For samplers that collect the relevant health-related fraction(s) of airborne particles on the collection substrate(s), including samplers of the disposable cassette type (see Note 2 to 6.1.1), load sufficient collection substrates (6.1.3) for sampling and for use as blanks (see 9.2.2.3) into clean, labelled samplers. If gravimetric analysis is to be performed, preweigh them following the instructions given in A.2.2. Seal each sampler with its protective cover or plug to prevent contamination during transport.

#### **9.2.2.2 Samplers that incorporate a sampling cassette**

For samplers that incorporate a sampling cassette that is designed to be removed for weighing (see Note 2 to 6.1.1), load sufficient collection substrates (6.1.3) for sampling and for use as blanks (see 9.2.2.3) into labelled sampling cassettes and, if gravimetric analysis is to be performed, preweigh each loaded cassette following the instructions given in A.2.2. Install each loaded and, if applicable, preweighed, sampling cassette in a sampler and label it with the same identification as the sampling cassette installed in it. Seal each sampler with its protective cover or plug to prevent contamination during transport.

### 9.2.2.3 Blanks

Retain, as blanks, one unused collection substrate or loaded sampling cassette from each batch of 10 prepared for sampling, subject to a minimum of three. Treat these in the same manner as those used for sampling in respect of storage and transport, but draw no air through them.

### 9.2.3 Setting of flow rate

Perform the following in a clean area, where the concentration of airborne particles is low.

Connect each loaded sampler (see 9.2.2) to a sampling pump (6.1.4) using flexible tubing (6.1.6.1), ensuring that no leaks can occur.

Remove the protective cover or plug from each sampler, switch on the sampling pump, attach the calibrated flow meter (6.1.5) to the sampler so that it measures the flow through the sampler inlet orifice(s), and set the flow rate (see 9.1.2) with an accuracy of  $\pm 5\%$ . Switch off the sampling pump and seal the sampler with its protective cover or plug to prevent contamination during transport to the sampling position.

NOTE It can be necessary to operate the pump for some minutes to enable the flow rate to stabilize before setting the flow rate.

## 9.3 Sampling position

### 9.3.1 Personal sampling position

**9.3.1.1** Position the sampler within the operator's breathing zone (see 3.3.5). If a welder's face shield is used, position it behind the face shield (see 8.2), as close to the mouth as possible (sampler inlet within 10 cm). Mount the sampler in a horizontal orientation if it has an inlet velocity  $< 1 \text{ m s}^{-1}$ . See Annex B for examples of arrangements for mounting a sampler behind a face shield, in no particular order of precedence, and for an evaluation of the relative merits of the example sampler mounting arrangements.

It is preferable that the sampler be mounted in such a way that the sampler inlet faces forward.

NOTE Sampling inside an air-fed face shield can be useful to confirm its effectiveness.

**9.3.1.2** Place the sampling pump in a convenient pocket or attach it to the operator in a manner that causes minimum inconvenience, e.g. to a belt around the waist (6.1.6.2).

### 9.3.2 Fixed-point sampling position

If fixed-point sampling to determine the general background level of welding fume and other airborne particles generated by welding-related operations is to be carried out (see 8.3), select a suitable sampling position that is sufficiently remote from welding and allied processes and welding-related operations, such that results are not directly affected by any individual source of welding fume or other airborne particles. Take into consideration all workplace parameters: ventilation, local circumstances, etc.

## 9.4 Sampling

**9.4.1** When ready to begin sampling, remove the protective cover or plug from the sampler and switch on the sampling pump. If the sampling pump is fitted with an integral timer, check that this is reset to zero prior to turning it on. Record the time and volume flow rate at the start of the sampling period. If appropriate (see 9.1.4), measure the atmospheric temperature and pressure at the start of the sampling period using the thermometer (6.1.6.5) and barometer (6.1.6.6), and record the measured values.

Integral timers built into sampling pumps can be imprecise and shall only be used to provide evidence that the sampler has been operating properly throughout the sampling period (see 9.1.3).

If the temperature or pressure at the sampling position is different from that where the volume flow rate was set (see 9.2.3), the volume flow rate can change, necessitating readjustment before sampling.

**9.4.2** Monitor the performance of the pumps frequently, a minimum of once every 2 h. Measure the flow rate using the flow meter (6.1.5) and record the measured value. Terminate sampling and consider the sample to be invalid if the flow rate is not maintained to within  $\pm 5\%$  of the nominal value throughout the sampling period.

**9.4.3** At the end of the sampling period (see 9.1.3), record the time and calculate the duration of the sampling period. Check the malfunction indicator and/or the reading on the integral timer, if fitted, and consider the sample to be invalid if there is evidence that the sampling pump was not operating properly throughout the sampling period. Measure the volume flow rate at the end of the sampling period using the flow meter (6.1.5) and record the measured value. If appropriate (see 9.1.4), measure the atmospheric temperature and pressure at the end of the sampling period using the thermometer (6.1.6.5) and barometer (6.1.6.6), and record the measured values.

**9.4.4** Carefully record the sample identity and all relevant sampling data (see Clause 11). Calculate the mean volume flow rate by averaging the volume flow rates at the start and at the end of the sampling period and, if appropriate (see 9.1.4), calculate the mean atmospheric temperature and pressure. Calculate the volume, in litres, of air sampled at atmospheric temperature and pressure, by multiplying the mean flow rate in litres per minute by the duration of the sampling period in minutes.

## 9.5 Transportation

**9.5.1** For samplers of the disposable cassette type, transport samples to the laboratory in the samplers in which they were collected. For other samplers that collect airborne particles only on the collection substrate (see Note 2 to 6.1.1), remove each collection substrate from its sampler, place in its labelled transport cassette (see 9.2.2.1) and close with a lid. Take particular care to prevent fume from becoming dislodged from heavily loaded collection substrates.

**9.5.2** For samplers that incorporate a sampling cassette (see Note 2 to 6.1.1), remove the sampling cassette from each sampler and fasten with its lid or transport clip.

**9.5.3** Transport the samples (9.5.1 and 9.5.2) to the analytical laboratory in a container which has been designed to prevent damage to the samples in transit and which has been labelled to assure proper handling.

## 9.6 Analysis

### 9.6.1 Gravimetric analysis of samples

#### 9.6.1.1 Collection substrates

After sampling, remove each blank and sample collection substrate from its sampler (see 9.5.1) or transport cassette (see 9.5.2), and reweigh following the instructions given in A.2.3.

If exposure to specific chemical agents in the welding fume and other airborne particles generated by welding-related operations is to be determined, transport the blank and sample collection substrates to the laboratory for chemical analysis: either replace each collection substrate in its transport cassette, or, if the collection substrates were transported to the weighing room in samplers, place each collection substrate in a new labelled transport cassette (6.1.6.4).

#### 9.6.1.2 Sampling cassettes

After sampling, reweigh each blank and sampling cassette following the instructions given in A.2.3.

If exposure to specific chemical agents in the welding fume and other airborne particles generated by welding-related operations is to be determined, transport the blank and sampling cassettes to the laboratory for chemical analysis.

## 9.6.2 Chemical analysis of samples

Consult the manufacturer's fume data sheet, if available, to determine which components of the welding fume to analyse. Depending on the way in which the resulting data are to be used, the analysis may include determination of all chemical agents of occupational hygienic significance or it may be limited to analysis of the key component of the welding fume (see 3.2.8). If appropriate, the analytical techniques used shall be selected to enable several chemical agents to be determined simultaneously or sequentially on a single sample. Refer to published methods for the determination of hazardous substances in workplace air for procedures suitable for the analysis of samples of welding fume and other airborne particles generated by welding-related operations (see ISO 15202-2<sup>[8]</sup>, ISO 15202-3<sup>[9]</sup>, ISO 16740<sup>[10]</sup> and ISO 21438-3<sup>[11]</sup> for examples of such methods).

The chemical analysis required depends on the composition of the filler material and the possible presence of contaminants. Chemical composition data that manufacturers of filler materials determine according to ISO 15011-4<sup>[6]</sup> and provide on fume data sheets should be used to help decide the analysis protocol. However, it is also necessary to consider other activities undertaken in the workplace that might affect exposure and, if appropriate, to measure other air contaminants, e.g. asbestos.

## 9.7 Expression of results

### 9.7.1 Concentration of airborne particles and/or chemical agent(s) of interest

Calculate the concentration of airborne particles and/or chemical agent(s) of interest,  $\rho$ , in milligrams per cubic metre, using the following equation:

$$\rho = \frac{1\,000\ m}{V}$$

where

$m$  is the blank corrected mass of airborne particles or chemical agent, in milligrams;

$V$  is the volume, in litres, of air sampled (see 9.4.4).

### 9.7.2 Calculation of the time-weighted average concentration

Calculate the time-weighted average concentration of airborne particles and/or chemical agent(s) of interest over the reference period from the results of the measurements made during the sampling period or periods (see 9.1.3).

### 9.7.3 Temperature and pressure correction for the indicated sampling flow rate

In some instances it is necessary to apply a temperature and pressure correction for the indicated sampling flow rate (see 9.1.4). A typical example of when such a correction is necessary is when a constant pressure drop, variable area, flow meter was calibrated (6.1.5) and used to measure the flow rate in 9.4.1 and 9.4.3.

In this instance, the corrected volume of air sampled,  $V_{\text{corr}}$ , in litres, is given by:

$$V_{\text{corr}} = \bar{q}_V t \sqrt{\frac{p_1 \bar{T}}{\bar{p} T_1}}$$

where

$\bar{q}_V$  is the mean flow rate, in litres per minute;

$t$  is the duration of the sampling period, in minutes;

$p_1$  is the atmospheric pressure, in kilopascals, during calibration of the sampling pump flow meter;

$\bar{p}$  is the mean atmospheric pressure, in kilopascals, during the sampling period;

$T_1$  is the temperature, in kelvin, during calibration of the sampling pump flow meter;

$\bar{T}$  is the mean temperature, in kelvin, during the sampling period.

Other flow meters can also require correction for variation in temperature and pressure. Follow the manufacturer's directions for such corrections.

## 10 Exposure assessment

The most accurate approach to exposure assessment in welding and allied processes is to measure the concentration of chemical agents of occupational hygienic significance present in the air the welder breathes (see 9.6.2) and compare the results obtained with the corresponding limit values for the substances concerned. However, chemical analysis is relatively expensive in comparison with gravimetric measurement. The work required to make an exposure assessment can be reduced by carrying out a gravimetric measurement of personal exposure to airborne particles and comparing results with a limit value that protects against the key component of the welding fume (see 3.2.8). Such a welding fume limit value can be calculated from information on the chemical composition of welding fume provided on the manufacturer's fume data sheets. See ISO 15011-4<sup>[6]</sup> for further information.

NOTE Use of fume data to estimate the concentration of specific chemical agents can lead to an over-estimation if the welding fume sample contains a significant quantity of airborne particles generated by welding-related operations.

## 11 Recording of sampling data and presentation of results

To obtain the full benefit of measurements made in the manner described in Clauses 9 and 10, record as much information as possible about the process itself, the materials used and the particular circumstances of each measurement. Such information is essential for the correct interpretation of results.

NOTE An example of the type of information to be recorded in the report is given in Annex C. Basic data related to the investigation are recorded in C.1, process-specific data are recorded in C.2, and sampling data and results are recorded in C.3. If chemical analysis of welding fume and other airborne particles generated by welding-related operations samples is carried out, then results for specific chemical agents are also reported in C.3, together with calculated 8 h time-weighted average concentrations.

## Annex A (normative)

### Gravimetric analysis

#### A.1 Handling and conditioning of collection substrates

##### A.1.1 Handling of collection substrates

Only handle filters in a clean environment, using flat-tipped tweezers to reduce the possibility of perforation.

Only handle foams and sampling cassettes that are weighed wearing powder-free gloves.

##### A.1.2 Conditioning collection substrates before weighing

If gravimetric analysis is to be performed, allow the moisture content of the collection substrates to equilibrate with the air in the weighing room before weighing by conditioning collection substrates or loaded sampling cassettes for a suitable period, e.g. overnight. Expose collection substrates in such a manner that contamination is avoided, e.g. place collection substrates in individual, clean, labelled transport cassettes (see 6.1.6.4) with the lids ajar.

##### A.1.3 Dissipation of electrostatic charge on collection substrates before weighing

If the collection substrates used are susceptible to the accumulation of electrostatic charge, e.g. membrane filters, use an electrostatic charge neutralizer to dissipate the charge on them before weighing.

#### A.2 Weighing

##### A.2.1 General

Perform weighing in accordance with the recommendations in ISO 15767.

##### A.2.2 Preweighing

Preweigh sufficient collection substrates for sampling and for use as blanks (see 9.2.2.3), following the instructions on handling, conditioning and dissipation of electrostatic charge given in A.1, and replace in the labelled transport cassettes in which the collection substrates were conditioned to protect them from damage in transit. If samplers of the disposable cassette type containing matched-weight filters are used for sampling, no preweighing is necessary.

Preweigh loaded sampling cassettes (see 9.2.2.2) following the instructions on handling, conditioning and dissipation of electrostatic charge given in A.1 and fasten with the transport clips supplied by the manufacturer.

##### A.2.3 Reweighing

Reweigh the collection substrates or sampling cassettes used for sampling and those retained for use as blanks following the instructions on handling, conditioning and dissipation of electrostatic charge given in A.1. Then calculate the mass of airborne particles collected using the mean mass change of the blanks to correct the mass change measured for each sample.

### A.3 Quality control of weighing collection substrates

Perform quality control of weighing collection substrates in accordance with ISO 15767.

STANDARDSISO.COM : Click to view the full PDF of ISO 10882-1:2011

## Annex B (informative)

### Examples of arrangements for mounting samplers behind welder's face shields

#### B.1 Introduction

For personal sampling of welding fume, it is essential to locate the sampler in the operator's breathing zone (3.3.5), which is behind the welder's face shield, if used.

#### B.2 Characteristics of the ideal mounting arrangement

The characteristics of the ideal arrangement for mounting samplers behind a welder's face shield are listed (not in any order of importance) in Table B.1.

**Table B.1 — Characteristics of the ideal mounting arrangement**

1	Sampler mounted in the operator's breathing zone (see 3.3.5), behind the welder's face shield
2	Sampler inlet within 10 cm of the mouth (see 9.3.1.1)
3	Sampler inlet faces forward
4	Sampler maintained in the same position whether the visor is up or down
5	Sampler maintained in the breathing zone (see 3.1.2), without intervention, when the welder's face shield is removed
6	Mechanical stability of sampler position
7	Operators can use their own face shield
8	Operator should experience no discomfort when using a welder's face shield that has dimensions that conform to EN 175 <sup>[13]</sup>
9	Sampler can be mounted inside face shields of all commercially available designs, including close-fitting types
10	Sampler mounting arrangement commercially available
11	Samplers can be mounted that are designed to collect simultaneously the respirable and inhalable fractions of airborne particles
12	Mounting arrangement easy to attach
13	Sampler performance not adversely affected by breathing when mounted behind the welder's face shield <sup>a</sup>
<sup>a</sup> At present, the effect of breathing on the performance of samplers mounted behind the welder's face shield is unknown and therefore this characteristic is not assessed in Table B.2.	

## B.3 Examples of mounting arrangements

### B.3.1 Sampler attached to the welder's face shield by means of a removable clip (clip type)

A specially designed, removable clip may be used to attach the sampler inside the welder's face shield. See the example in Figure B.1.

### B.3.2 Sampler attached to the headband of the welder's face shield

#### B.3.2.1 Sampler attached to the headband by means of a specially designed bracket (bracket type)

A specially designed bracket may be used to attach the sampler to the headband of the welder's face shield. See the example in Figure B.2.

#### B.3.2.2 Sampler attached to the headband by means of a bent copper tube (tube type)

A copper tube, bent into a suitable form, may be used to attach the sampler to the headband of the welder's face shield. See the example in Figure B.3.

#### B.3.2.3 Sampler attached to the headband by means of its collar clip (collar clip type)

The sampler's collar clip may be used to attach the sampler to the headband of the welder's face shield. See the example in Figure B.4.

#### B.3.2.4 Sampler attached to the headband by means of the AWS mounting arrangement (AWS type)

The mounting arrangement described in AWS F1.1M<sup>[21]</sup> may be used to attach the sampler to the headband of the welder's face shield. See the example in Figure B.5.

### B.3.3 Sampler mounted in a specially modified welder's face shield (built-in type)

A sampler mounted in a specially modified welder's face shield may be used. See the example in Figure B.6.

### B.3.4 Sampler mounted on the welder

#### B.3.4.1 Mini-sampler on a headset beam attached to the operator's head (mini-sampler type)

A small sampler attached to the beam of a headset may be used to sample air inside the welder's face shield. See the example in Figure B.7.

Such a mounting arrangement is commercially available or can be made by modification of a professional microphone headset having a support around the back of the head (with all electronics stripped away).

#### B.3.4.2 Sampler suspended from the operator's neck

A sampler is suspended under the chin from a band around the operator's neck.

## B.4 Characteristics of mounting arrangements


An evaluation of the mounting arrangements described in B.3 with respect to the characteristics of the ideal mounting arrangement listed in Table B.1 is given in Table B.2. It is important to note that factors other than the simple +/- counts in Table B.2 need to be considered when interpreting it with respect to the relative merits of these mounting arrangements. In particular, the relative importance of the various characteristics, when applied to a given measurement task, sampling situation or national requirement, has a bearing on the desirability of any given mounting arrangement.

**Table B.2 — Evaluation of the characteristics of example mounting arrangements**

Example mounting arrangement type	Evaluation with respect to the characteristics of an ideal mounting arrangement (see Table B.1)												Observations (with cross-reference to the related ideal mounting arrangement characteristic)
	1	2	3	4	5	6	7	8	9	10	11	12	
Clip type	+	+	-	-	-	-	+	+	-	-	+	+	Samplers can be maintained in the breathing zone throughout the sampling period if repositioned on the collar when not welding (5)
Bracket type	+	+	+	+	-	+	+	-	-	-	+	-	Depending upon the dimensions of the sampler and the welder's face shield, it might not be possible to mount the sampler such that the sampler inlet faces forward (3) Samplers can be maintained in the breathing zone throughout the sampling period if repositioned on the collar when not welding (5)
Tube type	+	+	+	+	-	+	+	-	-	-	+	-	Depending upon the dimensions of the sampler and the welder's face shield, it might not be possible to mount the sampler such that the sampler inlet faces forward (3) The mounting arrangement can be simply constructed by the user from copper pipe (9)
Collar clip type	+	+	-	+	-	-	+	-	-	+	+	+	Samplers can be maintained in the breathing zone throughout the sampling period if repositioned on the collar when not welding (5) A standard sampler clipped to the headband of the welder's face shield is used (9)
AWS type	+	+	+	-	-	-	+	-	-	+	-	+	The AWS mounting arrangement is designed for use with samplers of the disposable cassette type, for which no polyurethane foam pre-separator to facilitate determination of both the respirable and inhalable fractions of airborne particles is presently available (11)
Built-in type	+	+	-	-	-	+	-	+	-	-	+	+	It is necessary to use welder's face shields that have been specially adapted for mounting samplers (7, 9) Specially adapted welder's face shields have to be prepared in advance (12)
Mini-sampler type	+	+	+	+	+	+	+	+	+	+	-	+	A polyurethane foam pre-separator for determination of both the respirable and inhalable fractions of airborne particles is not available at the time of publication (11)
Sampler suspended from the operator's neck	— <sup>a</sup>	— <sup>a</sup>	+	+	+	+	— <sup>a</sup>	+	-	+	+	+	

<sup>a</sup> Whether the sampler is in the operator's breathing zone, within 10 cm of the nose and mouth, and whether the operator's own face shield can be used depend upon the type of face shield and exactly where it is positioned.

## B.5 Illustrations of mounting arrangements

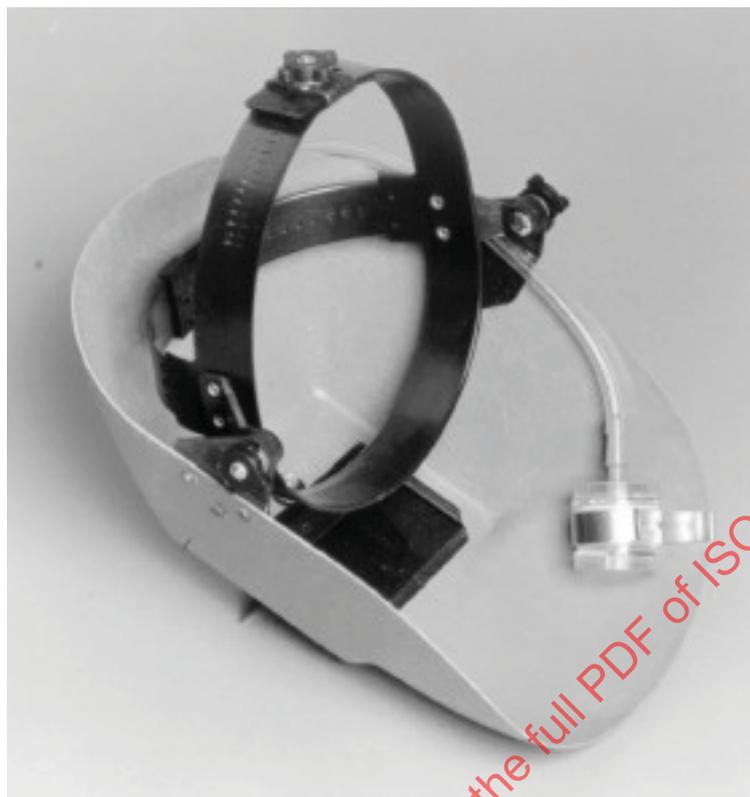


a) Welder's face shield with a sampler attached by means of a removable clip [see Figure B.1 b)]



b) Removable clip used to attach a sampler to a welder's face shield [see Figure B.1 a)]

Figure B.1 — Sampler attached using a clip-type mounting

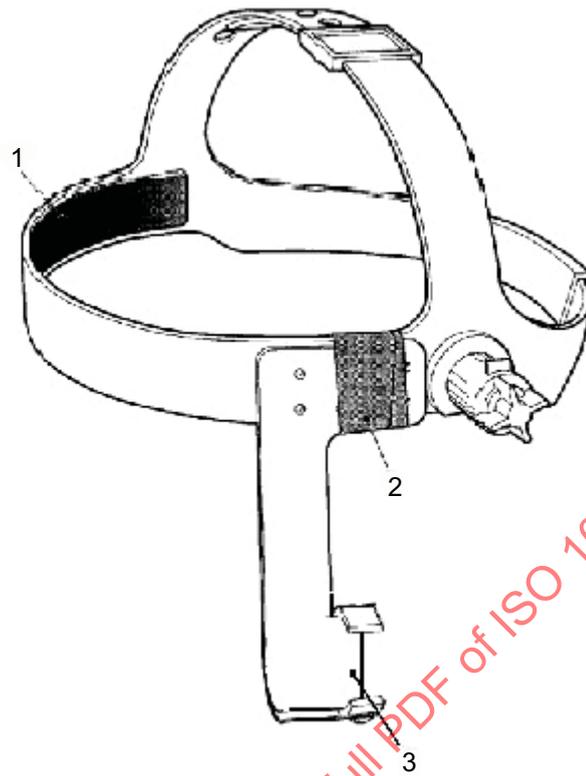

**Key**

- 1 headband inside welder's headshield
- 2 adhesive tape binding
- 3 sampler clip

**Figure B.2 — Sampler attached to the headband by means of a specially designed bracket**



**Figure B.3 — Sampler attached to the headband by means of a bent copper tube**

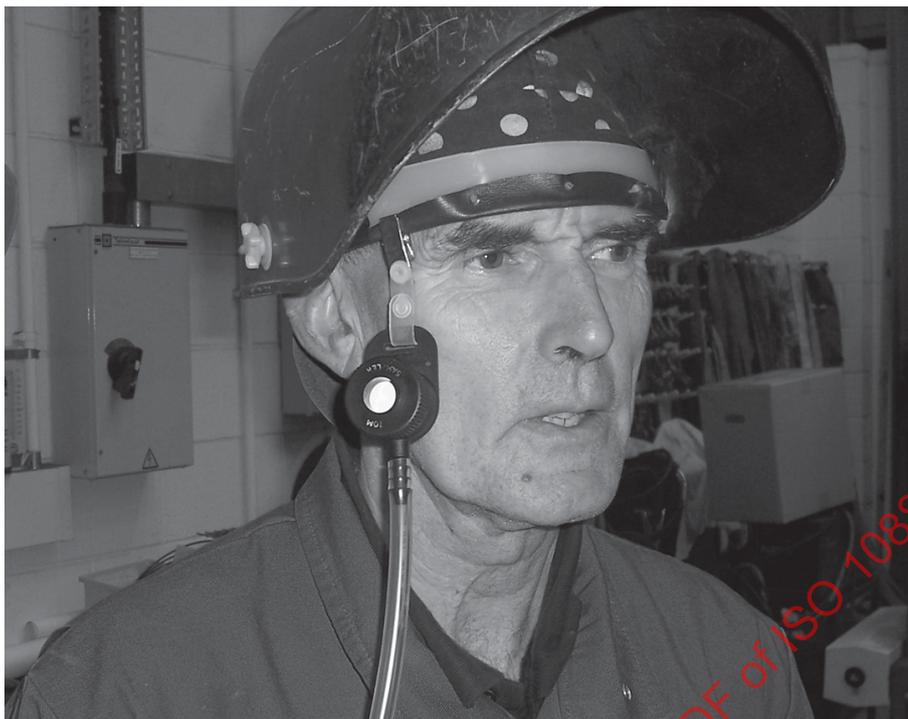


Figure B.4 — Sampler attached to the headband by means of its collar clip

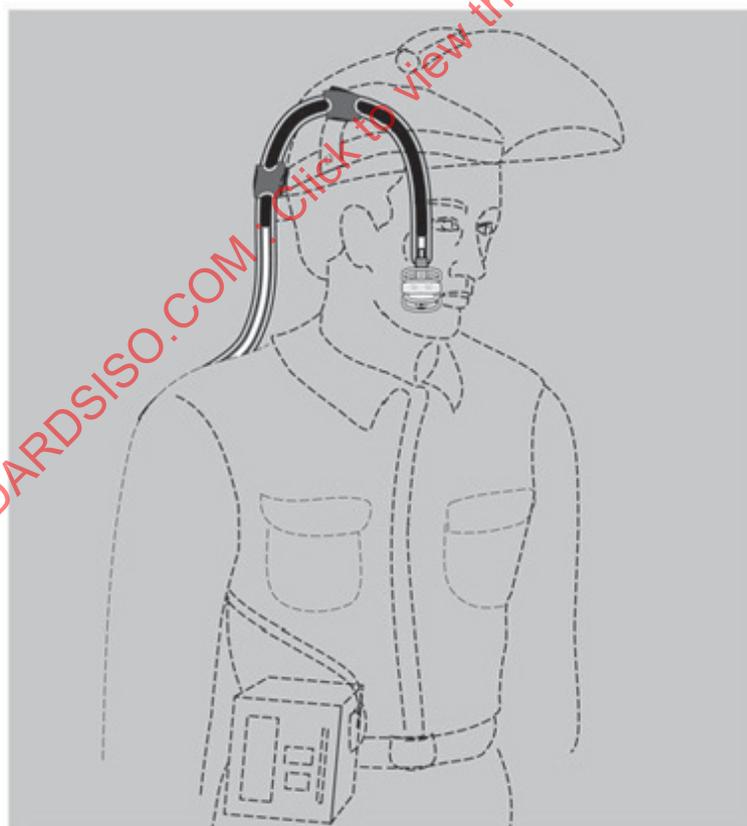


Figure B.5 — Sampler attached to the headband by means of the AWS mounting arrangement

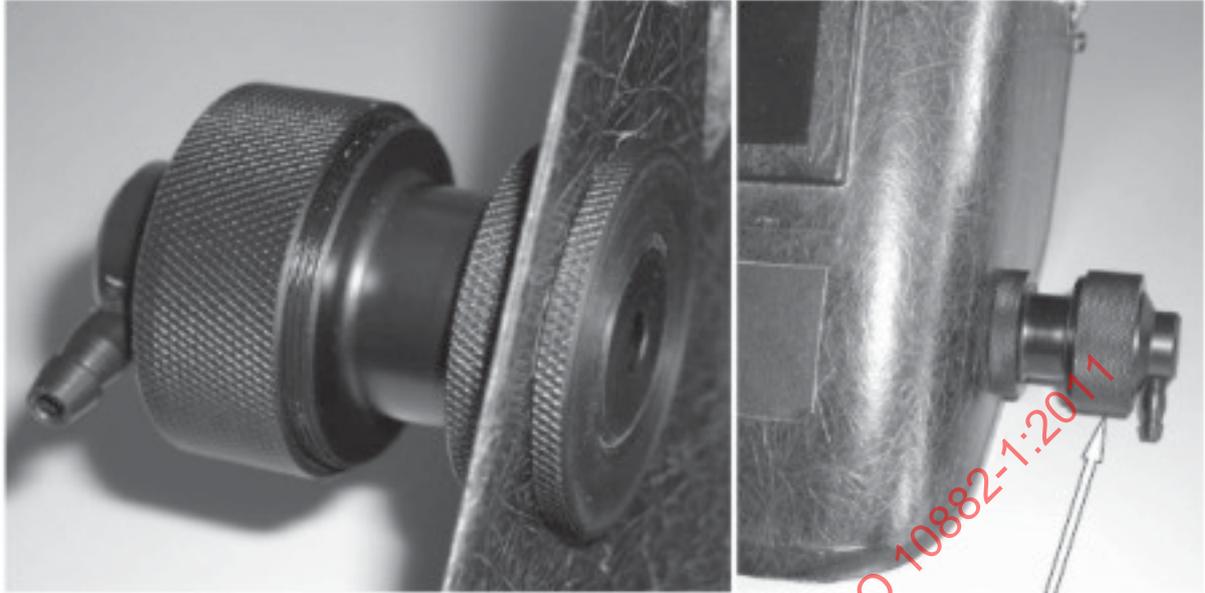


Figure B.6 — Sampler mounted in a specially modified welder's face shield



Figure B.7 — Mini-sampler on a headset beam attached to the welder's head