

**INTERNATIONAL  
STANDARD**

**ISO/IEC  
14776-351**

First edition  
2007-01

---

---

**Information technology –  
Small computer system interface-3 (SCSI-3) –  
Part 351:  
Medium changer commands (SMC)**

IECNORM.COM : Click to view the full PDF of ISO/IEC 14776-351:2007



Reference number  
ISO/IEC 14776-351:2007(E)

[IECNORM.COM](http://IECNORM.COM) : Click to view the full PDF of ISO/IEC 14776-351:2007

# INTERNATIONAL STANDARD

# ISO/IEC 14776-351

First edition  
2007-01

---

---

## Information technology – Small computer system interface-3 (SCSI-3) – Part 351: Medium changer commands (SMC)

Copyright © 2007 ISO/IEC, Geneva — All rights reserved

No part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from the publisher.

International Electrotechnical Commission, 3, rue de Varembé, PO Box 131, CH-1211 Geneva 20, Switzerland  
Telephone: +41 22 919 02 11 Telefax: +41 22 919 03 00 E-mail: inmail@iec.ch Web: www.iec.ch



PRICE CODE

T

*For price, see current catalogue*

## CONTENTS

FOREWORD .....	5
INTRODUCTION .....	6
1 Scope .....	8
2 Normative References .....	8
3 Definitions, symbols and abbreviations .....	8
3.1 Definitions .....	8
3.2 Symbols and abbreviations .....	13
3.3 Keywords .....	13
3.4 Conventions .....	14
4 Overview .....	14
5 Medium changer models .....	16
5.1 Independent medium changer .....	16
5.2 Attached medium changer .....	16
5.3 Medium changer elements .....	16
5.4 Medium transport element .....	17
5.5 Storage element .....	18
5.6 Import/export element .....	18
5.7 Data transfer element .....	18
5.8 Element status maintenance requirements .....	18
5.9 Volume tag information .....	19
5.10 Primary and alternate volume tag information .....	19
5.11 Volume tag information format .....	19
6 Commands for medium changer logical units .....	21
6.1 Commands for independent medium changers .....	21
6.2 Commands for attached medium changers .....	22
6.3 EXCHANGE MEDIUM command .....	22
6.4 INITIALIZE ELEMENT STATUS command .....	24
6.5 MOVE MEDIUM command .....	25
6.6 POSITION TO ELEMENT command .....	26
6.7 READ ELEMENT STATUS command .....	27
6.7.0 General .....	27
6.7.1 Element status data .....	28
6.7.2 Element status page .....	29
6.7.3 Medium transport element descriptor .....	30
6.7.4 Storage element descriptor .....	32
6.7.5 Import/export element descriptor .....	33
6.7.6 Data transfer element descriptor .....	35
6.7.7 Identification descriptor .....	36
6.8 RELEASE ELEMENT (6) command .....	37
6.8.0 General .....	37
6.8.1 Logical unit release (mandatory) .....	37
6.8.2 Element release (optional) .....	37
6.9 RELEASE ELEMENT (10) command .....	37

6.9.1	RELEASE ELEMENT (10) overview.....	37
6.9.2	Third-party release (Mandatory) .....	38
6.10	REQUEST VOLUME ELEMENT ADDRESS command .....	39
6.11	RESERVE ELEMENT (6) command .....	41
6.11.0	General .....	41
6.11.1	Logical unit reservation (mandatory).....	42
6.11.2	Element reservation (optional).....	42
6.12	RESERVE ELEMENT (10) command .....	43
6.12.0	General .....	43
6.12.1	Third-party reservation (mandatory) .....	44
6.12.2	Superseding reservations.....	44
6.13	SEND VOLUME TAG command .....	45
7	Parameters.....	48
7.0	General .....	48
7.1	Diagnostic parameters .....	48
7.2	Log parameters .....	48
7.3	Mode parameters.....	48
7.3.0	General .....	48
7.3.1	Device capabilities page.....	49
7.3.2	Element address assignment page.....	51
7.3.3	Transport geometry parameters page.....	52
	Bibliography .....	54
	Figure 1 – General structure of SCSI standards.....	6
	Figure 2 – Example independent medium changer device .....	15

IECNORM.COM : Click to view the full PDF of ISO/IEC 14776-351:2007

Table 1 – Volume tag information format .....	20
Table 2 – Commands for independent medium changers .....	21
Table 3 – Commands for attached medium changers .....	22
Table 4 – EXCHANGE MEDIUM command .....	23
Table 5 – INITIALIZE ELEMENT STATUS command .....	24
Table 6 – MOVE MEDIUM command .....	25
Table 7 – POSITION TO ELEMENT command .....	26
Table 8 – READ ELEMENT STATUS command .....	27
Table 9 – Element type code .....	28
Table 10 – Element status data .....	28
Table 11 – Element status page .....	29
Table 12 – Medium transport element descriptor .....	30
Table 13 – Storage element descriptor .....	32
Table 14 – Import/export element descriptor .....	33
Table 15 – Data transfer element descriptor .....	35
Table 16 – Identification descriptor fields .....	36
Table 17 – RELEASE ELEMENT (6) command .....	37
Table 18 – RELEASE ELEMENT (10) command .....	38
Table 19 – RELEASE ELEMENT (10) parameter list .....	39
Table 20 – REQUEST VOLUME ELEMENT ADDRESS command .....	40
Table 21 – Volume element address header .....	41
Table 22 – RESERVE ELEMENT (6) command .....	41
Table 23 – Data format of element list descriptors .....	43
Table 24 – RESERVE ELEMENT (10) command .....	43
Table 25 – RESERVE ELEMENT (10) ID and elements parameter list .....	45
Table 26 – SEND VOLUME TAG command .....	45
Table 27 – Send action codes .....	46
Table 28 – Send volume tag parameters format .....	47
Table 29 – Diagnostic page codes .....	48
Table 30 – Log page codes .....	48
Table 31 – Mode page codes .....	49
Table 32 – Device capabilities page .....	50
Table 33 – Element address assignment page .....	51
Table 34 – Transport geometry parameters page .....	52
Table 35 – Transport geometry descriptor .....	53

# INFORMATION TECHNOLOGY – SMALL COMPUTER SYSTEM INTERFACE-3 (SCSI-3) –

## Part 351: Medium changer commands (SMC)

### FOREWORD

- 1) ISO (International Organization for Standardization) and IEC (International Electrotechnical Commission) form the specialized system for worldwide standardization. National bodies that are members of ISO or IEC participate in the development of International Standards. Their preparation is entrusted to technical committees; any ISO and IEC member body interested in the subject dealt with may participate in this preparatory work. International governmental and non-governmental organizations liaising with ISO and IEC also participate in this preparation.
- 2) In the field of information technology, ISO and IEC have established a joint technical committee, ISO/IEC JTC 1. Draft International Standards adopted by the joint technical committee are circulated to national bodies for voting. Publication as an International Standard requires approval by at least 75 % of the national bodies casting a vote.
- 3) The formal decisions or agreements of IEC and ISO on technical matters express, as nearly as possible, an international consensus of opinion on the relevant subjects since each technical committee has representation from all interested IEC and ISO member bodies.
- 4) IEC, ISO and ISO/IEC Publications have the form of recommendations for international use and are accepted by IEC and ISO member bodies in that sense. While all reasonable efforts are made to ensure that the technical content of IEC, ISO and ISO/IEC Publications is accurate, IEC or ISO cannot be held responsible for the way in which they are used or for any misinterpretation by any end user.
- 5) In order to promote international uniformity, IEC and ISO member bodies undertake to apply IEC, ISO and ISO/IEC Publications transparently to the maximum extent possible in their national and regional publications. Any divergence between any ISO/IEC Publication and the corresponding national or regional publication should be clearly indicated in the latter.
- 6) ISO and IEC provide no marking procedure to indicate their approval and cannot be rendered responsible for any equipment declared to be in conformity with an ISO/IEC Publication.
- 7) All users should ensure that they have the latest edition of this publication.
- 8) No liability shall attach to IEC or ISO or its directors, employees, servants or agents including individual experts and members of their technical committees and IEC or ISO member bodies for any personal injury, property damage or other damage of any nature whatsoever, whether direct or indirect, or for costs (including legal fees) and expenses arising out of the publication of, use of, or reliance upon, this ISO/IEC publication or any other IEC, ISO or ISO/IEC publications.
- 9) Attention is drawn to the normative references cited in this publication. Use of the referenced publications is indispensable for the correct application of this publication.
- 10) Attention is drawn to the possibility that some of the elements of this International Standard may be the subject of patent rights. ISO and IEC shall not be held responsible for identifying any or all such patent rights.

International Standard ISO/IEC 14776-351 was prepared by subcommittee 25: Interconnection of information technology equipment, of ISO/IEC joint technical committee 1: Information technology.

The list of all parts of ISO/IEC 14776 series, under the general title *Information technology – Small computer system interface (SCSI)*, can be found on the IEC web site.

This International Standard has been approved by vote of the member bodies, and the voting results may be obtained from the address given on the title page.

This publication has been drafted in accordance with the ISO/IEC Directives, Part 2.


## INTRODUCTION

This International Standard defines the SCSI commands and model for independent medium changer devices and attached medium changer functions integrated into other SCSI devices.

The SCSI-3 Medium Changer Commands (SMC) standard specifies the commands and external behavioural characteristics of a device server that declares itself a medium changer in the device type field of the INQUIRY command response data. This standard also specifies the behaviour of the attached medium changer commands available when the medium changer MCHNGR bit is set to one in INQUIRY command response data.

SMC is specified independent of any service delivery subsystem used to carry commands, command parameter data, command response data and status. The SMC standard conforms to the requirements specified in the SCSI-3 Architecture Model (SAM) standard.

This International Standard forms part of the series of SCSI standards as shown in Figure 1.

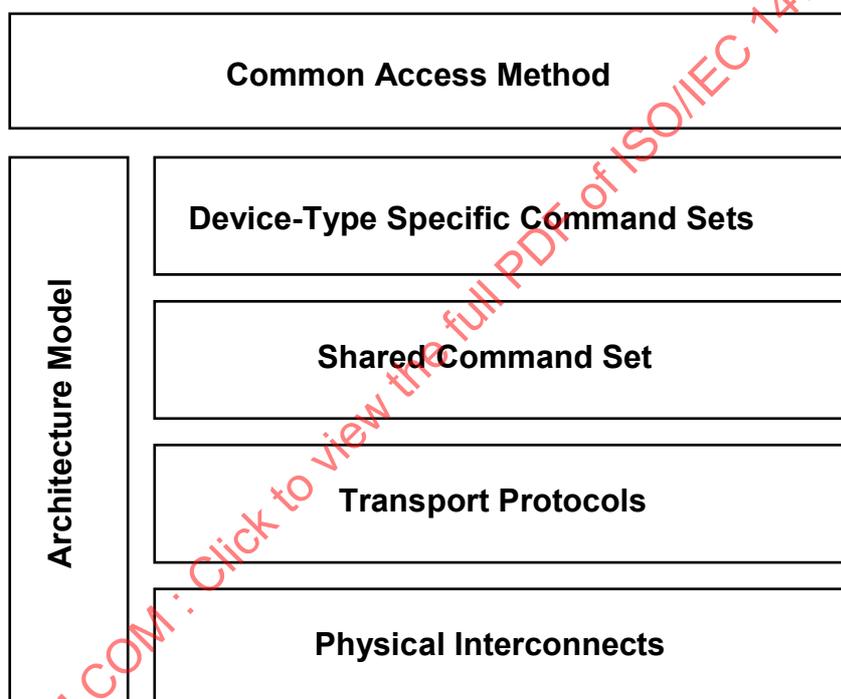

**Figure 1 – General structure of SCSI standards**

Figure 1 shows the general structure of SCSI-3 standards. The figure is not intended to imply a relationship such as a hierarchy, protocol stack or system architecture.

At the time this standard was generated examples of the SCSI-3 general structure included:

### **Physical Interconnects**

Fibre Channel – Physical and Signalling Interface

SCSI-3 Parallel Interface

SCSI-3 Fast-20 Parallel Interface

SCSI Parallel Interface – 2 [ISO/IEC 14776-112]

**Transport Protocols**

- SCSI-3 Interlocked Protocol [ISO/IEC 14776-211]
- SCSI-3 Fibre Channel Protocol Version 3 [ISO/IEC 14776-223]
- SCSI Serial Bus Protocol – 2 [ISO/IEC 14776-232]

**Shared Command Set**

- SCSI-3 Primary Commands-2 [ISO/IEC 14776-452]

**Device-Type Specific Command Sets**

- SCSI-3 Block Commands [ISO/IEC 14776-321]
- SCSI-3 Enclosure Services [ISO/IEC 14776-371]
- SCSI-3 Stream Commands [ISO/IEC 14776-331]
- SCSI-3 Medium Changer Commands (this standard)
- SCSI-3 Controller Commands [ISO/IEC 14776-341]
- SCSI-3 Controller Commands – 2 [ISO/IEC 14776-342]
- SCSI-3 Multimedia Command Set
- SCSI-3 Multimedia Command Set – 2 [ISO/IEC 14776-362]

**Architecture Model**

- SCSI-3 Architecture Model [ISO/IEC 14776-411]

**Common Access Method**

- SCSI Common Access Method [ISO/IEC 9316-2]

NOTE See bibliography for full references and availability of the documents.

The term SCSI is used wherever it is not necessary to distinguish between the versions of SCSI. The Small Computer System Interface–2 [ISO/IEC 9316:1995] is referred to herein as SCSI–2. The term SCSI-3 in this standard refers to versions of SCSI defined since SCSI–2.

The SCSI-3 Medium Changer Command Set (SMC) standard is divided into seven clauses and a bibliography, as follows.

- Clause 1 Scope
  - Clause 2 enumerates the normative references that apply to this standard.
  - Clause 3 describes definitions, symbols, abbreviations and conventions used in this standard.
  - Clause 4 is an overview of this standard.
  - Clause 5 describes the model for this device class.
  - Clause 6 describes the commands and responses.
  - Clause 7 describes the parameters.
- Bibliography.

# INFORMATION TECHNOLOGY – SMALL COMPUTER SYSTEM INTERFACE-3 (SCSI-3) –

## Part 351: Medium changer commands (SMC)

### 1 Scope

This part of ISO/IEC 14776 defines the command set extensions for operation of SCSI medium changer devices and command set extensions that allow medium changer functions in other types of SCSI devices.

This SCSI-3 Medium Changer Commands standard

- permits an application client to communicate with a logical unit that declares itself to be a medium changer device in the DEVICE TYPE field of the INQUIRY command response data over a SCSI service delivery subsystem,
- permits an application client to access the medium changer functions in a logical unit that sets the MCHNGR bit in INQUIRY command response data,
- defines commands to manage the operation of SCSI medium changer devices.

### 2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO/IEC 14776-411, *Information technology – Small Computer System Interface – Part 411: SCSI-3 Architecture Model (SCSI-3 SAM)*

ISO/IEC 14776-452, *Information technology – Small Computer System Interface (SCSI) – Part 452: Primary Commands-2 (SPC-2)*

### 3 Definitions, symbols and abbreviations

#### 3.1 Definitions

This clause contains a glossary of special terms used in this standard. These terms apply to SMC and do not constitute a comprehensive glossary for SCSI-3.

##### 3.1.1

##### **additional sense code**

value in the ADDITIONAL SENSE CODE and ADDITIONAL SENSE CODE QUALIFIER fields of REQUEST SENSE command response data (see SPC)

##### 3.1.2

##### **application client**

object that is the source of SCSI commands. Further definition of an application client may be found in the SCSI-3 Architecture Model (SAM)

##### 3.1.3

##### **attached medium changer**

medium changer that accepts commands issued to the same logical unit as a primary SCSI device that is not a medium changer

**3.1.4****autosense data**

sense data that is automatically delivered to the application client by the device server in a protocol-specific manner when a command completes with a CHECK CONDITION or COMMAND TERMINATED status (see SAM)

**3.1.5****byte**

indicates an 8-bit construct

**3.1.6****command**

request describing a unit of work to be performed by a device server  
A detailed definition of a command may be found in SAM.

**3.1.7****command descriptor block**

structure up to 16 bytes in length used to communicate commands from an application client to a device server

**3.1.8****data transfer element**

component of a medium changer used to access the data stored on a volume  
It is the address in a medium changer element space of a primary device.

**3.1.9****device service request**

request, submitted by an application client, conveying a SCSI command to a device server  
A detailed definition of a device service request may be found in SAM.

**3.1.10****device type**

type of device (or device model) implemented by the device server

**3.1.11****element**

addressable physical component of a medium changer device that can serve as the location of a removable unit of data storage medium

**3.1.12****extent**

extent is a specified number of logical blocks, typically identified by a starting logical block address and a count of the number of blocks in the extent

**3.1.13****field**

a group of one or more contiguous bits

**3.1.14****hard reset**

a target response to a reset event or TARGET RESET task management function  
A detailed definition of hard reset may be found in SAM.

**3.1.15**

**host**

a device with the characteristics of a primary computing device, typically a personal computer, workstation, minicomputer, mainframe computer or auxiliary computing device or server  
A host includes application clients, one or more initiators and may in some cases take on a target role.

**3.1.16**

**import/export element**

a location within a medium changer device that can be accessed by both the medium transport elements and by the operator or an external device

**3.1.17**

**independent medium changer**

a medium changer addressed as a separate SCSI device or logical unit

**3.1.18**

**initiator**

a SCSI device containing application clients that generate device service requests to be processed in a device server

A detailed definition of an initiator may be found in SAM.

**3.1.19**

**linked command**

one in a series of SCSI commands executed by a single task, which collectively make up a discrete I/O operation

A detailed definition of a linked command may be found in SAM.

**3.1.20**

**logical unit**

an externally addressable entity within a target that implements a SCSI device model and contains a device server

A detailed definition of a logical unit may be found in SAM.

**3.1.21**

**logical unit number**

an encoded 64-bit identifier for a logical unit

A detailed definition of a logical unit number may be found in SAM.

**3.1.22**

**medium**

one unit of media, equivalent to volume as defined in this standard

**3.1.23**

**medium changer**

a medium changer mechanizes the movement of media to and from the device that records on or reads from the media

**3.1.24**

**medium transport element**

a component of a medium changer device that is used to move volumes

**3.1.25**

**one**

value of 1, the logical true condition of a variable

**3.1.26****page**

several commands use regular parameter structures that are referred to as pages  
These pages are identified with a value known as a page code.

**3.1.27****port**

a portion of the service delivery interface of a SCSI-3 device  
A SCSI-3 device may have more than one port. Each port may attach to the same or a different physical interface.

**3.1.28****primary device**

device for reading or writing data on medium  
Examples are magnetic disk drives, cartridge tape drives, optical disk drives and CD-ROM drives. Use in a medium changer environment implies that the device supports removable volumes.

**3.1.29****protocol-specific**

requirements for the referenced item are defined by a SCSI-3 protocol standard  
A detailed definition of protocol-specific may be found in SAM.

**3.1.30****SCSI device**

a device that is connected to a service delivery subsystem and supports a SCSI application protocol  
A detailed definition of a SCSI device may be found in SAM.

**3.1.31****SCSI domain**

the interconnection of two or more SCSI devices and a service delivery subsystem forms a SCSI domain  
A detailed definition of a SCSI domain may be found in SAM.

**3.1.32****sense data**

Data describing an error or device exception condition that a device server delivers to an application client (see SPC)  
Sense data may be delivered in response to a REQUEST SENSE command or as auto-sense data.

**3.1.33****sense key**

contents of the sense key field of REQUEST SENSE command response data

**3.1.34****service delivery subsystem**

the part of a SCSI I/O system that transmits service requests to a logical unit and returns logical unit responses to an initiator  
A detailed definition of a service delivery subsystem may be found in SAM.

**3.1.35****status**

one byte of response information sent from a device server to an application client upon completion of each command  
A detailed definition of status may be found in SAM.

**3.1.36**

**storage element**

component of a medium changer device used only for physical storage of a volume

**3.1.37**

**system**

one or more SCSI domains operating as a single configuration

**3.1.38**

**target**

a SCSI device containing one or more logical units that receive and execute commands from an initiator

A detailed definition of a target may be found in SAM.

**3.1.39**

**task**

an object within a logical unit that represents the work associated with a command or a group of linked commands

A detailed definition of a task may be found in SAM.

**3.1.40**

**task set**

a group of tasks within a logical unit, whose interaction is dependent on the queuing and auto-contingent allegiance rules defined in SAM

**3.1.41**

**third-party**

when used in reference to RESERVE or RELEASE commands, third-party means a reservation made on behalf of another device

For example, a processor device requests that a direct-access device reserve itself for use by a sequential-access device.

**3.1.42**

**unit attention condition**

a state that a logical unit maintains while it has asynchronous status information to report to one or more initiators

A detailed definition of the unit attention condition may be found in SAM.

**3.1.43**

**vendor-specific**

an item (e.g., a bit, field, code value, etc.) that is not defined in this standard

This item may be vendor specific.

**3.1.44**

**volume**

recording media and its carrier that is removable from a primary device and may be moved from one element to another by a medium changer

**3.1.45**

**volume rotation**

process of changing the orientation of a volume

In particular, volume rotation refers to inverting a two-sided volume cartridge so that a data transport element that accesses only one side at a time may access data on the other side.

**3.1.46**

**zero**

value of 0, the logical false condition of a variable

### 3.2 Symbols and abbreviations

- **CDB** command descriptor block
- **I/O** input/output
- **ID** identifier
- **LSB** least significant bit
- **LUN** logical unit number
- **MCHNGR bit** medium changer bit (specified in ISO/IEC 14776-452)
- **MSB** most significant bit
- **MMC** SCSI-3 Multi-Media Commands standard
- **RSVD** reserved field or bit
- **SAM** SCSI-3 Architecture Model
- **SBC** SCSI-3 Block Commands standard
- **SCSI-3** standards identified in the foreword as being part of the SCSI-3 standard document set
- **SMC** SCSI-3 Medium Changer Commands standard
- **SPC** SCSI-3 Primary Commands standard
- **SSC** SCSI-3 Stream Commands standard

### 3.3 Keywords

#### 3.3.1 **expected**

A keyword used to describe the behaviour of the hardware or software in the design models assumed by this standard. Other hardware and software design models may also be implemented.

#### 3.3.2 **invalid**

A keyword used to describe an illegal or unsupported bit, byte, word, field or code value. Receipt of an invalid bit, byte, word, field or code value shall be reported as error.

#### 3.3.3 **mandatory**

A keyword indicating an item that is required to be implemented as defined in this standard.

#### 3.3.4 **may**

A keyword that indicated flexibility of choice with no implied preference.

#### 3.3.5 **obsolete**

A keyword indicating that an item was defined in prior SCSI standards but has been removed from this standard.

#### 3.3.6 **optional**

A keyword that describes features that are not required to be implemented by this standard. However, if any optional feature defined by this standards is implemented, then it shall be implemented as defined in this standard.

### 3.3.7

#### **reserved**

A keyword referring to bits, bytes, words, fields and code values that are set aside for future standardization. A reserved bit, byte, word or field shall be set to zero, or in accordance with a future extension to this standard. Recipients may check reserved bits, bytes, words or fields for zero values and report errors if non-zero values are received. Receipt of reserved code values in defined fields shall be reported as error.

### 3.3.8

#### **shall**

A keyword indicating a mandatory requirement. Designers are required to implement all such mandatory requirements to ensure interoperability with other products that conform to this standard.

### 3.3.9

#### **should**

A keyword indicating flexibility of choice with a strongly preferred alternative, equivalent to the phrase "it is strongly recommended".

## 3.4 Conventions

Certain words and terms used in this standard have a specific meaning beyond the normal English meaning. These words and terms are defined either in 3.1 or in the text where they first appear. Names of commands, statuses, sense keys, additional sense codes and additional sense code qualifiers are in all uppercase (e.g., REQUEST SENSE). Field names and bit names are in SMALL CAPS. Lower case is used for words having the normal English meaning.

Fields containing only one bit are usually referred to as the name bit instead of the name field.

Numbers that are not immediately followed by lowercase b or h are decimal values.

Numbers immediately followed by lowercase b (xxb) are binary values.

Numbers or upper case letters immediately followed by lowercase h (xxh) are hexadecimal values.

Lists sequenced by letters (e.g., a-red, b-blue, c-green) show no priority relationship between the listed items. Numbered lists (e.g., 1-red, 2-blue, 3-green) show a priority ordering between the listed items. If a conflict arises between text, tables or figures, the order of precedence to resolve the conflicts is: text, then tables and finally figures. Not all tables or figures are fully described in the text. Tables show data format and values. NOTES do not constitute any requirements for implementors.

## 4 Overview

The SCSI-3 medium changer device class specifies a logical unit that is involved, primarily, with the movement of removable volumes in a controlled environment without human intervention. The SCSI-3 device classes that provide for removable volumes are block, multi-media and sequential. (See the SBC, MMC and SSC standards.)


A medium changer logical unit receives commands to move volumes between various element types in the element address space of the medium changer. The element types are storage, data transfer, medium transport and import/export. A volume handling robotic subsystem, addressed as a medium transport element, moves volumes within a medium changer.

A medium changer logical unit maintains an inventory of volumes and the element address they can be found in. The medium changer logical unit reports this inventory when requested as well as identifying the element addresses assigned to different types of elements.

Different levels of sophistication may be implemented in how this inventory is managed, reported, detected and maintained. The elements in a medium changer may be reserved to different initiators. For example, one data transport element may be reserved for exclusive use by one initiator. The primary device, located at that data transfer element, may then be attached to various systems for their use. In some cases, the primary device associated with a data transfer element may not be a SCSI device.

The split between load and unload control of the medium and read and write control by a primary device is a key feature of this device class. The mechanism for coordinating this kind of sophisticated activity is not specified in this standard. The medium changer device class provides the means for mount/dismount management only.

Figure 2 shows an example of an independent medium changer. The data transfer elements (primary devices) shown may be any type of removable media device such as a tape drive, disk drive or optical drive. Supporting multiple types of removable media within the same medium changer is also permitted. Also, the ports on each primary device may or may not attach to the same service delivery subsystem, and the interfaces to the primary devices may or may not be SCSI. The number and arrangement of elements is arbitrary.

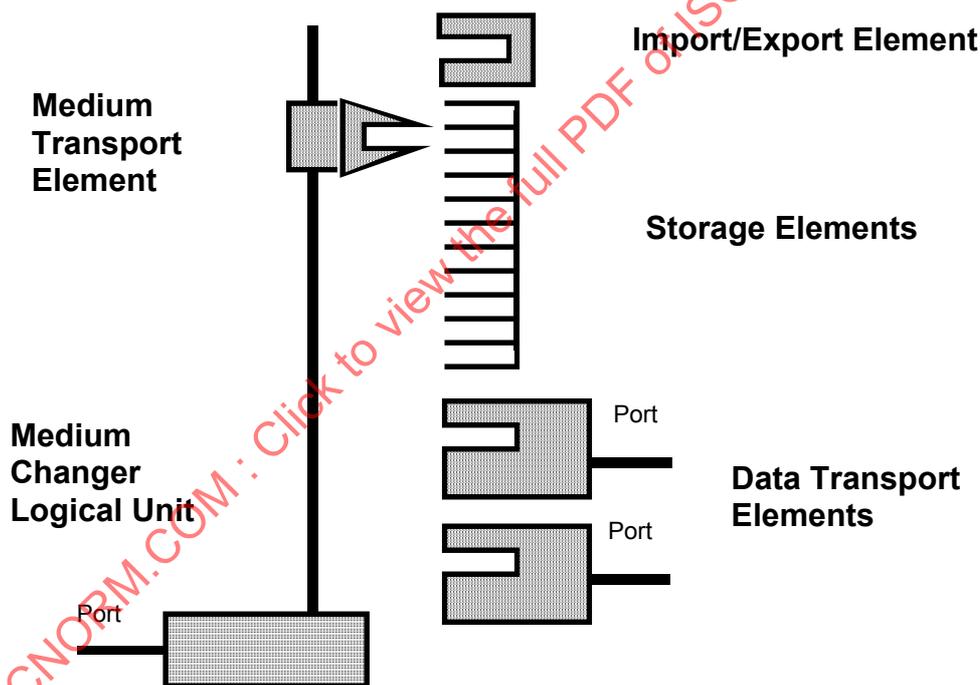

**Figure 2 – Example independent medium changer device**

The independent changer model applies to implementations where the medium changer is addressed as a separate logical unit. The logical unit for the medium changer may be accessed via the same SCSI ID as the primary device, or via a different SCSI ID. This type of medium changer may support more than one primary device.

The attached medium changer model permits a subset of the functions of an independent changer to be incorporated directly into a primary device. Only one data transport element is permitted. In this case, only one logical unit is used to access all functions.

A medium changer moves volumes among the several element types accessible to it on command from an initiator. Medium changers shall be capable of reporting the full or empty status of any element address in its domain.

## 5 Medium changer models

### 5.1 Independent medium changer

An independent medium changer is a device server that returns 8h in the PERIPHERAL DEVICE TYPE field (see SPC) of INQUIRY command response data.

Independent medium changers for the SMC standard respond to a LUN different from those used by a primary device. Communication with a primary device may use the same service delivery subsystem as the medium changer device or a different SCSI service delivery subsystem. Primary devices that are not SCSI devices are also permitted. Multiple primary devices may be attached to an independent changer.

If a primary device served by the medium changer is a SCSI device, the primary device may be addressed on a SCSI-3 service delivery subsystem though the same port as the medium changer but with a different LUN or the primary device may be addressed through independent ports and any LUN on the same or a different service delivery subsystem.

The READ ELEMENT STATUS command response data page for each data transfer element may provide the identity of the primary device serviced by a medium changer device. This support is optional since a primary device is not required to be a SCSI-3 device.

### 5.2 Attached medium changer

An attached medium changer is part of a device server that sets the MCHNGR bit to one in its standard INQUIRY data (see SPC). Attached medium changers respond to the same LUN as a primary device that is not a medium changer. In an attached medium changer, the PERIPHERAL DEVICE TYPE field of INQUIRY command response data returns the type of the primary device.

Two medium changer commands, READ ELEMENT STATUS ATTACHED and MOVE MEDIUM ATTACHED are added to the command set of the primary device. The other commands available depend on the model for the primary device.

### 5.3 Medium changer elements

A medium changer has an address space separate and distinct from the physical address space of a SCSI-3 service delivery subsystem. The term element is used throughout this standard to refer to one member of the medium changer address space. Within a medium changer, the element addresses are a set of physical locations and mechanisms within the scope of a medium changer device.

Each element is an instance of one of four element types:

- Medium Transport Element;
- Storage Element;
- Import/Export Element,
- Data Transfer Element.

Each element is a discrete physical entity with a unique element address that may provide storage for zero or one volume. A volume is in exactly one element at a time. The point in time during movement when a volume is considered in a different element is implementation dependent. When requested to report element status, a volume shall be reported as being at

exactly one element address. The element address shall not be arbitrarily changed by the medium changer. However, multiple initiator environments may cause volumes to be moved without notifying other initiators.

Volumes are addressed indirectly by this model. Volumes can be moved to or from any of the elements of the medium changer device using element addresses. The method of detecting the presence of a volume at any element in a medium changer is vendor-specific.

In order to ensure exclusive access to a volume, the element where the volume is located (the element address) may be reserved by an initiator. Exclusive access will be lost if the volume is moved to an unreserved element. Exclusive access will be retained if a volume is moved between two reserved elements. Reservation of the medium transport element used is not required to preserve exclusive access. In an independent medium changer, elements may be reserved by the RESERVE ELEMENT (6), RESERVE ELEMENT (10) or PERSISTENT RESERVE OUT (see SPC) commands. In an attached medium changer, element reservations are only available using the PERSISTENT RESERVE OUT command.

Providing independent storage for medium is optional for medium transport, import export and data transport elements. The capabilities of a particular medium changer can be determined from mode parameters in the device capabilities page (see 7.3.1).

NOTE An example of an element not providing independent storage for a volume is a carousel style storage for volumes. The import/export function could be provided by a port which allows operator access to one of the storage elements. In such a medium changer a MOVE MEDIUM command to move a volume from a storage element to the import/export element rotates the carousel to align the addressed storage element to the import/export position. In this case, the import/export element does not provide independent storage but rather access to one of the storage elements.

Each element type shall be assigned a contiguous number range. The number ranges assigned to element types shall not overlap. The number ranges are not required to form one contiguous number range over all element types. Element address zero is reserved for use as the default medium transport element address.

#### **5.4 Medium transport element**

A medium transport element contains the functions of the medium changer device that moves a volume from one element address to another. When a medium transport element can serve (even temporarily) as a storage location for a volume, each location where a volume may be held shall have a separate medium transport element address. Support for a medium transport element address being the source and/or destination address in a MOVE MEDIUM and EXCHANGE MEDIUM command is optional. The maximum number of medium transport elements is 127.

In larger medium changer devices, the medium movement functions may be performed by multiple independent robotics subsystems. Each of these subsystems may have a number of medium transport element addresses. Sets of medium transport elements for the same common robotics system shall have their medium transport element addresses assigned contiguously.

Any of the medium transport element addresses within a medium changer may be used in the medium transport element address field of any MOVE MEDIUM or EXCHANGE MEDIUM command. An initiator may determine the capabilities of the medium transport elements of a medium changer in the transport geometry mode parameters.

Element address zero is reserved for use in the medium transport element address field of MOVE MEDIUM and EXCHANGE MEDIUM commands to direct the medium changer to use a default or any available medium transport element. Support for element address zero is mandatory.

Attached medium changer devices shall have only one medium transport element. In an attached changer, element address zero is reserved for the medium transport element.

### 5.5 Storage element

Storage elements are locations of volumes while a volume is not in some other element type. A volume in a storage element is available for access by medium transport elements. If the SMC device has no storage elements, then it shall have at least one import/export element with independent storage capability.

A storage element may be a source or destination address in a MOVE MEDIUM command or the optional EXCHANGE MEDIUM command.

### 5.6 Import/export element

Import/export elements are locations of volumes that are being inserted into or withdrawn from the medium changer. A volume in one of these elements is accessible by at least one medium transport element in the medium changer, by the operator or by another medium changer device (i.e., cascaded medium changer devices). Support for an import/export element is optional.

Any import/export element may be capable of import actions only, export actions only or both when present in a medium changer logical unit.

An import/export element address may be a source or destination address in a MOVE MEDIUM command or the optional EXCHANGE MEDIUM command. Import/export elements may or may not provide independent storage of a volume.

### 5.7 Data transfer element

A data transfer element represents the interface between the medium changer and a primary device (e.g., a removable media optical disk drive or tape drive). A data transfer element is considered part of the medium changer and is not part of a primary device.

NOTE It should be possible to place a primary device of a compatible device class in proximity to a medium changer, specify the interface as a data transfer element to the medium changer and begin operation without any change to the primary device. Closer coordination between the medium changer and a primary device may be required in some implementations. Such coordination is vendor-specific.

Primary devices are capable of reading or writing the medium in a volume. Data transfer elements may also be viewed as medium changer element addresses of volumes loaded in or available for loading in or removal from primary devices (e.g., disk or tape drives). Any data transfer element shall be accessible to at least one medium transport element.

A data transfer element address may be a source or destination address in a MOVE MEDIUM command or the optional EXCHANGE MEDIUM command. Data transfer elements may or may not provide independent storage of a unit of media, see the device capabilities mode parameters. Attached medium changers shall have only one data transfer element.

### 5.8 Element status maintenance requirements

When a medium changer receives a valid READ ELEMENT STATUS command with a CURDATA bit of zero, the medium changer shall be capable of reporting as command response data, various data required by each page type (i.e., full, error, etc.). The medium changer may maintain this information at all times or it may regenerate it after receiving a valid READ ELEMENT STATUS command. The optional INITIALIZE ELEMENT STATUS command may be used to force regeneration of this information.

## 5.9 Volume tag information

The READ ELEMENT STATUS command response data descriptor format for all element types includes fields that contain volume tag information. These optional fields are used to report volume identification information that the medium changer has acquired either by reading an external label (e.g., bar code labels), by a SEND VOLUME TAG command or by other means which may be vendor-specific. The same volume tag information shall be available to all initiators whether the volume tag information was assigned by that initiator by some other initiator or by the medium changer.

The volume tag information field values shall be independent of any volume identification information recorded on the medium or a volume.

The medium changer command set definition does not impose any requirement that volume tag information be unique over the volumes within the domain of the medium changer. If volume tag information is implemented, the medium changer shall retain the association between volume tag information and a volume, as the volume is moved from element address to element address.

Volume tag information provides a means to confirm the identity of a volume that is stored at a medium changer element address. When volume tag information is implemented, this standard does not specify any direct addressing of volumes based on the values in these fields. Optional commands are defined that provide translation between volume tag information and the element addresses of zero or more volumes with matching volume tags information.

The following commands support the optional volume tag functionality:

- SEND VOLUME TAG – used either as a translation request or to associate a volume tag with the volume currently residing at an element address. This is an optional command for independent medium changers;
- REQUEST VOLUME ELEMENT ADDRESS – returns the element address currently associated with the volume tag information transferred with the last SEND VOLUME TAG command. This is an optional command for independent medium changers;
- READ ELEMENT STATUS – optionally reports volume tag information for all element types. Volume tag information is an optional function of a medium changer.

### 5.10 Primary and alternate volume tag information

Element status descriptors, as optionally reported by the READ ELEMENT STATUS command, permit defining a primary volume tag and an alternate volume tag. Alternate volume tag information provides a means for a system to use different volume identification information for each partition of a volume. Primary volume tag information refers to the logical medium accessible via a MOVE MEDIUM command with the INVERT bit set to zero. Alternate volume tag information refers to the other side of the media (i.e., the side that would be accessed via a MOVE MEDIUM command with the INVERT bit set to one). Some volumes may be recorded on both sides. The INVERT bit setting permits an initiator to select the side to use when a volume is mounted.

All volumes have a primary volume tag information attribute.

### 5.11 Volume tag information format

Volume tag information consists of a VOLUME IDENTIFICATION field plus a VOLUME SEQUENCE NUMBER field.

Table 1 defines the fields within the primary and alternate volume tag information fields that may be present in READ ELEMENT STATUS descriptors and in the data format for the SEND VOLUME TAG command.

**Table 1 – Volume tag information format**

Bit	7	6	5	4	3	2	1	0
Byte								
0	Volume identification							
31								
32	Reserved							
33								
34	Volume sequence number							
35								

The VOLUME IDENTIFICATION field shall consist of a left justified sequence of characters. Unused positions shall be blank (20h) filled. In order for the SEND VOLUME TAG translate with template to work, the characters '\*' and '?' (2Ah and 3Fh) shall not appear in the VOLUME IDENTIFICATION field and there shall be no blanks (20h) in the significant part (non blank filled) of the VOLUME IDENTIFICATION field. If volume tag information for a particular element is undefined, the VOLUME IDENTIFICATION field shall be zero filled. The VOLUME SEQUENCE NUMBER is a 2-byte integer field. If the VOLUME SEQUENCE NUMBER is not used, this field shall be zero.

NOTE For compatibility with existing volume label conventions, it is recommended that the characters in the significant non-blank portion of the VOLUME IDENTIFICATION field be restricted to the set: '0'...'9', 'A'...'Z' and '\_'.

IECNORM.COM : Click to view the full PDF of ISO/IEC 14776-351:2007

## 6 Commands for medium changer logical units

### 6.1 Commands for independent medium changers

The commands for independent medium changers shall be as shown in Table 2. Operation codes 0Ch and C0h through FFh are vendor-specific. All other operation codes are reserved.

**Table 2 – Commands for independent medium changers**

Command	Operation code	Type	Subclause
CHANGE DEFINITION	40h	O	SPC
EXCHANGE MEDIUM	A6h	O	6.3
INITIALIZE ELEMENT STATUS	07h	O	6.4
INQUIRY	12h	M	SPC
LOG SELECT	4Ch	O	SPC
MODE SELECT (6)	15h	O	SPC
MODE SELECT (10)	55h	O	SPC
MODE SENSE (6)	1Ah	O	SPC
MODE SENSE (10)	5Ah	O	SPC
MOVE MEDIUM	A5h	M	6.5
PERSISTENT RESERVE IN	5Eh	O	SPC
PERSISTENT RESERVE OUT	5Fh	O	SPC
POSITION TO ELEMENT	2Bh	O	6.6
PREVENT ALLOW MEDIUM REMOVAL	1Eh	O	SPC
READ BUFFER	3Ch	O	SPC
READ ELEMENT STATUS	B8h	M	6.7
RECEIVE DIAGNOSTIC RESULTS	1Ch	O	SPC
RELEASE ELEMENT (6)	17h	O	6.8
RELEASE ELEMENT (10)	57h	O	6.9
REQUEST VOLUME ELEMENT ADDRESS	B5h	O	6.10
REQUEST SENSE	03h	M	SPC
RESERVE ELEMENT (6)	16h	O	6.11
RESERVE ELEMENT (10)	56h	O	6.12
REZERO UNIT	01h	O	SPC
SEND DIAGNOSTIC	1Dh	M	SPC
SEND VOLUME TAG	B6h	O	6.13
TEST UNIT READY	00h	M	SPC
WRITE BUFFER	3Bh	O	SPC
Key:	M	= command implementation is mandatory.	
	O	= command implementation is optional.	

## 6.2 Commands for attached medium changers

Attached medium changers shall support the READ ELEMENT STATUS ATTACHED and MOVE MEDIUM ATTACHED commands (see Table 3) in addition to the commands defined by the primary device type. Attached medium changers shall not support other medium changer commands (e.g. EXCHANGE MEDIUM).

**Table 3 – Commands for attached medium changers**

Command name	Operation Code	Type	Subclause
MOVE MEDIUM ATTACHED	A7h	M	6.5
MOVE MEDIUM ATTACHED*	A5h	O	6.5
READ ELEMENT STATUS ATTACHED	B4h	M	6.7
READ ELEMENT STATUS ATTACHED*	B8h	O	6.7
Key: M = command implementation is mandatory. O = command implementation is optional. * = optional operation codes for use by sequential devices only.			

Sequential devices (primary device type 1) may also use operation codes A5h for MOVE MEDIUM ATTACHED and B8h for READ ELEMENT STATUS ATTACHED.

## 6.3 EXCHANGE MEDIUM command

The EXCHANGE MEDIUM command (see Table 4) provides a means to exchange the volume in the source element address, with the volume located at a destination element address. Support of this command requires that the logical unit have the capability of handling two volumes at the same time or that it emulate this capability.

Support for this command is optional for an independent medium changer. This command has no command parameter data. No command response data is returned.

A reservation conflict shall occur if an EXCHANGE MEDIUM command is received from an initiator other than the one holding a logical unit or element reservation.

**Table 4 – EXCHANGE MEDIUM command**

Byte	Bit	7	6	5	4	3	2	1	0
0	OPERATION CODE (A6h)								
1	Reserved								
2	MEDIUM TRANSPORT ADDRESS								
3									
4	SOURCE ADDRESS								
5									
6	FIRST DESTINATION ADDRESS								
7									
8	SECOND DESTINATION ADDRESS								
9									
10	Reserved						INV1	INV2	
11	CONTROL								

The volume in the SOURCE ADDRESS element is moved to the FIRST DESTINATION ADDRESS element and the volume that previously occupied the FIRST DESTINATION ADDRESS element is moved to the SECOND DESTINATION ADDRESS element. The SECOND DESTINATION ADDRESS element may or may not be the same as the SOURCE ADDRESS element. In the case of a simple exchange, SOURCE ADDRESS and SECOND DESTINATION ADDRESS are the same. The device capabilities page (see 7.3.1) of the MODE SENSE command provides a matrix which defines the supported source element type and first destination element type combinations for EXCHANGE MEDIUM commands when the source element type is the same as second destination element type.

If the SOURCE ADDRESS element is empty or the FIRST DESTINATION ADDRESS element is empty, the command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code MEDIUM SOURCE ELEMENT EMPTY. If the SECOND DESTINATION ADDRESS element is full, and not the same as the SOURCE ADDRESS element, the command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code MEDIUM DESTINATION ELEMENT FULL.

The MEDIUM TRANSPORT ADDRESS field specifies the medium transport element that is to be used in executing this command. The default transport element address of zero may be used. If the MEDIUM TRANSPORT ADDRESS element has not been assigned or that element address has been assigned to a different element type, the logical unit shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS.

The SOURCE ADDRESS, the FIRST DESTINATION ADDRESS and the SECOND DESTINATION ADDRESS fields may represent a storage element, an import/export element, a data transfer element or a medium transport element. If the element address specified has not been assigned to a specific element of the medium changer, the logical unit shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS.

An INV1 bit of one specifies that the volume shall be inverted prior to depositing the volume into the FIRST DESTINATION ADDRESS element. Support for this bit set to one is optional.

An INV2 bit of one specifies that the volume shall be inverted prior to depositing the volume into the SECOND DESTINATION ADDRESS element. Support for this bit set to one is optional.

If the medium changer does not support volume rotation for handling double sided volumes, the INV1 and INV2 bits should be set to zero. If either of these bits is one, a logical unit which is not capable of volume rotation shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB.

**6.4 INITIALIZE ELEMENT STATUS command**

The INITIALIZE ELEMENT STATUS command (see Table 5) shall cause the medium changer to check all assigned element addresses for volume and any other status relevant to that element address. The intent of this command is to enable the Initiator to get a quick response from a subsequent READ ELEMENT STATUS command. It may be useful to issue this command after a power failure, or if a volume has been changed by an operator, or if configurations have been changed.

**Table 5 – INITIALIZE ELEMENT STATUS command**

Byte	Bit	7	6	5	4	3	2	1	0
0	OPERATION CODE (07h)								
1	Reserved								
2									
3									
4									
5	CONTROL								

Support for this command is optional for an independent medium changer. This command has no command parameter data. No command response data is returned.

If an implementation does not support this command, the same function is provided in the READ ELEMENT STATUS command.

A reservation conflict shall occur if an INITIALIZE ELEMENT STATUS command is received from an initiator other than the one holding a logical unit or element reservation.

IECNORM.COM : Click to view the full PDF of ISO/IEC 14776-351:2007

## 6.5 MOVE MEDIUM command

The MOVE MEDIUM command (see Table 6) requests that the target move a volume from a source element to a destination element. Support for this command is mandatory for both independent medium changers and attached medium changers.

A reservation conflict shall occur if a MOVE MEDIUM command is received from an initiator other than the one holding a logical unit or element reservation.

**Table 6 – MOVE MEDIUM command**

Byte	Bit	7	6	5	4	3	2	1	0
0	OPERATION CODE								
1	Reserved								
2	MEDIUM TRANSPORT ADDRESS								
3									
4	SOURCE ADDRESS								
5									
6	DESTINATION ADDRESS								
7									
8	Reserved								
9									
10	Reserved								INV
11	CONTROL								

The MOVE MEDIUM OPERATION CODE for an independent medium changer shall be A5h. An attached medium changer shall use OPERATION CODE A7h for the MOVE MEDIUM ATTACHED command. Attached changers connected to a sequential primary device are also permitted to implement OPERATION CODE A5h as the MOVE MEDIUM ATTACHED command.

This command moves the volume from the element specified by SOURCE ADDRESS to the element specified by DESTINATION ADDRESS.

If the SOURCE ADDRESS element is empty, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code MEDIUM SOURCE ELEMENT EMPTY. If the DESTINATION ADDRESS element is full and different from the SOURCE ADDRESS element, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code MEDIUM DESTINATION ELEMENT FULL.

The MEDIUM TRANSPORT ADDRESS field specifies the medium transport element that is to be used in executing this command. Attached medium changers shall set this field to zero. Independent changers may set this field to zero to specify the default medium transport element. If the address specified has not been assigned or has been assigned to an element other than a medium transport element, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS.

The SOURCE ADDRESS and the DESTINATION ADDRESS fields may represent a storage element, an import/export element, a data transfer element or a medium transport element. If the address specified has not been assigned to a specific element of the medium changer, the target shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS.

The device capabilities MODE SENSE page (see 7.3.1), provides a matrix with the supported source element or destination element combinations for the MOVE MEDIUM command.

An INVERT bit of one specifies that the volume shall be inverted or rotated prior to depositing the medium into the DESTINATION ADDRESS element. If the medium changer does not support volume rotation for handling double sided media, the INVERT bit should be set to zero. If this bit is one, a target that is not capable of volume rotation shall return CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB.

### 6.6 POSITION TO ELEMENT command

The POSITION TO ELEMENT command (see Table 7) shall position the MEDIUM TRANSPORT ADDRESS element such that further motion of the MEDIUM TRANSPORT ADDRESS element is unnecessary to execute an appropriate MOVE MEDIUM command between the MEDIUM TRANSPORT ADDRESS element and the DESTINATION ADDRESS element.

Support for this command is optional for independent medium changers. This command has no command parameter data. No command response data is returned.

A reservation conflict shall occur if a POSITION TO ELEMENT command is received from an initiator other than the one holding a logical unit or element reservation.

**Table 7 – POSITION TO ELEMENT command**

Bit	7	6	5	4	3	2	1	0
Byte								
0	OPERATION CODE (2Bh)							
1	Reserved							
2	MEDIUM TRANSPORT ADDRESS							
3								
4	DESTINATION ADDRESS							
5								
6	Reserved							
7	Reserved							
8	Reserved							INVERT
9	CONTROL							

An INVERT bit value of one requests that the MEDIUM TRANSPORT ADDRESS element be inverted or rotated before positioning in front of the destination element address. A value of zero requests that the orientation of the MEDIUM TRANSPORT ADDRESS element be unchanged before positioning in front of the DESTINATION ADDRESS element. Support for this bit set to one is optional.

## 6.7 READ ELEMENT STATUS command

### 6.7.0 General

The READ ELEMENT STATUS command (see Table 8) requests that the target report the status of its internal elements to the initiator. Support for this command is mandatory for both attached medium changers and independent medium changers.

**Table 8 – READ ELEMENT STATUS command**

Byte	Bit	7	6	5	4	3	2	1	0
0	OPERATION CODE								
1	Reserved			VOLTAG		ELEMENT TYPE CODE			
2	STARTING ELEMENT ADDRESS								
3									
4	NUMBER OF ELEMENTS								
5									
6	Reserved						CURDATA		DVCID
7	ALLOCATION LENGTH								
8									
9									
10	Reserved								
11	control								

The READ ELEMENT STATUS OPERATION CODE for an independent medium changer shall be B8h. An attached medium changer shall use OPERATION CODE B4h for the READ ELEMENT STATUS ATTACHED command. Attached changers connected to a sequential primary device may also implement OPERATION CODE B8h as the READ ELEMENT STATUS ATTACHED command.

A volume tag (VOLTAG) bit of one indicates that the target shall report volume tag information if this feature is supported. A value of zero indicates that volume tag information shall not be reported. If the volume tag feature is not supported this bit shall be treated as reserved.

If the current data (CURDATA) bit is one, the target shall return element status data without causing device motion. If the CURDATA bit is zero, the target may cause device motion to confirm element status data. Support for the CURDATA bit set to one is mandatory.

A reservation conflict shall occur if a READ ELEMENT STATUS or READ ELEMENT STATUS ATTACHED command with the CURDATA bit set to zero is received from an initiator other than the one holding a logical unit or element reservation. If the CURDATA bit is set to one, a reservation conflict shall not occur.

The ELEMENT TYPE CODE field specifies the particular element type(s) selected for reporting by this command. A value of zero specifies that status for all element types shall be reported. The element type codes are defined in Table 9.

**Table 9 – Element type code**

Code	Description
0h	All element types reported, (valid in CDB only)
1h	Medium transport element
2h	Storage element
3h	Import/export element
4h	Data transfer element
5h - Fh	Reserved

The STARTING ELEMENT ADDRESS field specifies the minimum element address to report. Only elements with an element type code permitted by the ELEMENT TYPE CODE field, and an element address greater than or equal to STARTING ELEMENT ADDRESS shall be reported. Element descriptor blocks are not generated for undefined element addresses.

The NUMBER OF ELEMENTS field specifies the maximum number of element descriptors to be created by the target for this command. The value specified by this field is not the range of element addresses to be considered for reporting but rather the number of defined elements to report. If the ALLOCATION LENGTH field is not sufficient to transfer all the element descriptors, the target shall transfer all those descriptors that can be completely transferred and this shall not be considered an error.

A device ID (DVCID) bit of one specifies that the target shall return device identifiers, if available, for the specified range. A DVCID bit of zero specifies that the target shall not return device identifiers. If the device ID feature is not supported, the DVCID bit shall be treated as reserved.

**6.7.1 Element status data**

The data returned by the READ ELEMENT STATUS command is defined in Table 10 and 6.7.2 through 6.7.6. Element status data consists of an eight-byte header (see Table 10), followed by zero or more element status pages.

**Table 10 – Element status data**

Bit	7	6	5	4	3	2	1	0
<b>Byte</b>								
0	FIRST ELEMENT ADDRESS REPORTED							
1								
2	NUMBER OF ELEMENTS AVAILABLE							
3								
4	Reserved							
5	BYTE COUNT OF REPORT AVAILABLE (all pages, n - 7)							
6								
7								
8	Element status page(s)							
8								

The FIRST ELEMENT ADDRESS REPORTED field indicates the element address of the element with the smallest element address found to meet the CDB request.

The NUMBER OF ELEMENTS AVAILABLE field indicates the number of elements meeting the request in the command descriptor block. The status for these elements is returned if sufficient ALLOCATION LENGTH was specified.

The BYTE COUNT OF REPORT AVAILABLE field indicates the number of bytes of element status page data available for all elements meeting the request in the command descriptor block. This value shall not be adjusted to match the ALLOCATION LENGTH available.

NOTE The READ ELEMENT STATUS command can be issued with an ALLOCATION LENGTH of eight bytes in order to determine the ALLOCATION LENGTH required to transfer all the element status data specified by the command.

### 6.7.2 Element status page

The element status page is defined in Table 11. Each element status page includes an eight-byte header followed by zero or more element descriptor blocks. The header includes the element type code, the length of each descriptor block and the number of bytes of element descriptor information that follow the header for this element type.

Table 11 – Element status page

Bit	7	6	5	4	3	2	1	0
Byte								
0	element type code							
1	pvoltag	avoltag	Reserved					
2	element descriptor length (z)							
3								
4	Reserved							
5	byte count of descriptor data available (this page, y - 7)							
6								
7								
8	Element descriptor(s)							
y								

The ELEMENT TYPE CODE field indicates the element type (see Table 9) reported by this page.

A primary volume tag (PVOLTAG) bit of one indicates that the PRIMARY VOLUME TAG INFORMATION field is present in each of the following element descriptor blocks. A value of zero indicates that these bytes are omitted from the element descriptors that follow.

An alternate volume tag (AVOLTAG) bit of one indicates that the ALTERNATE VOLUME TAG INFORMATION field is present in each of the following element descriptor blocks. A value of zero indicates that these bytes are omitted from the element descriptors that follow.

The ELEMENT DESCRIPTOR LENGTH field indicates the number of bytes in each element descriptor.

The BYTE COUNT OF DESCRIPTOR DATA AVAILABLE field indicates the number of bytes of element descriptor data available for elements of this element type meeting the request in the CDB. This value shall not be adjusted to match the ALLOCATION LENGTH available.

Each element descriptor includes the element address and status flags; it may also contain sense code information as well as other information depending on the element type (see 6.7.3 through 6.7.6).

### 6.7.3 Medium transport element descriptor

Table 12 defines the medium transport element descriptor.

**Table 12 – Medium transport element descriptor**

Byte	Bit	7	6	5	4	3	2	1	0
0		ELEMENT ADDRESS							
1									
2		Reserved				EXCEPT	RSVD	FULL	
3		Reserved							
4		ADDITIONAL SENSE CODE							
5		ADDITIONAL SENSE CODE QUALIFIER							
6		Reserved							
8									
9		SVALID	INVERT	Reserved					
10		SOURCE STORAGE ELEMENT ADDRESS							
11									
		...							
(36 bytes)		PRIMARY VOLUME TAG INFORMATION (field omitted if PVOLTAG=0)							
(36 bytes)		ALTERNATE VOLUME TAG INFORMATION (field omitted if AVOLTAG =0)							
		...							
(1 byte)		Reserved				CODE SET			
(1 byte)		Reserved				IDENTIFIER TYPE			
(1 byte)		Reserved							
(1 byte)		IDENTIFIER LENGTH (x)							
(x bytes)		IDENTIFIER							
		...							
to z-1		Vendor-specific							

The ELEMENT ADDRESS field gives the address of the medium changer element whose status is reported by this element descriptor block.

An exception (EXCEPT) bit of one indicates the element is in an abnormal state. An exception bit of zero indicates the element is in a normal state. If this bit is one, information on the abnormal state may be available in the ADDITIONAL SENSE CODE and ADDITIONAL SENSE CODE QUALIFIER fields.

A FULL bit value of one indicates that the element contains a unit of media. A value of zero indicates that the element does not contain a unit of media. When the EXCEPT bit is one, the value of the FULL bit is not valid.

The ADDITIONAL SENSE CODE field may provide specific information on an abnormal element state. The values in this field are as defined for the ADDITIONAL SENSE CODE field of REQUEST SENSE command response data (see SPC). This field is valid only if the EXCEPT bit is one.

The ADDITIONAL SENSE CODE QUALIFIER field may provide more detailed information on an abnormal element state. The values in this field are as defined for the ADDITIONAL SENSE CODE QUALIFIER field of REQUEST SENSE command response data (see SPC). This field is valid only if the EXCEPT bit is one.

A source valid (SVALID) bit value of one indicates that the SOURCE STORAGE ELEMENT ADDRESS field and the INVERT bit information are valid. A value of zero indicates that the values in these fields are not valid.

An INVERT bit value of one indicates that the unit of media now in this element was inverted by MOVE MEDIUM or EXCHANGE MEDIUM operations since it was last in the SOURCE STORAGE ELEMENT ADDRESS. A value of zero indicates that no inversion occurred during the operation.

The SOURCE STORAGE ELEMENT ADDRESS field provides the address of the last storage element this unit of media occupied. This field is valid only if the SVALID bit is one.

The PRIMARY VOLUME TAG INFORMATION and ALTERNATE VOLUME TAG INFORMATION fields provide for identifying the unit of media residing in this element (see 5.9). Either or both of these fields may be omitted for all the element descriptor blocks that comprise an element status page as indicated by the PVOLTAG and AVOLTAG bits in the element status page header.

The CODE SET field and IDENTIFIER TYPE field are defined in 6.7.7.

The IDENTIFIER LENGTH field contains the length in bytes of the IDENTIFIER field (see 6.7.7). If no device identifier is available, or the DVCID bit in the CDB is zero, the IDENTIFIER LENGTH field shall be zero and the CODE SET and IDENTIFIER TYPE fields shall also be zero.

The IDENTIFIER field provides a device identifier for this medium transport element as defined in 6.7.7. If no device identifier is available for this element, or the DVCID bit in the CDB is zero, this field shall be omitted.

### 6.7.4 Storage element descriptor

Table 13 defines the storage element descriptor.

**Table 13 – Storage element descriptor**

Bit	7	6	5	4	3	2	1	0
Byte								
0	ELEMENT ADDRESS							
1	ELEMENT ADDRESS							
2	Reserved				ACCESS	EXCEPT	RSVD	FULL
3	Reserved							
4	ADDITIONAL SENSE CODE							
5	ADDITIONAL SENSE CODE QUALIFIER							
6	Reserved							
8	Reserved							
9	SVALID	INVERT	Reserved					
10	SOURCE STORAGE ELEMENT ADDRESS							
11	SOURCE STORAGE ELEMENT ADDRESS							
	...							
(36 bytes)	PRIMARY VOLUME TAG INFORMATION (field omitted if PVOLTAG=0)							
(36 bytes)	ALTERNATE VOLUME TAG INFORMATION (field omitted if AVOLTAG=0)							
	...							
(1 byte)	Reserved				CODE SET			
(1 byte)	Reserved				IDENTIFIER TYPE			
(1 byte)	Reserved							
(1 byte)	IDENTIFIER LENGTH (x)							
(x bytes)	IDENTIFIER							
	...							
to z-1	Vendor-specific							

An ACCESS bit value of one indicates that access to the element by a medium transport element is allowed. An ACCESS bit of zero indicates that access to the element by the medium transport element is denied. When the EXCEPT bit is one, the value of the ACCESS bit is not valid.

The SOURCE STORAGE ELEMENT ADDRESS field provides the address of the last storage element this unit of media occupied. This element address value may or may not be the same as this element. This field is valid only if the SVALID bit is one.

The CODE SET field and IDENTIFIER TYPE field are defined in 6.7.7.

The IDENTIFIER LENGTH field contains the length in bytes of the IDENTIFIER field (see 6.7.7). If no device identifier is available, or the DVCID bit in the CDB is zero, the IDENTIFIER LENGTH field shall be zero and the CODE SET and IDENTIFIER TYPE fields shall also be zero.

The IDENTIFIER field provides a device identifier for this storage element as defined in 6.7.7. If no device identifier is available for this element, or the DVCID bit in the CDB is zero, this field shall be omitted.

For fields not defined in this subclause, see 6.7.3.

### 6.7.5 Import/export element descriptor

Table 14 defines the import/export element descriptor.

**Table 14 – Import/export element descriptor**

Bit	7	6	5	4	3	2	1	0
Byte								
0	ELEMENT ADDRESS							
1								
2	Reserved	INENAB	EXENAB	ACCESS	EXCEPT	IMPEXP	FULL	
3	Reserved							
4	ADDITIONAL SENSE CODE							
5	ADDITIONAL SENSE CODE QUALIFIER							
6	Reserved							
8								
9	SVALID	INVERT	Reserved					
10	SOURCE STORAGE ELEMENT ADDRESS							
11								
	...							
(36 bytes)	PRIMARY VOLUME TAG INFORMATION (field omitted if PVOLTAG=0)							
(36 bytes)	ALTERNATE VOLUME TAG INFORMATION (field omitted if AVOLTAG=0)							
	...							
(1 byte)	Reserved				CODE SET			
(1 byte)	Reserved				IDENTIFIER TYPE			
(1 byte)	Reserved							
(1 byte)	IDENTIFIER LENGTH (x)							
(x bytes)	IDENTIFIER							
	...							
To z-1	Vendor-specific							

An import enable (INENAB) bit of one indicates that the import/export element supports movement of media into the scope of the medium changer device. An INENAB bit of zero indicates that this element does not support import actions.

An export enable (EXENAB) bit of one indicates that the import/export element supports movement of media out of the scope of the medium changer device. An EXENAB bit of zero indicates that this element does not support export actions.

An ACCESS bit of one indicates that access to the import/export element by a medium transport element is allowed. An ACCESS bit of zero indicates access to the import/export element by medium transport elements is denied. When the EXCEPT bit is one, the value of the ACCESS bit is invalid.

NOTE An example of when access would be denied is when the operator has exclusive access to the import/export element.

An import export (IMPEXP) bit of one indicates the unit of media in the import/export element was placed there by an operator. An IMPEXP bit of zero indicates the unit of media in the import/export element was placed there by the medium transport element. When the EXCEPT bit is one, the value of the IMPEXP bit is invalid.

The CODE SET field and IDENTIFIER TYPE field are defined in 6.7.7.

The IDENTIFIER LENGTH field contains the length in bytes of the IDENTIFIER field (see 6.7.7). If no device identifier is available, or the DVCID bit in the CDB is zero, the IDENTIFIER LENGTH field shall be zero and the CODE SET and IDENTIFIER TYPE fields shall also be zero.

The IDENTIFIER field provides a device identifier for this import/export element as defined in 6.7.7. If no device identifier is available for this element, or the DVCID bit in the CDB is zero, this field shall be omitted.

For fields not defined in this subclause, see 6.7.3.

IECNORM.COM : Click to view the full PDF of ISO/IEC 14776-351:2007

### 6.7.6 Data transfer element descriptor

Table 15 defines the data transfer element descriptor.

**Table 15 – Data transfer element descriptor**

Bit	7	6	5	4	3	2	1	0
<b>Byte</b>								
0	ELEMENT ADDRESS							
1								
2	Reserved			ACCESS	EXCEPT	RSVD	FULL	
3	Reserved							
4	ADDITIONAL SENSE CODE							
5	ADDITIONAL SENSE CODE QUALIFIER							
6	NOT BUS	RSVD	ID VALID	LU VALID	RSVD	LOGICAL UNIT NUMBER		
7	SCSI BUS ADDRESS							
8	Reserved							
9	SVALID	INVERT	Reserved					
10	SOURCE STORAGE ELEMENT ADDRESS							
11								
	...							
(36 bytes)	PRIMARY VOLUME TAG INFORMATION (field omitted if PVOLTAG=0)							
(36 bytes)	ALTERNATE VOLUME TAG INFORMATION (field omitted if AVOLTAG=0)							
	...							
(1 byte)	Reserved				CODE SET			
(1 byte)	Reserved				IDENTIFIER TYPE			
(1 byte)	Reserved							
(1 byte)	IDENTIFIER LENGTH (X)							
(x bytes)	IDENTIFIER							
	...							
to z-1	Vendor-specific							

An ACCESS bit value of one indicates access to the data transfer element by the medium transport element is allowed. A value of zero indicates access to the data transfer element by a medium transport element is denied.

NOTE Access to the data transfer element by medium transport elements might be denied if a data transfer operation was under way. Note that a one value in this bit may not be sufficient to ensure a successful operation. This bit can only reflect the best information available to the medium changer device, which may not accurately reflect the state of the primary (data transfer) device.

The NOT BUS bit, ID VALID bit, SCSI BUS ADDRESS field, LU VALID bit and LOGICAL UNIT NUMBER field return information about addressing other devices connected to an independent medium changer. These fields shall be set to zero in an attached medium changer. If the SCSI bus address of the other device is over 255, the ID VALID bit shall be set to zero. If the lun address is over 7, the LU VALID bit shall be set to zero.

A not this bus (NOT BUS) bit value of one indicates that the SCSI BUS ADDRESS and LOGICAL UNIT NUMBER values may not be valid for the SCSI bus used to select the medium changer device. A NOT BUS bit value of zero indicates that the SCSI address and logical unit values, are on the same bus as the medium changer device. If the ID VALID and LU VALID bits are zero, this bit shall be ignored.

An ID VALID bit value of one indicates that the SCSI BUS ADDRESS field contains valid information. An LU VALID bit value of one indicates that the LOGICAL UNIT NUMBER field contains valid information.

The SCSI BUS ADDRESS field, if valid, provides the SCSI address of the primary device served by the medium changer at this element address.

The LOGICAL UNIT NUMBER field, if valid, provides the logical unit number within the SCSI bus device of the primary device served by the medium changer at this element address.

The CODE SET field and IDENTIFIER TYPE field are defined in 6.7.7.

The IDENTIFIER LENGTH field contains the length in bytes of the IDENTIFIER field (see 6.7.7). If no device identifier is available, or the DVCID bit in the CDB is zero, the IDENTIFIER LENGTH field shall be zero and the CODE SET and IDENTIFIER TYPE fields shall also be zero.

The IDENTIFIER field provides a device identifier for the primary device associated with this data transfer element as defined in 6.7.7. If no device identifier is available for this element, or the DVCID bit in the CDB is zero, this field shall be omitted.

For fields not defined in this subclause, see 6.7.7.

### 6.7.7 Identification descriptor

Table 16 defines the identification descriptor fields returned in element descriptors.

**Table 16 – Identification descriptor fields**

Bit	7	6	5	4	3	2	1	0
Byte								
(1 byte)	Reserved				CODE SET			
(1 byte)	Reserved				IDENTIFIER TYPE			
(1 byte)	Reserved							
(1 byte)	IDENTIFIER LENGTH (x)							
(x bytes)	IDENTIFIER							

The CODE SET, IDENTIFIER TYPE, IDENTIFIER LENGTH and IDENTIFIER fields in element descriptors are defined by the device identification page in SPC. Device identifiers may be available for some or all elements in a medium changer. If no device identifier is available or the DVCID bit in the CDB is zero, the IDENTIFIER LENGTH shall be zero, the IDENTIFIER field is omitted, and the CODE SET and IDENTIFIER TYPE fields shall be zero.

For a data transfer element, the IDENTIFIER field returns a device identifier from the primary device (disk or tape drive) associated with this element. The same CODE SET, IDENTIFIER TYPE, IDENTIFIER LENGTH and IDENTIFIER fields should be available via an INQUIRY command (see SPC) issued to the primary device.

For an import/export element, the IDENTIFIER field returns a unique identifier for the import/export device. An element used to exchange media between two medium changers should return the same CODE SET, IDENTIFIER TYPE, IDENTIFIER LENGTH and IDENTIFIER fields via either medium changer.

For a storage or medium transport element the CODE SET, IDENTIFIER TYPE, IDENTIFIER LENGTH and IDENTIFIER fields refer to the element, and are not an identifier for a volume stored in this location.

## 6.8 RELEASE ELEMENT (6) command

### 6.8.0 General

The RELEASE ELEMENT (6) command (see Table 17) is used to release a previously reserved logical unit, or, if the element release option is implemented, to release previously reserved elements within units.

**Table 17 – RELEASE ELEMENT (6) command**

Byte	Bit	7	6	5	4	3	2	1	0
0	OPERATION CODE (17h)								
1	Reserved			Obsolete				ELEMENT	
2	RESERVATION IDENTIFICATION								
3	Reserved								
4									
5	CONTROL								

Attached medium changers shall implement the RESERVE (6) command as defined in the SPC. Element reservations are not allowed in attached medium changer usage.

NOTE The ELEMENT bit is in the same position as the EXTENT bit in the SPC definition of RESERVE (6). An attached medium changer with a primary device that supports extents can not distinguish element from extent reservations.

The RESERVE ELEMENT and RELEASE ELEMENT commands provide the basic mechanism for contention resolution in multiple initiator systems. A reservation may only be released by a RELEASE command from the initiator that made it. It is not an error for an application client to attempt to release a reservation that is not currently valid, or is held by another initiator. In this case, the device server shall return GOOD status without altering any other reservation.

#### 6.8.1 Logical unit release (mandatory)

If the ELEMENT bit is zero, this command shall cause the device server to terminate all unit and element reservations that are active from the initiator to the specified logical unit. The RESERVATION IDENTIFICATION field in the command descriptor shall be ignored by the device server.

#### 6.8.2 Element release (optional)

If the ELEMENT bit is one and the element release option is implemented, this command shall cause any reservation from the requesting initiator with a matching reservation identification to be terminated. Other reservations from the requesting initiator shall remain in effect. If the ELEMENT bit is one and the element release option is not implemented, the RELEASE ELEMENT command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB. This option shall be implemented if the element reservation option (see 6.11.2) is implemented.

## 6.9 RELEASE ELEMENT (10) command

### 6.9.1 RELEASE ELEMENT (10) overview

The RELEASE ELEMENT (10) command (see Table 18) is used to release a previously reserved logical unit, or if the element release option is implemented, to release previously reserved elements within units. This clause describes only those instances where the RELEASE ELEMENT (10) command differs from the RELEASE ELEMENT (6) command.

Except for the instances described in this clause, the RELEASE ELEMENT (10) command shall function exactly like the RELEASE ELEMENT (6) command (see 6.8).

**Table 18 – RELEASE ELEMENT (10) command**

Byte	Bit	7	6	5	4	3	2	1	0
0	OPERATION CODE (57h)								
1	Reserved			3RDPTY	Reserved			LONGID	element
2	RESERVATION IDENTIFICATION								
3	THIRD PARTY DEVICE ID								
4	Reserved								
5									
6									
7	PARAMETER LIST LENGTH								
8									
9	CONTROL								

**6.9.2 Third-party release (Mandatory)**

The third-party release option of the RELEASE ELEMENT command allows an initiator to release a unit or elements within a unit that were previously reserved using third-party reservation (see 6.12.1). Third-party release shall be implemented if third-party reserve is implemented.

If the third-party (3RDPTY) bit is zero, the third-party release option is not requested. If the 3RDPTY bit is one and the target implements the third-party release option, the target shall release the specified unit or elements, but only if the reservation was made using the third-party reservation option by the initiator that is requesting the release for the same SCSI device as specified in the THIRD PARTY DEVICE ID field.

The format of THIRD PARTY DEVICE ID is protocol specific. If the THIRD PARTY DEVICE ID value associated with the reservation release is smaller than 255, the LONGID bit may be zero and the THIRD PARTY DEVICE ID value sent in the CDB. If the LONGID bit is zero, the PARAMETER LIST LENGTH field shall be set to zero. If the THIRD PARTY DEVICE ID value is greater than 255, the LONGID bit shall be one.

Device servers that support device IDs greater than 255 shall accept commands with LONGID equal to one. Device servers whose devices IDs are limited to 255 or smaller may reject commands with LONGID equal to one with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB.

If the LONGID bit is one, the PARAMETER LIST LENGTH shall be eight, and the parameter list shall have the format shown in Table 19. If the LONGID bit is one, the THIRD PARTY DEVICE ID field in the CDB shall be ignored. If the LONGID bit is one and the PARAMETER LIST LENGTH is not eight, the device server shall return a CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code PARAMETER LIST LENGTH ERROR.

**Table 19 – RELEASE ELEMENT (10) parameter list**

Bit	7	6	5	4	3	2	1	0
Byte								
0	THIRD PARTY DEVICE ID							
7								

### 6.10 REQUEST VOLUME ELEMENT ADDRESS command

The REQUEST VOLUME ELEMENT ADDRESS command (see Table 20) is used to transfer the results of a SEND VOLUME TAG command. Multiple REQUEST VOLUME ELEMENT ADDRESS commands may be used to retrieve the results of a single SEND VOLUME TAG command with the translate option.

Support for this command is optional for independent medium changers. This command has no command parameter data. This command returns command response data.

A reservation conflict shall occur if a REQUEST VOLUME ELEMENT ADDRESS command is received from an initiator other than the one holding a logical unit or element reservation.

The command response data returned by this command consists of a header as defined by Table 21, plus zero or more element type specific pages in the same format as defined by the READ ELEMENT STATUS command (see 6.7).

For each SEND VOLUME TAG command, the logical unit shall be able to report in response to a REQUEST VOLUME ELEMENT ADDRESS command zero or more elements that match a volume tag template in element address order. Once information for a given element address has been reported, only higher element addresses will be reported by subsequent REQUEST VOLUME ELEMENT ADDRESS commands.

If a REQUEST VOLUME ELEMENT ADDRESS command is received and no prior SEND VOLUME TAG command has been executed or the element list has been completely reported for the most recent successful SEND VOLUME TAG command, the logical unit shall return command response data consisting of only the volume element address header.

NOTE In order to ensure the successful completion of a SEND VOLUME TAG, REQUEST VOLUME ELEMENT ADDRESS command sequence in a multi-initiator environment, it may be necessary to reserve the logical unit to the initiator prior to sending the SEND VOLUME TAG command and release the logical unit after the last REQUEST VOLUME ELEMENT ADDRESS command has completed.

**Table 20 – REQUEST VOLUME ELEMENT ADDRESS command**

Byte	Bit	7	6	5	4	3	2	1	0
0		OPERATION CODE (B5h)							
1		Reserved			VOLTAG	ELEMENT TYPE CODE			
2		ELEMENT ADDRESS							
3									
4		NUMBER OF ELEMENTS TO REPOR							
5									
6		Reserved							
7		ALLOCATION LENGTH							
8									
9									
10		Reserved							
11		CONTROL							

A volume tag (VOLTAG) bit of one indicates that the logical unit shall report volume tag information, if implemented by the logical unit. A value of zero indicates that volume tag information shall not be reported. Support for this bit set to one is optional.

The ELEMENT TYPE CODE field specifies the particular element type(s) selected for reporting by this command. A value of zero specifies that status for all element types shall be returned. The element type codes are defined in Table 9. This field value determines the element types to be reported from information prepared by the most recently successful SEND VOLUME TAG command.

The ELEMENT ADDRESS field gives a medium changer element address whose interpretation depends on the SEND ACTION CODE field (see Table 27) of the last successful SEND VOLUME TAG command. The SEND ACTION CODE is returned in the volume element address header. When the last SEND ACTION CODE was a translate, the ELEMENT ADDRESS field gives the minimum element address to be reported by this command. When the SEND ACTION CODE is assert, replace and undefine, the ELEMENT ADDRESS field gives the particular element whose volume tag information was modified.

The NUMBER OF ELEMENTS TO REPORT field specifies the maximum number of elements to be reported for this command. The value specified in this field is the number of elements to report of those that match the last SEND VOLUME TAG command translate template. If the ALLOCATION LENGTH is not sufficient to transfer all the element descriptors, the logical unit shall transfer all those descriptors that can be completely transferred and this shall not be considered an error.

**Table 21 – Volume element address header**

Byte	Bit	7	6	5	4	3	2	1	0
0	FIRST ELEMENT ADDRESS REPORTED								
1									
2	NUMBER OF ELEMENTS REPORTED								
3									
4	Reserved			SEND ACTION CODE					
5	BYTE COUNT OF REPORT AVAILABLE (all pages, x - 7 )								
6									
7									
8	Element status page(s)								
x									

The SEND ACTION CODE field (see Table 27) reports the function performed by the last SEND VOLUME TAG command.

For fields not defined in this subclause, see the READ ELEMENT STATUS command description.

### 6.11 RESERVE ELEMENT (6) command

#### 6.11.0 General

The RESERVE ELEMENT (6) command (see Table 22) is used to reserve a logical unit or, if the element reservation option is implemented, elements within a logical unit.

**Table 22 – RESERVE ELEMENT (6) command**

Byte	Bit	7	6	5	4	3	2	1	0
0	OPERATION CODE (16h)								
1	Reserved			Obsolete					ELEMENT
2	RESERVATION IDENTIFICATION								
3	ELEMENT LIST LENGTH								
4									
5	CONTROL								

The RESERVE ELEMENT (6) and RELEASE ELEMENT (6) commands provide the basic mechanism for contention resolution in multiple-initiator systems.

If the RESERVE ELEMENT (6) command is implemented, then the RELEASE ELEMENT (6) also shall be implemented. Attached medium changers shall implement the RESERVE (6) command as defined in SPC. Element reservations are not allowed in attached medium changer usage.

NOTE The ELEMENT bit is in the same position as the EXTENT bit in the SPC definition of RESERVE (6). An attached medium changer with a primary device that supports extents can not distinguish an element from extent reservations.

### 6.11.1 Logical unit reservation (mandatory)

If the ELEMENT bit is zero, this command shall request that the entire logical unit be reserved for the exclusive use of the initiator as defined in SPC. If the ELEMENT bit is zero, the RESERVATION IDENTIFICATION and the ELEMENT LIST LENGTH fields shall be ignored.

If the unit, or any element within the unit, is reserved for another initiator, the target shall respond by returning RESERVATION CONFLICT status.

If, after completion of the reservation, any other initiator attempts to perform any command on the reserved unit other than an INQUIRY, REQUEST SENSE, RESERVE, RELEASE command, or a READ ELEMENT STATUS command with a curdata bit of 1, the command shall be rejected with RESERVATION CONFLICT status.

### 6.11.2 Element reservation (optional)

The RESERVATION IDENTIFICATION field provides a means for an application client to identify each element reservation. This allows an application client in a multiple tasking environment to have multiple reservations outstanding. The RESERVATION IDENTIFICATION field is used in the RELEASE ELEMENT command to specify which reservation is to be released. It is also used in superseding RESERVE ELEMENT commands to specify which reservation is to be superseded.

If the element reservation option is implemented, the element release option (see 6.8.2) shall also be implemented. These options permit multiple groups of elements within the unit to be reserved, each with a separate reservation identification.

If the ELEMENT bit is one and the element reservation option is implemented, the device server shall process the reservation request as follows.

- The element list shall be checked for valid element addresses. If any element address is invalid for this unit, the command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS. If any element descriptor in the element list specifies an element already specified in another element descriptor in the list, the command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID ELEMENT ADDRESS.
- If the requested reservation does not conflict with any active or previously requested reservation, the elements specified shall be reserved until superseded by another valid RESERVE command from the initiator that made the reservation or until released by a RELEASE command from the same initiator, by a TARGET RESET task management function from any initiator, by a hard reset condition or by a power-on cycle. If either of the last three conditions occur, a unit attention condition shall be generated;
- If the reservation request conflicts with an existing reservation, then the device server shall return RESERVATION CONFLICT status.
- If the ELEMENT bit is one and the element reservation option is not implemented, the RESERVE command shall be terminated with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB.

The size of the element list shall be defined by the ELEMENT LIST LENGTH parameter. The element list shall consist of zero or more descriptors, as shown in Table 23. Each element list descriptor defines a series of elements beginning at the specified ELEMENT ADDRESS for the specified NUMBER OF ELEMENTS. If the NUMBER OF ELEMENTS field is zero, the element list shall begin at ELEMENT ADDRESS and continue through the last element address on the unit.

**Table 23 – Data format of element list descriptors**

Byte	Bit	7	6	5	4	3	2	1	0
0		Reserved							
1									
2		NUMBER OF ELEMENTS							
3									
4		ELEMENT ADDRESS							
5									

If an initiator issues a command to an element that has been reserved by a different initiator, the command shall not be performed and the command shall be terminated with a RESERVATION CONFLICT status. If a reservation conflict precludes any part of the command, none of the command shall be performed.

## 6.12 RESERVE ELEMENT (10) command

### 6.12.0 General

The RESERVE ELEMENT (10) command (see Table 24) is used to reserve a logical unit or, if the element reservation option is implemented, elements within a logical unit. This subclause describes only those instances where the RESERVE ELEMENT (10) command differs from the RESERVE ELEMENT (6) command. Except for the instances described in this clause, the RESERVE ELEMENT (10) command shall function exactly like the RESERVE ELEMENT (6) command (see 6.11).

**Table 24 – RESERVE ELEMENT (10) command**

Byte	Bit	7	6	5	4	3	2	1	0
0		OPERATION CODE (56h)							
1		Reserved			3RDPTY	Reserved		LONGID	ELEMENT
2		RESERVATION IDENTIFICATION							
3		Reserved							
4									
5									
6									
7		PARAMETER LIST LENGTH							
8									
9		CONTROL							

The RESERVE ELEMENT (10) and RELEASE ELEMENT (10) commands provide the basic mechanism for contention resolution in multiple-initiator systems. The third-party reservation allows logical units or elements to be reserved for another specified SCSI device.

If the RESERVE ELEMENT (10) command is implemented, then the RELEASE ELEMENT (10) also shall be implemented. Element reservations are not allowed in attached medium changer usage.

NOTE The ELEMENT bit is in the same position as the EXTENT bit in the SPC definition of RESERVE (10). An attached medium changer with a primary device that supports extents can not distinguish element from extent reservations.

### 6.12.1 Third-party reservation (mandatory)

The third-party reservation option of the RESERVE command allows an application client to reserve a logical unit or elements within a logical unit for another SCSI device.

If the third-party (3RDPTY) bit is zero, the third-party reservation option is not requested. If the 3RDPTY bit is one, the RESERVE command shall reserve the specified unit or elements for the SCSI device specified in the THIRD PARTY DEVICE ID field. The target shall preserve the reservation until it is superseded by another valid RESERVE command from the initiator that made the reservation or until it is released by the same initiator, by a TARGET RESET task management function from any initiator, by a hard reset condition, or by a power-on cycle. The target shall ignore any attempt to release the reservation made by any other initiator.

After a third-party reservation has been granted, the initiator that sent the RESERVE command shall be treated like any other initiator. Reservation conflicts shall occur in all cases where another initiator is not allowed access due to the reservation.

### 6.12.2 Superseding reservations

An initiator that holds a current reservation may modify that reservation by issuing another RESERVE command to the same unit and, if the ELEMENT bit is one, using the same reservation identification. The superseding RESERVE command shall release the previous reservation in place when the new reservation request is granted. The current reservation shall not be modified if the new reservation request cannot be granted. If the superseding reservation cannot be granted because of conflicts with a previous active reservation (other than the reservation being superseded), the target shall return to RESERVATION CONFLICT status.

NOTE Superseding reservations are principally intended to allow the SCSI device ID to be changed on a reservation using the third-party reservation option.

The format of THIRD PARTY DEVICE ID is protocol specific. If the THIRD PARTY DEVICE ID value associated with the reservation is smaller than 255, the LONGID bit may be zero and the THIRD PARTY DEVICE ID value sent in the CDB. If the LONGID bit is zero, the PARAMETER LIST LENGTH field shall be set to zero. If the THIRD PARTY DEVICE ID value is greater than 255, the LONGID bit shall be one.

If the LONGID bit is one, the THIRD PARTY DEVICE ID field in the CDB shall be ignored. If the LONGID bit is one, the PARAMETER LIST LENGTH field shall be at least eight. If the LONGID bit is one and the PARAMETER LIST LENGTH field is less than eight, the device server shall return a CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code PARAMETER LIST LENGTH ERROR.

Device servers that support device IDs greater than 255 shall accept commands with LONGID equal to one. Device servers whose devices IDs are limited to 255 or smaller may reject commands with LONGID equal to one with CHECK CONDITION status. The sense key shall be ILLEGAL REQUEST and the additional sense code INVALID FIELD IN CDB.

If both the LONGID and ELEMENT bits are one, then the parameter list shall have the format shown in Table 25 and the extent list length shall be the PARAMETER LIST LENGTH minus eight.