

---

---

**Cranes — Tolerances for wheels and  
travel and traversing tracks —**

**Part 1:  
General**

*Appareils de levage à charge suspendue — Tolérances des galets et  
des voies de translation et de direction —*

*Partie 1: Généralités*

STANDARDSISO.COM : Click to view the full PDF of ISO 12488-1:2012



STANDARDSISO.COM : Click to view the full PDF of ISO 12488-1:2012



**COPYRIGHT PROTECTED DOCUMENT**

© ISO 2012

All rights reserved. Unless otherwise specified, no part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office  
Case postale 56 • CH-1211 Geneva 20  
Tel. + 41 22 749 01 11  
Fax + 41 22 749 09 47  
E-mail [copyright@iso.org](mailto:copyright@iso.org)  
Web [www.iso.org](http://www.iso.org)

Published in Switzerland

**Contents**

Page

<b>Foreword</b> .....	<b>iv</b>
<b>Introduction</b> .....	<b>v</b>
<b>1 Scope</b> .....	<b>1</b>
<b>2 Normative references</b> .....	<b>1</b>
<b>3 Terms and definitions</b> .....	<b>1</b>
<b>4 Symbols</b> .....	<b>2</b>
<b>5 Classification of tolerances</b> .....	<b>3</b>
<b>6 Tolerances</b> .....	<b>3</b>
<b>6.1 General</b> .....	<b>3</b>
<b>6.2 Thermal effects</b> .....	<b>3</b>
<b>6.3 Application of vertical out-of-plane tolerance</b> .....	<b>3</b>
<b>6.4 Construction tolerances</b> .....	<b>4</b>
<b>6.5 Operational tolerances</b> .....	<b>4</b>
<b>Bibliography</b> .....	<b>20</b>

STANDARDSISO.COM : Click to view the full PDF of ISO 12488-1:2012

## Foreword

ISO (the International Organization for Standardization) is a worldwide federation of national standards bodies (ISO member bodies). The work of preparing International Standards is normally carried out through ISO technical committees. Each member body interested in a subject for which a technical committee has been established has the right to be represented on that committee. International organizations, governmental and non-governmental, in liaison with ISO, also take part in the work. ISO collaborates closely with the International Electrotechnical Commission (IEC) on all matters of electrotechnical standardization.

International Standards are drafted in accordance with the rules given in the ISO/IEC Directives, Part 2.

The main task of technical committees is to prepare International Standards. Draft International Standards adopted by the technical committees are circulated to the member bodies for voting. Publication as an International Standard requires approval by at least 75 % of the member bodies casting a vote.

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO shall not be held responsible for identifying any or all such patent rights.

ISO 12488-1 was prepared by Technical Committee ISO/TC 96, *Cranes*, Subcommittee SC 8, *Jib cranes*.

This second edition cancels and replaces the first edition (ISO 12488-1:2005), which has been technically revised. It also incorporates the Technical Corrigendum ISO 12488-1:2005/Cor 1:2008.

ISO 12488 consists of the following parts, under the general title *Cranes — Tolerances for wheels and travel and traversing tracks*:

- *Part 1: General*
- *Part 4: Jib cranes*

STANDARDSISO.COM : Click to view the full PDF of ISO 12488-1:2012

## Introduction

This part of ISO 12488 establishes requirements and gives guidance and design rules that reflect the present state of the art in the field of crane machine design. The rules given represent good design practice that ensures fulfilment of essential safety requirements and adequate service life of components. Deviation from these rules normally leads to increased risks or reduction of service life, but it is acknowledged that new technical innovations, materials etc. may provide new solutions that result in equal or improved safety and durability.

STANDARDSISO.COM : Click to view the full PDF of ISO 12488-1:2012

[STANDARDSISO.COM](http://STANDARDSISO.COM) : Click to view the full PDF of ISO 12488-1:2012

# Cranes — Tolerances for wheels and travel and traversing tracks —

## Part 1: General

### 1 Scope

This part of ISO 12488 specifies tolerances for construction assemblies and operational conditions of cranes and associated crane tracks as defined in ISO 4306-1. The purpose of the requirements in this part of ISO 12488 is to promote safe operation and achievement of the expected life of components by the elimination of excessive load effects due to deviations or misalignments from the normal dimensions of the structure.

Tolerances given are extreme values. The elastic deformations due to load effects are outside the scope of this part of ISO 12488. These will need to be taken into account at the design stage using other criteria to achieve the intended operation and performance.

Specific values for particular crane types are given in other parts of ISO 12488.

### 2 Normative references

The following referenced documents are indispensable for the application of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO 286-2, *Geometrical product specifications (GPS) — ISO code system for tolerances on linear sizes — Part 2: Tables of standard tolerance classes and limit deviations for holes and shafts*

ISO 1101, *Geometrical Product Specifications (GPS) — Geometrical tolerancing — Tolerances of form, orientation, location and run-out*

ISO 4306-1, *Cranes — Vocabulary — Part 1: General*

### 3 Terms and definitions

For the purposes of this document, the following terms and definitions apply.

#### 3.1

##### **construction tolerance**

amount by which a specific dimension is permitted to vary, resulting from the assembly of the complete crane and its tracks, in new, modified, rebuilt or repaired buildings, before operational use

NOTE 1 This applies to new build or repaired or modified cranes and tracks.

NOTE 2 The amount is given either by the absolute value of the difference between the limits of size, or by the allowable geometric variation.

#### 3.2

##### **operational tolerance**

amount by which a specific dimension is permitted to vary, resulting from the use of the crane and its tracks

NOTE The amount is given either by the absolute value of the difference between the limits of size, or by the allowable geometric variation.

## 4 Symbols

$A$	Tolerance of the span, related to the rail centre of travelling or traversing tracks, at each point of the track or to the wheel centre of crabs or cranes
$B$	Tolerance of the horizontal straightness, in ground plan, at each point of the travelling track
$b$	Tolerance of horizontal straightness related to a test length of 2 m in ground plan, (sample value) at each point of the rail head
$C$	Tolerance of straightness related to the height of the crane rail centre at each point of the travelling track
$c$	Tolerance of straightness related to a test length of 2 m (sample value) at each point of height of the crane rail
$a$	Centre-to-centre distance between the horizontal guide rollers, in longitudinal direction of rail
$e$	Centre-to-centre distance between two wheels or bogeys, in longitudinal direction of rail
$h_F$	Distance between the top edge of a rail and the bottom edge of horizontal guide rollers
$S$	Span from centre to centre of the rail
0/00	Angle of inclination expressed as vertical points per horizontal thousand
$D$	Wheel diameter
$E$	Height tolerance related to opposite measuring points at right angles to each point of the track
$F$	Parallelism tolerance of end stops or buffers
$G$	Angularity tolerance related to rail cross-section with plane surface
$H_F$	Vertical offset of a welded connection
$H_S$	Horizontal offset of a rail head
$K$	Parallelism tolerance of a rail with reference to the web
$\Delta D$	Diameter tolerance for coupled and independently driven crane/cab wheels
$\Delta e$	Tolerance of the wheel base in ground plan
$\Delta F$	Alignment tolerance of guide rollers in ground plan
$\Delta hr$	Height tolerance of the points of wheel contact
$\Delta N$	Tolerance of parallel offset of the wheels in ground plan
$\alpha_F$	Axle tolerance of parallelism of guide rollers across the track
$\beta_F$	Axle tolerance of parallelism of guide rollers across the track
$\phi k$	Axle tolerance of parallelism in a ground plan of the hole (inclination of axis)
$\phi r$	Axle tolerance of parallelism in a ground plan of the wheel (inclination of wheel)
$\tau k$	Axle tolerance parallelism in elevation of the hole (axle camber)
$\tau r$	Axle tolerance of parallelism in elevation of the wheel (wheel camber)
$b_s$	Tolerance of straightness related to a test length of 1 m adjacent to a welded rail joint
$c_h$	Tolerance of straightness related to a test length of 2 m adjacent to a welded rail joint

These symbols and their meanings are applicable to all parts of ISO 12488.

Where symbols for construction tolerances are also applicable to operational tolerances (e.g. in operator instructions), the suffix *w* is used (e.g.  $A_w$ ,  $B_w$ ,  $C_w$ ,  $E_w$ ).

Where necessary, an additional suffix may be added, for example,

$A_{w1}$	operational tolerance for travelling tracks,
$A_{w2}$	operational tolerances for traversing tracks,
$A_{w3}$	operational tolerances for cranes,
$A_{w4}$	operational tolerances for crabs.

## 5 Classification of tolerances

The main criterion for determining the class of tolerance is the total amount of travel throughout the life of the crane; however, system sensitivity shall be considered along with the class of tolerance as given in other parts of ISO 12488.

NOTE In the context of this part of ISO 12488, system sensitivity is considered to be the amount of reaction of the system in terms of load effect resulting from the tolerance considered as unintentional displacement (see ISO 8686-1:1989, 6.1.5). In the case of highly sensitive systems, it could be appropriate to select a higher tolerance class than that shown in Table 1.

Table 1 — Tolerance classes

Tolerance class	Limits of travelling and traversing distance
	km
1	$50\,000 \leq L$
2	$10\,000 \leq L < 50\,000$
3	$L < 10\,000$ , for stationary erected tracks
4	Temporarily erected tracks for building and erection purposes

NOTE  $L$  is calculated as the product of the normal travel speed and the specified working time of the relevant travel/traverse mechanism, either by application of customer specified values or through reference to the classification of the mechanism (see ISO 4301-1).

## 6 Tolerances

### 6.1 General

The tolerances for the various classes and parameters shall be as given in Tables 2, 3, 4, 5, 6 and 7.

### 6.2 Thermal effects

The tolerances given in Tables 2, 3, 4, 5, 6 and 7 shall be used for an ambient temperature of 20°C. Where the average ambient temperature for the operational position of the crane differs from 20°C, the tolerances shall be adjusted accordingly.

### 6.3 Application of vertical out-of-plane tolerance

The tolerance  $\Delta hr$  given in Tables 4 and 5 for the vertical out-of-plane displacement of a corner of rail wheel of a crane or crane crab, and the corresponding tolerances for tracks given in Tables 2 and 3 are valid for rigid structures travelling or traversing on the rails, i.e. for box beam structures of main girders, crabs or portals. For frames built from open sections, the tolerances used may be one or two classes lower.

## 6.4 Construction tolerances

### 6.4.1 General

The measurements shall be taken in the unloaded condition with the crane and its associated tracks supported in the manner in which they will be operated. Tables 2 to 6 show the appropriate tolerances.

If technical documentation requires a means for differentiation of the tolerances, a suffix shall be added to the tolerance symbol, corresponding to the relevant table in this part of ISO 12488.

EXAMPLE  $A_2$  is the construction tolerances for travelling tracks as per Table 2.

### 6.4.2 Rail joints

Construction tolerances shall be in accordance with Table 6.

## 6.5 Operational tolerances

The operational tolerances given in Table 7 shall be measured with the crane in the unloaded condition.

NOTE Tolerances in excess of those shown in Table 7 can result in unacceptable ride characteristics and additional stresses, leading to increased wear on rails, wheels, guide rollers etc., and possible damage to the supporting structure. If any measurements are beyond the tolerances in Table 7, then investigations should be undertaken by a competent engineer and the appropriate action taken.

STANDARDSISO.COM : Click to view the full PDF of ISO 12488-1:2012

Table 2 — Construction tolerances for travelling tracks of tolerance classes 1 to 4

Symbol	Description with respect of this table	Graphical representation	Tolerance				Unit
			Class 1	Class 2	Class 3	Class 4	
A	Tolerance of span $S$ of the crane rails related to rail centre at each point of travelling track	<p><math>+A = S_{\max} - S</math> <math>-A = S_{\min} - S</math></p>	<p><math>\pm 3</math></p> <p>Valid for all spans <math>S \leq 16</math> m</p> <p><math>\pm[3 + 0,25(S-16)]</math></p> <p><math>\pm 10</math> max.</p> <p>Valid for spans <math>S &gt; 16</math> m, <math>S</math> in metres</p>	<p><math>\pm 5</math></p> <p>Valid for all spans <math>S \leq 16</math> m</p> <p><math>\pm[5 + 0,25(S-16)]</math></p> <p><math>\pm 15</math> max.</p> <p>Valid for spans <math>S &gt; 16</math> m, <math>S</math> in metres</p>	<p><math>\pm 8</math></p> <p>Valid for all spans <math>S \leq 16</math> m</p> <p><math>\pm[8 + 0,25(S-16)]</math></p> <p><math>\pm 20</math> max.</p> <p>Valid for spans <math>S &gt; 16</math> m, <math>S</math> in metres</p>	<p><math>\pm 12,5</math></p> <p>Valid for all spans <math>S \leq 16</math> m</p> <p><math>\pm[12,5 + 0,25(S-16)]</math></p> <p><math>\pm 25</math> max.</p> <p>Valid for spans <math>S &gt; 16</math> m, <math>S</math> in metres</p>	mm
B	Tolerance of horizontal straightness of rail head at each point of travelling track	<p>Position of crane rail in ground plan</p>	<p><math>\pm 5</math></p>	<p><math>\pm 10</math></p>	<p><math>\pm 20</math></p>	<p><math>\pm 40</math></p>	mm
b	Tolerance of horizontal straightness related to test length of 2 000 mm (sample value) at each point of rail head		<p>1</p>	<p>1</p>	<p>2</p>	<p>4</p>	mm
C	Tolerance of straightness related to height of crane rail centre at each point of travelling track	<p>Height of crane rail (axial slope)</p>	<p><math>\pm 5</math></p>	<p><math>\pm 10</math></p>	<p><math>\pm 20</math></p>	<p><math>\pm 40</math></p>	mm
c	Tolerance of straightness related to test length of 2 000 mm (sample value) at each point of height of crane rail		<p>1</p>	<p>2</p>	<p>4</p>	<p>8</p>	mm
E	Tolerance of height related to opposite measuring points at right angles at each point of travelling track	<p>Height of travelling track (lateral slope)</p>	<p><math>\pm 0,5S</math></p> <p><math>S</math> in metres</p> <p><math>E \leq E_{\max}</math></p> <p><math>\pm 5</math> max.</p>	<p><math>\pm S</math></p> <p><math>S</math> in metres</p> <p><math>E \leq E_{\max}</math></p> <p><math>\pm 10</math> max.</p>	<p><math>\pm 2S</math></p> <p><math>S</math> in metres</p> <p><math>E \leq E_{\max}</math></p> <p><math>\pm 20</math> max.</p>	<p><math>\pm 4S</math></p> <p><math>S</math> in metres</p> <p><math>E \leq E_{\max}</math></p> <p><math>\pm 40</math> max.</p>	mm

Table 2 (continued)

Symbol	Description with respect of this table	Tolerance parameter	Tolerance				Unit
			Class 1	Class 2	Class 3	Class 4	
<i>F</i>	Tolerance of parallelism of end stops or buffers on travelling track at right angles to longitudinal axis with parallelism symbol //	<p>Position in a ground plan (datum symbol in accordance with ISO 1101)</p>	$\pm 0,8S$ $\pm 8$ max. <i>S</i> in metres	$\pm S$ $\pm 10$ max. <i>S</i> in metres	$\pm 1,25 S$ $\pm 12,5$ max. <i>S</i> in metres	$\pm 1,6 S$ $\pm 16$ max. <i>S</i> in metres	mm
<i>G</i>  (see Table 3)	Tolerance of angularity related to crane rail cross-section at each point of travelling track with angularity symbol $\angle$		4	6	9	12	0/00
$\Delta hr$	Height tolerance of points of wheel contact of each point of travelling track		$0,5S$ or $0,5e$ 5 max. <i>e</i> and <i>S</i> in metres, insert <i>e</i> or <i>S</i> , whichever is the least	$1,0S$ or $1,0e$ 10 max. <i>e</i> and <i>S</i> in metres, insert <i>e</i> or <i>S</i> , whichever is the least	$1,6S$ or $1,6e$ 16 max. <i>e</i> and <i>S</i> in metres, insert <i>e</i> or <i>S</i> , whichever is the least	$2,0S$ or $2,0e$ 20 max. <i>e</i> and <i>S</i> in metres, insert <i>e</i> or <i>S</i> , whichever is the least	mm
<i>K</i>	Tolerance of parallelism of crane rail to web at each point of travelling track	<p><math>t_{min}</math> = smallest thickness of web</p>	$\pm 0,5 t_{min}$				mm

Table 3 — Construction tolerances for traversing tracks of tolerance classes 1 to 4

Symbol	Description with respect to this table	Graphical representation	Tolerance				Unit
			Class 1	Class 2	Class 3	Class 4	
<i>A</i>	Tolerance of span <i>S</i> of crab rails related to rail centre at each point of traversing track		±3 Valid for all spans <i>S</i> ≤ 16 m	±5 Valid for all spans <i>S</i> ≤ 16 m	±8 Valid for all spans <i>S</i> ≤ 16 m	±12,5 Valid for all spans <i>S</i> ≤ 16 m	mm
<i>b</i>	Tolerance of horizontal straightness related to test length of 2 000 mm (sample value) at each point of rail head		1 Valid for all spans <i>S</i> ≤ 16 m	1 Valid for all spans <i>S</i> ≤ 16 m	2 Valid for all spans <i>S</i> ≤ 16 m	4 Valid for all spans <i>S</i> ≤ 16 m	mm
<i>E</i>	Tolerance of height related to opposite measuring points at right angles at each point of traversing track		±3,2 Valid for all spans <i>S</i> ≤ 2 m ±1,6 <i>S</i> <i>E</i> ≤ <i>E</i> <sub>max</sub> <i>S</i> in metres, valid for <i>S</i> > 2 m ±6,3 max.	±4,2 Valid for all spans <i>S</i> ≤ 2 m ±2 <i>S</i> <i>E</i> ≤ <i>E</i> <sub>max</sub> <i>S</i> in metres, valid for <i>S</i> > 2 m ±8 max.	±5 Valid for all spans <i>S</i> ≤ 2 m ±2,5 <i>S</i> <i>E</i> ≤ <i>E</i> <sub>max</sub> <i>S</i> in metres, valid for <i>S</i> > 2 m ±10 max.	±6,3 Valid for all spans <i>S</i> ≤ 2 m ±3,2 <i>S</i> <i>E</i> ≤ <i>E</i> <sub>max</sub> <i>S</i> in metres, valid for <i>S</i> > 2 m ±12,5 max.	mm
$\Delta hr$	Height tolerance of points of wheel contact at each point of traversing track		1,6 Valid for all spans <i>S</i> ≤ 2 m 0,8 <i>S</i> $\Delta hr$ ≤ $\Delta hr$ <sub>max</sub> <i>S</i> in metres, valid for <i>S</i> > 2 m 3,2 max.	2 Valid for all spans <i>S</i> ≤ 2 m 1 <i>S</i> $\Delta hr$ ≤ $\Delta hr$ <sub>max</sub> <i>S</i> in metres, valid for <i>S</i> > 2 m 4 max.	2,5 Valid for all spans <i>S</i> ≤ 2 m 1,25 <i>S</i> $\Delta hr$ ≤ $\Delta hr$ <sub>max</sub> <i>S</i> in metres, valid for <i>S</i> > 2 m 5 max.	3,2 Valid for all spans <i>S</i> ≤ 2 m 1,6 <i>S</i> $\Delta hr$ ≤ $\Delta hr$ <sub>max</sub> <i>S</i> in metres, valid for <i>S</i> > 2 m 6,3 max.	mm



Table 3 (continued)

Symbol	Description with respect to this table	Tolerance parameter				Unit
		Class 1	Class 2	Class 3	Class 4	
<i>F</i>	Tolerance of parallelism of end stops or buffers on traversing track to right angles to longitudinal axis with parallelism symbol //					mm
<i>G</i> (see Note)	Tolerance of angularity related to crab rail cross-section at each point of traversing track with angularity symbol ∠					0/00
<i>K</i>	Tolerance of parallelism of crab rail related to web at each point of traversing track with parallelism symbol //					mm
NOTE Parameter <i>G</i> with the characteristic of datum applies to crab rails with flat upper rail surfaces only. For crab rails with convex surfaces, tolerances for <i>G</i> are not required.						

Table 4 — Construction tolerances for crane wheels of tolerance classes 1 to 4

Symbol	Description with respect to this table	Graphical representation	Tolerance				Unit
			Class 1	Class 2	Class 3	Class 4	
$A$	Tolerance of span $S$ of a crane related to wheel centre, wheel with flanges		$\pm 2$ Valid for all spans $S \leq 10$ m $\pm [2 + 0,1(S-10)]$ $S$ in metres, valid for all spans $S > 10$ m	$\pm 2,5$ Valid for all spans $S \leq 10$ m $\pm [2,5 + 0,1(S-10)]$ $S$ in metres, valid for all spans $S > 10$ m	$\pm 3,2$ Valid for all spans $S \leq 10$ m $\pm [3,2 + 0,1(S-10)]$ $S$ in metres, valid for all spans $S > 10$ m	$\pm 4$ Valid for all spans $S \leq 10$ m $\pm [4 + 0,1(S-10)]$ $S$ in metres, valid for all spans $S > 10$ m	mm
$A$	Tolerance of span $S$ of a crane related to wheel centre, flangeless wheels, guide rollers on one side		$\pm 3,2$ Valid for all spans $S \leq 10$ m $\pm [3,2 + 0,1(S-10)]$ $S$ in metres, valid for all spans $S > 10$ m	$\pm 4$ Valid for all spans $S \leq 10$ m $\pm [4 + 0,1(S-10)]$ $S$ in metres, valid for all spans $S > 10$ m	$\pm 5$ Valid for all spans $S \leq 10$ m $\pm [5 + 0,1(S-10)]$ $S$ in metres, valid for all spans $S > 10$ m	$\pm 6,3$ Valid for all spans $S \leq 10$ m $\pm [6,3 + 0,1(S-10)]$ $S$ in metres, valid for all spans $S > 10$ m	mm
$\Delta e$	Tolerance of wheel base $e$ or bogey distance $e$ , 8 wheels		$\pm 3,2$ Valid for $e \leq 3$ m $e$ in metres, valid for $e > 3$ m	$\pm 4$ Valid for $e \leq 3$ m $\pm 1,25e$ $e$ in metres, valid for $e > 3$ m	$\pm 5$ Valid for $e \leq 3$ m $\pm 1,6e$ $e$ in metres, valid for $e > 3$ m	$\pm 6,3$ Valid for $e \leq 3$ m $\pm 2e$ $e$ in metres, valid for $e > 3$ m	mm
$\Delta N$	Parallel offset of crane wheels or bogeys, 8 wheels		$\pm 5$ Valid for independent drive only $\pm 2$ Valid for coupled drive only, $S \leq 20$ m $\pm [2 + 0,2(S-20)]$ $S$ in metres, valid for coupled drive only, $S > 20$ m	$\pm 6,3$ Valid for independent drive only $\pm 2,5$ Valid for coupled drive only, $S \leq 20$ m $\pm [2,5 + 0,2(S-20)]$ $S$ in metres, valid for coupled drive only, $S > 20$ m	$\pm 8$ Valid for independent drive only $\pm 3,2$ Valid for coupled drive only, $S \leq 20$ m $\pm [3,2 + 0,2(S-20)]$ $S$ in metres, valid for coupled drive only, $S > 20$ m	$\pm 10$ Valid for independent drive only $\pm 4$ Valid for coupled drive only, $S \leq 20$ m $\pm [4 + 0,2(S-20)]$ $S$ in metres, valid for coupled drive only, $S > 20$ m	mm

Table 4 (continued)

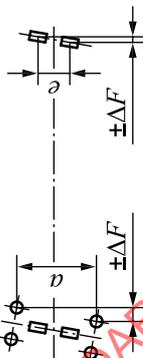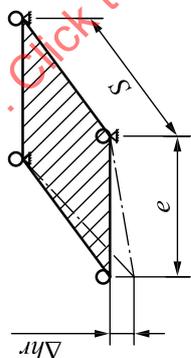Symbol	Description with respect to this table	Tolerance parameter		Tolerance				Unit
		Graphical representation		Class 1	Class 2	Class 3	Class 4	
$\Delta F$	Alignment tolerance of guide rollers or wheel flanges			$\pm 0,32a$ $a$ in metres $\pm 0,4e$ $e$ in metres	$\pm 0,4a$ $a$ in metres $\pm 0,5e$ $e$ in metres	$\pm 0,5a$ $a$ in metres $\pm 0,63e$ $e$ in metres	$\pm 0,63a$ $a$ in metres $\pm 0,8e$ $e$ in metres	mm
$\Delta hr$	Height tolerance of points of wheel contact For a given stiffness of structures related to wheel loads, the difference in height between the points of wheel contact shall be limited in such a way that the mean wheel load (crab with load in centre of bridge) of the driven wheels can change by no more than $\pm 5\%$ . Where this calculation is not made, $\Delta hr$ is valid for the height tolerance according to this table. The height tolerance of the points of wheel contact of a crane is the maximum vertical distance of a point of wheel contact from a plane $S$ ; $e$ set by three points of wheel contact. For statically determinate supported cranes, $\Delta hr = 0,4 S$ may be used.			2 max. Valid for all spans $S \leq 10$ m $[2 + 0,1(S-10)]$ max. $S$ in metres, valid for all spans $S > 10$ m	2,5 max. Valid for all spans $S \leq 10$ m $[2,5 + 0,1(S-10)]$ max. $S$ in metres, valid for all spans $S > 10$ m	3,2 max. Valid for all spans $S \leq 10$ m $[3,2 + 0,1(S-10)]$ max. $S$ in metres, valid for all spans $S > 10$ m	4 max. Valid for all spans $S \leq 10$ m $[4 + 0,1(S-10)]$ max. $S$ in metres, valid for all spans $S > 10$ m	mm

STANDARDSISO.COM · Click to view the full PDF of ISO 12488-1:2012

Table 4 (continued)

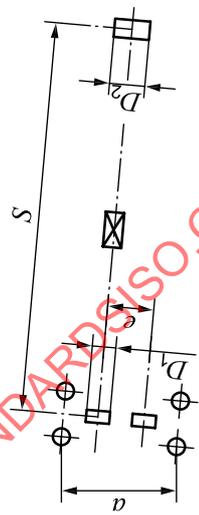
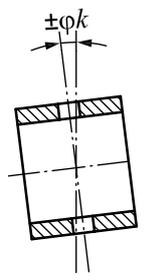
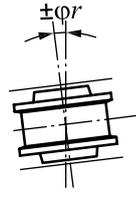
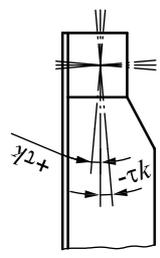
Symbol	Description with respect to this table	Tolerance parameter	Tolerance				Unit
			Class 1	Class 2	Class 3	Class 4	
$\Delta D$	Diameter tolerance for coupled and independently driven crane wheels. $a/S$ without wheel flanges $e/S$ with wheel flanges	 <p style="text-align: center;"> <math>\Delta D = D_1 - D_2</math>; <math>D = \frac{D_1 + D_2}{2}</math>; <math>D_1 &gt; D_2</math>;                      Where wheels are mechanically or electrically coupled, it is necessary to check whether the maximum allowable diameter difference requires higher values for <math>e</math> and <math>a</math>, or lower tolerances. For cranes with two coupled drives, <math>\Delta D</math> shall be divided by 1,4.                 </p>	h9 For $D_1$ and $D_2$ . Diameter tolerance according to ISO 286-2 $\frac{1,6 a D}{S}$ D in metres $\frac{1,6 e D}{S}$ D in metres	h9 For $D_1$ and $D_2$ . Diameter tolerance according to ISO 286-2 $\frac{2 a D}{S}$ D in metres $\frac{2 e D}{S}$ D in metres	h9 For $D_1$ and $D_2$ . Diameter tolerance according to ISO 286-2 $\frac{2,5 a D}{S}$ D in metres $\frac{2,5 e D}{S}$ D in metres	h9 For $D_1$ and $D_2$ . Diameter tolerance according to ISO 286-2 $\frac{3,2 a D}{S}$ D in metres $\frac{3,2 e D}{S}$ D in metres	mm
$\varphi k$	Axle parallelism tolerance in a ground plan (inclination of axis)		±0,3	±0,4	±0,5	±0,63	0/00
$\varphi r$	Axle parallelism tolerance in a ground plan (inclination of wheel)		±0,4	±0,5	±0,63	±0,8	0/00
$\tau k$	Axle parallelism tolerance in elevation (axle camber) The tolerances are for an unloaded crane (without crab) with unrestricted support on or near the end carriages. The mean values of tolerances are chosen approximately so that under load (crab with total load in centre of bridge), a horizontal position of the wheel axle will result from elastic deformation.		+1,9 -0,4			+2,4 -0,5	0/00

Table 4 (continued)

Symbol	Description with respect to this table	Tolerance parameter		Tolerance				Unit
		Graphical representation		Class 1	Class 2	Class 3	Class 4	
$\pi'$	Axle parallelism tolerance in elevation (wheel camber) The tolerances are for an unloaded crane (without crab) with unrestricted support on or near the end carriages. The mean values of tolerances are chosen approximately so that under load (crab with total load in centre of bridge), a horizontal position of the wheel axle will result from elastic deformation.			+2 -0,5		+2,6 -0,6		0,00
$F$	Tolerance of parallelism of end stops or buffers on crane at right angles to longitudinal axis with parallelism symbol //			$\pm(0,8S)$ $S$ in metres $\pm 8$ max.	$\pm(1,0S)$ $S$ in metres $\pm 10$ max.	$\pm(1,25S)$ $S$ in metres $\pm 12,5$ max.	$\pm(1,6S)$ $S$ in metres $\pm 16$ max.	mm
$\alpha F$	Axle parallelism tolerance of guide rollers across travelling track			$\pm 0,5$	$\pm 0,63$	$\pm 0,8$	$\pm 1$	0,00
$\beta F$	Axle parallelism tolerance of guide rollers along travelling track			$\pm 0,3$	$\pm 0,4$	$\pm 0,5$	$\pm 0,63$	0,00
$\Delta h_F$	Height tolerance of $h_F$			+0 -1	+0 -1,6	+0 -2,5	+0 -4	mm

Table 5 — Construction tolerances for crab wheels of tolerance classes 1 to 4 and tolerance for the guide rollers in Table 4

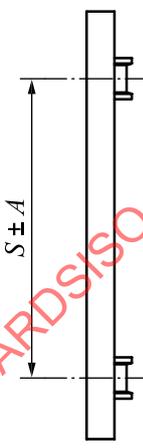
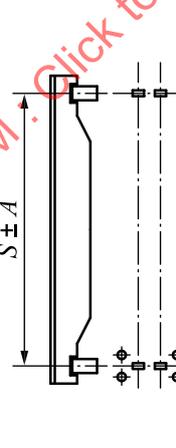
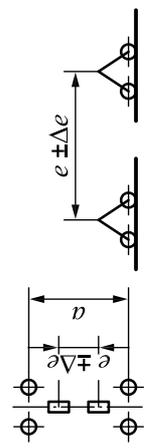
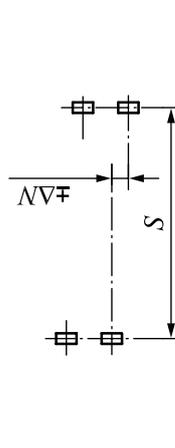
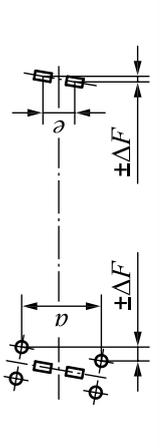
Symbol	Description with respect to this table	Graphical representation	Tolerance				Unit
			Class 1	Class 2	Class 3	Class 4	
$A$	Tolerance of span $S$ of a crab related to wheel centre, wheel with flanges		$\pm 1$ Valid for all spans $S \leq 2$ m $\pm [1 + 0,1(S-2)]$ $S$ in metres, valid for all spans $S > 2$ m	$\pm 2$ Valid for all spans $S \leq 2$ m $\pm [2 + 0,1(S-2)]$ $S$ in metres, valid for all spans $S > 2$ m	$\pm 2,5$ Valid for all spans $S \leq 2$ m $\pm [2,5 + 0,1(S-2)]$ $S$ in metres, valid for all spans $S > 2$ m	$\pm 3,2$ Valid for all spans $S \leq 2$ m $\pm [3,2 + 0,1(S-2)]$ $S$ in metres, valid for all spans $S > 2$ m	mm
$A$	Tolerance of span $S$ of a crab related to wheel centre, flangeless wheel, with guide rollers on one side		$\pm 1,6$ Valid for all spans $S \leq 2$ m $\pm [1,6 + 0,1(S-2)]$ $S$ in metres, valid for all spans $S > 2$ m	$\pm 3,2$ Valid for all spans $S \leq 2$ m $\pm [3,2 + 0,1(S-2)]$ $S$ in metres, valid for all spans $S > 2$ m	$\pm 4$ Valid for all spans $S \leq 2$ m $\pm [4 + 0,1(S-2)]$ $S$ in metres, valid for all spans $S > 2$ m	$\pm 5$ Valid for all spans $S \leq 2$ m $\pm [5 + 0,1(S-2)]$ $S$ in metres, valid for all spans $S > 2$ m	mm
$\Delta e$	Tolerance of wheel base $e$ of crab wheels or bogey distance $e$ , 8 wheels		$\pm 3,2$ $e$ in metres, valid for $e \leq 3$ m $\pm e$ $e$ in metres, valid for $e > 3$ m	$\pm 4$ $e$ in metres, valid for $e \leq 3$ m $\pm 1,25e$ $e$ in metres, valid for $e > 3$ m	$\pm 5$ $e$ in metres, valid for $e \leq 3$ m $\pm 1,6e$ $e$ in metres, valid for $e > 3$ m	$\pm 6,3$ $e$ in metres, valid for $e \leq 3$ m $\pm 2e$ $e$ in metres, valid for $e > 3$ m	mm
$\Delta N$	Parallel offset of crab wheels or bogeys, 8 wheels		$\pm 5$ Valid for independent drive only $\pm 2$ Valid for coupled drive only	$\pm 6,3$ Valid for independent drive only $\pm 2,5$ Valid for coupled drive only	$\pm 8$ Valid for independent drive only $\pm 3,2$ Valid for coupled drive only	$\pm 10$ Valid for independent drive only $\pm 4$ Valid for coupled drive only	mm
$\Delta F$	Alignment tolerance of guide rollers or wheel flanges		$\pm 0,32a$ $a$ in metres $\pm 0,4e$ $e$ in metres	$\pm 0,4a$ $a$ in metres $\pm 0,5e$ $e$ in metres	$\pm 0,5a$ $a$ in metres $\pm 0,63e$ $e$ in metres	$\pm 0,63a$ $a$ in metres $\pm 0,8e$ $e$ in metres	mm

Table 5 (continued)

Symbol	Description with respect to this table	Graphical representation	Tolerance parameter				Unit
			Class 1	Class 2	Class 3	Class 4	
$\Delta D$	Diameter tolerance for coupled and independently driven crab wheels		h9 Diameter tolerance according to ISO 286-2	h9 Diameter tolerance according to ISO 286-2	h9 Diameter tolerance according to ISO 286-2	h9 Diameter tolerance according to ISO 286-2	mm
$\Delta hr$	Height of tolerance of points of wheel contact		1,6 max. Valid for all spans $S \leq 2$ m [1,6 + 0,1(S-2)] max. S in metres, valid for all spans $S > 2$ m	2 max. Valid for all spans $S \leq 2$ m [2 + 0,1(S-2)] max. S in metres, valid for all spans $S > 2$ m	2,5 max. Valid for all spans $S \leq 2$ m [2,5 + 0,1(S-2)] max. S in metres, valid for all spans $S > 2$ m	3,2 max. Valid for all spans $S \leq 2$ m [3,2 + 0,1(S-2)] max. S in metres, valid for all spans $S > 2$ m	mm
$\phi k$	Axle parallelism tolerance in a ground plan of crab frame (inclination of axis)		±0,3	±0,4	±0,5	±0,63	0/00
$\phi r$	Axle parallelism tolerance in a ground plan of crab wheel (inclination of wheel)		±0,4	±0,5	±0,63	±0,8	0/00
$\tau k$	Axle parallelism tolerance in elevation of crab frame (axle camber)		+19 -0,4	+2,4 -0,5	—	—	0/00
$\tau r$	Axle parallelism tolerance in elevation of crab wheel (wheel camber)		+2 -0,5	+2,6 -0,6	—	—	0/00

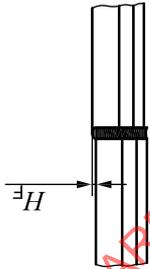
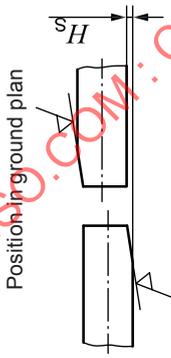
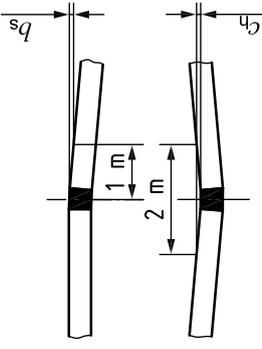
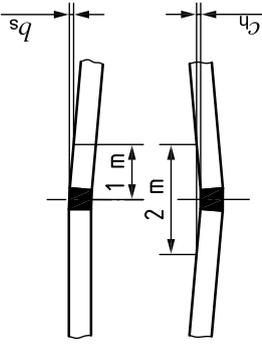
STANDARDSISO.COM : Click to view the full PDF of ISO 12488-1:2012

Table 5 (continued)

Symbol	Description with respect to this table	Tolerance parameter	Tolerance				Unit
			Class 1	Class 2	Class 3	Class 4	
F	Tolerance of parallelism of end stops of buffers on crab at right angles to longitudinal axis with parallelism symbol //		$\pm 0,8S$ <i>S</i> in metres $\pm 8$ max.	$\pm S$ <i>S</i> in metres $\pm 10$ max.	$\pm 1,25S$ <i>S</i> in metres $\pm 12,6$ max.	$\pm 1,6S$ <i>S</i> in metres $\pm 16$ max.	mm

NOTE For tolerances of guide rollers, see Table 4.

Table 6 — Construction tolerances for rail joints

Tolerance parameter		Tolerance		
Symbol	Description	Graphical representation	All classes	
$H_F$	Vertical offset of the welded joint at the rail flange		<p>0 (for welding in production) 1 max. (for welding on site)</p>	mm
$H_S$	Horizontal offset of the rail head		1 max., with a taper of 1:50 to blend the offset	mm
$b_s$	Inclination of rail in ground plan $b_s$ and height $c_h$ (lateral slope) with angularity symbol $\sphericalangle$		2	mm
$c_h$	Tolerances $b_s$ and $c_h$ related to a test length of 1 m		2	mm
$H_X$	Flatness after grinding the trued-up area of $H_S$ No finishing required at the rail end joint near the rail fastening for a staggered rail end joint		0,5 max.	mm
Detachable rail joints shall be in accordance with this table.				