
**Information technology — Open
Connectivity Foundation (OCF)
Specification —**

**Part 5:
OCF device specification**

*Technologies de l'information — Spécification de la Fondation pour la
connectivité ouverte (Fondation OCF) —*

Partie 5: Spécification des appareils OCF

IECNORM.COM : Click to view the full PDF of ISO/IEC 30118-5:2021



IECNORM.COM : Click to view the full PDF of ISO/IEC 30118-5:2021



COPYRIGHT PROTECTED DOCUMENT

© ISO/IEC 2021

All rights reserved. Unless otherwise specified, or required in the context of its implementation, no part of this publication may be reproduced or utilized otherwise in any form or by any means, electronic or mechanical, including photocopying, or posting on the internet or an intranet, without prior written permission. Permission can be requested from either ISO at the address below or ISO's member body in the country of the requester.

ISO copyright office
CP 401 • Ch. de Blandonnet 8
CH-1214 Vernier, Geneva
Phone: +41 22 749 01 11
Email: copyright@iso.org
Website: www.iso.org

Published in Switzerland

Contents

Page

Foreword	v
Introduction	vi
1 Scope	1
2 Normative references	1
3 Terms, definitions and abbreviated terms.....	2
3.1 Terms and definitions	2
3.2 Symbols and abbreviated terms	2
4 Document conventions and organization.....	2
4.1 Conventions	2
4.2 Notation	3
4.3 Data types	3
4.4 Document structure	3
5 Operational scenarios	4
5.1 Document version	4
6 Core Resource model	5
6.1 Introduction.....	5
6.2 Device Type.....	5
6.3 Profile of ISO/IEC 30118-1.....	5
6.4 Third (3 rd) party specified extensions.....	6
6.5 Semantic Tags.....	7
6.5.1 Introduction.....	7
6.5.2 "tag-pos-desc" or position description Semantic Tag	7
6.5.3 "tag-func-desc" or function description Semantic Tag.....	7
7 Modelling of multiple logical Devices	7
7.1 Introduction.....	7
7.2 Single platform model.....	7
7.3 Multi-platform model.....	8
7.4 Composite Device model	8
8 Discovery.....	10
8.1 Endpoint discovery	10
8.2 Resource discovery	10
9 Security.....	10
Annex A (normative) Device categories and device types	12
A.1 Device categories.....	12
A.2 Device Types	12
Annex B (normative) Smart home Device Types	18
B.1 Smart home required Resources per Device Type	18
B.2 Standardized enumeration values.....	21
B.2.1 Introduction.....	21
B.2.2 Alphabetical list of standardized enumeration types	21
B.2.3 Standardized list of supported values for mode Resource Type (oic.r.mode).....	27
B.2.4 Standardized list of supported values for operational state Resource Type (oic.r.operational.state).....	30

B.2.5	Standardized list of supported values for consumable and consumable collection Resource Types (oic.r.consumable, oic.r.consumablecollection)	36
B.3	Camera media format (oic.r.media)	37
B.4	Additional requirements per Device Type	38
B.4.1	Additional requirements for Television Devices ("oic.d.tv")	38
Annex C (normative)	Healthcare Device Types	39
C.1	Scope	39
C.2	Introduction to OCF healthcare Devices	39
C.3	Operational scenarios	39
C.4	Standardized Device Types	40
C.4.1	Introduction	40
C.4.2	Blood pressure monitor	42
C.4.3	Glucose meter	42
C.4.4	Body scale	43
C.4.5	Body thermometer	44
C.4.6	Heart rate monitor	45
C.4.7	Pulse oximeter	46
C.4.8	Sleep monitor	47
C.4.9	Activity tracker	48
C.4.10	CGM (Continuous Glucose Meter)	48
C.4.11	Cycling power meter	50
C.4.12	Cycling speed sensor	50
C.4.13	Cycling cadence sensor	51
C.4.14	Muscle oxygen monitor	51
C.4.15	Body composition analyser	52
Annex D (normative)	Industrial Device Types	54
D.1	Operational scenarios	54
D.2	Industrial required Resources per Device Type	57
Annex E (normative)	PV (Photovoltaic) system Device Types	58
E.1	Scope	58
E.2	Operational scenarios	58
E.3	Standard Device Types	60

Foreword

ISO (the International Organization for Standardization) and IEC (the International Electrotechnical Commission) form the specialized system for worldwide standardization. National bodies that are members of ISO or IEC participate in the development of International Standards through technical committees established by the respective organization to deal with particular fields of technical activity. ISO and IEC technical committees collaborate in fields of mutual interest. Other international organizations, governmental and non-governmental, in liaison with ISO and IEC, also take part in the work.

The procedures used to develop this document and those intended for its further maintenance are described in the ISO/IEC Directives, Part 1. In particular, the different approval criteria needed for the different types of document should be noted (see www.iso.org/directives or www.iec.ch/members_experts/refdocs).

Attention is drawn to the possibility that some of the elements of this document may be the subject of patent rights. ISO and IEC shall not be held responsible for identifying any or all such patent rights. Details of any patent rights identified during the development of the document will be in the Introduction and/or on the ISO list of patent declarations received (see www.iso.org/patents) or the IEC list of patent declarations received (see patents.iec.ch).

Any trade name used in this document is information given for the convenience of users and does not constitute an endorsement.

For an explanation of the voluntary nature of standards, the meaning of ISO specific terms and expressions related to conformity assessment, as well as information about ISO's adherence to the World Trade Organization (WTO) principles in the Technical Barriers to Trade (TBT), see www.iso.org/iso/foreword.html. In the IEC, see www.iec.ch/understanding-standards.

This document was prepared by the Open Connectivity Foundation (OCF) (as OCF Device Specification, version 2.2.0) and drafted in accordance with its editorial rules. It was adopted, under the JTC 1 PAS procedure, by Joint Technical Committee ISO/IEC JTC 1, *Information technology*.

This second edition cancels and replaces the first edition (ISO/IEC 30118-5:2018), which has been technically revised.

The main changes compared to the previous edition are as follows:

- renaming of smarthome to generic applicable device specification;
- addition of new device types and classification of devices;
- addition of clarifications throughout.

A list of all parts in the ISO/IEC 30118 series can be found on the ISO and IEC websites.

Any feedback or questions on this document should be directed to the user's national standards body. A complete listing of these bodies can be found at www.iso.org/members.html and www.iec.ch/national-committees.

Introduction

This document, and all the other parts associated with this document, were developed in response to worldwide demand for smart home focused Internet of Things (IoT) devices, such as appliances, door locks, security cameras, sensors, and actuators; these to be modelled and securely controlled, locally and remotely, over an IP network.

While some inter-device communication existed, no universal language had been developed for the IoT. Device makers instead had to choose between disparate frameworks, limiting their market share, or developing across multiple ecosystems, increasing their costs. The burden then falls on end users to determine whether the products they want are compatible with the ecosystem they bought into, or find ways to integrate their devices into their network, and try to solve interoperability issues on their own.

In addition to the smart home, IoT deployments in commercial environments are hampered by a lack of security. This issue can be avoided by having a secure IoT communication framework, which this standard solves.

The goal of these documents is then to connect the next 25 billion devices for the IoT, providing secure and reliable device discovery and connectivity across multiple OSs and platforms. There are multiple proposals and forums driving different approaches, but no single solution addresses the majority of key requirements. This document and the associated parts enable industry consolidation around a common, secure, interoperable approach.

ISO/IEC 30118 consists of eighteen parts, under the general title Information technology — Open Connectivity Foundation (OCF) Specification. The parts fall into logical groupings as described herein:

- Core framework
 - Part 1: Core Specification
 - Part 2: Security Specification
 - Part 13: Onboarding Tool Specification
- Bridging framework and bridges
 - Part 3: Bridging Specification
 - Part 6: Resource to AllJoyn Interface Mapping Specification
 - Part 8: OCF Resource to oneM2M Resource Mapping Specification
 - Part 14: OCF Resource to BLE Mapping Specification
 - Part 15: OCF Resource to EnOcean Mapping Specification
 - Part 16: OCF Resource to UPlus Mapping Specification
 - Part 17: OCF Resource to Zigbee Cluster Mapping Specification
 - Part 18: OCF Resource to Z-Wave Mapping Specification
- Resource and Device models
 - Part 4: Resource Type Specification
 - Part 5: Device Specification

- Core framework extensions
 - Part 7: Wi-Fi Easy Setup Specification
 - Part 9: Core Optional Specification
- OCF Cloud
 - Part 10: Cloud API for Cloud Services Specification
 - Part 11: Device to Cloud Services Specification
 - Part 12: Cloud Security Specification

IECNORM.COM : Click to view the full PDF of ISO/IEC 30118-5:2021

[IECNORM.COM](https://www.iecnorm.com) : Click to view the full PDF of ISO/IEC 30118-5:2021

Information technology — Open Connectivity Foundation (OCF) Specification —

Part 5: OCF device specification

1 Scope

The Device definitions use Resource definitions from ISO/IEC 30118-4.

This document is built on top of ISO/IEC 30118-1. ISO/IEC 30118-1 specifies the core architecture, interfaces protocols and services to enable the implementation of profiles for IoT usages and ecosystems. ISO/IEC 30118-1 also defines the main architectural components of network connectivity, discovery, data transmission, device & service management and ID & security. The core architecture is scalable to support simple devices (constrained devices) and more capable devices (smart devices).

2 Normative references

The following documents are referred to in the text in such a way that some or all of their content constitutes requirements of this document. For dated references, only the edition cited applies. For undated references, the latest edition of the referenced document (including any amendments) applies.

ISO/IEC 30118-1, *Information technology -- Open Connectivity Foundation (OCF) Specification -- Part 1: Core specification*
<https://www.iso.org/standard/53238.html>

ISO/IEC 30118-2, *Information technology -- Open Connectivity Foundation (OCF) Specification -- Part 2: Security specification*
<https://www.iso.org/standard/74239.html>

ISO/IEC 30118-4, *Information technology -- Open Connectivity Foundation (OCF) Specification -- Part 4: Resource type specification*
<https://www.iso.org/standard/74241.html>

Latest version available at:

ISO/IEC 61850-7-1, *Communication networks and systems for power utility automation -- Part 7-1: Basic communication structure -- Principles and models*
<https://webstore.iec.ch/publication/6014>

OpenAPI specification, fka *Swagger RESTful API Documentation Specification*, Version 2.0
<https://github.com/OAI/OpenAPI-Specification/blob/master/versions/2.0.md>

IETF RFC 4566, SDP: Session Description Protocol, July 2006
<https://tools.ietf.org/html/rfc4566>

Draft Report: A Basic Classification System for Energy-Using Products--Universal Device Classification, December 2013
<https://eta-intranet.lbl.gov/sites/default/files/lbni-classification-v1.pdf>

3 Terms, definitions and abbreviated terms

3.1 Terms and definitions

For the purposes of this document, the terms and definitions given in ISO/IEC 30118-1 and ISO/IEC 30118-2 and the following apply.

ISO and IEC maintain terminological databases for use in standardization at the following addresses:

- ISO Online browsing platform: available at <https://www.iso.org/obp>
- IEC Electropedia: available at <http://www.electropedia.org/>

3.1.1

Actuator

Resource with support of the UPDATE operation.

3.1.2

Sensor

Resource without support of the UPDATE operation.

3.1.3

Healthcare Device

Device that is conformant to the normative requirements contained in Annex C of this document.

3.2 Symbols and abbreviated terms

CGM	Continuous Glucose Monitor
CRUDN	Create Retrieve Update Delete Notify
CSV	Comma Separated Value
NREM	Non Rapid Eye Movement
REM	Rapid Eye Movement
REST	Representational State Transfer
SDP	Session Description Protocol
UDC	Universal Device Classification

4 Document conventions and organization

4.1 Conventions

In this document a number of terms, conditions, mechanisms, sequences, parameters, events, states, or similar terms are printed with the first letter of each word in uppercase and the rest lowercase (e.g., Network Architecture). Any lowercase uses of these words have the normal technical English meaning.

In this document, to be consistent with the IETF usages for RESTful operations, the RESTful operation words CRUDN, CREATE, RETRIVE, UPDATE, DELETE, and NOTIFY will have all letters capitalized. Any lowercase uses of these words have the normal technical English meaning.

4.2 Notation

In this document, features are described as required, recommended, allowed or DEPRECATED as follows:

Required (or shall or mandatory).

These basic features shall be implemented. The phrases "shall not", and "PROHIBITED" indicate behaviour that is prohibited, i.e. that if performed means the implementation is not in compliance.

Recommended (or should).

These features add functionality supported by a Device and should be implemented. Recommended features take advantage of the capabilities a Device, usually without imposing major increase of complexity. Notice that for compliance testing, if a recommended feature is implemented, it shall meet the specified requirements to be in compliance with these guidelines. Some recommended features could become requirements in the future. The phrase "should not" indicates behaviour that is permitted but not recommended.

Allowed (or allowed).

These features are neither required nor recommended by a Device, but if the feature is implemented, it shall meet the specified requirements to be in compliance with these guidelines.

Conditionally allowed (CA).

The definition or behaviour depends on a condition. If the specified condition is met, then the definition or behaviour is allowed, otherwise it is not allowed.

Conditionally required (CR).

The definition or behaviour depends on a condition. If the specified condition is met, then the definition or behaviour is required. Otherwise the definition or behaviour is allowed as default unless specifically defined as not allowed.

DEPRECATED

Although these features are still described in this document, they should not be implemented except for backward compatibility. The occurrence of a deprecated feature during operation of an implementation compliant with the current document has no effect on the implementation's operation and does not produce any error conditions. Backward compatibility may require that a feature is implemented and functions as specified but it shall never be used by implementations compliant with this document.

Strings that are to be taken literally are enclosed in "double quotes".

Words that are emphasized are printed in *italic*.

4.3 Data types

See ISO/IEC 30118-1.

4.4 Document structure

This document describes specific requirements governing the indication of Device Types on Devices and the requirements that are associated with specific Device Types themselves. The document makes use of functionality defined in the ISO/IEC 30118-1 and ISO/IEC 30118-4.

Annex A specifies the Device Types that shall be used by an OCF Device.

Annex B specifies the profiles that shall be used by an OCF Device that is part of the Smart Home vertical.

Annex C specifies the profiles that shall be used by an OCF Device that is part of the Healthcare vertical.

Annex D specifies the profiles that shall be used by an OCF Device that is part of the Industrial vertical.

Annex E specifies the profiles that shall be used by an OCF Device that is part of a Photovoltaic system.

This document further describes which constructs are used for a Device and which Resources are mandated to be implemented for each Device. A typical Device consisting of data elements defined in the referenced documents is depicted in Figure 1.

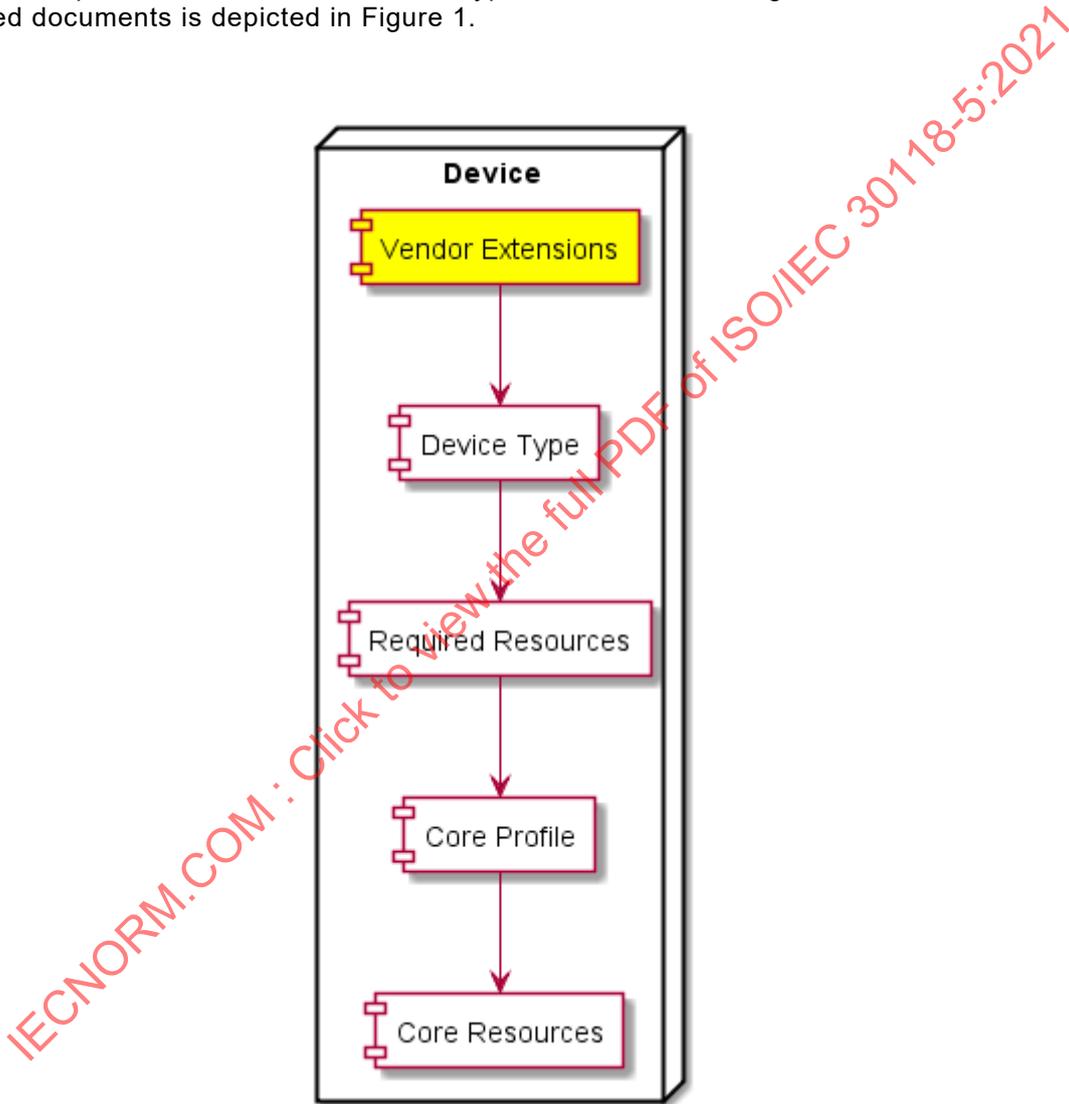


Figure 1 – Device building blocks

5 Operational scenarios

5.1 Document version

All Devices conformant to this document shall add the string "ocf.sh.1.3.0" to the dmv Property in oic.wk.d. This Property is for legacy Device support only and will no longer be revised in alignment with document versions.

6 Core Resource model

6.1 Introduction

The Core Resource model is described in ISO/IEC 30118-1.

6.2 Device Type

The Device Types of all devices shall have a Resource Type name ("rt") prefixed with "oic.d."

Examples of Device Types are:

- oic.d.fan
- oic.d.thermostat

The full list of defined Device names and types are in Table A.2, Annex B, Annex C, Annex D, and Annex E detail the minimal Resource(s) that a Device shall implement for a specific Device Type where required by a vertical. A Device may expose additional OCF and 3rd party defined Resources other than those indicated in these Annexes.

ISO/IEC 30118-1 defines a Device Resource with a URI of "/oic/d". A Device shall include in the "Resource Type" Property of "/oic/d" the Device Type (or Device Types) from Table A.2 of the physical device hosting the Server; the inclusion of the Device Type shall be done using one of the methods provided by clause 11.3.4 of ISO/IEC 30118-1 (i.e. add to the array of values).

ISO/IEC 30118-1 supports the inclusion of a Device Type as part of the Resource Type of a Collection (see also clause 7.4), in such cases the Collection shall include the Resource Types defined as mandatory for the Device Type by this document. For example, if a Collection Resource has an "rt" value of ["oic.d.light"], the Collection includes an instance of "oic.r.switch.binary" which is mandatory for an "oic.d.light" as per clause B.1.

Therefore a Device may be discovered by adding a query for the "rt" of the Device Type itself (e.g. "?rt=oic.d.fan") to the multicast Endpoint discovery method (see 8.1).

6.3 Profile of ISO/IEC 30118-1

This clause describes the profiling of the Core Resources and transport mechanisms and functions that are defined in ISO/IEC 30118-1.

The required ISO/IEC 30118-1 Resources are also required for a profile implementation.

In addition to the required Resources the optional ISO/IEC 30118-1 Resources in Table 1 shall be required.

Table 1 – Required Resources for Devices

Resource ("rt")	Required in Profile
Intentionally left blank	Intentionally left blank

For each of the Resources listed in Table 1, Table 2 details the Properties within those Resources that shall be required.

Table 2 – Required properties in Resource

Resource ("rt")	Property name	Required in Profile
Intentionally left blank	Intentionally left blank	Intentionally left blank

A Device shall support CoAP based endpoint discovery as defined in clause 10.3 of ISO/IEC 30118-1.

The messaging protocol for a Device shall be CoAP (see ISO/IEC 30118-1).

A Device shall support a network layer as defined in clause 9 of ISO/IEC 30118-1 including any necessary defined bridging functions that ensure inter-operability with IPv6.

6.4 Third (3rd) party specified extensions

This clause describes how a 3rd party may add Device Types, Resource Types, 3rd party defined Properties to an existing or 3rd party defined Resource Type, 3rd party defined enumeration values to an existing enumeration and 3rd party defined Parameters to an existing defined Property.

A 3rd party may specify additional (non-OCF) Resources within an OCF Device. A 3rd party may also specify additional Properties within an existing OCF defined Resource Type. Further a 3rd party may extend an OCF defined enumeration with 3rd party defined values.

A 3rd party defined Device Type may expose both 3rd party and OCF defined Resource Types. A 3rd party defined Device Type must expose the mandatory Resources for all OCF Devices defined within this document.

A 3rd party defined Resource Type shall include any mandatory Properties defined in this document and also any vertical specified mandatory Properties. All Properties defined within a 3rd party defined Resource Type that are part of the OCF namespace that are not Common Properties as defined in this document shall follow the 3rd party defined Property rules in Table 3.

Table 3 defines the syntax rules for 3rd party defined Resource Type elements. Within the table the term "Domain_Name" refers to a domain name that is owned by the 3rd party that is defining the new element.

Table 3 – 3rd party defined Resource elements

	Resource Element	Vendor Definition Rules
New 3 rd party defined Device Type	"rt" Property Value of "/oic/d"	"x.<Domain_Name>.<Resource identification>"
New 3 rd party defined Resource Type	"rt" Property Value	"x.<Domain_Name>.<Resource identification>"
New 3 rd party defined Property within the OCF namespace	Property Name	"x.<Domain_Name>.<Property>"
Additional 3 rd party defined values in an OCF specified enumeration	Enumeration Property Value	"x.<Domain_Name>.<enum value>"
Additional 3 rd party defined Parameter in an OCF specified Property	Parameter key word	x.<Domain_Name>.<parameter keyword>

With respect to the use of the Domain_Name in this scheme the labels are reversed from how they appear in DNS or other resolution mechanisms. The 3rd party defined Device Type and Resource Type otherwise follow the rules defined in ISO/IEC 30118-1. 3rd party defined Resource Types should be registered in the IANA Constrained RESTful Environments (CoRE) Parameters registry.

For example:

```
x.com.samsung.galaxyphone.accelerator
x.com.cisco.ciscorouterport
x.com.hp.printerhead
x.org.allseen.newinterface.newproperty
```

6.5 Semantic Tags

6.5.1 Introduction

Semantic Tags are meta-information associated with a specific Resource instance that are represented as both Link Parameters and Resource Properties that provide a mechanism whereby the Resource be annotated with additional contextual metadata that helps describe the Resource. The requirements are defined in ISO/IEC 30118-1, but clauses 6.5.2 and 6.5.3 define additional Device specific requirements.

6.5.2 "tag-pos-desc" or position description Semantic Tag

In addition to the requirements defined in ISO/IEC 30118-1 the following requirements will apply:

- This Semantic Tag should not contain any 3rd party defined values (see clause 6.4).

6.5.3 "tag-func-desc" or function description Semantic Tag

In addition to the requirements defined in ISO/IEC 30118-1 the following requirements will apply:

- This Semantic Tag when exposed shall be populated with a value from the currently supported set of standardized enumeration values defined in clause B.2.2.
- This Semantic Tag should not contain any 3rd party defined values (see clause 6.4).

7 Modelling of multiple logical Devices

7.1 Introduction

A physical Device may be modelled as a single Platform and Device, a single Platform with multiple Devices, multiple separately discoverable discrete Platforms and Devices, or as a single Platform and Device where the Device is represented as a composition of other Devices.

For example, a door that includes the functionality of a contact sensor, a lock and a camera may be modeled as a single-Platform, a multi-Platform, or a Composite Device. Each of these three options will be detailed in clauses 7.2, 7.3, and 7.4.

7.2 Single platform model

The physical Device exposes one or more logical Devices that are independently discoverable (i.e. they separately respond to multicast discovery request messages as defined in clause 11.3 of ISO/IEC 30118-1). Given the door example there could be a single discovery response with an instance of "/oic/d" that exposes a single Device Type (such as "oic.d.door") or multiple discovery responses, each response having a single Device Type in the "rt" of "/oic/d" that represents the logical Device. The common denominator being that for all discovered logical Devices the Properties of "/oic/p" have the same values.

7.3 Multi-platform model

Just like the single-Platform model, one or more logical Devices that make up a physical Device respond independently to multicast discovery request messages and expose their own Resources. Like the single-platform model, each logical Device exposes a single Device Type in the "rt" value of "/oic/d". The difference from the single-platform model is that each logical Device does not have the same values for the Properties of "oic/p".

7.4 Composite Device model

When modelling a Server as a Composite Device there shall be a single Platform which represents the Composite Device. The Resource Type Property Value of "/oic/d" exposed should contain all of the Device Types of the Devices that compose the Composite Device. For each Device that is part of the Composite Device when using this approach there shall exist a Collection that represents one of the distinct Devices in the composition. Further each Collection shall have a Resource Type that at a minimum includes the Device Type that the Collection represents (e.g. ["oic.d.door"]).

Figure 2 illustrates the response to a discovery request using the baseline Interface on "/oic/res" for a Composite Device modeled as described in this clause. Figure 3 illustrates the response to a unicast RETRIEVE request using the baseline Interface to the Collection that represents the door Device.

IECNORM.COM : Click to view the full PDF of ISO/IEC 30118-5:2021

```

[
  {
    "rt": ["oic.wk.res"],
    "if": ["oic.if.baseline", "oic.if.ll" ],
    "links":
      [
        {
          "anchor": "ocf://dc70373c-1e8d-4fb3-962e-017eaa863989",
          "href": "/oic/d",
          "rt": ["oic.wk.d", "oic.d.door", "oic.d.sensor", "oic.d.lock", "oic.d.camera"],
          "if": ["oic.if.r", "oic.if.baseline"],
          "p": {"bm": 3},
          "eps": [{"ep": "coap://[fe80::b1d6]:1111"}]
        },
        {
          "anchor": "ocf://dc70373c-1e8d-4fb3-962e-017eaa863989",
          "href": "/mydevice/mydoor",
          "rt": ["oic.d.door"],
          "if": ["oic.if.ll", "oic.if.baseline", "oic.if.r"],
          "p": {"bm": 3},
          "eps": [{"ep": "coaps://[fe80::b1d6]:1111"}]
        },
        {
          "anchor": "ocf://dc70373c-1e8d-4fb3-962e-017eaa863989",
          "href": "/mydevice/mysensor",
          "rt": ["oic.d.sensor"],
          "if": ["oic.if.ll", "oic.if.baseline", "oic.if.r"],
          "p": {"bm": 3},
          "eps": [{"ep": "coaps://[fe80::b1d6]:1111"}]
        },
        {
          "anchor": "ocf://dc70373c-1e8d-4fb3-962e-017eaa863989",
          "href": "/mydevice/mylock",
          "rt": ["oic.d.lock"],
          "if": ["oic.if.ll", "oic.if.baseline", "oic.if.r"],
          "p": {"bm": 3},
          "eps": [{"ep": "coaps://[fe80::b1d6]:1111"}]
        },
        {
          "anchor": "ocf://dc70373c-1e8d-4fb3-962e-017eaa863989",
          "href": "/mydevice/mycamera",
          "rt": ["oic.d.camera"],
          "if": ["oic.if.ll", "oic.if.baseline", "oic.if.r"],
          "p": {"bm": 3},
          "eps": [{"ep": "coaps://[fe80::b1d6]:1111"}]
        }
      ]
    }
  ]
]

```

Figure 2 – Example composite Device model

```

{
  "rt": ["oic.d.door"],
  "if": ["oic.if.ll", "oic.if.r", "oic.if.baseline"],
  "id": "unique_example_id",
  "di": "dc70373c-1e8d-4fb3-962e-017eaa863989",
  "icv": "ocf.1.3.0",
  "dmv": "ocf.res.1.3.0, ocf.sh.1.3.0",
  "piid": "6F0AAC04-2BB0-468D-B57C-16570A26AE48",
  "links": [
    {
      "href": "/mydoor/openlevel",
      "rt": ["oic.r.openlevel"],
      "if": ["oic.if.a", "oic.if.baseline"],
      "p": {"bm": 2},
      "eps": [
        {"ep": "coaps://[fe80::b1d6]:1122"}
      ]
    }
  ]
}

```

Figure 3 – RETRIEVE Response to example door from composite Device model

8 Discovery

8.1 Endpoint discovery

Clients may discover Servers by using the mechanisms defined by ISO/IEC 30118-1 clause 10. A Client may populate an "rt" query parameter with the Device Types that the Client wants to discover, or if no "rt" query parameter is provided then the search is for all available Device Types irrespective.

Devices may be discovered by Device Type or implemented Resource Type. This difference is conveyed by the population of any "rt" query parameter included as part of discovery (see clause 11.3 of ISO/IEC 30118-1).

The values that may be used for discovering a specific Device Type are listed in Table A.2. The values that may be used to discover a specific Resource Type are listed in clause 6 of ISO/IEC 30118-4.

The discovery process provides the base URI of the Device that is acting as a Server to the Client. The structure of the detected Device can then be retrieved by Resource Discovery.

8.2 Resource discovery

Clause intentionally left blank

9 Security

A Device shall implement the mandated Security Virtual Resources specified in the ISO/IEC 30118-2. Additionally, all exposed ISO/IEC 30118-4 defined Resources shall be accessible via at least one secure Endpoint (i.e. use of a "coaps" or "coaps+tcp" scheme locator within the "eps" Parameter exposed by /oic/res; see ISO/IEC 30118-1 clause 10.2.4). A Device shall not expose ISO/IEC 30118-4 defined Resources using unsecured Endpoints (i.e. "coap" or "coap+tcp" scheme locator in the "eps" Parameter).

With the exception of those Resources related to Discovery that are explicitly identified by the ISO/IEC 30118-1 as not requiring secured access (see ISO/IEC 30118-1 clause 11.3.4), all other Resources defined in ISO/IEC 30118-1 implemented in the Smart Home Device shall be accessible via at least one secure Endpoint (i.e. use of a "coaps" or "coaps+tcp" scheme locator within the "eps" Parameter exposed by /oic/res). Similarly, any Resources defined in ISO/IEC 30118-1 that do not require unsecured access that are not listed in /oic/res shall also be accessible via "coaps" or "coaps+tcp".

IECNORM.COM : Click to view the full PDF of ISO/IEC 30118-5:2021

Annex A
(normative)

Device categories and device types

A.1 Device categories

Devices are grouped into Device Categories based on the Universal Device Classification (UDC) (see A Basic Classification System for Energy-Using Products--Universal Device Classification), all Device Categories are listed in Table A.1.

Table A.1 – List of device categories

Device Category Name	Description
Space Conditioning	Heating and cooling systems
Lighting	
Appliance	Also known as "white goods"; covers major appliances only.
Electronics	Personal electronics
Miscellaneous	Small appliances, other
Infrastructure	Physical building and infrastructure
Transportation	Vehicles, fixed devices that provide movement (e.g. Escalators)
Fitness	Includes lifestyle
Medical	
Personal Health	
Other	

A.2 Device Types

The complete Universal Device Classification with Device Types per Device Category is provided in Table A.2. Note that not all Devices within the UDC classification have equivalent OCF defined Device Types. All defined Device Types are of the form "oic.d.<thing>" where <thing> is a single alphanumeric string (lower case [a..z],[0..9] only) no more than 24 characters in length giving a total maximum length of the Device Type of 32 characters. Where an abbreviated form of the Device Type is required (applicable only to population of a Wi-Fi beacon IE) then the "oic.d." portion of the Device Type may be omitted.

Table A.2 does not specify the mandatory Resources that are implemented by an instance of such a Device Type; the set of applicable mandatory Resources is dependent on the application domain. In this document the following domains are specified: Smart Home, Healthcare. The "Reference" column in the table references vertical specific annexes where the Device Type is further refined (e.g. mandatory Resources).

Table A.2 – Per category list of Device Types

Device Category Name	UDC Device Name	Device Name	Device Type (Normative)	Reference
Space Conditioning	Unitary System	Air Conditioner	oic.d.airconditioner	B.1
	Boiler	Water Heater	oic.d.waterheater	B.1
	Furnace	Furnace	oic.d.furnace	
	Pump	Pump	oic.d.pump	
	Fan	Fan	oic.d.fan	B.1
	Condensing Unit	Condensing Unit	oic.d.condensingunit	
	Condenser	Condenser	oic.d.condenser	
	Humidifier	Humidifier	oic.d.humidifier	B.1
	Dehumidifier	Dehumidifier	oic.d.dehumidifier	B.1
	HVAC – Control	Thermostat	oic.d.thermostat	B.1
	HVAC - Other	HVAC	oic.d.hvac	
		Air Purifier	oic.d.airpurifier	B.1
		Air Quality Monitor	oic.d.airqualitymonitor	B.1
Lighting	Lighting - Controls	Lighting Controls	oic.d.lightingcontrol	
	Lighting - Other	Light	oic.d.light	B.1
Appliance	Airer	Airer	oic.d.airer	B.1
	Clothes Dryer	Dryer (Laundry)	oic.d.dryer	B.1
	Clothes Washer	Washer (Laundry)	oic.d.washer	B.1
		Clothes Washer Dryer	oic.d.washerdryer	B.1
	Dishwasher	Dishwasher	oic.d.dishwasher	B.1
	Freezer	Freezer	oic.d.freezer	B.1
	Ice Machine	Ice Machine	oic.d.icemachine	
	Indoor Garden	Indoor Garden	oic.d.indoorgarden	B.1
	Mattress	Mattress	oic.d.mattress	B.1
	Oven	Oven	oic.d.oven	B.1
	Range	Range	oic.d.range	
	Refrigerator	Refrigerator	oic.d.refrigerator	B.1
	Water Heater	Water Heater	oic.d.waterheater	B.1
	Water Purifier	Water Purifier	oic.d.waterpurifier	B.1
	Appliance – Other	Cooker Hood	oic.d.cookerhood	B.1
		Cooktop	oic.d.cooktop	B.1
Steam Closet		oic.d.steamcloset	B.1	

Device Category Name	UDC Device Name	Device Name	Device Type (Normative)	Reference
Electronics	Audio System	Audio System	oic.d.audiosystem	
	A/V Player	AV Player	oic.d.avplayer	
	Camera	Camera	oic.d.camera	B.1
	Computer – Desktop	Desktop PC	oic.d.desktoppc	
	Computer - Notebook	Notebook PC	oic.d.notebookpc	
	Computer - Server	Server	oic.d.server	
	Computer – Other	Computer	oic.d.pc	
	Data Storage	Data Storage Unit	oic.d.datastorageunit	
	Display	Display	oic.d.display	
	Electronics - Portable	Portable Electronics	oic.d.portableelectronics	
	Game Console	Game Console	oic.d.gameconsole	
	Imaging Equipment	3D Printer	oic.d.3dprinter	B.1
		Printer	oic.d.printer	B.1
		Printer Multi-Function	oic.d.multifunctionprinter	B.1
		Scanner	oic.d.scanner	B.1
	Musical Instrument	Musical Instrument	oic.d.musicalinstrument	
	Networking Equipment	Networking Equipment	oic.d.networking	
	Phone Handset	Handset	oic.d.handset	
	Receiver	Receiver	oic.d.receiver	B.1
	Set Top Box	Set Top Box	oic.d.stb	B.1
	Telephony	Telephony	oic.d.telephonydevice	
	Television	Television	oic.d.tv	B.1, B.4.1
	A/V - Other	Active Speaker	oic.d.speaker	
	Electronics – Other	Electronics	oic.d.smallelectrical	
Miscellaneous	Air Compressors	Air Compressor	oic.d.aircompressor	
	Bathroom Device	Bathroom General	oic.d.bathroomdevice	
	Battery Charger	Battery Charger	oic.d.batterycharger	
	Business Equipment	Business Equipment	oic.d.businessequipment	
	Cleaning Equipment	Robot Cleaner	oic.d.robotcleaner	B.1
	Cooking – Portable	Portable Stove	oic.d.portablestove	

Device Category Name	UDC Device Name	Device Name	Device Type (Normative)	Reference
	Exercise Machine	Exercise Machine	oic.d.exercisemachine	
	HVAC – Portable	Portable HVAC	oic.d.hvacportable	
	Industrial	Optical augmented RFID Reader	oic.d.orfid	D.1
	Kitchen	Coffee Machine	oic.d.coffeemachine	B.1
		Food Probe	oic.d.foodprobe	B.1
		Grinder	oic.d.grinder	B.1
		Kettle	oic.d.kettle	B.1
	Lighting – Decorative	Decorative Lighting	oic.d.lightdecorative	
	Lighting – Emergency	Emergency Lighting	oic.d.lightemergency	
	Microwave Oven	Microwave Oven	oic.d.microwave	B.1
	Vending Machine	Vending Machine	oic.d.vendingmachine	
	Water Dispenser	Water Dispenser	oic.d.waterdispenser	
	Miscellaneous - Other	Battery	oic.d.battery	B.1, E.3
Infrastructure	Breakers	Water Valve	oic.d.watervalve	B.1
	Doors/Windows	Blind	oic.d.blind	B.1
		Door	oic.d.door	B.1
		Garage Door	oic.d.garagedoor	B.1
		Smart Lock	oic.d.smartlock	B.1
		Window	oic.d.window	B.1
	Fireplace	Fireplace	oic.d.fireplace	
	Pump	Pump	oic.d.pump	
	Power - Portable	Energy Generator	oic.d.energygenerator	B.1
		Smart Plug	oic.d.smartplug	B.1
	Power - Fixed	Arc Fault Circuit Interrupter	oic.d.afci	B.1
		Circuit Breaker	oic.d.circuitbreaker	E.3
		Ground Fault Circuit Interrupter	oic.d.gfci	B.1
		Inverter	oic.d.inverter	E.3
		PV Array System	oic.d.pvarraysystem	E.3
		Switch	oic.d.switch	B.1
	Security	Security Panel	oic.d.securitypanel	B.1
	Sensors	Generic Sensor	oic.d.sensor	B.1

Device Category Name	UDC Device Name	Device Name	Device Type (Normative)	Reference
	Meter	Electric Meter	oic.d.electricmeter	B.1
		Energy Monitor	oic.d.energymonitor	B.1
Transportation	Transport - Other	Electric Vehicle Charger	oic.d.electricvehiclecharger	B.1
Fitness		Fitness Device	oic.d.fitnessdevice	
		Activity Tracker	oic.d.activitytracker	C.4
		Blood Pressure Monitor	oic.d.bloodpressuremonitor	C.4
		Body Thermometer	oic.d.bodythermometer	C.4
		Cycling Power Meter	oic.d.cyclingpowermeter	C.4
		Cycling Speed Sensor	oic.d.cyclingspeedsensor	C.4
		Cycling Cadence Sensor	oic.d.cyclingcadencesensor	C.4
		Heart Rate Monitor	oic.d.heartratemonitor	C.4
		Muscle Oxygen Monitor	oic.d.muscleoxygenmonitor	C.4
Medical		Blood Pressure Monitor	oic.d.bloodpressuremonitor	C.4
		Body Scale	oic.d.bodyscale	C.4
		Body Thermometer	oic.d.bodythermometer	C.4
		CGM	oic.d.cgm	C.4
		Glucose Meter	oic.d.glucosemeter	C.4
		Heart Rate Monitor	oic.d.heartratemonitor	C.4
		Medical Device	oic.d.medicaldevice	
		Pulse Oximeter	oic.d.pulseoximeter	C.4
		Sleep Monitor	oic.d.sleepmonitor	C.4
Personal Health		Activity Tracker	oic.d.activitytracker	C.4
		Blood Pressure Monitor	oic.d.bloodpressuremonitor	C.4
		Body Composition Analyser	oic.d.bodycompositionanalyser	C.4
		Body Scale	oic.d.bodyscale	C.4
		Body Thermometer	oic.d.bodythermometer	C.4
		CGM	oic.d.cgm	C.4
		Glucose Meter	oic.d.glucosemeter	C.4

Device Category Name	UDC Device Name	Device Name	Device Type (Normative)	Reference
		Heart Rate Monitor	oic.d.heartratemonitor	C.4
		Personal Health Device	oic.d.personalhealthdevice	
		Pulse Oximeter	oic.d.pulseoximeter	C.4
		Sleep Monitor	oic.d.sleepmonitor	C.4
Other	Other		oic.d.unknown	
		Access Management Service	oic.d.ams	
		Credential Management Service	oic.d.cms	
		Device Ownership Transfer Service	oic.d.dots	

IECNORM.COM : Click to view the full PDF of ISO/IEC 30118-5:2021

Annex B
(normative)

Smart home Device Types

B.1 Smart home required Resources per Device Type

Device Types may mandate that specific Resources be implemented. The required Resource per Device Type where mandated is listed in Table B.1. Additionally, specific Resources that use enumeration values to indicate supported states or modes may mandate usage of standardized enumeration values. The mandated allowed values are indicated for each applicable Resource Type, the Property of interest on that Resource Type and to which Device Type it applies.

Per Table B.1, some Device types support two instances of the same Resource Type. When this is the case, the Resources shall support different CRUDN actions, e.g. one Resource acts as a Sensor (CRUDN action write not supported) and the other Resource acts as an Actuator (CRUDN actions read and write supported at a minimum) unless otherwise specified.

Table B.1 – Alphabetical list of Device Types ("rt"), including required Resources for smart home

Device Name (informative)	Device Type ("rt") (Normative)	Required Resource name	Required Resource Type
3D Printer	oic.d.3dprinter	Binary Switch	oic.r.switch.binary
		3D Printer	oic.r.printer.3d
		Operational State	oic.r.operational.state
		Temperature	oic.r.temperature
		Print Queue	oic.r.printer.queue
Active Speaker	oic.d.speaker	Binary Switch	oic.r.switch.binary
		Audio Controls	oic.r.audio
Airer	oic.d.airer	Binary Switch	oic.r.switch.binary
		Linear Movement Controls	oic.r.movement.linear
Air Conditioner	oic.d.airconditioner	Binary Switch	oic.r.switch.binary
		Temperature	oic.r.temperature
Air Purifier	oic.d.airpurifier	Binary Switch	oic.r.switch.binary
Air Quality Monitor	oic.d.airqualitymonitor	Air Quality Collection	oic.r.airqualitycollection
Arc Fault Circuit Interrupter	oic.d.afci	Fault Interrupter Switch	oic.r.switch.fault
Battery	oic.d.battery	Battery	oic.r.battery
Blind	oic.d.blind	Open Level	oic.r.openlevel
Camera	oic.d.camera	Media	oic.r.media
Clothes Washer Dryer	oic.d.washerdryer	Binary Switch	oic.r.switch.binary
		Operational State	oic.r.operational.state

Device Name (informative)	Device Type ("rt") (Normative)	Required Resource name	Required Resource Type
Coffee Machine	oic.d.coffeemachine	Binary Switch	oic.r.switch.binary
		Operational State	oic.r.operational.state
Cooker Hood	oic.d.cookerhood	Airflow Control	oic.r.airflowcontrol
		Binary Switch	oic.r.switch.binary
		Mode	oic.r.mode
Cooktop	oic.d.cooktop	Heating Zone Collection	oic.r.heatingzonecollection
Dehumidifier	oic.d.dehumidifier	Binary Switch	oic.r.switch.binary
		Humidity	oic.r.humidity
Dishwasher	oic.d.dishwasher	Binary Switch	oic.r.switch.binary
		Mode	oic.r.mode
Door	oic.d.door	Open Level	oic.r.openlevel
Dryer (Laundry)	oic.d.dryer	Binary switch	oic.r.switch.binary
		Operational State	oic.r.operational.state
Electric Vehicle Charger	oic.d.electricvehiclecharger	Binary Switch	oic.r.switch.binary
		Operational State	oic.r.operational.state
		Battery	oic.r.battery
		Vehicle Connector	oic.r.vehicleconnector
Electric Meter	oic.d.electrictmeter	Energy Consumption	oic.r.energy.consumption
Energy Generator	oic.d.energygenerator	Energy Generation	oic.r.energy.generation
Energy Monitor	oic.d.energymonitor	One of: Energy Consumption, Gas Consumption	oic.r.energy.consumption or oic.r.gas.consumption
Fan	oic.d.fan	Binary Switch	oic.r.switch.binary
Food Probe	oic.d.foodprobe	Temperature (Sensor)	oic.r.temperature
Freezer	oic.d.freezer	Temperature(2) (1 Sensor and 1 Actuator)	oic.r.temperature
Garage Door	oic.d.garagedoor	Door	oic.r.door
Generic Sensor	oic.d.sensor	Any Resource Type that supports and exposes in "/oic/res" the oic.if.s interface.	oic.r. <x> Where this equates to any Resource Type that supports the oic.if.s Interface.
Grinder	oic.d.grinder	Operational State	oic.r.operational.state
		Grinder Settings	oic.r.grinder
Ground Fault Circuit Interrupter	oic.d.gfci	Fault Interrupter Switch	oic.r.switch.fault
Humidifier	oic.d.humidifier	Binary Switch	oic.r.switch.binary
Kettle	oic.d.kettle	Binary Switch	oic.r.switch.binary
Light	oic.d.light	Binary Switch	oic.r.switch.binary
Indoor Garden	oic.d.indoorgarden	Binary Switch	oic.r.switch.binary

Device Name (informative)	Device Type ("rt") (Normative)	Required Resource name	Required Resource Type
Mattress	oic.d.mattress	Binary Switch	oic.r.switch.binary
		Mode	oic.r.mode
Oven	oic.d.oven	Binary Switch	oic.r.switch.binary
		Temperature (2) (1 Sensor and 1 Actuator)	oic.r.temperature
Printer	oic.d.printer	Binary Switch	oic.r.switch.binary
		Operational State	oic.r.operational.state
Printer Multi-Function	oic.d.multifunctionprinter	Binary switch	oic.r.switch.binary
		Operational State (2) ^a	oic.r.operational.state
		Automatic Document Feeder	oic.r.automaticdocumentfeeder ^b
Receiver	oic.d.receiver	Binary Switch	oic.r.switch.binary
		Audio Controls	oic.r.audio
		Media Source List (2)	oic.r.media.input, oic.r.media.output
Refrigerator	oic.d.refrigerator	Temperature (2) (1 Sensor and 1 Actuator)	oic.r.temperature
Robot Cleaner	oic.d.robotcleaner	Binary Switch	oic.r.switch.binary
		Mode	oic.r.mode
Scanner	oic.d.scanner	Binary Switch	oic.r.switch.binary
		Operational State	oic.r.operational.state
		Automatic Document Feeder	oic.r.automaticdocumentfeeder
Security Panel	oic.d.securitypanel	Mode	oic.r.mode
Set Top Box	oic.d.stb	Binary Switch	oic.r.switch.binary
Smart Lock	oic.d.smartlock	Lock Status	oic.r.lock.status
Smart Plug	oic.d.smartplug	Binary Switch	oic.r.switch.binary
Steam Closet	oic.d.steamcloset	Operational State	oic.r.operational.state
		Time Period	oic.r.time.period
Switch	oic.d.switch	Binary Switch	oic.r.switch.binary
Television	oic.d.tv	Binary Switch	oic.r.switch.binary
		Audio Controls	oic.r.audio
		Media Source List	oic.r.media.input
Thermostat	oic.d.thermostat	Temperature (2) (1 Sensor and 1 Actuator)	oic.r.temperature
Washer (Laundry)	oic.d.washer	Binary Switch	oic.r.switch.binary
		Operational State	oic.r.operational.state
Water Heater	oic.d.waterheater	Binary Switch	oic.r.switch.binary
		Temperature(2) (1 Sensor and 1 Actuator)	oic.r.temperature

Device Name (informative)	Device Type ("rt") (Normative)	Required Resource name	Required Resource Type
Water Purifier	oic.d.waterpurifier	Operational State	oic.r.operational.state
		Water Info	oic.r.waterinfo
Water Valve	oic.d.watervalve	Open Level	oic.r.openlevel
Window	oic.d.window	Open Level	oic.r.openlevel
<p>^a A Multi-Function Printer shall expose two instances of an Operational State Resource; each in discrete Collections, one for the Printer specific operational state information and one for the Scanner specific operational state information. The friendly name for the Collections should indicate the device modality (printer or scanner).</p> <p>^b A Multi-Function Printer shall only expose an Automatic Document Feeder Resource if the device has the Automatic Document Feeder capability.</p>			

B.2 Standardized enumeration values

B.2.1 Introduction

Resource Types may have a list of supported enumeration values. The supported enumeration values may differ when applied in different devices. In this clause the affected Resource Types are described by:

- Generic list of supported values
- Mandated list of supported values when applied to a specific Device

B.2.2 Alphabetical list of standardized enumeration types

Table B.2 lists the standardized enumeration types that may be present within Resource Properties where the Property is defined as containing values from this clause. The enumerations also apply to Semantic Tags (see ISO/IEC 30118-1) where the tag is defined as containing values from this clause.

Table B.2 – The defined set of standardized enumerations

Enumeration	Description
aborted	An internal device, communication or security error
active	Unit is active
airClean	unit is in air clean mode or state
airDry	unit is air drying
airfilterconsumable	identifies the main air filter consumable ("oic.r.consumable") Resource of the Device
airflow	Identifies the main airflow ("oic.r.airflow") Resource of the Device
airpurifierswitch	identifies that the switch ("oic.r.switch.binary") can turn on/off the air purifying function of the Device
airqualityairpollution	identifies the air quality ("oic.r.airquality") Resource measuring (total) air pollution
airqualityodor	identifies the air quality ("oic.r.airquality") Resource measuring odor
airqualitypm1	identifies the air quality ("oic.r.airquality") Resource measuring pm1
airqualitypm10	identifies the air quality ("oic.r.airquality") Resource measuring pm10

Enumeration	Description
airqualitypm2.5	identifies the air quality ("oic.r.airquality") Resource measuring pm2.5
ambient	unit is in ambient mode or state
alarmtimeperiod	identifies the duration time for an alarm ("oic.r.time.period")
armedAway	unit is armed for away
armedInstant	unit is armed instantly
armedMaximum	unit is armed at maximum level
armedNightStay	unit is armed in night stay
armedStay	unit is armed in stay mode
aroma	unit is armed in aroma mode
artificialintelligence	unit is in artificial intelligence mode
auto	unit is in auto mode or state
awning	identifies that the instance of "oic.r.windowcovering" represents an awning
babyCare	unit is in baby care mode or state
baking	unit is in baking mode or state
battery	identifies the main battery ("oic.r.battery") Resource of the Device
boiling	unit is in boiling state or mode
brewing	unit is in brewing state or mode
cancelled	the job was cancelled either by the remote client or by the user
changeCondition	the unit has experienced a change in condition, mode or state
charging	the unit is in charging mode or state
checkingTurbidity	unit is in checking turbidity state
circulating	unit is in circulating model or state
cleaning	unit is in cleaning mode or state
clothes	unit is in clothes mode
completed	job finished successfully
contactsensor	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of contact sensor
convenientroomdoor	identifies the convenient room door ("oic.r.door") of the refrigerator ("oic.d.refrigerator")
convertible	unit is for a convertible part (among compartments of a refrigerator). User can configure the parts as desired
convBake	unit is in convection bake mode
convRoast	unit is in convection roast mode
cool	unit is in cooling mode or state
coolingtargettemperature	identifies the target cooling temperature ("oic.r.temperature") Resource of the air conditioner ("oic.d.airconditioner")
coolerdoor	identifies the cooler door ("oic.r.door") of the Device
coolermeasuredtemperature	identifies the measured cooler temperature ("oic.r.temperature") Resource of the Device

Enumeration	Description
coolertargettemperature	identifies the target cooler temperature ("oic.r.temperature") Resource of the Device
cosensor	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of carbon monoxide sensor
currenttemperature	identifies the current measured temperature ("oic.r.temperature") Resource of the Device
delicate	unit is in delicate mode or state
deodorization	identifies the main deodorization ("oic.r.deodorization") Resource of the Device
diagnosis	unit is in diagnosis mode or state; when an error occurs, a Device is in diagnosis mode (state) for identifying causes and finding solutions
disabled	unit's current operational mode is disabled
dishwasherdoor	identifies the main door ("oic.r.door") Resource of the Dish Washer ("oic.d.dishwasher")
down	unit is unavailable
drapery	identifies that the instance of "oic.r.windowcovering" represents drapery
dry	unit is dry mode
dual	unit is in dual mode
ecomode	identifies the main (overall) ecomode ("oic.r.ecomode") Resource of the Device
edge	unit is edge mode or state
enabled	unit's current operational mode is enabled
express	unit is in express mode or state
extended	unit is in extended mode or state
fan	unit is in fan mode or state
fast	unit is in fast mode or state
filterMaterial	filter material that is used by a Device
firesensor	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of fire sensor
focused	unit is in focused mode or state
foot	unit is in foot mode or state
freezePrevent	unit is in freeze prevent mode or state
freezePreventPending	unit is pending freeze prevent mode
freezePreventPause	unit is in the paused state while in freeze prevent mode
freezer	unit is for a freezer part (among compartments of a refrigerator)
freezerdoor	identifies the freezer room door ("oic.r.door") Resource of the Device
freezermeasuredtemperature	identifies the measured freezer temperature ("oic.r.temperature") of the Device
freezertargettemperature	identifies the target freezer temperature ("oic.r.temperature") of the Device
fridge	unit is for a fridge part (among compartments of a refrigerator)
glassbreaksensor	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of glass break sensor

Enumeration	Description
grinding	unit is in grinding state or mode
healing	unit is in healing mode or state
heating	unit is in heating mode or state
heatingtargettemperature	identifies the target heating temperature ("oic.r.temperature") of the Device
heavy	unit is in heavy mode or state
homing	unit is in homing state, Device produces a special signal so that it can be found using electronic equipment
hot	unit is in hot mode or state
humidify	unit is in humidify mode or state
humidity	identifies the main humidity ("oic.r.humidity") Resource of the Device
ice	unit is in ice mode or state
idle	new jobs can start processing without waiting
initializing	unit is in initializing state, a Device resets its values set by a Client to initial values set by manufacturer
ink	generic ink cartridge for a Device
inkBlack	black ink cartridge for a Device
inkCyan	cyan ink cartridge for a Device
inkMagenta	magenta ink cartridge for a Device
inkTricolour	tricolour ink cartridge for a Device
inkYellow	yellow ink cartridge for a Device
invalid	unit is in an invalid mode, state, or setting
keepwarm	unit is in keep warm state or mode
keyfob	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of key fob
keypad	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of keypad
localtime	identifies the clock ("oic.r.clock") time representing the local time zone
macro	unit is in macro mode or state, Client manually inputs a rule or pattern of operation
main	unit is part of the main device or is the main device
mapping	unit is in mapping mode or state
mineral	unit is in mineral mode
monitoring	unit is in monitoring mode or state; such as security functions detecting unusual movements in an empty place for a camera-mounted Device
monitoringInitializing	unit is in initializing state in monitoring mode; a Device resets its values of monitoring mode to initial values set by manufacturer
monitoringMoving	unit is in moving state in monitoring mode; following a specific target that client select while the Device is in monitoring mode
monitoringPreparation	unit is in preparation state in monitoring mode; a Device is getting ready for its monitoring operation
morning	unit is in morning mode or state
motionsensor	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of motion sensor

Enumeration	Description
moving	unit is in moving state; the action of going to a different place
night	unit is in night-time mode or state
nightDry	unit is in night-time drying mode or state
none	unit is in an undefined mode or state
normal	unit is in a normal operational state
notsupported	ability to set a specific operational mode by a Client is not supported
onedoorfridge	identifies the single door ("oic.r.door") of the Device
operationalstate	identifies the main (overall) operational state ("oic.r.operational.state") of the Device
operationalmode	identifies the main (overall) mode ("oic.r.mode") of the Device
pause	unit is paused (by user)
ped	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of personal emergency device
pending	job initiated, engine is preparing
pendingHeld	job is not a candidate for processing for any number of reasons, will return to pending state if reasons are solved
permapress	unit is in permanent press mode or state
powerswitch	identifies the Resource that is the main power switch ("oic.r.switch.binary"), e.g. on/off of the Device
preHeat	unit is in pre-heat mode or state
preparation	unit is in preparation mode or state; a Device is getting ready for its operation
preSteam	unit is in pre-steam mode or state
preWash	unit is pre wash mode
processing	processing the job
projectorscreen	identifies that the instance of "oic.r.windowcovering" represents a projector screen
pure	unit is in pure mode or state
quick	unit is in quick mode or state
quiet	unit is in quiet mode
refresh	unit is in refresh mode or state
refrigeration	identifies the main ("oic.r.refrigeration") Resource of the Device
relativeremainingtimeperiod	identifies the Resource as (overall) relative remaining time period ("oic.r.time.period")
relax	unit is in relax mode or state
remainingtimeperiod	identifies the Resource as (overall) absolute remaining time period ("oic.r.time.period")
remotecontrol	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of remote control
remotecontrolenable	identifies the Resource for remote control enable ("oic.r.switch.binary"), e.g. remote enablement of the Device
reserve	unit is in reserve mode or state

Enumeration	Description
reserving	unit is in reserving state
restart	unit is in re-start mode or state
ringing	unit is in ringing state to indicate alarm, emergency, caution, and so on
rinse	unit is in rinse mode or state
rollershade	identifies that the instance of "oic.r.windowcovering" represents a roller shade
rollershade2	identifies that the instance of "oic.r.windowcovering" represents a two motor roller shade
rollershadeext	identifies that the instance of "oic.r.windowcovering" represents an exterior roller shade
rollershadeext2	identifies that the instance of "oic.r.windowcovering" represents an exterior two moto roller shade
sectored	unit is in sectored mode or state
select	unit is in select mode or state
securityrepeater	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of security repeater
setOption	unit is in a state whereby device options may be set
shake	unit is in shake mode or state
shoesDry	unit is in shoes dry mode or state
shutter	identifies that the instance of "oic.r.windowcovering" represents a shutter
silent	unit is in silent mode or state
sleep	unit is in sleep mode or state
sleepreservationtimeperiod	identifies the Resource ("oic.r.time.period") as sleep reservation time
smart	unit is in smart mode or state
soaking	unit is in soaking mode or state
soda	unit is in soda mode
spin	unit is in spin mode or state
spot	unit is in spot mode or state
spray	unit is in spray mode or state
standardcie	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of standard control and indicator equipment
start	unit is in start mode or state
startreservationtimeperiod	identifies the Resource ("oic.r.time.period") as start of reservation time
steam	unit is in steam mode or state
steamSoftening	unit is in steam softening mode or state, whereby the fabric is softened using only water and no softening additives
sterilize	unit is in sterilize mode or state
stopreservationtimeperiod	identifies the Resource ("oic.r.time.period") as stop of reservation time
stopped	error condition occurred
stretching	unit is in stretching mode or state
subDevice	unit is for a sub-device that makes up part of a main device

Enumeration	Description
swd	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of standard warning device
targettemperature	identifies the target (setpoint) temperature ("oic.r.temperature") of the Device
testing	calibrating, preparing the unit
tiltblind	identifies that the instance of "oic.r.windowcovering" represents a tilt only tilt blind
tiltblind2mode	identifies that the instance of "oic.r.windowcovering" represents a tilt and lift tilt blind
toner	generic toner cartridge for a Device
tonerBlack	black toner cartridge for a Device
tonerCyan	cyan toner cartridge for a Device
tonerMagenta	magenta toner cartridge for a Device
tonerYellow	yellow toner cartridge for a Device
turbo	unit is in turbo mode or state
update	unit is in update mode or state
vendorspecific	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type that is specific to the manufacturer
vibrationsensor	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of vibration sensor
waiting	unit is in waiting mode or state
wakeup	unit is in wakeup state just after sleep mode
warm	unit is in warm mode or state
wash	unit is in wash mode or state
waterinfo	identifies the main water information ("oic.r.waterinfo") of the Device
waterfilterconsumable	identifies the main water filter consumable ("oic.r.consumable") of the Device
waterproofing	unit is in waterproofing mode or state
watersensor	identifies an "Intruder Alert Zone" ("oic.r.iaszoneinfo") type of water sensor
wet	unit is in wet mode or state
wind	unit is in wind mode
wrinklePrevent	unit is in wrinkle prevent mode
zigzag	unit is in zigzag mode or state

B.2.3 Standardized list of supported values for mode Resource Type (oic.r.mode)

Table B.3 lists per Device Type the supported enumeration values that can apply to both of the Properties "supportedModes" and "modes" of the Mode Resource Type.

Table B.3 – List of supported "oic.r.mode" values per Device Type ("rt")

Device Name (informative)	Device Type (rt) (Normative)	Supported enumeration value	Description
Air Conditioner	oic.r.airconditioner	airClean	This removes contaminants from the indoor air.
		airDry	This removes moisture from the inside of the device to prevent mould after cooling air.
		aroma	This adds a deodorizing scent to make the air fresher.
		auto	This automatically selects and operates cooling and/or heating based on the current temperature condition.
		cool	This cools the indoor air.
		energySaving	This saves energy (electricity) by restricting some functions.
		fan	This circulates the inside air without cool and inflow of outside air.
Air Purifier	oic.d.airpurifier	auto	This is continuously checking the air quality and operating as needed to maintain good air quality.
		babyCare	This removes contaminants from indoor air and discharges clean air in a downward flow for babies and children.
		circulating	This circulates the inside air by using the fan inside the device.
		cleaning	This removes contaminants from the indoor air. In the case where the device consists of lower and upper sections, this function is operated only in the lower section.
		dual	This removes contaminants from the indoor air. In the case where the device consists of lower and upper sections, this function operates in both of sections.
		humidity	This increases moisture in the indoor air.
		silent	This reduces noise during the operation.
		sleep	This is a low power mode for the device to lower electrical consumption on standby.
Airer	oic.d.airer	airDry	This dries wet materials by using forced air (no heat).
		dry	This dries wet materials by using hot air.
		none	This is an undefined mode.
Dishwasher	oic.d.dishwasher	auto	This senses the soiled amount and soiled toughness and is optimized to achieve the best cleaning.
		cleaning	This means cleaning the inside of the device when there are no dishes.
		delicate	This is to clean delicate items (e.g., fine china, small plates, long cutlery, cups, glasses, and so on).
		energySaving	This saves energy by reducing the wash and rinsing temperature.
		express	This cleans lightly soiled dishes faster than "quick" mode.
		fast	This focuses on cleaning soiled dishes quickly.
		heavy	This cleans heavily soiled dishes with the strongest spray intensity.

Device Name (informative)	Device Type (rt) (Normative)	Supported enumeration value	Description
		normal	This cleans soiled dishes for everyday use based on basic setting from manufacturers.
		quick	This quickly cleans the lightly soiled dishes used that were used recently.
		refresh	This is to freshen up and warm dishes that have been unused for a long time.
		rinse	This rinses dishes with water.
		spray	This provides selectable options for spray intensity. (For example, the options could be soft, medium, and strong)
		steam	This adds steam at the beginning of the cycle to improve the wash performance.
		turbo	This cleans heavily soiled dishes by using slightly more energy and water.
		update	This downloads a dedicated cycle via Wi-Fi, NFC, and so on.
Oven	oic.d.oven	baking	This cooks by dry heat in an oven
		convBake	This is a baking mode of a convection oven
		convRoast	This is a roasting mode of a convection oven
Robot Cleaner	oic.d.robotcleaner	edge	This is cleaning the outside perimeter of the area.
		macro	This is cleaning specific areas manually selected by a client.
		sectored	This is cleaning complex areas by dividing the cleaning area into sections.
		select	This is cleaning areas selected by a client among divided sections of the indoor.
		spot	This is cleaning a small area within the radius of the manufacturer's default set.
		zigzag	This is cleaning each spot of indoor by moving zigzag.
Security Panel	oic.d.securityPanel	active	
		armedAway	
		armedInstant	
		armedMaximum	
		armedNightStay	
		armedStay	

The modes can be viewed upon as mode changes of the device. However, this document does not impose any relationship between the different modes of a Device. Hence all mode changes are expected to occur from a Client point of view.

Figure B.1 provides an illustrative example of a possible set of modes and the transitions between them for a Dryer Device Type (oic.d.dryer).

An example mode transition diagram of a Dryer, not all mode transitions are listed.

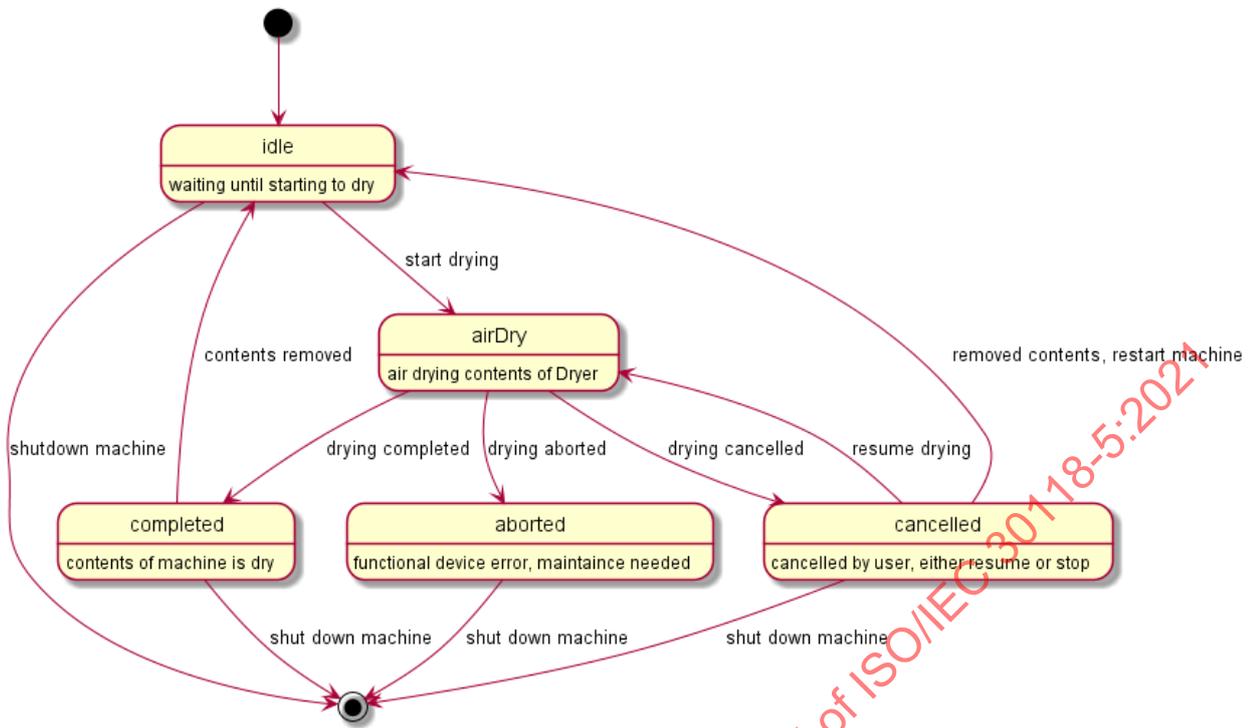


Figure B.1 – Example of mode transitions of a dryer

B.2.4 Standardized list of supported values for operational state Resource Type (oic.r.operational.state)

Table B.4 lists the supported enumeration values per Device Type for the Property “machineStates” of the operational state Resource Type.

Table B.4 – List of supported “oic.r.operational.state” values per Device Type (“rt”)

Device Name (informative)	Device Type (rt) (Normative)	Supported enumeration value machineStates
Dishwasher	oic.d.dishwasher	start
		stop
Dryer	oic.d.dryer	start
		stop
Oven	oic.d.oven	completed
		preHeat
		start
Printer	oic.d.printer	idle
		processing
		stopped
Printer Multi-Function	oic.d.multifunctionPrinter	See Printer
		See Scanner

Device Name (informative)	Device Type (rt) (Normative)	Supported enumeration value machineStates
Robot Cleaner	oic.d.robotcleaner	homing
		pause
		restart
		start
		wakeUp
Scanner	oic.d.scanner	down
		idle
		processing
		stopped
		testing
Steam Closet	oic.d.steamcloset	start
		stop
		wakeUp
Washer	oic.d.washer	start
		stop
		wakeUp

Table B.5 lists the supported enumeration values per Device Type for the Property “jobStates” of the operational state Resource Type.

Table B.5 – List of supported values per Device Type (“rt”) for jobStates of operational state Resource Type

Device Name (informative)	Device Type (rt) (Normative)	Supported enumeration value jobStates	Description
Dishwasher	oic.d.dishwasher	aborted	This is an internal device, communication, or security error. (e.g. power_fail)
		airDry	This dries wet materials by using forced air (no heat).
		cancelled	This state is cancelled by (remote) user.
		completed	This state is a job completed without any error.
		down	This state is unavailable to operate a job due to some issues. (e.g. power_off)
		nightDry	This runs the ventilation fan periodically to vent the steam from the tub. Because the dishes are often left in the dishwasher overnight after the cycle ends, this can result in the steam inside the tub condensing on the dishes, leaving them wet. To prevent the above state, the device can provide this state.
		pause	This state is paused by user.
		pending	This state is waiting that the device prepares to initiate a job.
		reserve	This state means that a client has finished setting the system for future use.
		rinse	This is to rinse the dishes with water
wash	This is to clean the soiled dishes		

Device Name (informative)	Device Type (rt) (Normative)	Supported enumeration value jobStates	Description
Dryer	oic.d.dryer	aborted	This is an internal device, communication, or security error.
		airDry	This dries the materials by using forced air (no heat).
		completed	This state is a job completed without any error.
		coolDown	This state is for the temperature cool down to reduce clothes temperature' by spinning the interior drum without heat.
		diagnosis	When an error occurs, the device enters this state to identify causes and find solutions.
		down	This state is device unavailable to operate a job due issues. (e.g. power_off)
		pause	This state is paused by user.
		pending	This state is waiting that the device prepares to initiate a job.
		processing	This is working on a job executed by a client.
		reserve	This state means that a client has finished setting the system for future use.
		wrinklePrevent	This state runs the dryer periodically to help prevent wrinkles from forming.
		Oven	oic.d.oven
completed	This state is job completed without any error.		
cool	This is cooling the temperature inside and outside of the device after finishing cooking.		
down	This state is unavailable to operate a job due to issues. (e.g. power_off)		
idle	This means that new jobs can start processing without waiting. (e.g., preheating is done)		
pause	This state is paused by user.		
pending	This state is waiting that the engine prepares to initiate a job.		
preHeat	This is pre-heating the inside of the device prior to cooking.		
processing	This is working on a job executed by a user.		
setOption	This is in status while being set for the device's options.		
Printer	oic.d.printer	aborted	This is in internal device, communication, or security error.
		cancelled	This state is cancelled by (remote) user.
		completed	This state is job completed without any error.
		pending	This state is waiting that the device prepares to initiate a job.
		pendingHeld	This state halts pending from processing for any number of reasons. This will return to pending state if the issues are resolved.
		processing	This is working on a job executed by a client.

Device Name (informative)	Device Type (rt) (Normative)	Supported enumeration value jobStates	Description
Printer Multi-Function	oic.d.multifunction Printer	See printer	Refer to the supported enumeration values of a Printer (oic.d.printer).
		See scanner	Refer to the supported enumeration values of a Scanner (oic.d.scanner).
Robot Cleaner	oic.d.robotcleaner	charging	This means that the device is charging. In the case of robot cleaner, it can be charged by connecting with its home station.
		cleaning	This is cleaning indoor floor with selected mode by a client.
		diagnosis	When an error occurs, a device enters this state to identify causes and find solutions.
		homing	This state means that the device is moving to its home station after finishing work or to charging its battery
		idle	This means that new jobs can start processing without waiting.
		initializing	This is resetting device to initial values set by manufacturer.
		macro	This is controlled and cleaned by the client based on a remote controller.
		mapping	At first use of the device, it scans the indoor area by moving to make a map.
		monitoring	This is a security functions detecting strange movements in an empty place by using mounted cameras.
		monitoringInitializing	This is resetting device to initial values set by the manufacturer.
		monitoringMoving	This is moving to follow a specific target that a user selects while the device is in monitoring mode.
		monitoringPreparation	This is in a state where a device is getting ready for its monitoring operation.
		moving	This is moving to go to a different place.
		pause	This state is paused by user.
		preparation	This means that the device is getting ready for its operation.
		reserving	This state means that a client is setting systems for future use.
		setOption	This is the status while being set for the device's options.
Scanner	oic.d.scanner	aborted	This is in internal device, communication, or security error.
		cancelled	This state is cancelled by (remote) user.
		completed	This state is completely finished the job without any error.
		pending	This state is waiting that the device prepares to initiate a job.
		processing	This is working on a job executed by a client.
Steam Closet	oic.d.steamcloset	aborted	This is an internal device, communication, or security error.
		airDry	This is in drying the materials by using wind.
		completed	This state is job completed without any error.

Device Name (informative)	Device Type (rt) (Normative)	Supported enumeration value jobStates	Description
		diagnosis	When an error occurs, a device enters this state to identify causes and find solutions.
		down	This state is unavailable to operate a job due to issues (e.g. power_off)
		idle	This means that new jobs can start processing without waiting (e.g. washing is done).
		initializing	This is resetting device to initial values set by manufacturer.
		nightDry	This is a special sanitary care during the night, which runs heavy sanitary care and then dries periodically every hour for an additional eight hours.
		pause	This state is paused by user.
		pending	This state is waiting that the device prepares to initiate a job.
		preHeat	This is preheating the inside of the device.
		preSteam	This is steaming the inside of the device to remove residual material at the beginning of the cleaning sequence.
		processing	This is working on a job executed by a client.
		reserve	This state means that a client has finished setting the system for future use.
		shake	This is to quickly shake the hanger inside of the device to remove drops of water on clothes after a steam cycle.
		sleep	This is in low power state for the device to lower electrical consumption on standby.
		steam	This sprays steam on the washable items to remove odors and wrinkles after preheat the inside of the device.
		sterilize	This removes germs on items through high temperature and steam.
update	This downloads a dedicated cycle via Wi-Fi, NFC, and so on.		
Washer	oic.d.washer	aborted	This is an internal device, communication, or security error.
		changeCondition	After the washer checked the turbidity, the device could change condition progressing state. For example, the washer can rinse the clothes one more time or finish washing it.
		checkingTurbidity	The device automatically checks turbidity during rinsing the clothes to check if the detergent remains.
		completed	This state is completely finished the job without any error.
		coolDown	This state is temperature cool down to reduce clothes temperature' by spinning the interior drum without heat only in case the washer supports a dry function.
		diagnosis	When an error occurs, a device enters this state to identify causes and find solutions.
		down	This state is unavailable to operate a job due to issues. (e.g. power_off)
		dry	This is to dry the washed clothes with heat.

Device Name (informative)	Device Type (rt) (Normative)	Supported enumeration value jobStates	Description
		freezePrevent	To prevent developing ice inside of the device and pipe, the device takes special care of the device condition in the winter.
		freezePreventPause	This is paused state in freeze prevent mode.
		freezePreventPending	This is pending state in freeze prevent mode.
		grinding	This is to grind debris to prevent drain pipes being clogged.
		idle	This means that new jobs can start processing without waiting. (e.g. rinsing clothes is done)
		pause	This state is paused by user.
		pending	This state is waiting that the device prepares to initiate a job.
		preparation	This means that the device is getting ready for its operation. This state includes checking the amount of detergent, softener, water and so on.
		preWash	This is to wash heavily soiled clothes in advance before starting the washing process.
		processing	This is working on a job executed by a client.
		refresh	This removes wrinkles from slightly wrinkled clothes by using steam for if the washer supports steam function
		reserve	This state means that a client has finished setting the system for future use.
		rinse	This is to rinse the dishes with water.
		shoesDry	This is a special cycle for drying shoes.
		sleep	This is in low power state for the device to lower electrical consumption on standby.
		soaking	This makes clothes thoroughly wet by immersing them in liquid so dust and stains can easily be removed.
		spin	This is spinning fast to remove the water after completely rinsing the clothes.
		steam	This sprays steam on clothes to remove odors and wrinkles.
		steamSoftening	This softens the fabric using 100% pure water and no chemicals with steam instead of chemical fabric softeners.
		testing	This checks the amount of clothes inside the washer and displays the results.
		update	This downloads a dedicated cycle via Wi-Fi, NFC, and so on.
		wash	This is washing the clothes with selected cycle set by a client
		waterproofing	This washes (sports) clothes with a dedicated liquid for waterproofing.
		wrinklePrevent	This state can help prevent wrinkles from forming.

The operational state can be viewed as state changes of the device that includes separate handling of jobs within the overall machine state. However, this document does not impose any relationship between the different machine or job states of a device. Hence all "machinestate" and or "jobStates" changes are expected to occur from a Client point of view.

Figure B.2 provides an illustrative example of a possible set of job states and the transitions between them for a Printer Device Type ("oic.d.printer").

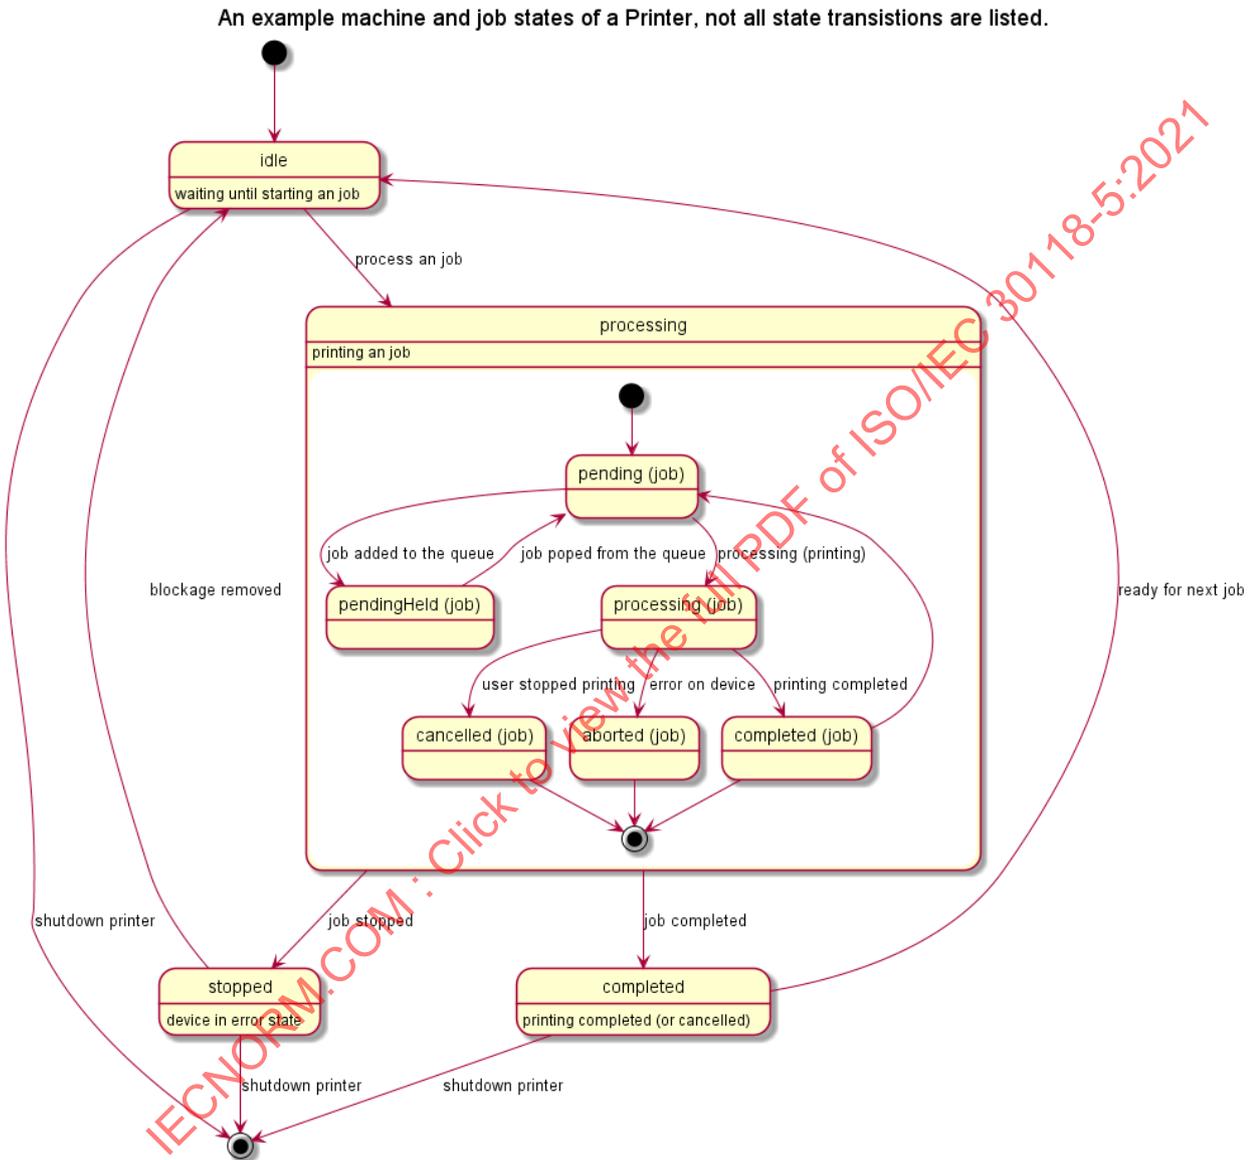


Figure B.2 – Example of job state transitions of a printer

B.2.5 Standardized list of supported values for consumable and consumable collection Resource Types (oic.r.consumable, oic.r.consumablecollection)

Table B.6 lists the enumeration values that may be populated in both the supportedconsumables (in oic.r.consumablecollection) and typeofconsumable (in oic.r.consumable) Properties within the Consumable and Consumable Collection Resource Types. The typeofconsumable Property shall only be populated with a value exposed within the supportedconsumables Property in a specific instance of the Consumable Collection Resource Type.

This constitutes the known set of possible values for these Properties in the Consumable and Consumable Collection Resources. A vendor may extend this set by providing vendor defined enumerations following the convention defined in ISO/IEC 30118-4.

Table B.6 – List of defined enumeration values for oic.r.consumable, oic.r.consumablecollection

Friendly Name (informative)	Enumeration Value (Normative)	Description (Informative)
Toner Cartridge	toner	Generic toner cartridge.
Black Toner Cartridge	tonerBlack	Black toner cartridge
Cyan Toner Cartridge	tonerCyan	Cyan toner cartridge
Magenta Toner Cartridge	tonerMagenta	Magenta toner cartridge
Yellow Toner Cartridge	tonerYellow	Yellow toner cartridge
Filter Material	filterMaterial	Any replaceable or reusable filter material; such as water filters, air filters, dust filters etc.
Ink Cartridge	ink	Generic ink cartridge
Black Ink Cartridge	inkBlack	Black ink cartridge
Cyan Ink Cartridge	inkCyan	Cyan ink cartridge
Magenta Ink Cartridge	inkMagenta	Magenta ink cartridge
Yellow Ink Cartridge	inkYellow	Yellow ink cartridge
Tricolour Ink Cartridge	inkTricolour	Tri-colour ink cartridge; typically Cyan plus Magenta plus Yellow.

B.3 Camera media format (oic.r.media)

The supported camera media formats can be discovered by looking at the SDP (see IETF RFC 4566) list of the media Resource Type. The recommended list of supported media formats are listed in Table B.7.

Table B.7 – Recommended media profiles

Mediatype	codec	Content container format	transport	Additional information
Audio	AAC		RTP	
Video	H.264		RTP	Recommended minimal resolution 1920x1080 (width, height)
Video	H.264/AAC	MPEG-2 TS	RTP	Recommended minimal resolution 1920x1080 (width, height)
Still image	JPEG	JPEG	RTP	Recommended minimal resolution 1920x1080 (width, height)

B.4 Additional requirements per Device Type

B.4.1 Additional requirements for Television Devices ("oic.d.tv")

A set of Resource Types have been defined that are applicable should a Device of type "oic.d.tv" need to expose behaviours typically found in "settings" menus or functions. A Device should expose one or more of these Resource Types:

- accessibility settings ("oic.r.settings.accessibility")
- broadcast settings ("oic.r.settings.broadcast")
- picture settings ("oic.r.settings.picture")
- sound settings ("oic.r.settings.sound")
- support settings ("oic.r.settings.support")
- general system settings ("oic.r.settings.system")
- ecomode ("oic.r.ecomode")

A Device may additionally expose the following Resource Types:

- software update ("oic.r.softwareupdate")
- Wi-Fi configuration ("oic.r.wificonf")

Thus enabling a complete set of Client accessible information typically found within a television system settings user interface.

IECNORM.COM : Click to view the full PDF of ISO/IEC 30118-5:2021

Annex C (normative)

Healthcare Device Types

C.1 Scope

This Annex defines Device Types for use in the healthcare and fitness vertical, and describes general use cases to which OCF Healthcare Devices apply, along with common functional requirements.

Although some common requirements are defined in this document, implementation is responsible for checking appropriate security, safety, environmental, and health practices, and applicable regulatory requirements from national health authorities.

C.2 Introduction to OCF healthcare Devices

This Annex references and inherits data models defined in the ISO/IEC 30118-4, to define OCF Healthcare Device Types in clause C.4.

C.3 Operational scenarios

Personal fitness and/or medical data are read by a monitoring Device (OCF Client role) from Healthcare Devices (OCF Server role), and the monitoring Device triggers appropriate actions based on the data collected. Many of the target usages are for personal health or fitness, although clinical use cases can be realized with similar modelling.

As shown in Figure C.1, data from various fitness and healthcare devices can be gathered on a smart phone for monitoring and can be transmitted to the healthcare services through a gateway or through the smartphone. The protocol to be used for transmission is defined in ISO/IEC 30118-1. Collected personal fitness and/or medical data are used for condition monitoring or medical research, receiving advice from a trainer/doctor, or triggering an emergency notification.

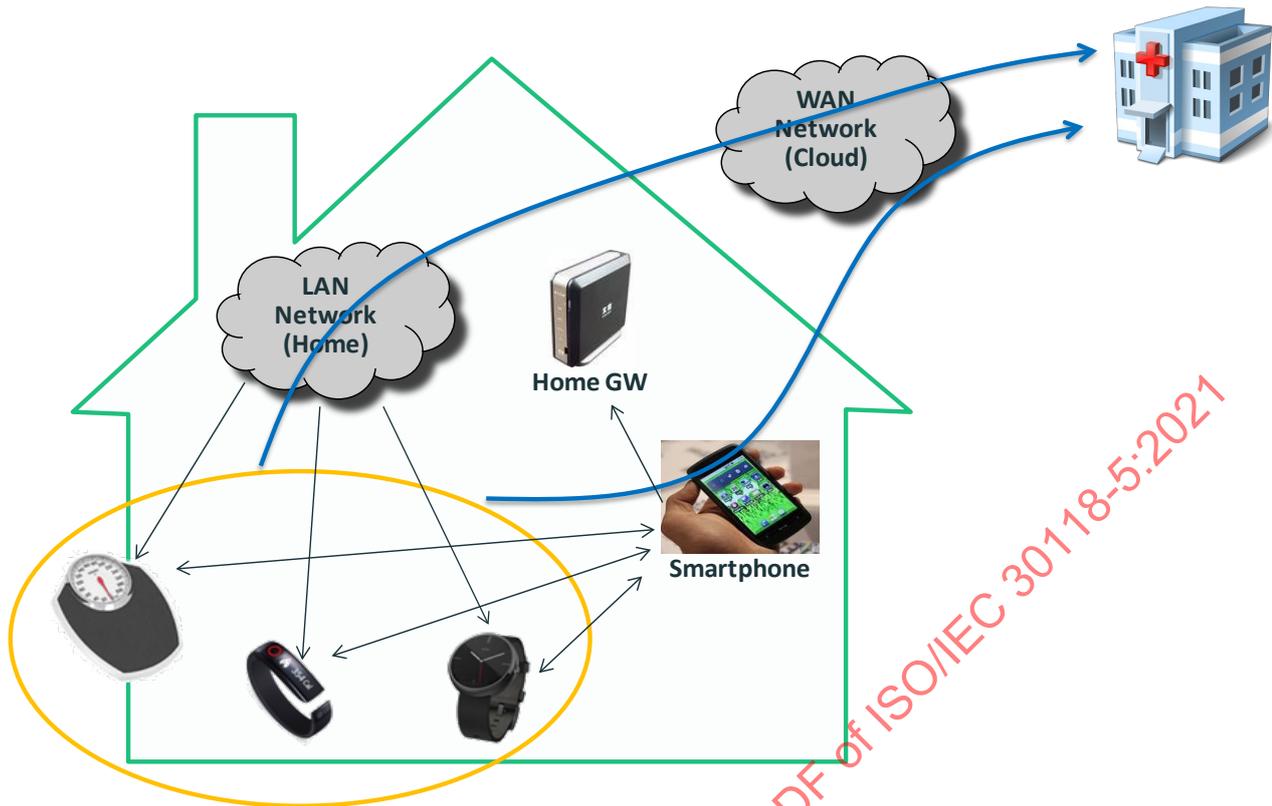


Figure C.1 – Schematic diagram of healthcare usages

C.4 Standardized Device Types

C.4.1 Introduction

OCF Healthcare Device Types specify Devices in the healthcare and fitness domains of the OCF ecosystem. The Device Type exposed by the "rt" value of /oic/d of all Healthcare Devices shall have a Resource Type value ("rt") prefixed with "oic.d." The Healthcare Device Types are listed in Table C.1.

Table C.1 – Alphabetical list of healthcare Device Types

Clause	Device Name	Device Type ("rt")
C.4.9	Activity Tracker	oic.d.activitytracker
C.4.2	Blood Pressure Monitor	oic.d.bloodpressuremonitor
C.4.15	Body Composition Analyser	oic.d.bodycompositionanalyser
C.4.4	Body Scale	oic.d.bodyscale
C.4.5	Body Thermometer	oic.d.bodythermometer
C.4.10	CGM(Continuous Glucose Monitor)	oic.d.cgm
C.4.11	Cycling Power Meter	oic.d.cyclingpowermeter
C.4.12	Cycling Speed Sensor	oic.d.cyclingspeedsensor
C.4.13	Cycling Cadence Sensor	oic.d.cyclingcadencesensor

Clause	Device Name	Device Type ("rt")
C.4.3	Glucose Meter	oic.d.glucosemeter
C.4.6	Heart Rate Monitor	oic.d.heartratemonitor
C.4.14	Muscle Oxygen Monitor	oic.d.muscleoxygenmonitor
C.4.7	Pulse Oximeter	oic.d.pulseoximeter
C.4.8	Sleep Monitor	oic.d.sleepmonitor

The remainder of this Annex defines Resource Types for each Device Type, but for full definitions of Resource Types, see ISO/IEC 30118-4.

Each Device Type defines a minimal set of Resource Types that are implemented by that Device Type as required Resource Types. A Healthcare Device may expose additional OCF-defined optional Resource Types. It should be noted that all Resource Types are commonly available for all Device Types, but if a Device Type aims to implement optional Resource Types related to healthcare, it shall expose such Resource Types using the definitions provided in this annex.

When a Resource Type is listed as Mandatory (M) in this Annex, the Device shall:

- expose that Atomic Measurement Resource Type in /oic/res
- expose that Resource Type as a Link in the Atomic Measurement

The mandatory Resource Types for an Atomic Measurement shall be listed in the "rts-m" Property Value.

When a Resource Type is listed as Optional (O) in this Annex, a Device may expose that Resource Type as a Link in the Atomic Measurement, or may also expose that Resource Type as a discretely discoverable Resource outside of the Atomic Measurement. For example, if a blood pressure monitor (i.e. "oic.d.bloodpressuremonitor") measures pulse rate and chooses to expose that feature over OCF, it exposes the "oic.r.pulserate" Resource Type as a Link in the blood pressure monitor Atomic Measurement ("oic.r.bloodpressuremonitor-am"). The allowed Resource Types for an instance of an Atomic Measurement (which includes both the M and O Resource Types that are implemented) shall be listed in the "rts" Property Value.

Some Resource Types are commonly used for all Healthcare Device Types; these are provided in Table C.2. Users may want to associate timestamps to the measurements when they access their healthcare information (in RFC3339 date and time format, oic.r.time.stamp). A Healthcare Device may be used by different users, so identifying a specific user with an ID may be appropriate ("oic.r.userid"). These Resource Types are exposed as Conditionally Required Resource Types of an Atomic Measurement (as defined per clause 7.8.4 of ISO/IEC 30118-1) of a specific Healthcare Device. The "rt" value of Resource Types that use Atomic Measurements are suffixed by -am (Atomic Measurements). When present in an Atomic Measurement, "oic.r.time.stamp" and "oic.r.userid" indicate the time when a sample of data is measured by a certain user.

Table C.2 – Commonly used Resource Types of healthcare Device Types

Resource Type Name	Resource Type Value	Requirement (M, S, O, CA, CR)
Observed Time	oic.r.time.stamp	O
User ID	oic.r.userid	O

It should also be noted that Resource-level and Property-level requirements can be different. All OCF Resource Types are specified using OpenAPI 2.0 and the Properties which are defined in a specific schema can either be mandatory or optional. In other words, even if a Resource Type is mandatory for a Device Type, some of its Properties may not be mandatory.

C.4.2 Blood pressure monitor

C.4.2.1 Introduction

A blood pressure monitor measures blood pressure [i.e., systolic, diastolic, and mean arterial pressure (MAP)]. Blood pressure is most frequently measured using the units of millimetres of mercury (mmHg). Blood pressure is often denoted as 120/80 mmHg, which means systolic blood pressure of 120 and diastolic blood pressure of 80.

Table C.3 describes the Device Type for a blood pressure monitor. Table C.4 describes the Atomic Measurement that is present in all instances of a blood pressure monitor.

Table C.3 – Healthcare Device Type of blood pressure monitor

Device Type (rt)	Resource Type Name	Resource Type Value	Requirement level
oic.d.bloodpressuremonitor	Blood pressure monitor Atomic Measurement	oic.r.bloodpressuremonitor-am	M

Table C.4 – Atomic measurement of blood pressure monitor

Atomic Measurement Resource Type Value	Resource Type Name	Resource Type Value	Requirement level
oic.r.bloodpressuremonitor-am	Blood pressure	oic.r.blood.pressure	M
	Pulse rate	oic.r.pulserate	O

C.4.2.2 Required Resource Types

A blood pressure monitor shall expose "oic.r.blood.pressure" to report the blood pressure (systolic and diastolic) and optionally MAP.

C.4.2.3 OCF-defined optional Resource Types

A blood pressure monitor measures pulse rate using the "oic.r.pulserate" Resource Type.

See Table C.2 for additional commonly used Resource Types that could be used here.

C.4.3 Glucose meter

C.4.3.1 Introduction

A glucose meter measures the concentration of glucose in the blood. Glucose, or blood sugar, is the human body's primary source of energy. The blood glucose level is a key parameter that diabetics measure multiple times per day.

Table C.5 describes the Device Type for a glucose meter. Table C.6 describes the Atomic Measurement that is present in all instances of a glucose meter.

Table C.5 – Healthcare Device Type of glucose meter

Device Type (rt)	Resource Type Name	Resource Type Value	Requirement level
oic.d.glucosemeter	Glucose meter Atomic Measurement	oic.r.glucosemeter-am	M

Table C.6 – Atomic measurement of glucose meter

Atomic Measurement Resource Type Value	Resource Type Name	Resource Type Value	Requirement level
oic.r.glucosemeter-am	Glucose	oic.r.glucose	M
	Context Carbohydrates	oic.r.glucose.carb	O
	Context Exercise	oic.r.glucose.exercise	O
	Hemoglobin Bound to Glucose A1c Form (HbA1c)	oic.r.glucose.hba1c	O
	Context Health	oic.r.glucose.health	O
	Context Meal	oic.r.glucose.meal	O
	Context Medication	oic.r.glucose.medications	O
	Context Sample Location	oic.r.glucose.samplelocation	O
	Context Tester	oic.r.glucose.testers	O

C.4.3.2 Required Resource Types

A glucose meter shall expose "oic.r.glucose" to report the blood glucose level in mg/dL or mmol/L.

C.4.3.3 OCF-defined optional Resource Types

A glucose meter measures context carbohydrates, then it shall expose the context carbohydrates using "oic.r.glucose.carb" Resource Type.

A glucose meter measures context exercise using the "oic.r.glucose.exercise" Resource Type.

A glucose meter measures Hemoglobin Bound to Glucose A1c Form (HbA1c) using the "oic.r.glucose.hba1c" Resource Type.

A glucose meter measures context health using the "oic.r.glucose.health" Resource Type.

A glucose meter measures context meal using the "oic.r.glucose.meal" Resource Type.

A glucose meter measures context medication using the "oic.r.glucose.medications" Resource Type.

A glucose meter measures context sample location using the "oic.r.glucose.samplelocation" Resource Type.

A glucose meter measures context tester using the "oic.r.glucose.testers" Resource Type.

See Table C.2 for additional commonly used Resource Types that could be used here.

C.4.4 Body scale

C.4.4.1 Introduction

A body scale measures the weight. The weight is most frequently measured using the units of kilograms (kg) or pounds (lb).

Table C.7 describes the Device Type for a body scale. Table C.8 describes the Atomic Measurement that is present in all instances of a body scale.

Table C.7 – Healthcare Device Type of body scale

Device Type (rt)	Resource Type Name	Resource Type Value	Requirement level
oic.d.bodyscale	Body scale Atomic Measurement	oic.r.bodyscale-am	M

Table C.8 – Atomic measurement type of body scale

Atomic Measurement Resource Type Value	Resource Type Name	Resource Type Value	Requirement level
oic.r.bodyscale-am	Weight	oic.r.weight	M
	Body Mass Index (BMI)	oic.r.bmi	O
	Height	oic.r.height	O
	Body Fat	oic.r.body.fat	O
	Body Water	oic.r.body.water	O
	Body Soft Lean Mass	oic.r.body.slm	O
	Body Fat Free Mass	oic.r.body.ffmpeg	O

C.4.4.2 Required Resource Types

A body scale shall expose "oic.r.weight" to report the body weight of a person.

C.4.4.3 OCF-defined optional Resource Types

A body scale measures height using the "oic.r.height" Resource Type. Especially, a body scale measures the height if BMI is also reported because the height is used when a body scale measures BMI.

A body scale measures Body Mass Index (BMI) using the "oic.r.bmi" Resource Type.

A body scale measures body fat using the "oic.r.body.fat" Resource Type.

A body scale measures body water using the "oic.r.body.water" Resource Type.

A body scale measures body soft lean mass using the "oic.r.body.slm" Resource Type.

A body scale measures body fat free mass using the "oic.r.body.ffmpeg" Resource Type.

See Table C.2 for additional commonly used Resource Types that could be used here.

C.4.5 Body thermometer

C.4.5.1 Introduction

A body thermometer measures the temperature at some point. In general, the body thermometer is placed at the measurement site for sufficient time for the measuring probe to reach the same temperature as the body site, and when stable, a direct digital reading of the probe temperature is taken.

Table C.9 describes the Device Type for a body thermometer. Table C.10 describes the Atomic Measurement that is present in all instances of a body thermometer.

Table C.9 – Healthcare Device Type of body thermometer

Device Type (rt)	Resource Type Name	Resource Type Value	Requirement level
oic.d.bodythermometer	Body thermometer Atomic Measurement	oic.r.bodythermometer-am	M

Table C.10 – Atomic measurement type of body thermometer

Atomic Measurement Resource Type Value	Resource Type Name	Resource Type Value	Requirement level
oic.r.bodythermometer-am	Temperature	oic.r.temperature	M
	Body Location for temperature	oic.r.body.location.temperature	O

C.4.5.2 Required Resource Types

A body thermometer shall expose "oic.r.body.temperature" to report the temperature level and the unit of a measured temperature is reported either in C, F or K.

C.4.5.3 OCF-defined optional Resource Types

A body thermometer measures temperature site using the "oic.r.body.location.temperature" Resource Type.

See Table C.2 for additional commonly used Resource Types that could be used here.

C.4.6 Heart rate monitor**C.4.6.1 Introduction**

A heart rate monitor measures heart rate. Heart rate is most frequently measured using the units of beats per minute (bpm). While normal heart rate varies from person to person depending on the individual, age, body size, heart conditions, posture, medication use, etc., normal resting heart rate range for adults is from 60 to 100 according to the American Heart Association.

Table C.11 describes the Device Type for a heart rate monitor. Table C.12 describes the Atomic Measurement that is present in all instances of a heart rate monitor.

Table C.11 – Healthcare Device Type of heart rate monitor

Device Type (rt)	Resource Type Name	Resource Type Value	Requirement level
oic.d.heartratemonitor	Heart Rate Monitor Atomic Measurement	oic.r.heartratemonitor -am	M

Table C.12 – Atomic measurement of heart rate monitor

Atomic Measurement Resource Type Value	Resource Type Name	Resource Type Value	Requirement level
oic.r.heartratemonitor -am	Heart Rate	oic.r.heartrate	M

C.4.6.2 Required Resource Types

A heart rate monitor shall expose "oic.r.heartrate" to report the heart rate of a person.

C.4.6.3 OCF-defined Optional Resource Types

See Table C.2 for additional commonly used Resource Types that could be used here.

C.4.7 Pulse oximeter

C.4.7.1 Introduction

A pulse oximeter measures peripheral capillary oxygen saturation (SpO2), an estimate of the amount of oxygen in the blood. Oxygen saturation is most frequently measured using percentage (%). Normal oxygen saturation is 95% or above according to the World Health Organization (WHO).

Table C.13 describes the Device Type for a pulse oximeter. Table C.14 describes the Atomic Measurement that is present in all instances of a pulse oximeter.

Table C.13 – Healthcare Device Type of pulse oximeter

Device Type (rt)	Resource Type Name	Resource Type Value	Requirement level
oic.d.pulseoximeter	Pulse Oximeter Atomic Measurement	oic.r.pulseoximeter-am	M

Table C.14 – Atomic measurement of pulse oximeter

Atomic Measurement Resource Type Value	Resource Type Name	Resource Type Value	Requirement level
oic.r.pulseoximeter-am	SpO2	oic.r.spo2	M
	Pulse Rate	oic.r.pulserate	M
	Pulsatile Occurrence	oic.r.pulsatileoccurrence	O
	Pulsatile Characteristic	oic.r.pulsatilecharacteristic	O

C.4.7.2 Required Resource Types

A pulse oximeter shall expose "oic.r.spo2" to report the oxygen saturation of a person.

A pulse oximeter shall expose "oic.r.pulserate" to report the pulse rate of a person.

C.4.7.3 OCF-defined Optional Resource Types

A pulse oximeter measures pulsatile occurrence using the "oic.r.pulsatileoccurrence" Resource Type.

A pulse oximeter measures pulsatile characteristic using the "oic.r.pulsatilecharacteristic" Resource Type.

See Table C.2 for additional commonly used Resource Types that could be used here.

C.4.8 Sleep monitor

C.4.8.1 Introduction

A sleep monitor measures the duration of each one of the sleep stages, and can also compute a "Sleep Score" from these data. The stages of sleep are: NREM stage 1 (Light Sleep stage 1), NREM stage 2 (Light Sleep stage 2), NREM stage 3 (Deep Sleep stage 1), NREM stage 4 (Deep Sleep stage 2), REM.

A night of sleep is composed of several sleep cycles, with each sleep cycle progressing from Light Sleep to Deep Sleep, before reversing back from Deep Sleep to Light Sleep, ending with REM. The first cycle takes about 90 minutes. After that, the cycles average between 100 minutes and 120 minutes. Typically, an individual will go through 4 to 5 sleep cycles per night. Dreams occur during REM stages.

NREM stage 4 is not recognized in every country: in 2007, the USA merged NREM stages 3 and 4 into only one stage, NREM stage 3, thus effectively removing NREM stage 4.

Light Sleep consists of NREM stages 1 and 2. Deep Sleep consists of NREM stages 3 and 4.

Table C.15 describes the Device Type for a sleep monitor. Table C.16 describes the Atomic Measurement that is present in all instances of a sleep monitor.

Table C.15 – Healthcare Device Type of sleep monitor

Device Type (rt)	Resource Type Name	Resource Type Value	Requirement level
oic.d.sleepmonitor	Sleep Monitor Atomic Measurement	oic.r.sleepmonitor-am	M

Table C.16 – Atomic measurement of sleep monitor

Atomic Measurement Resource Type Value	Resource Type Name	Resource Type Value	Requirement level
oic.r.sleepmonitor-am	Sleep	oic.r.sleep	M
	Heart Rate	oic.r.heartrate	O

C.4.8.2 Required Resource Types

A sleep monitor shall expose "oic.r.sleep" to report the time spent in the Awake, NREM1, NREM2, NREM3 and REM stages, and optionally the time spent in the NREM4, Light Sleep, Deep Sleep stages, and the sleep score.

C.4.8.3 OCF-defined Optional Resource Types

A sleep monitor measures the heartrate using the "oic.r.heartrate" Resource Type.

See Table C.2 for additional commonly used Resource Types that could be used here.

C.4.9 Activity tracker

C.4.9.1 Introduction

An Activity Tracker measures a user's activities. An Activity Tracker shows a user's current activity type, accumulated step counts per day since the beginning of the day (or last reset), consumed calories per day since the beginning of the day (or last reset), and alarm status.

Table C.17 describes the Device Type for an activity tracker. Table C.18 describes the Atomic Measurement that is present in all instances of an activity tracker.

Table C.17 – Healthcare Device Type of activity tracker

Device Type (rt)	Resource Type Name	Resource Type Value	Requirement level
oic.d.activitytracker	Activity Tracker Atomic Measurement	oic.r.activitytracker-am	M
	Clock	oic.r.clock	O
	Battery	oic.r.energy.battery	O
	Alarm	oic.r.alarm	O

Table C.18 – Atomic measurement of activity tracker

Atomic Measurement Resource Type Value	Resource Type Name	Resource Type Value	Requirement level
oic.r.activitytracker-am	Activity	oic.r.activity	M
	Heartrate	oic.r.heartrate	O

C.4.9.2 Required Resource Types

An activity tracker shall expose "oic.r.activity" to report the activity of a person, and optionally the number of steps per day or since last reset, plus the consumed calories per day or since last reset.

C.4.9.3 OCF-defined Optional Resource Types

An activity tracker manages the alarm status using the "oic.r.alarm" Resource Type.

An activity tracker measures heart rate using the "oic.r.heartrate" Resource Type.

An activity tracker measures time using the "oic.r.clock" Resource Type.

An activity tracker measures battery status using the "oic.r.energy.battery" Resource Type.

See Table C.2 for additional commonly used Resource Types that could be used here.

C.4.10 CGM (Continuous Glucose Meter)

C.4.10.1 Introduction

A CGM is a device that measures the concentration of glucose in the blood, typically measured from interstitial fluid (ISF). The glucose concentration is available on a continual basis at a periodic interval from a sensor. Glucose, or blood sugar, is the human body's primary source of energy. Frequent